


MODEL : CF 9584-B (3')


ASSEMBLY INSTRUCTION

A		2 pcs
B		1 pc
C		1 pc
D		1 pc
E		1 pc
F		1 pc
G		1 pc
H		1 pc

Step 1 : Attach side rail (D) & (E) to arm (A) by pushing the bracket down to fit it.

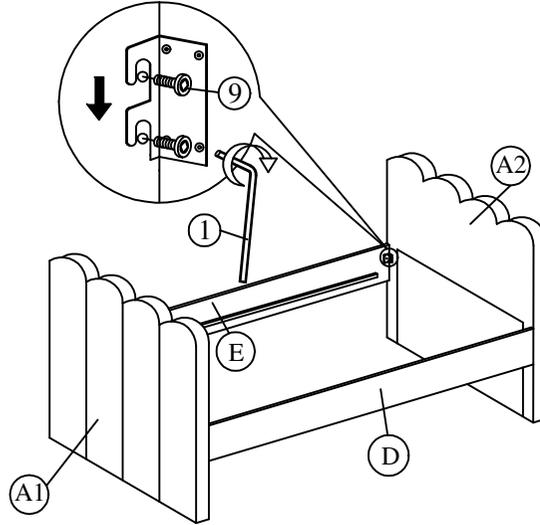


Step 2 : Attach the Back Panel (B) to the arm (A) as shown.

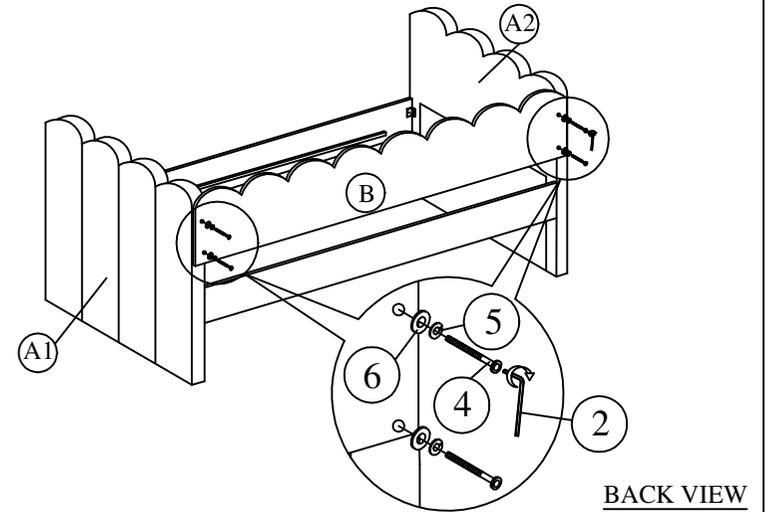


Packing Hardware

1		1 pc
2		1 pc
3		56 pcs
4		4 pcs
5		4 pcs
6		4 pcs
7		6 pcs
8		40 pcs
9		8 pcs
10		4 pcs


Step 3 : Tighten the 4 Corner with Allen Key (1). Install the slats to side rail. Tighten the slats with CSK screw (3). The distance of the slats should be sufficient to obtain desirable bed stability.

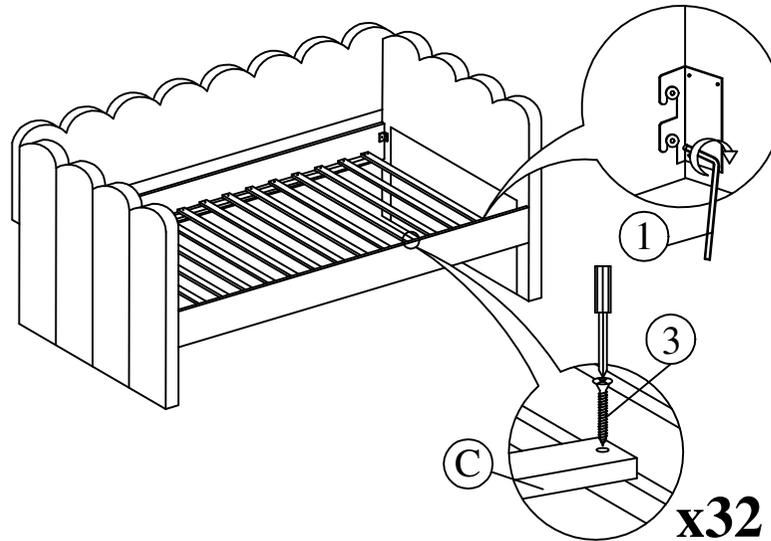


Step 4 : Fix the slat (H) to the trundle at (F) & (G).

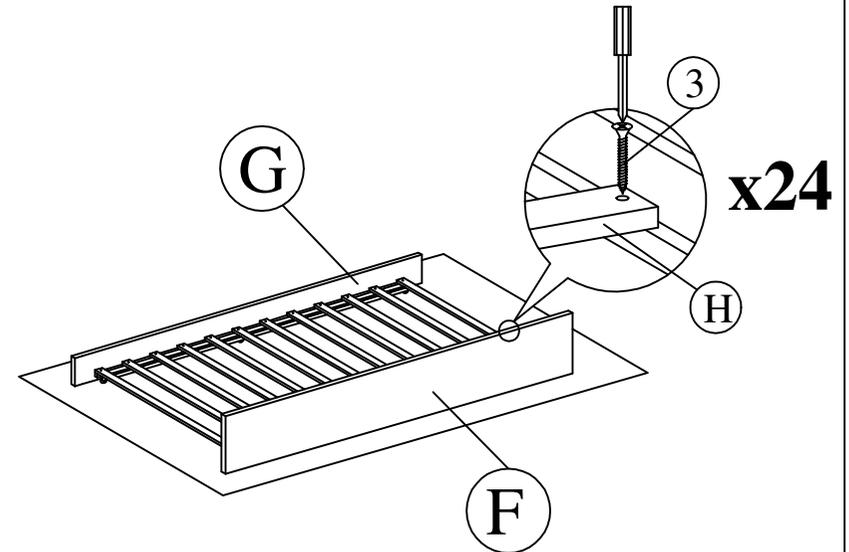

Step 5 : Attach the L-bracket (10) on the slat (H).

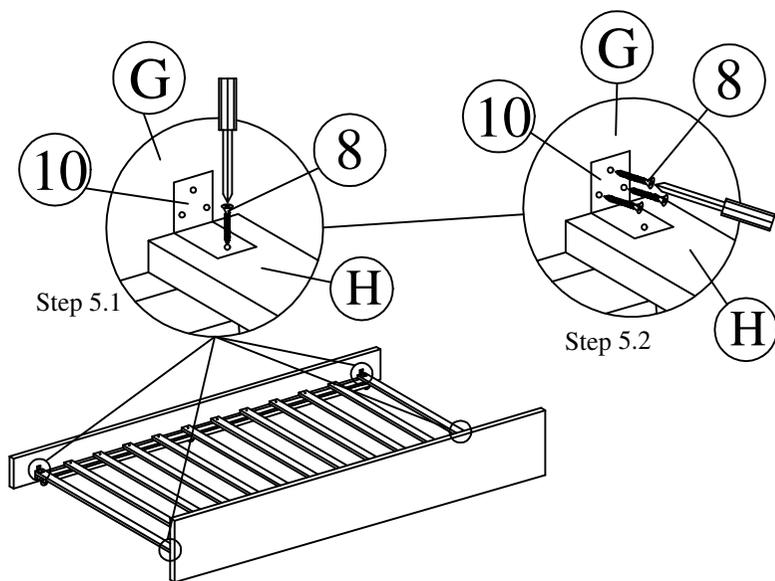

Step 6 : Turn the trundle to another side as below diagram and tighten the roller (7) with CSK screw (8) at the slat (H).

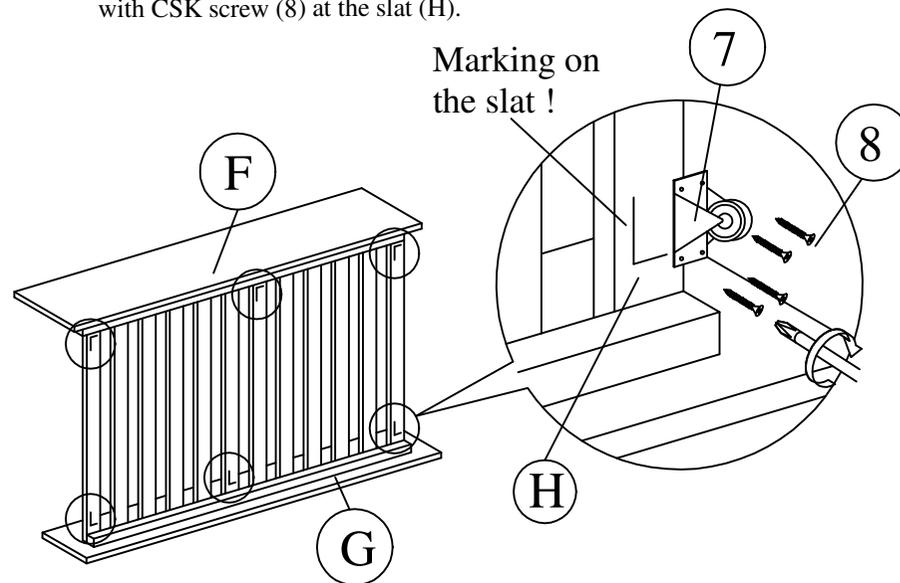

Step 7 : Assembly is complete.

