


# 9726 Full / Queen Headboard


## Assembly Instructions

W11-0720


### 1 Parts List

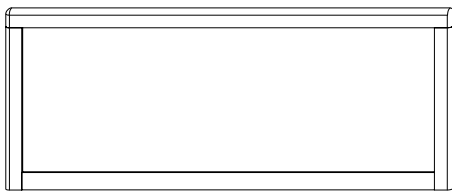

**A**  
Headboard  
Panel x 1



**B**  
Support  
Bars x 2

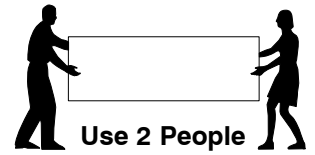

### 2 Hardware List



**1** M6 x 35mm JCB  
x 10



**2** Spring Washer  
x 10





**3** Flat Washer  
x 10



**4** Allen Key  
x 1



**Note:** Do not assemble  
using power tools.  
This can cause the bolts  
to be overtightened

### 3 Assemble the Support Bars (B) to the Headboard Panel.

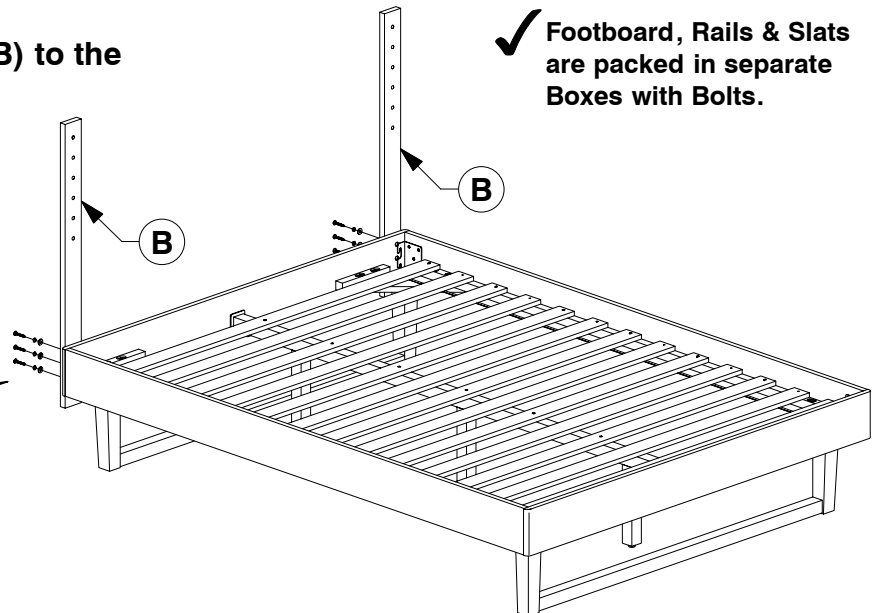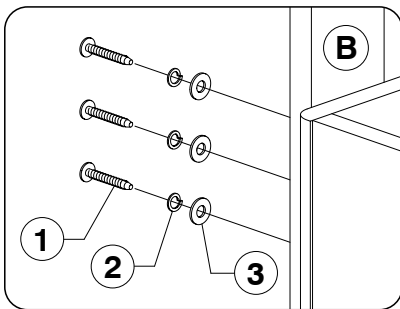

✓ Footboard, Rails & Slats  
are packed in separate  
Boxes with Bolts.

### 4 Assemble the Headboard Panel (A) to the Support Bars (B).

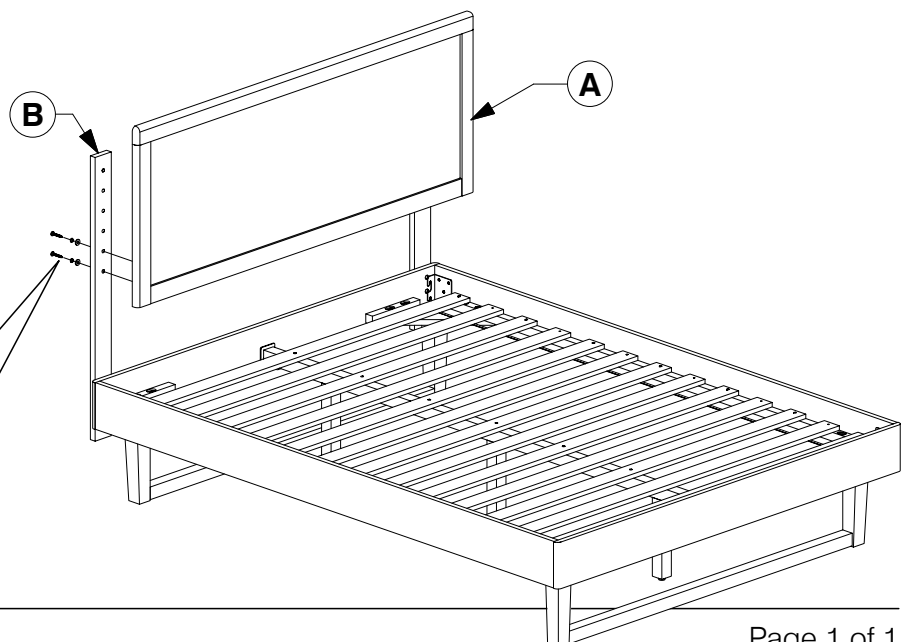
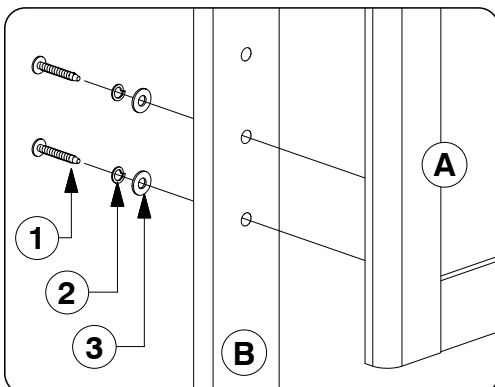


# Queen Bed

## Assembly Instructions









0818

### 1 Assembled View










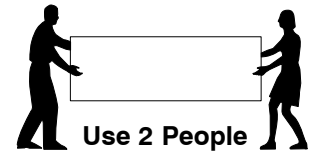
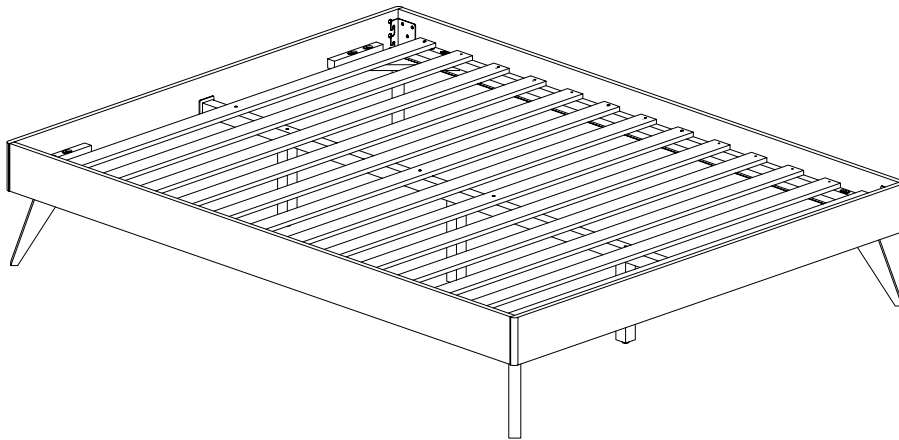


**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened

### 2 Parts List

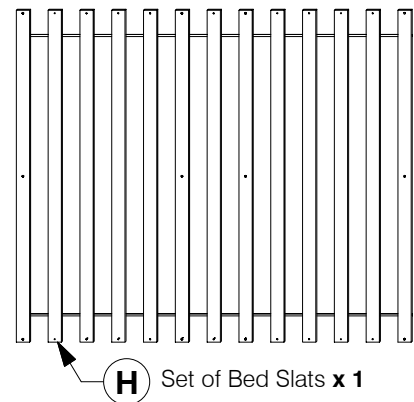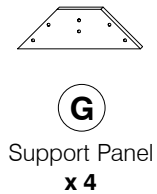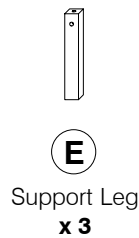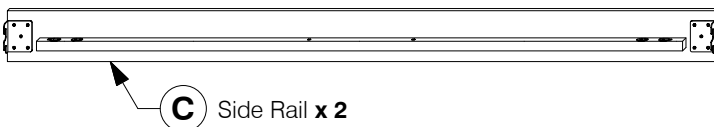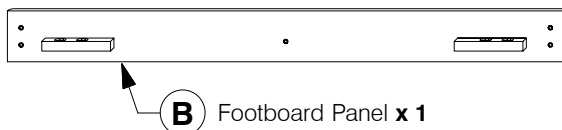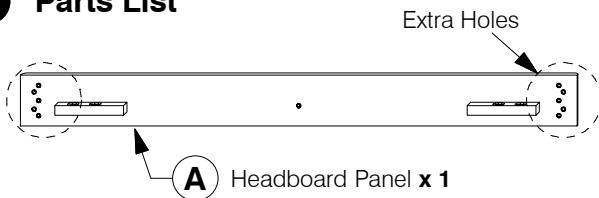

### 3 Hardware List

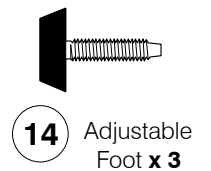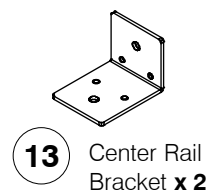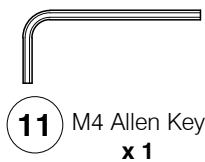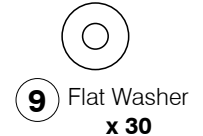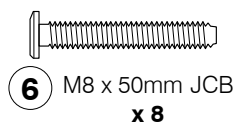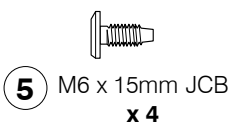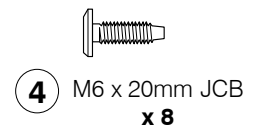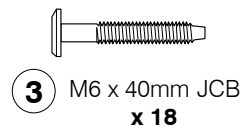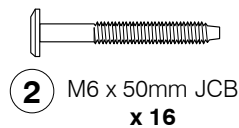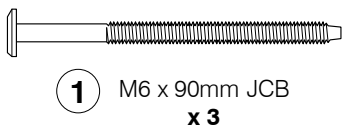


# Queen Bed


## Assembly Instructions

0818

- 4** Assembled the Support Leg (E) to the Long Support (D).

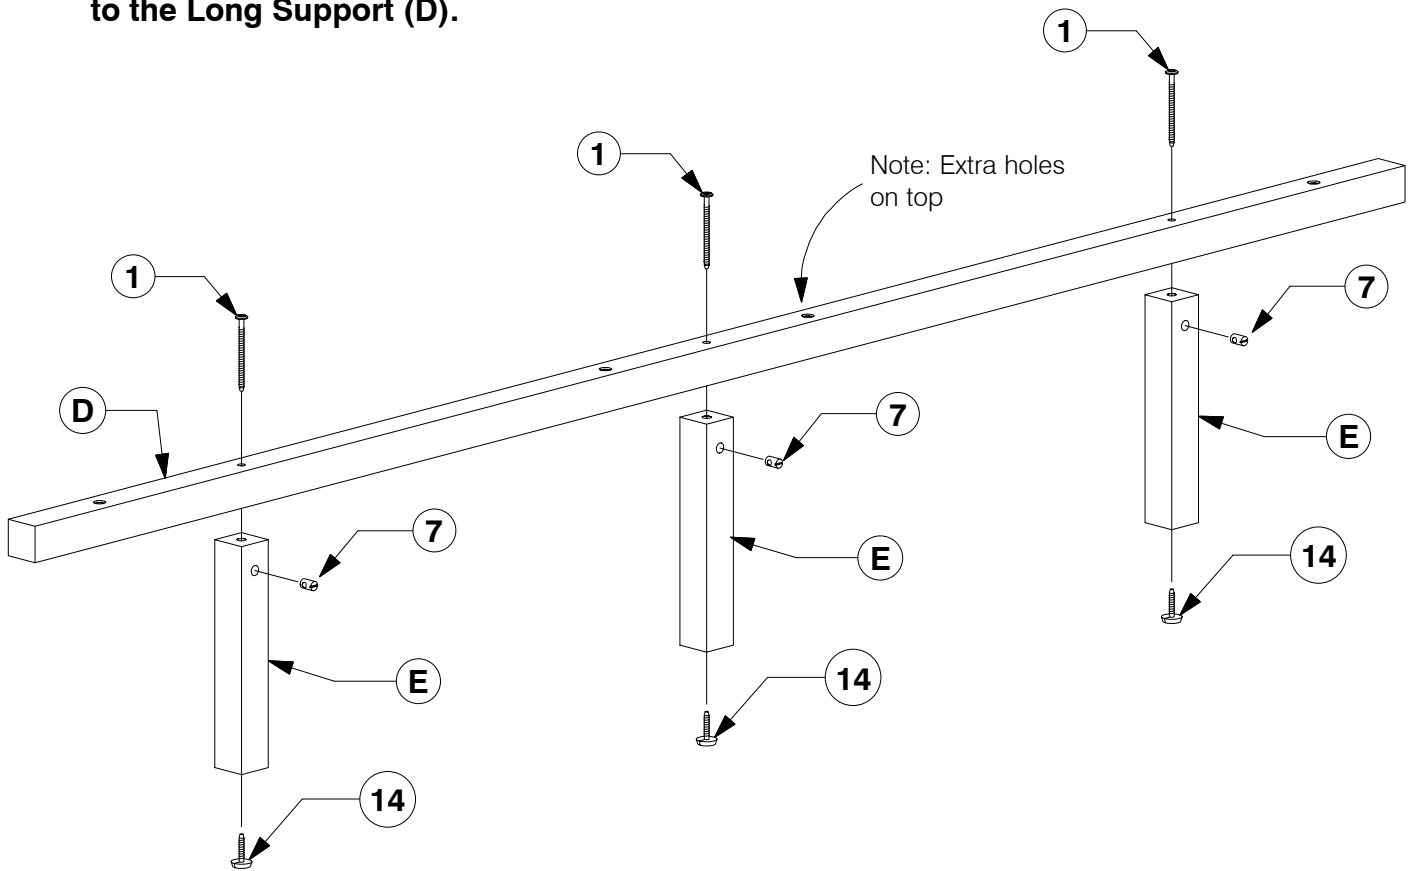

- 5** Fit the Post (F) to the Support Panel (G).

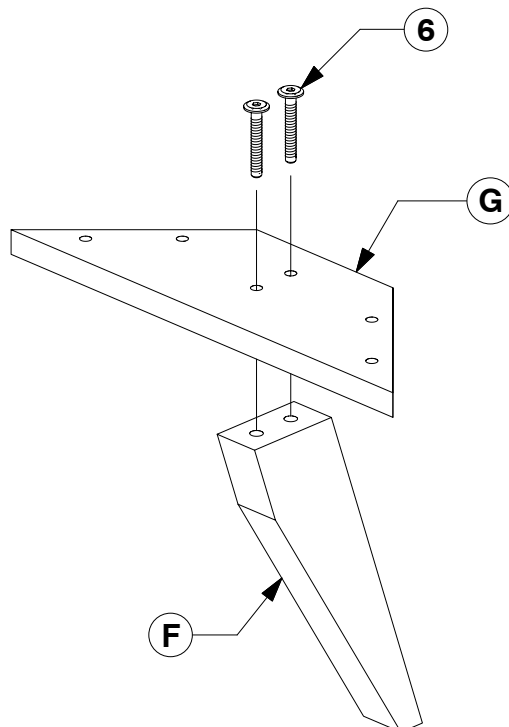


# Queen Bed


## Assembly Instructions

0818


- 6** Fit the Center Rail Bracket to the Headboard Panel (A).

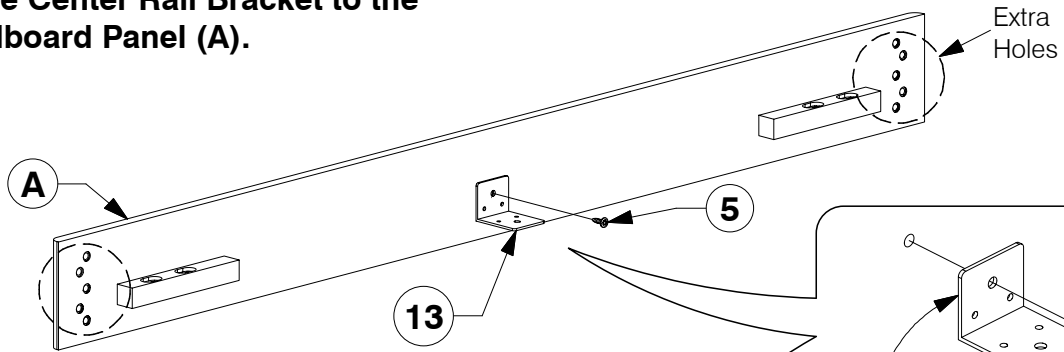

- 7** Fit the Center Rail Bracket to the Footboard Panel (B).

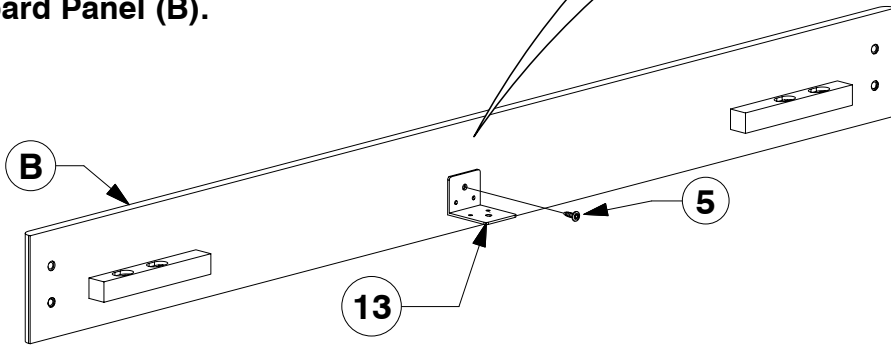

- 8** Bolt the assembled Support Panel (G) to the Side Rail (C).

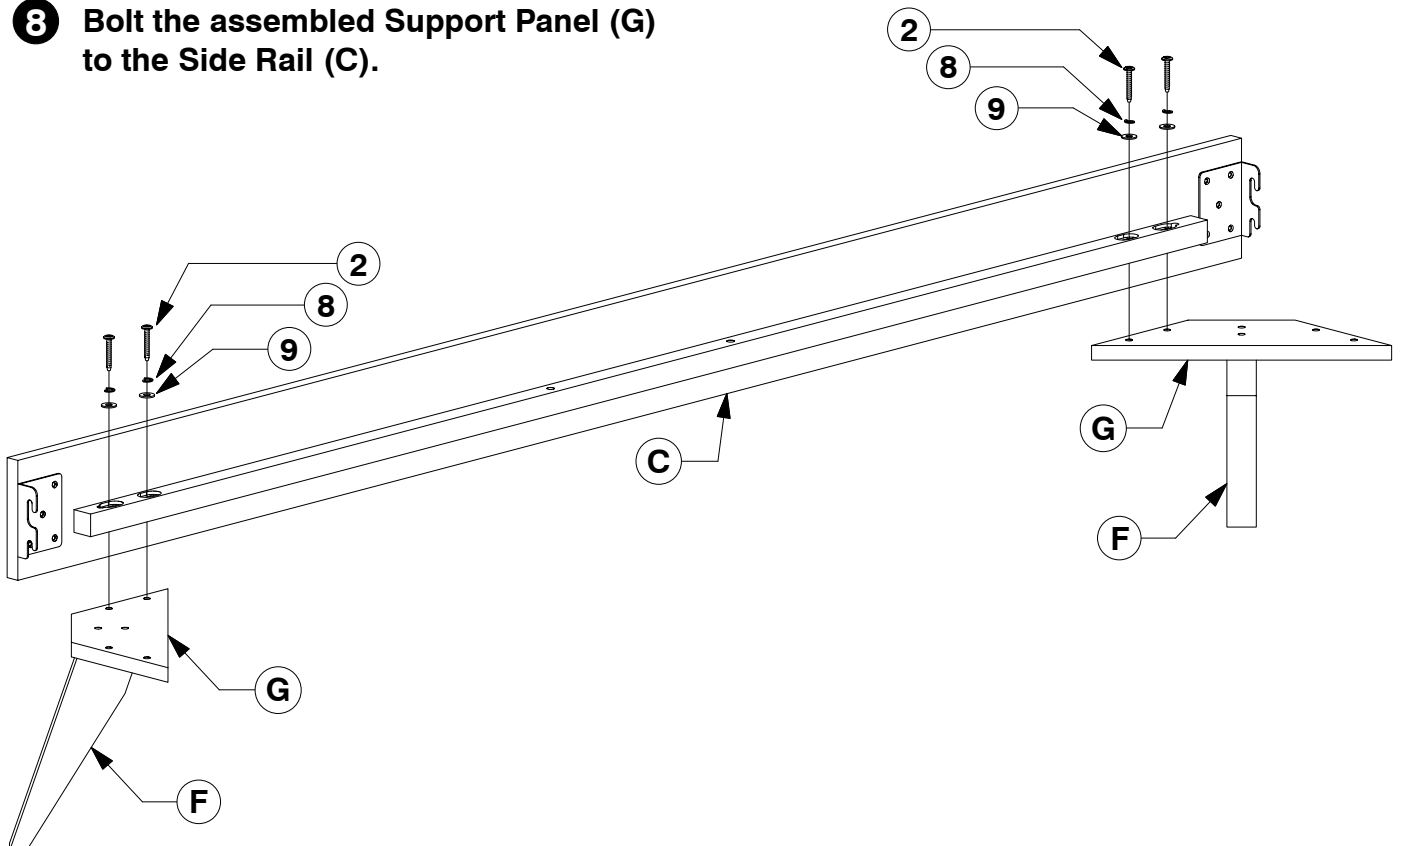


# Queen Bed


## Assembly Instructions

0818

- 9** Assemble the Side Rail (C) to the Headboard and Footboard Panel (A & B).

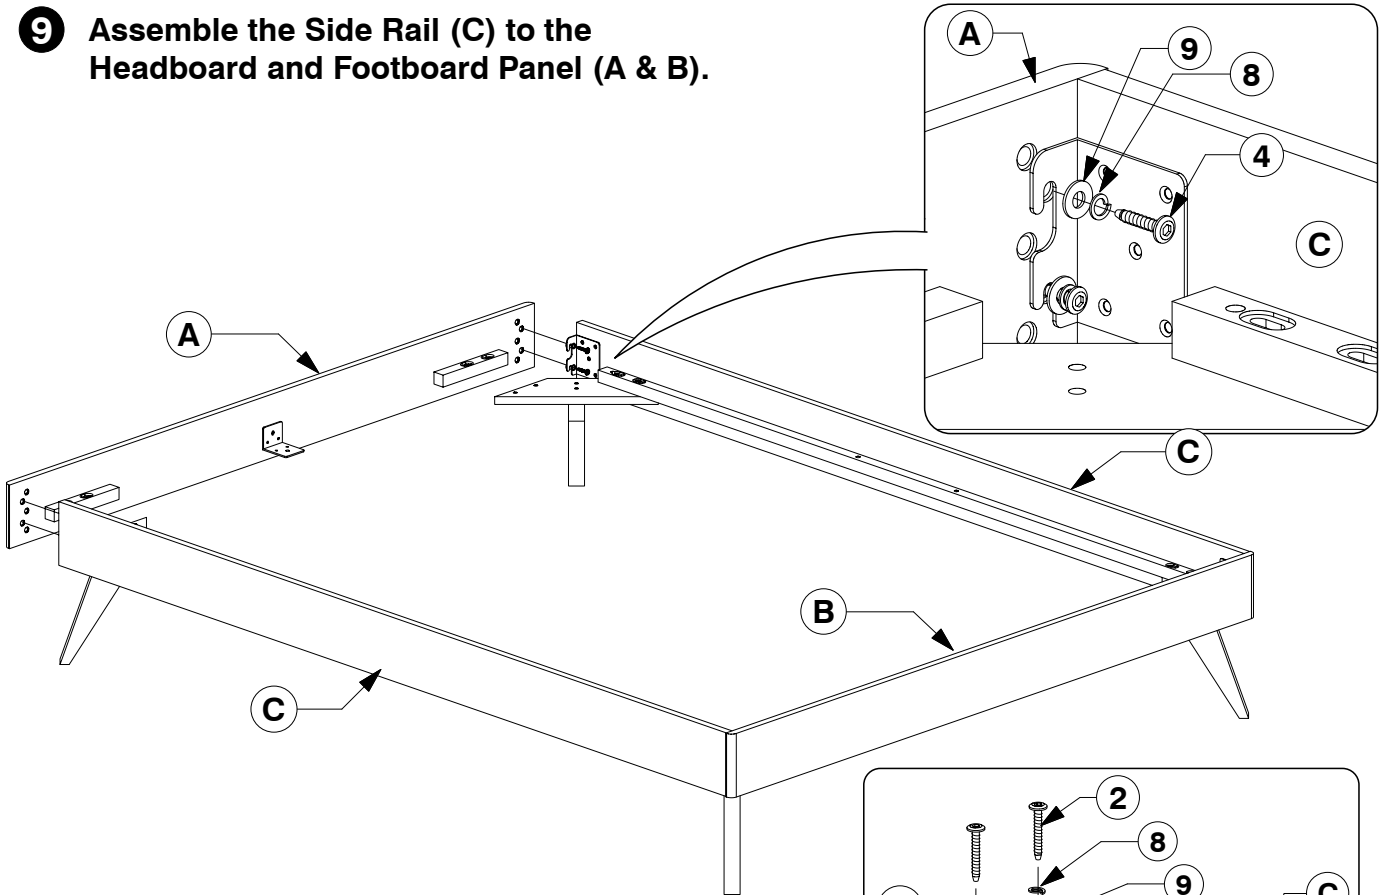

- 10** Bolt the assembled Support Panel (G) to the Headboard and Footboard Panel (A & B).

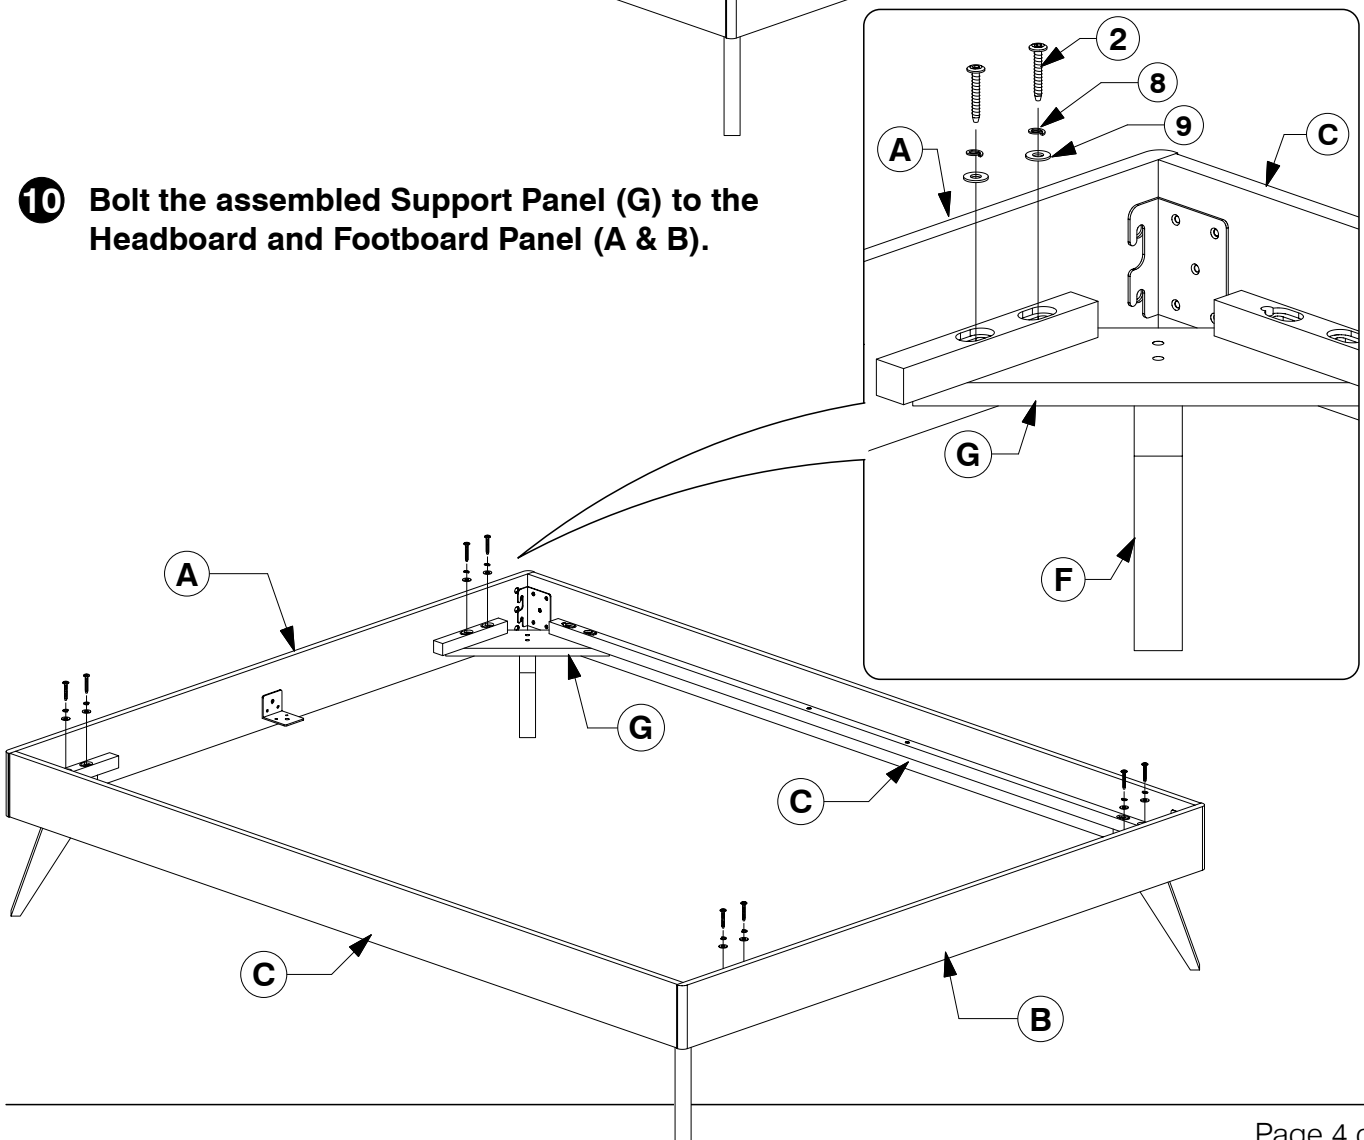


# Queen Bed

## Assembly Instructions

0818

- 11** Bolt the Long Support (D) to the Center Rail Brackets (13) on the Headboard and Footboard Panel (A & B).

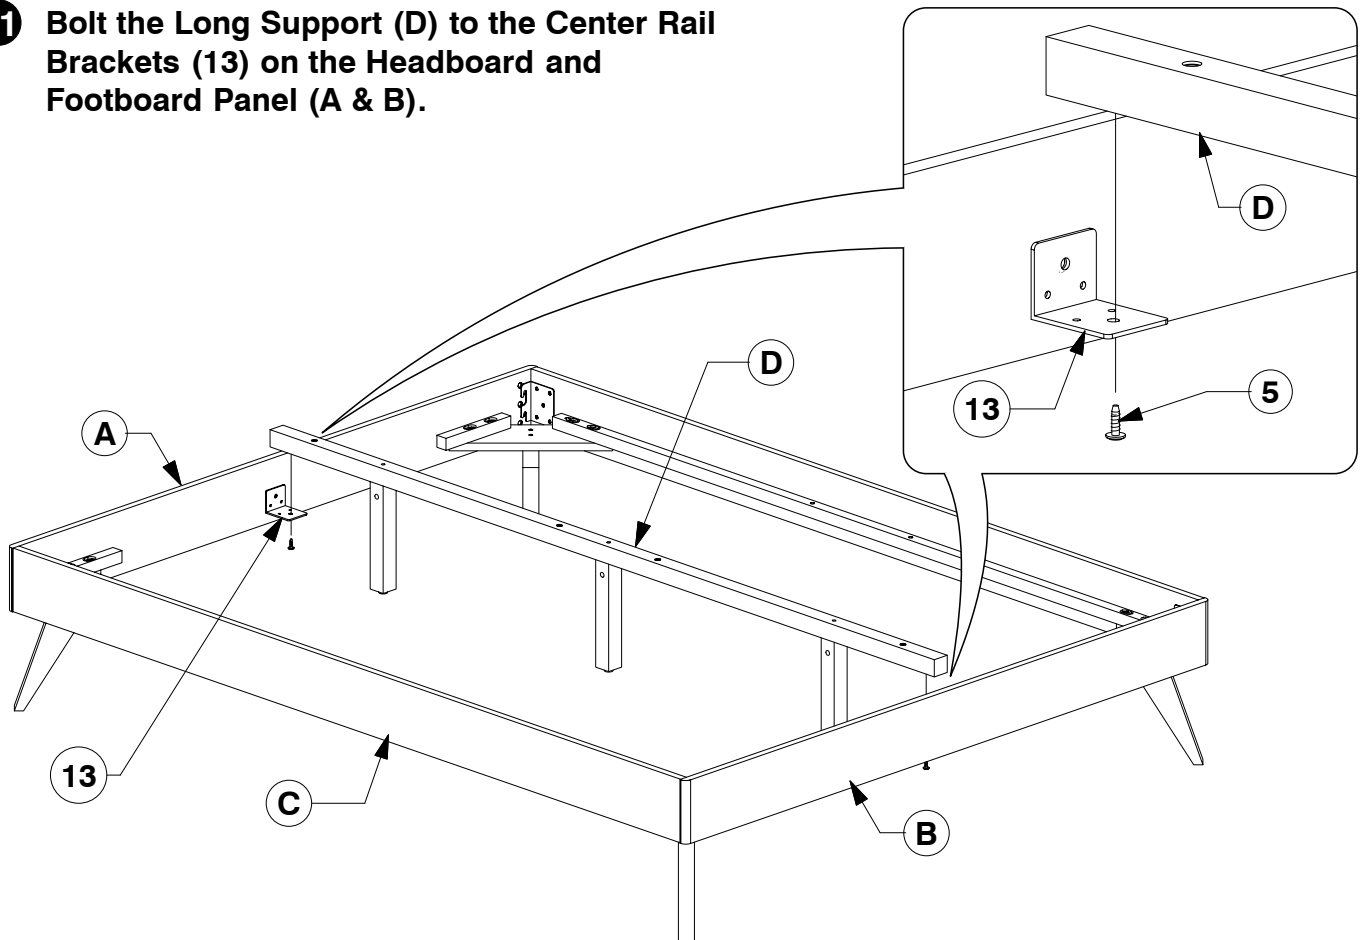

- 12** Bolt & screw the Bed Slats (H) to the Side Rail (C).

