
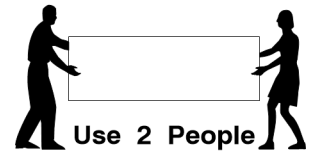


0259-2 Canopy King Bed

Assembly Instructions

WI-1225


1 Assembled View

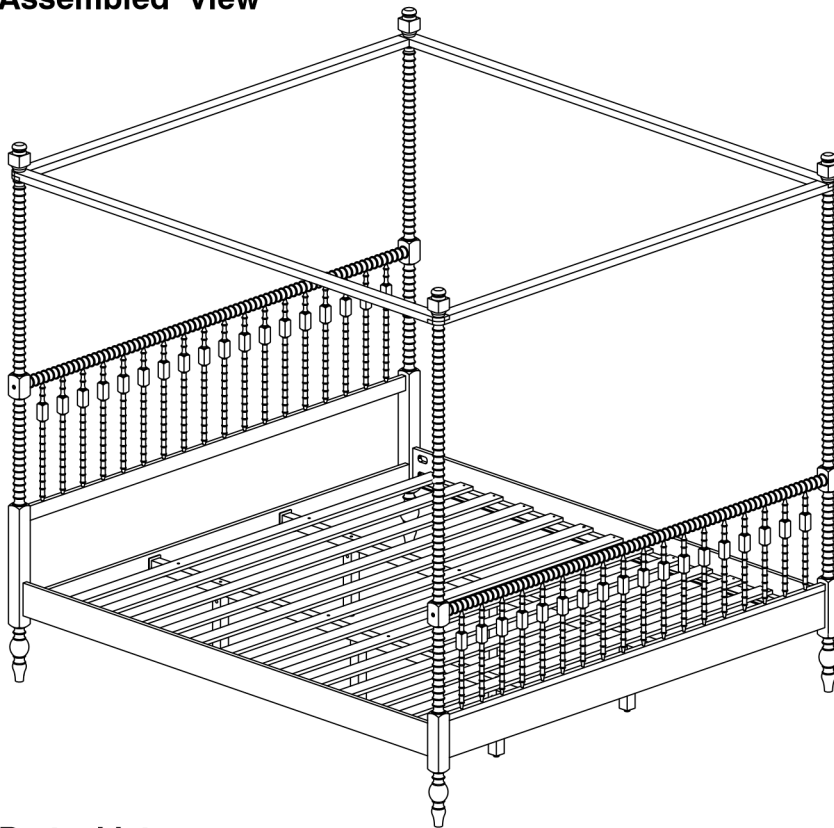

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List


Parts in Box A:

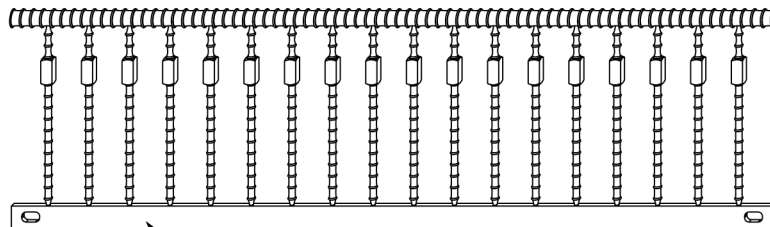

A Headboard Panel x 1



B Headboard Support x 1

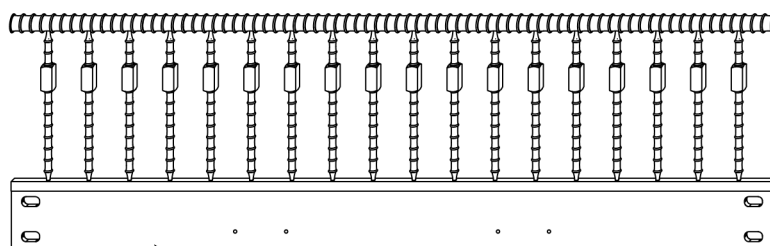

C Footboard Panel x 1


0259-2 Canopy King Bed

Assembly Instructions


WI-1225

2 Parts List


Parts in Box B:




E Top Bar (Short) x 2




F Top Bar (Long) x 2




G Side Rail x 2



H Long Support x 2



D Footboard Support Bar x 2

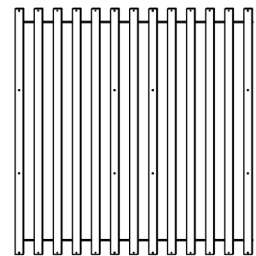

K Set of Bed Slats x 1



J Support Leg x 6

M Upper Post x 4

O Headboard Post (Right Hand) x 1


N Headboard Post (Left Hand) x 1

P Footboard Post (Left Hand) x 1

Q Footboard Post (Right Hand) x 1



L Headboard / Footboard Lower Post x 4

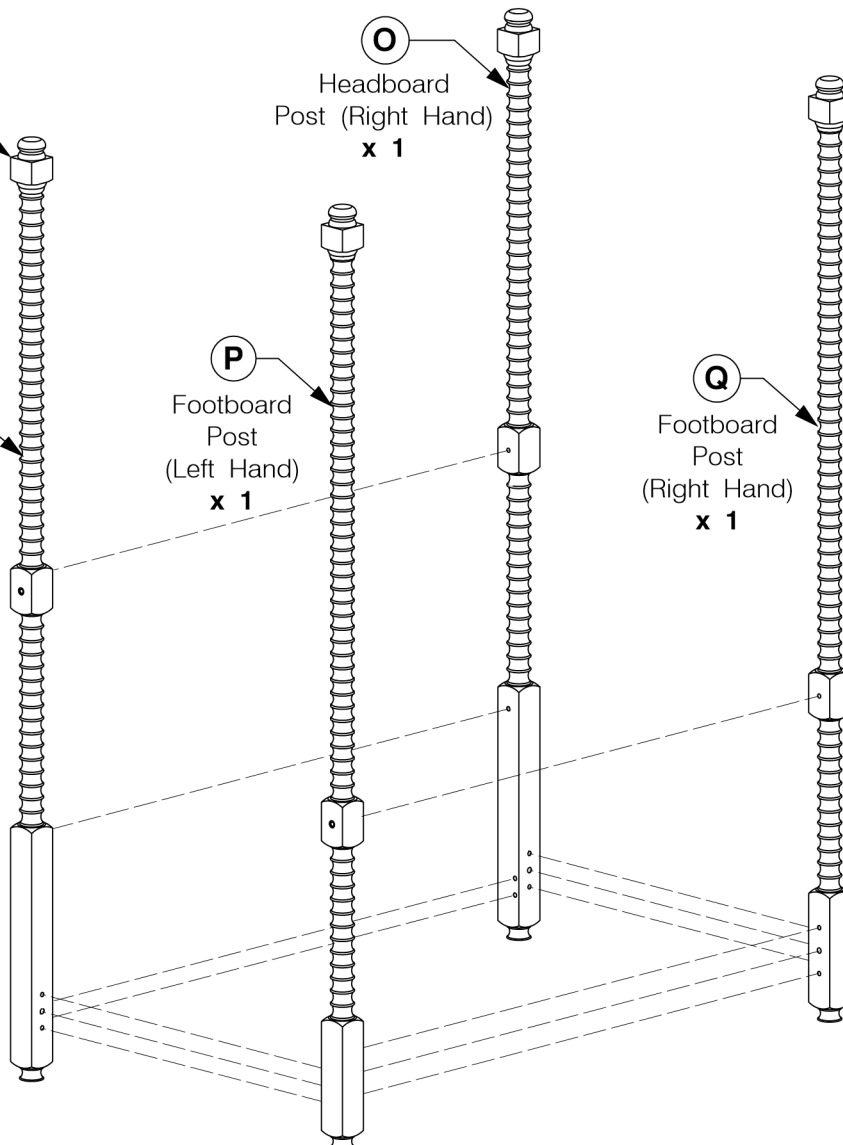

0259-2 Canopy King Bed

Assembly Instructions

WI-1225

3 Hardware List



1 M6 x 90mm JCB
x 6



2 M6 x 70mm JCB
x 4




3 M6 x 40mm JCB
x 34



4 M6 x 30mm JCB
x 4



5 M6 x 15mm JCB
x 8



6 Wood Screw
(M4 x 32mm) x 18




7 Wood Dowel
(M10 x 40mm) x 6




8 Barrel Nut
x 6



9 Allen Key
x 1

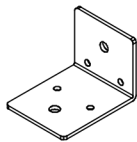


10 Center Rail Bracket x 4



11 Adjustable Foot x 6

4 Assemble the Support Leg (J) to the Long Support (H).

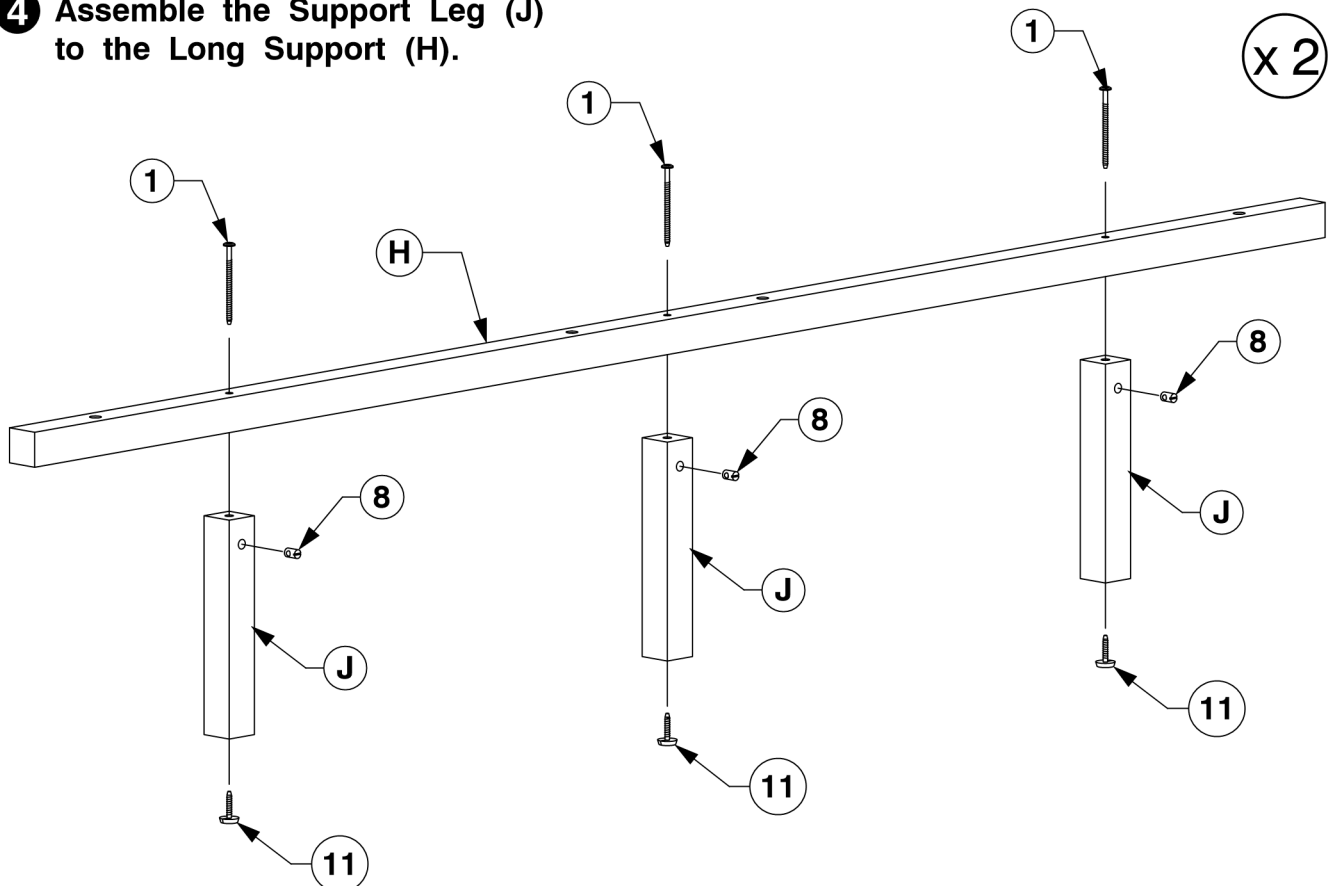


0259-2 Canopy King Bed


Assembly Instructions

WI-1225

- 5** Fit the Headboard/Footboard Lower Post (L) to the Headboard Post (N & O).

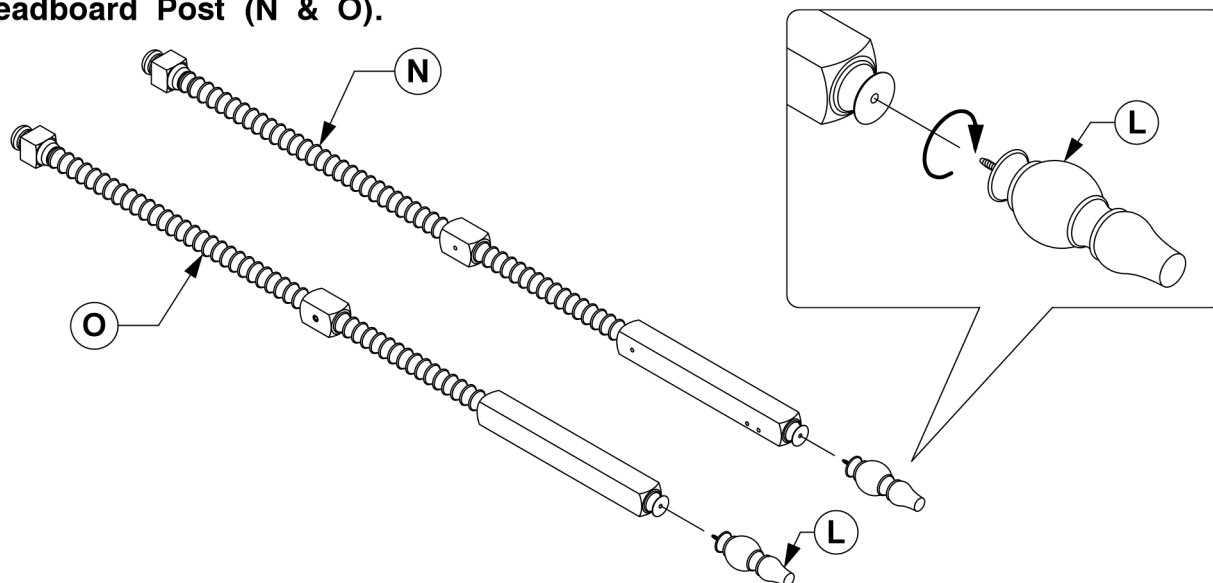


- 6** Assemble the Headboard Post (N & O) to the Headboard Panel (A) & Headboard Support (B).

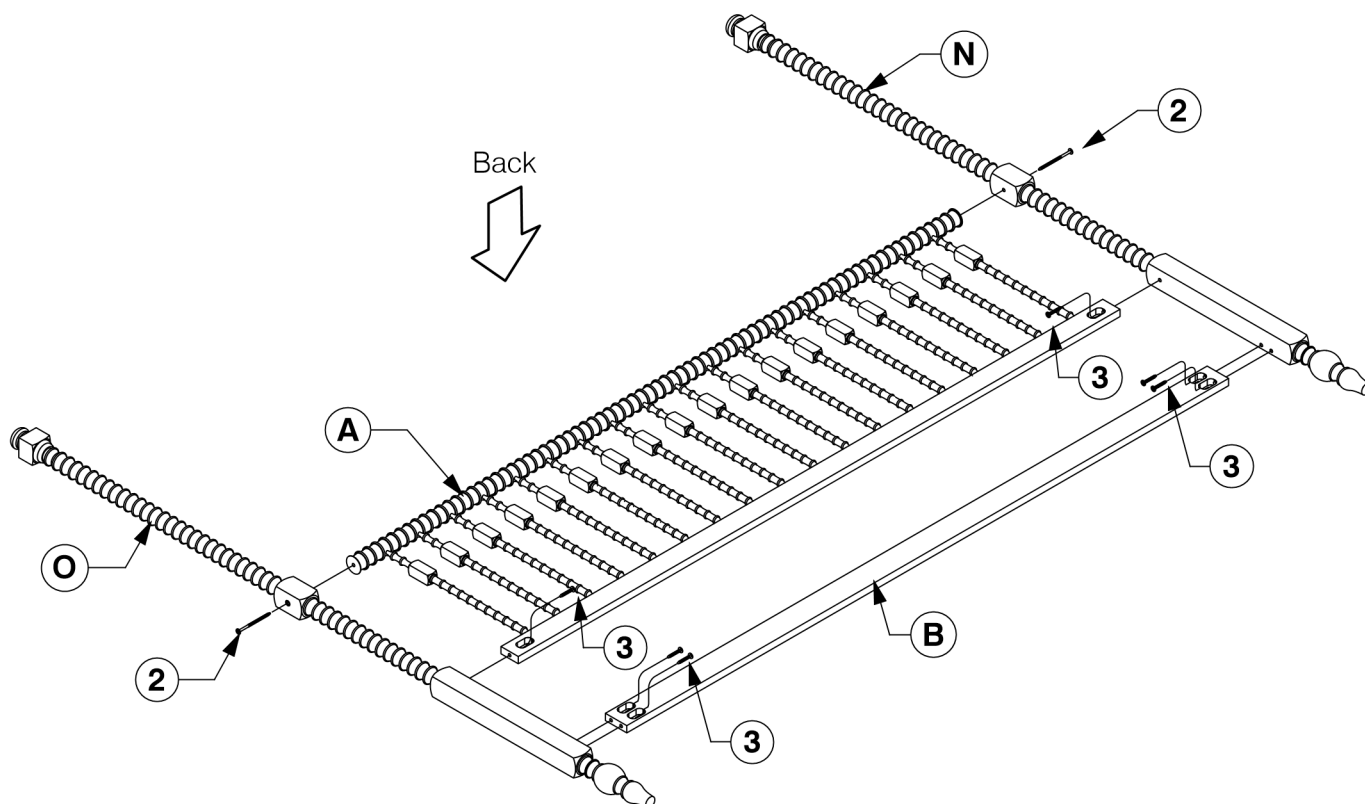


Step 1

Use the ***ball end*** of Allen key to start the bolt.

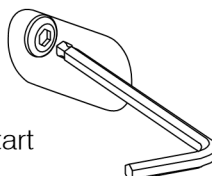

Step 2

Tighten fully with the ***straight end***.

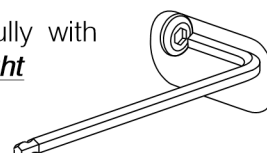

WI-1225

-
- This diagram shows an exploded view of a cable assembly. Two long, flexible cables are shown, each with a braided shield and a central conductor. The top cable is labeled 'Q' and the bottom cable is labeled 'P'. Both cables have a connector at one end. A detailed inset shows the connector assembly, which includes a cable gland, a connector body, and a connector cap. The connector body is labeled 'L'. The inset also shows a curved arrow indicating the direction of rotation for the connector cap.

-
- to the Footboard Panel (C).
- Diagram illustrating the assembly of the footboard panel (C) to the metal bracket (10). The diagram shows the footboard panel (C) being attached to the metal bracket (10) using screws (2) and washers (3). The inset shows the bracket (10) being attached to the footboard panel (C) using screws (4) and washers (5). The inset also shows the "Short Tab of Metal Bracket (10)".

part


ully with
ht

0259-2 Canopy King Bed

Assembly Instructions


WI-1225

- 9 Assemble the Side Rail (G) to the Head / Footboard. Fit the Center Rail Bracket (10) to the Headboard Support (B).**

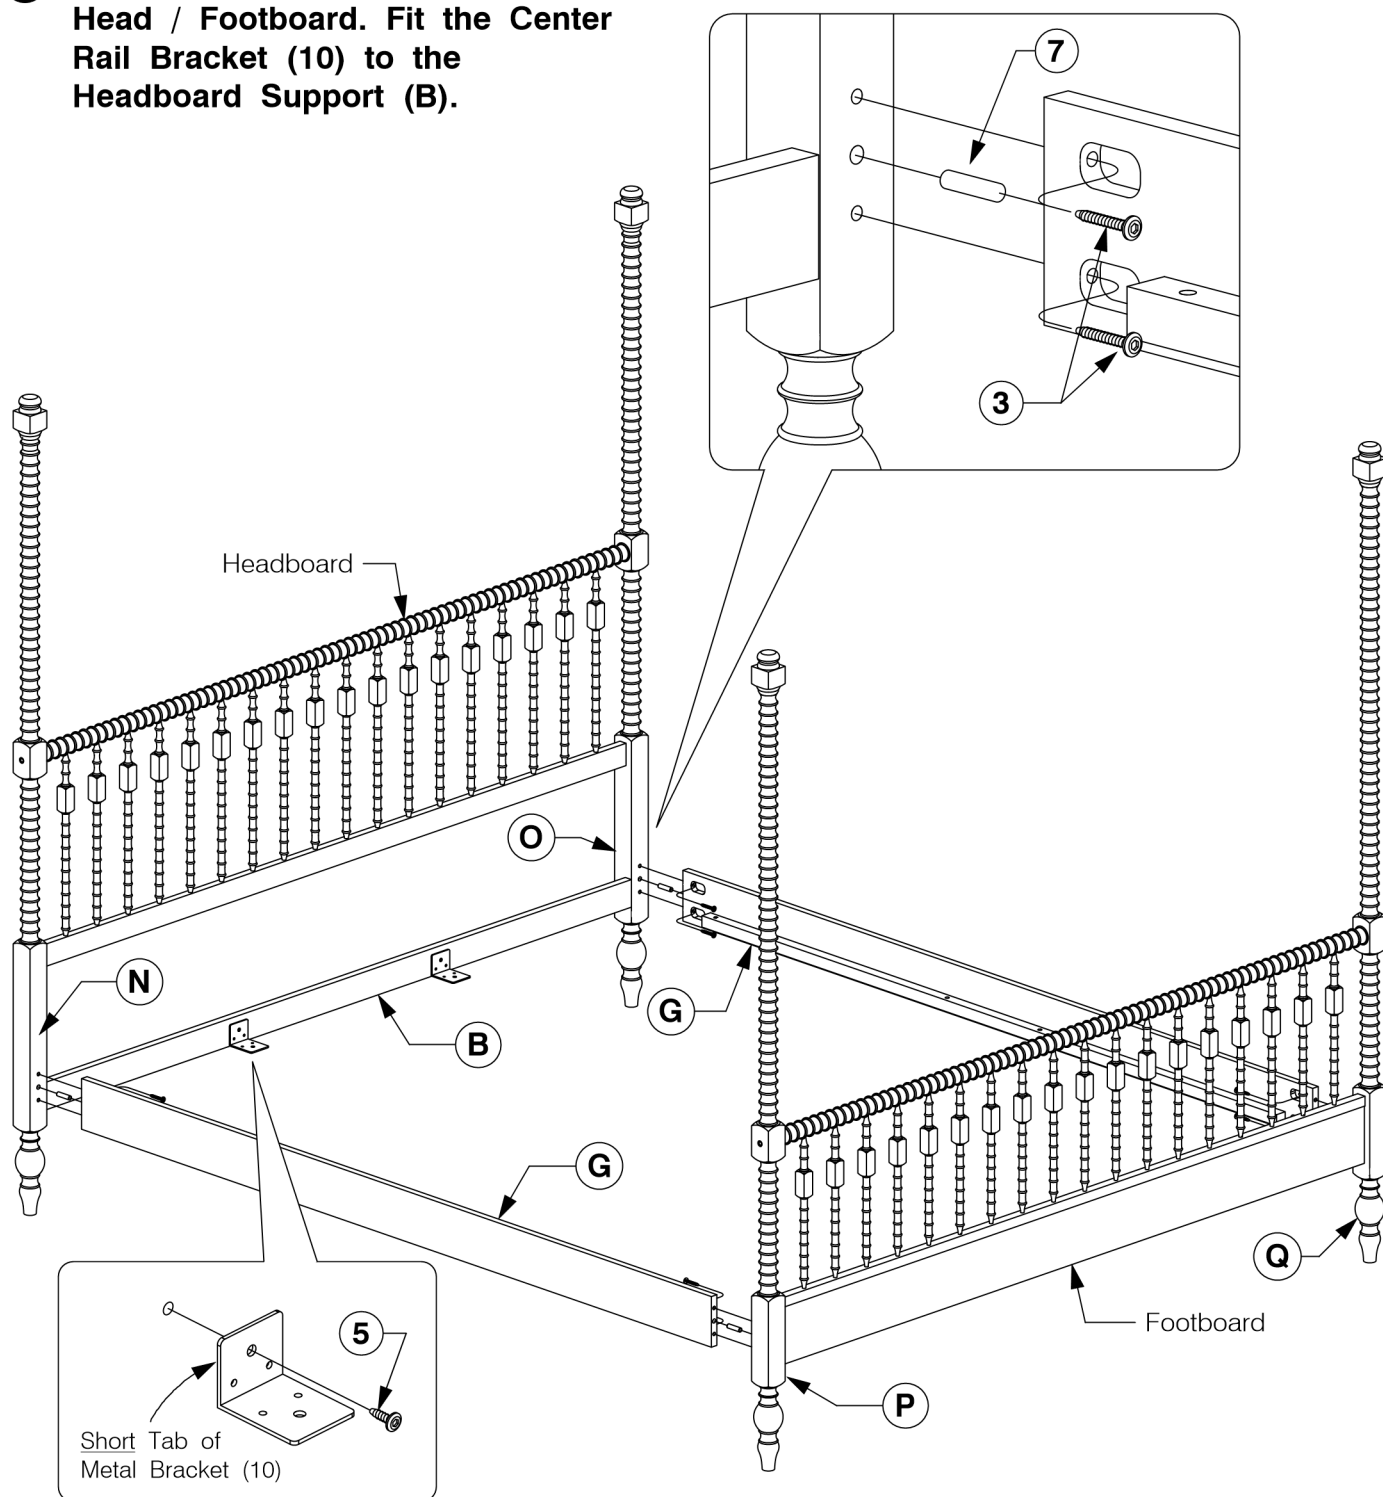


Step 1

Use the **ball end** of Allen key to start the bolt.

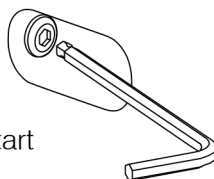

Step 2

Tighten fully with the **straight end**.

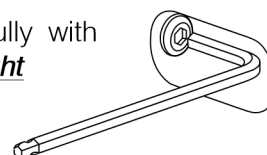


0259-2 Canopy King Bed


Assembly Instructions

WI-1225

- 10** Bolt the Long Support (H) to the Center Rail Brackets on the Head / Footboard.

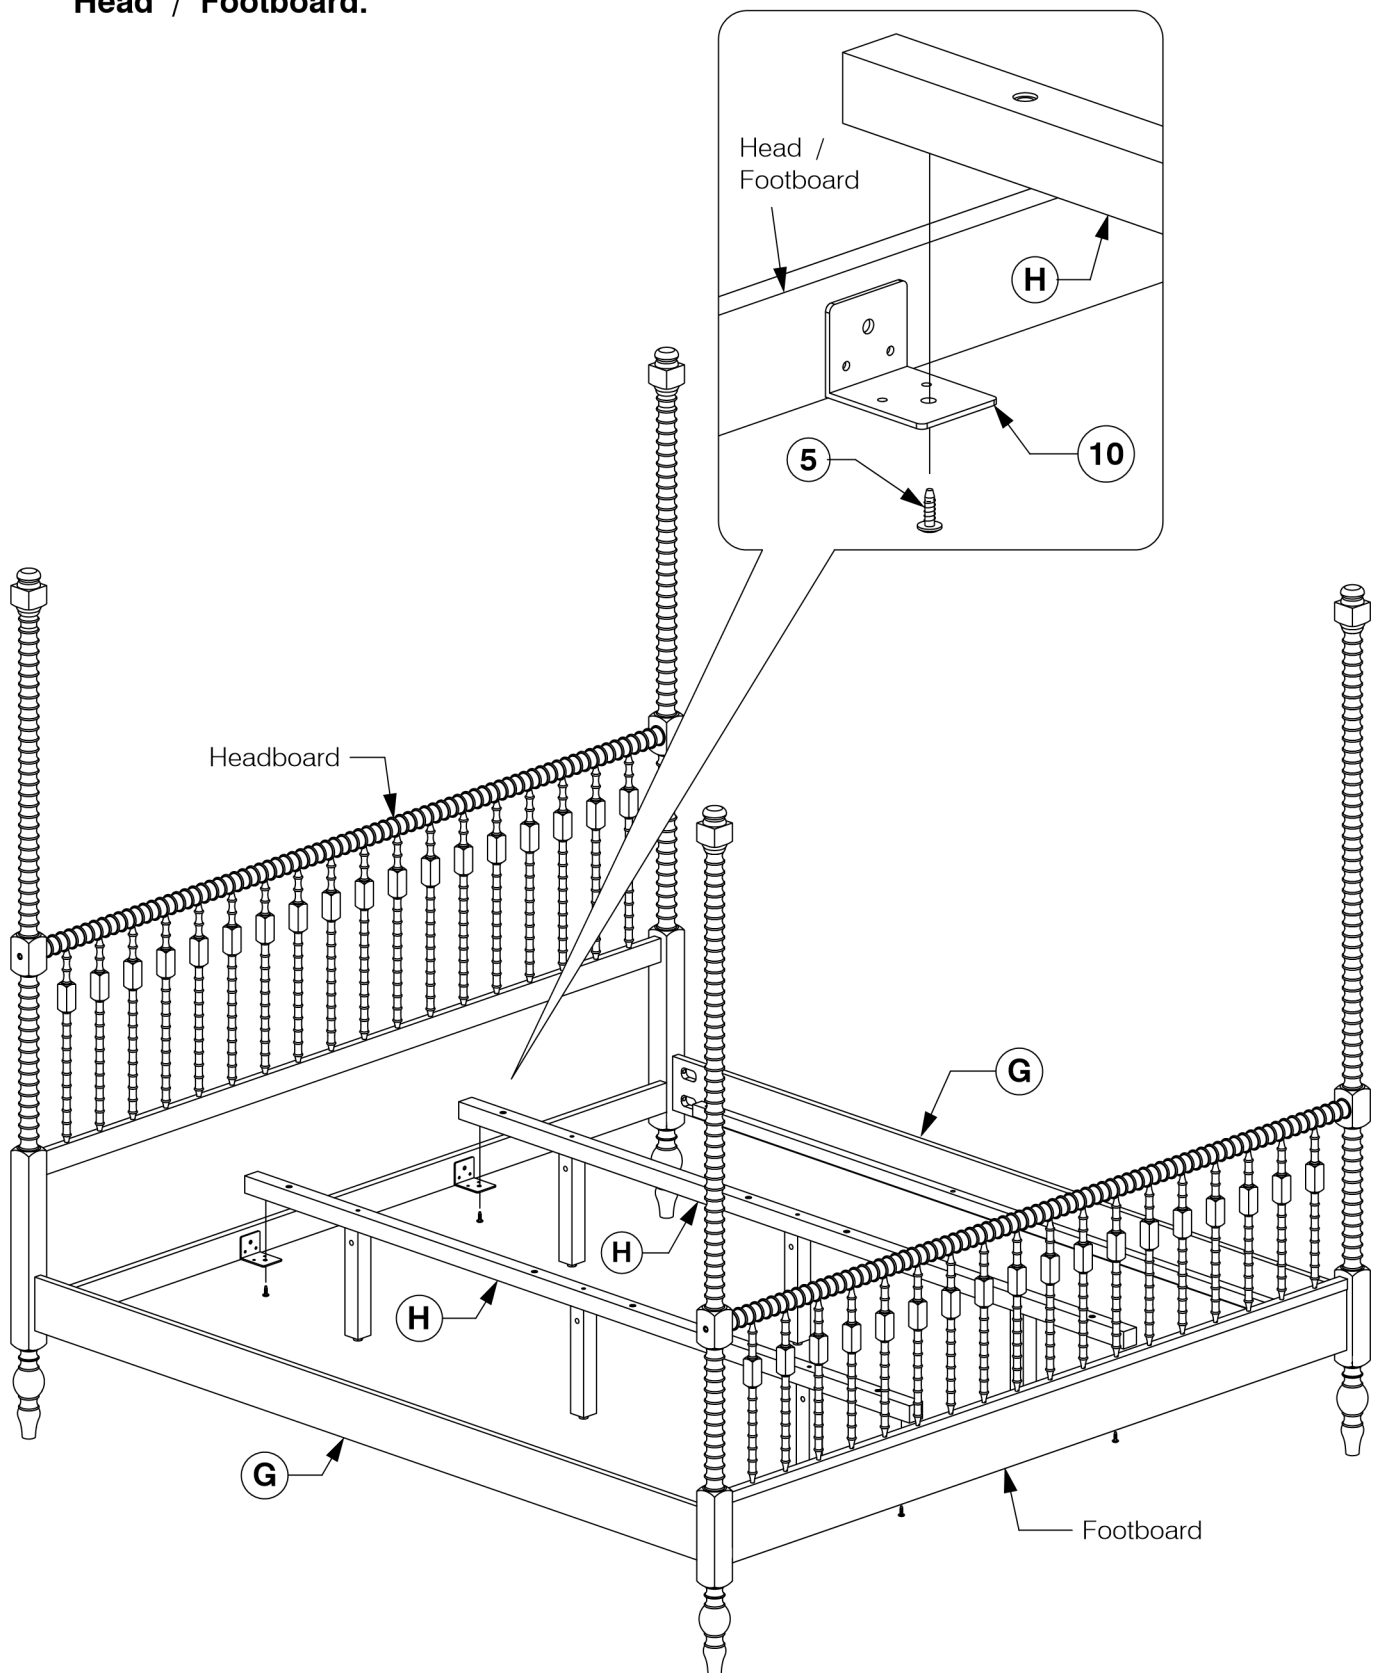

- 11 Bolt & screw the Bed Slats (K) to the Side Rail (G) and Long Support (H).**

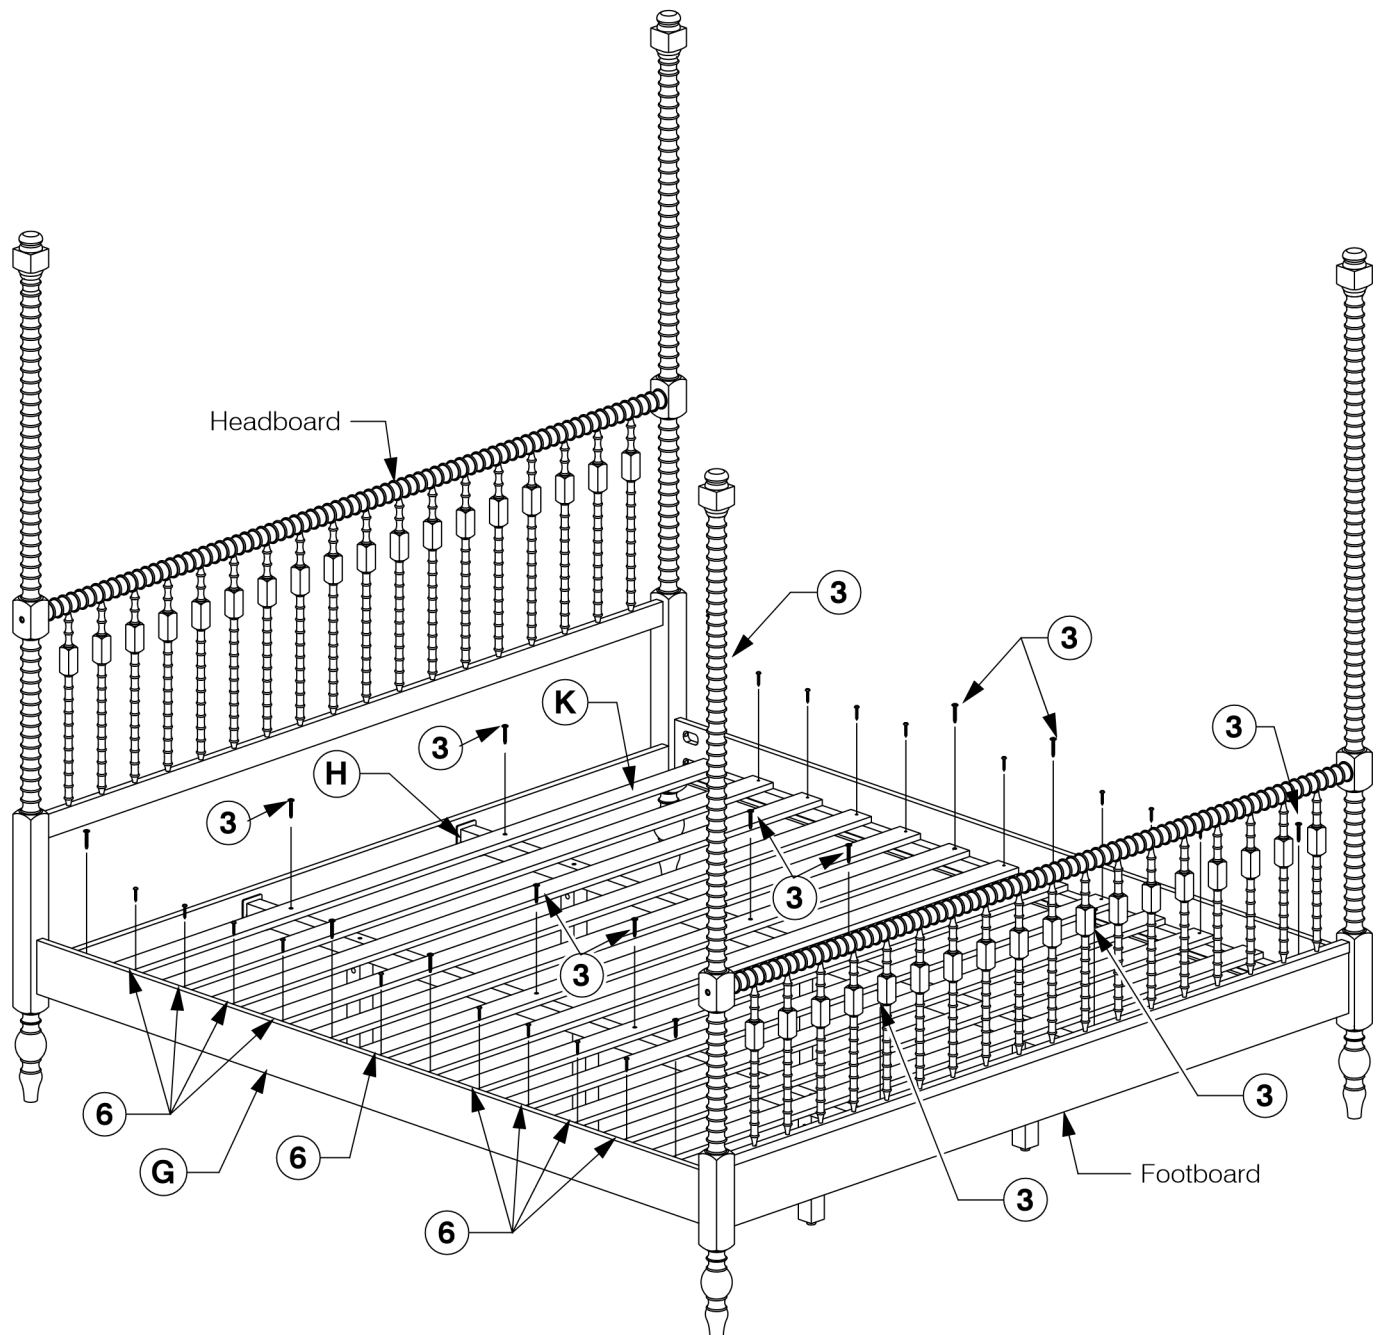


0259-2 Canopy King Bed

Assembly Instructions

WI-1225

- 12** Remove the Upper Post (M) from the Headboard Post (N & O) and Footboard Post (P & Q).

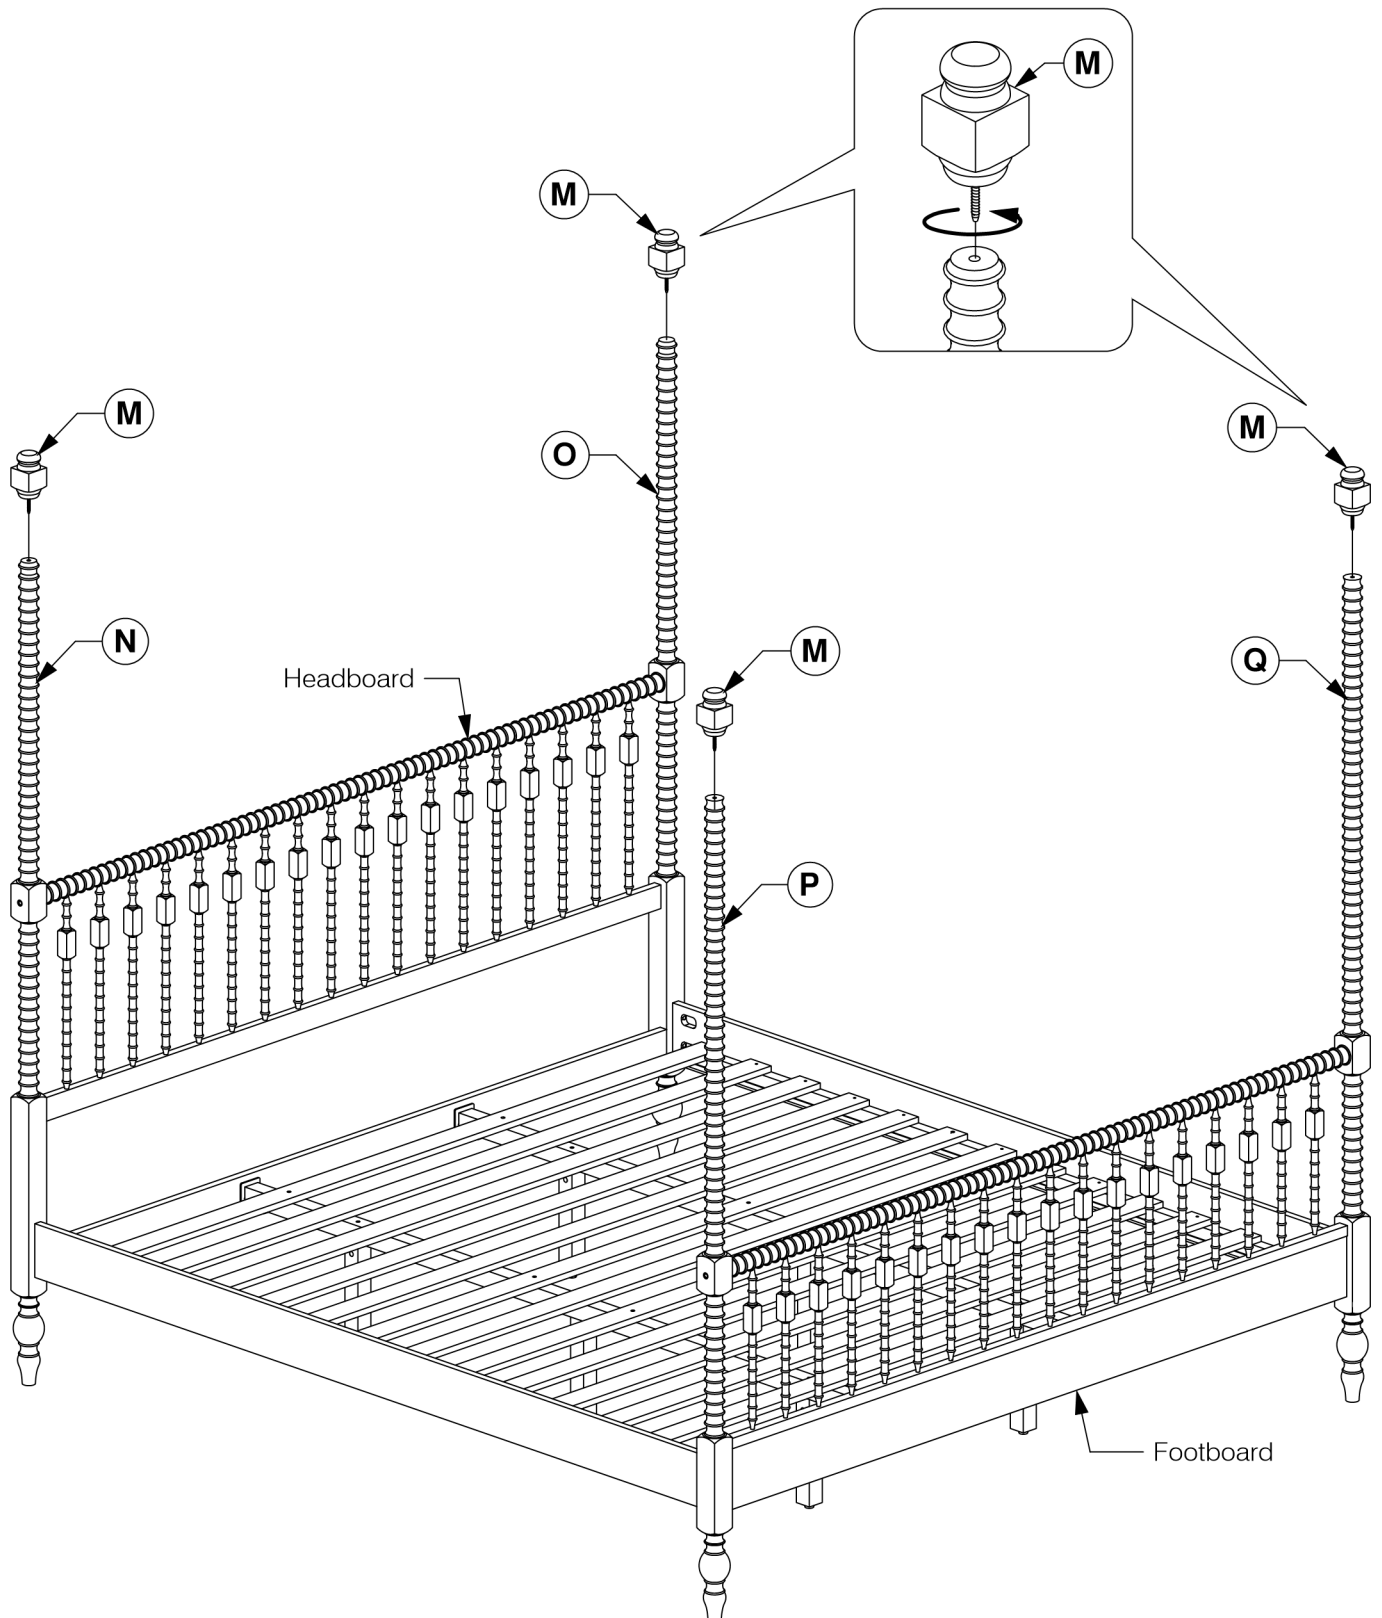

0259-2 Canopy King Bed

Assembly Instructions

WI-1225

- 13** Attach the Top Bar-Short (E) to the top of the Posts. Then place the Top Bar-Long (F) on top of (E) on both sides. Bolt the Upper Post (M) to lock the Top Bars (E & F).

