
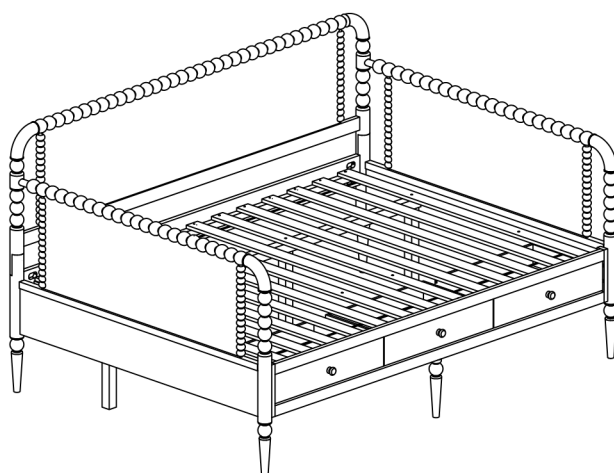


0110-7 Full Daybed

Assembly Instructions


WI-1225

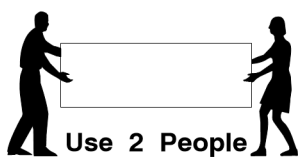


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List


Parts in Box A:

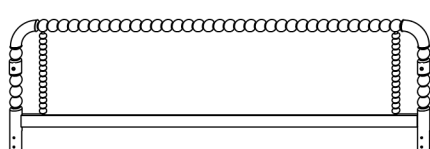

A
Back Panel x 1

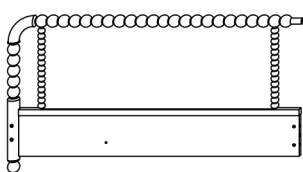

B
Side Panel (Left Hand) x 1

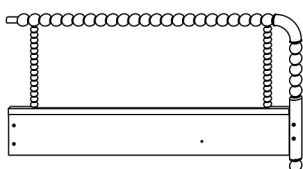

C
Side Panel (Right Hand) x 1



D
Back Panel Lower Post (Left Hand) x 1




E
Back Panel Lower Post (Right Hand) x 1



F
Side Panel Lower Post x 2




G
Center Post x 1

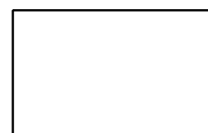


H Drawer Bottom x 3

Parts in Box B:




J Drawer Face x 3




K Drawer Back x 3



L Drawer Rail x 3

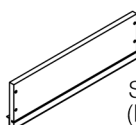

M
Drawer Side Panel (Left Hand) x 3

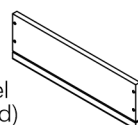

N
Drawer Side Panel (Right Hand) x 3



O Back Side Rail x 1



P Front Side Rail x 1



Q Long Support x 1



R Support Rail x 1



S Support Leg x 4



T Support Bar (Left Hand) x 1



U Support Bar (Center) x 2



V Support Bar (Right Hand) x 1


0110-7 Full Daybed

Assembly Instructions

WI-1225

1 Parts List

Parts in Box C:

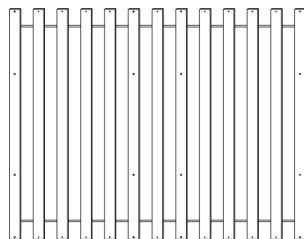

W
Set of
Bed Slats
x 1


2 Hardware List




1 M6 x
100mm JCB
x 4



2 M6 x
90mm JCB
x 4




3 M6 x
40mm JCB
x 22



4 M6 x
30mm JCB
x 6



5 M6 x
15mm
JCB x 4



6 Adjustable
Foot x 4



7 Wood Dowel
(10 x 40mm) x 4



8 Wood Dowel
(8 x 30mm) x 4



9 Wood Dowel
(6 x 25mm) x 12



10 Barrel Nut
x 8



11 Wood Screw
(M4 x 32mm) x 20



12 Wood Screw
(M4 x 25mm) x 30



13 'L' Bracket
(5005-3) x 2



14 Spring
Washer x 4



15 Flat
Washer x 4



16 M4 x 25mm
Bolt x 3




17 Wood Knobs
(9901) x 3



18 Long Allen
Key x 1

3 Assemble the Drawer Sides (M & N) & Drawer Rail (L) to the Drawer Face (J).

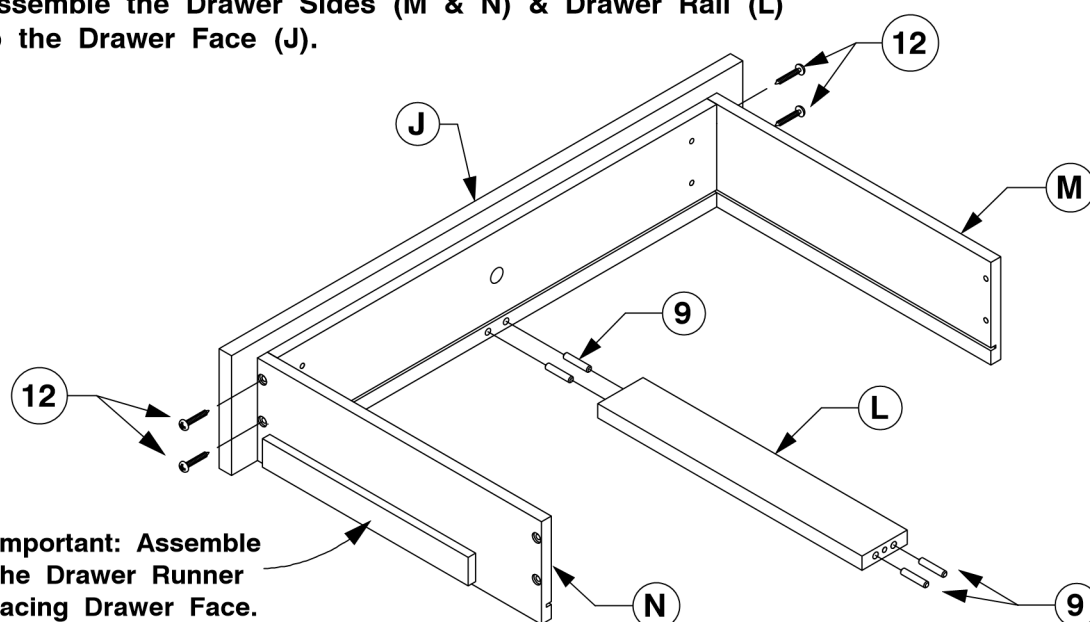

Important: Assemble the Drawer Runner facing Drawer Face.


x3

0110-7 Full Daybed

Assembly Instructions


WI-1225

- 4** Slide the Drawer Bottom (H) into the groove on the Drawer Sides (M & N).

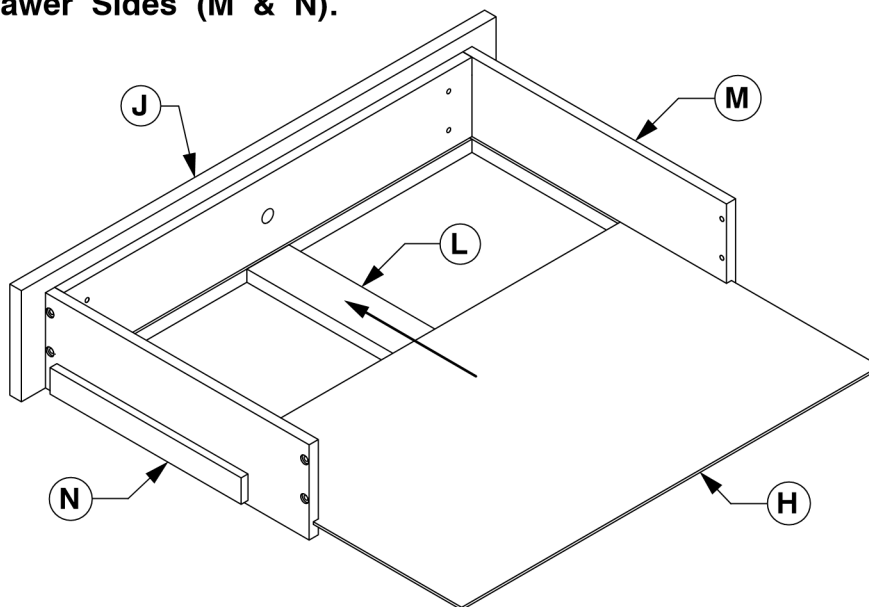


x3

- 5** Assemble the Drawer Back (K) to the Drawer Sides (M & N). Fit the Handles to the Drawer Face (J).

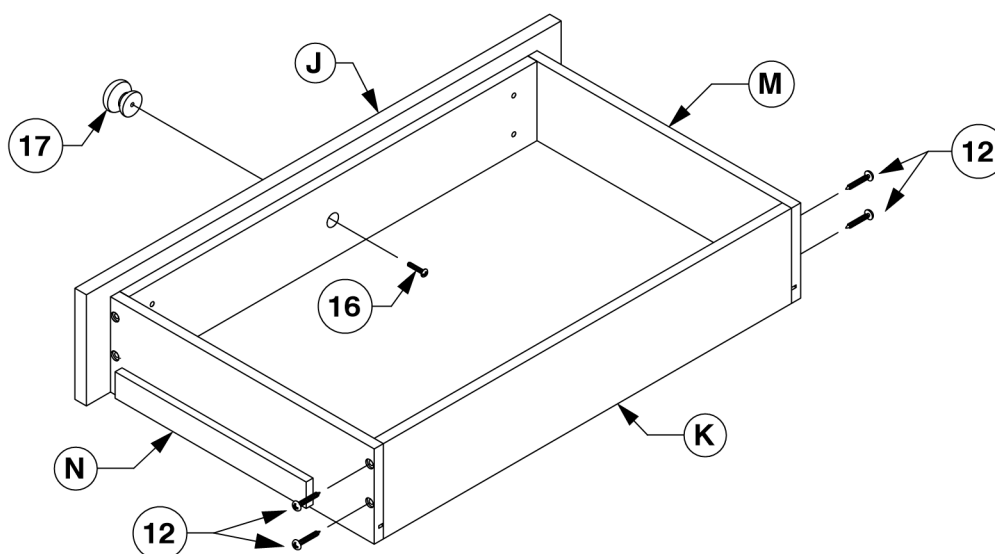

x3

- 6** Turn the Drawer over to fit angled 25mm Wood screws (12) to the Drawer Rail (L).

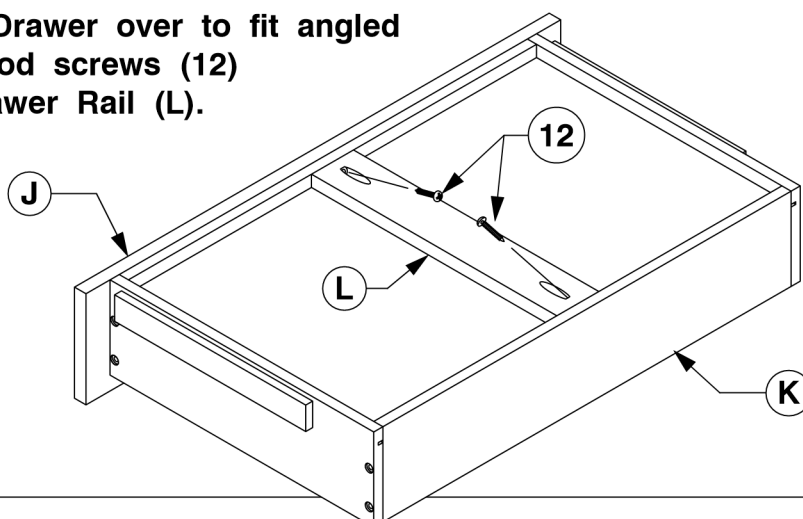


x3

0110-7 Full Daybed

Assembly Instructions

WI-1225


- 7** Fix the Adjustable foot to the bottom of the Support Leg (S).

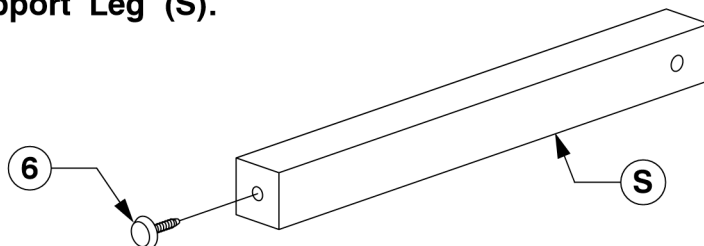


x4

- 8** Fit the Side Panel Lower Post (F) to the Side Panel Left & Right (B & C).

LEFT HAND

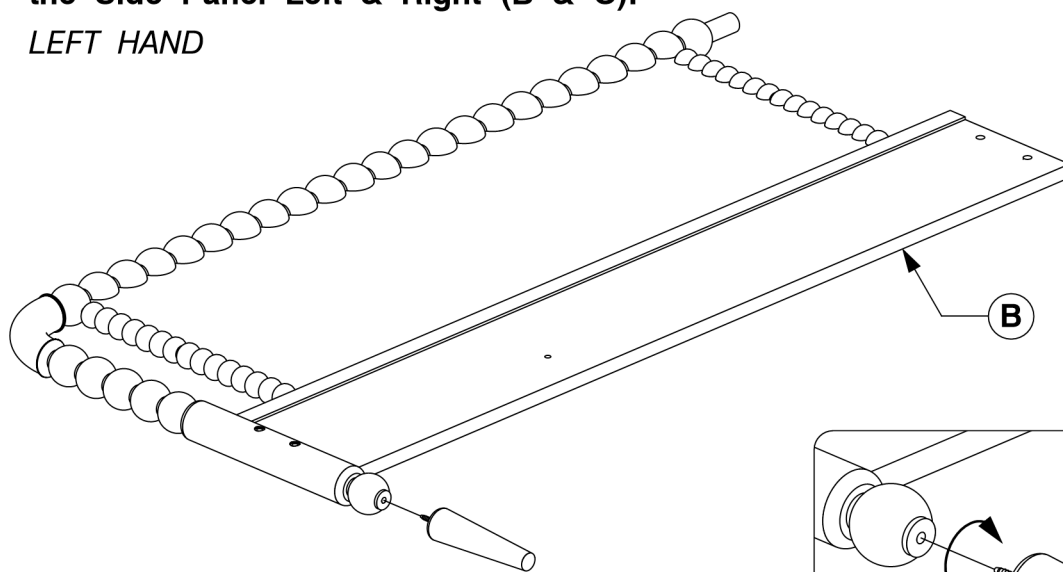

RIGHT HAND

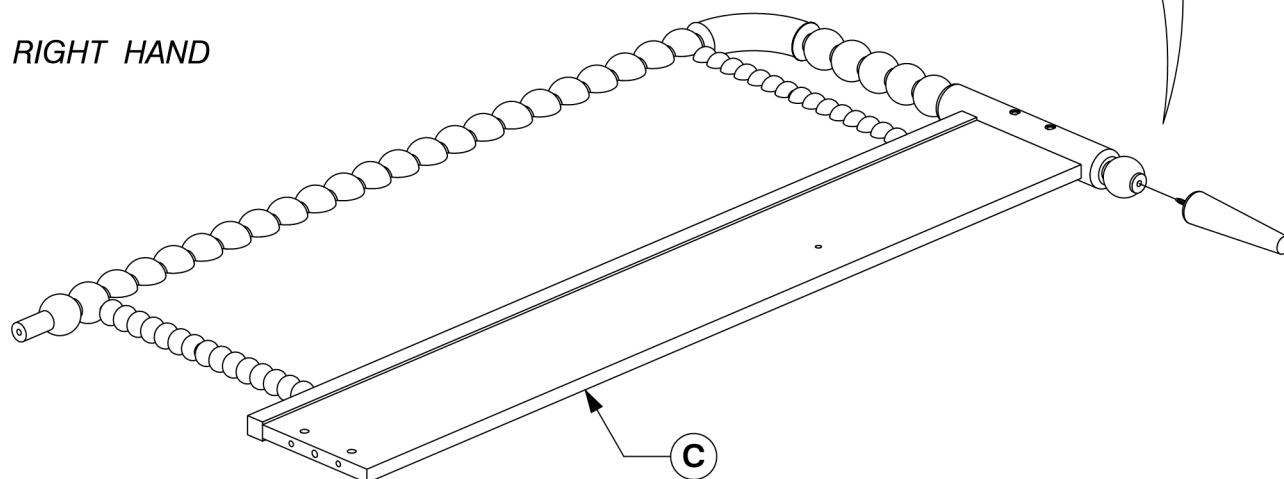


0110-7 Full Daybed

Assembly Instructions


WI-1225

- 9 Assemble the Back Side Rail (O) to the Back Panel Lower Post (D & E).**

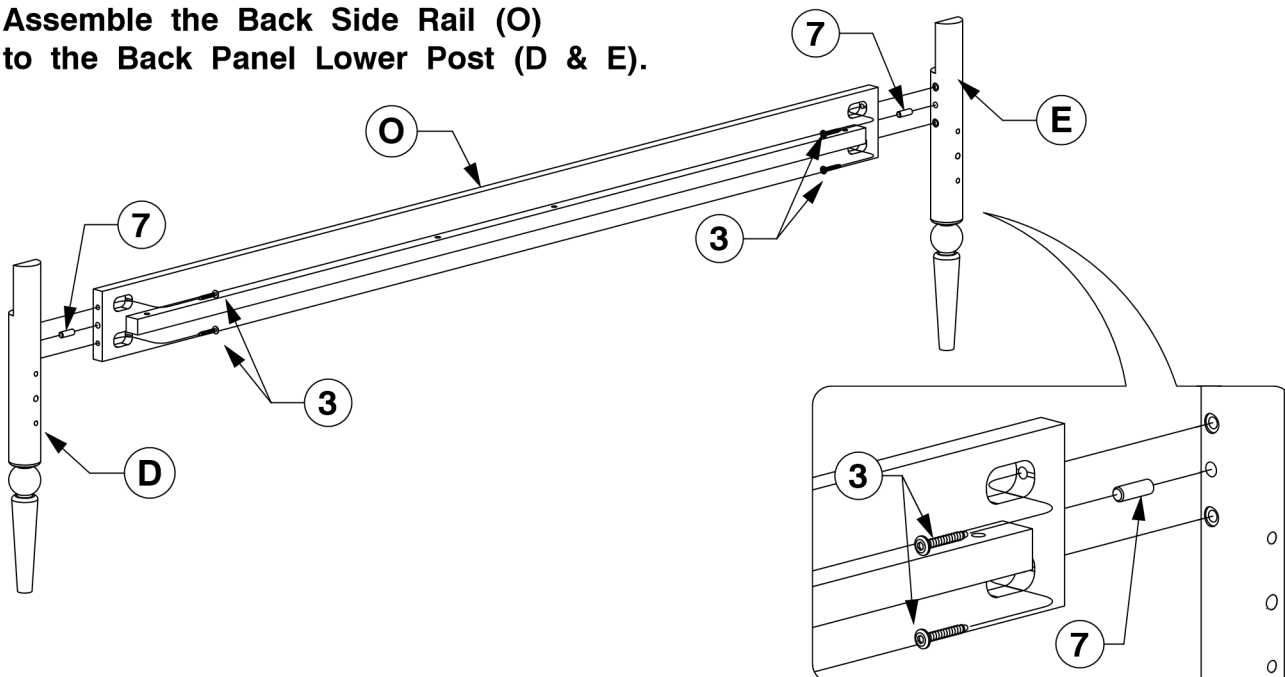


Step 1

Use the **ball end** of Allen key to start the bolt.

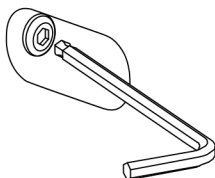


Step 2

Tighten fully with the **straight end**.

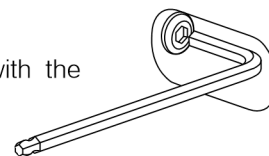

- 10 Assemble the Back Panel (A) to the Back Panel Lower Post (D & E).**

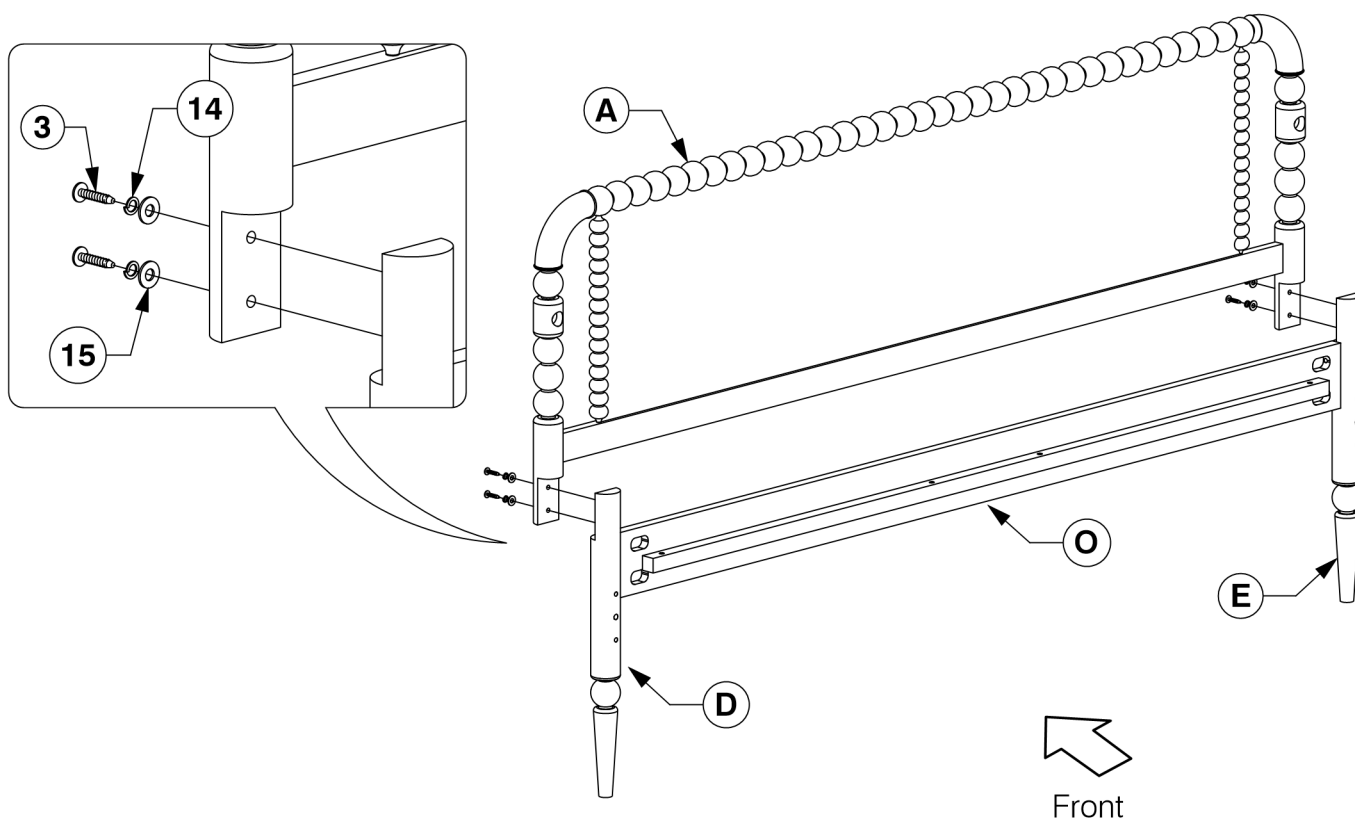


0110-7 Full Daybed


Assembly Instructions

WI-1225


- 11** Fit the 'L' Bracket (13) to the Support Rail (R).

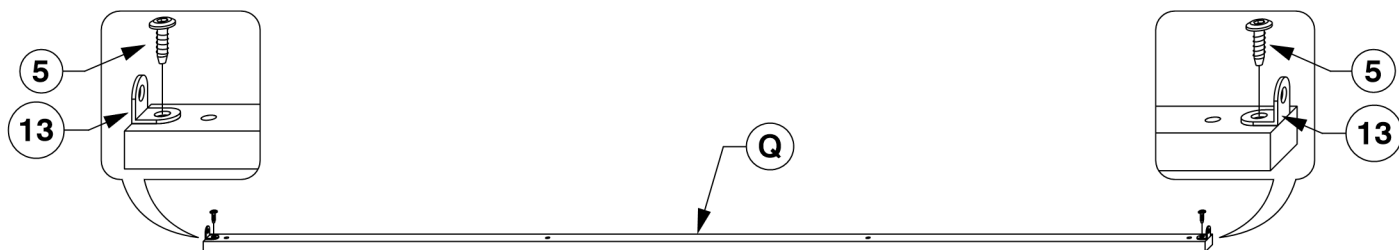

- 12** Fit the Front Side Rail (P) & Support Rail (R) to the Support Bar (T, U, & V).

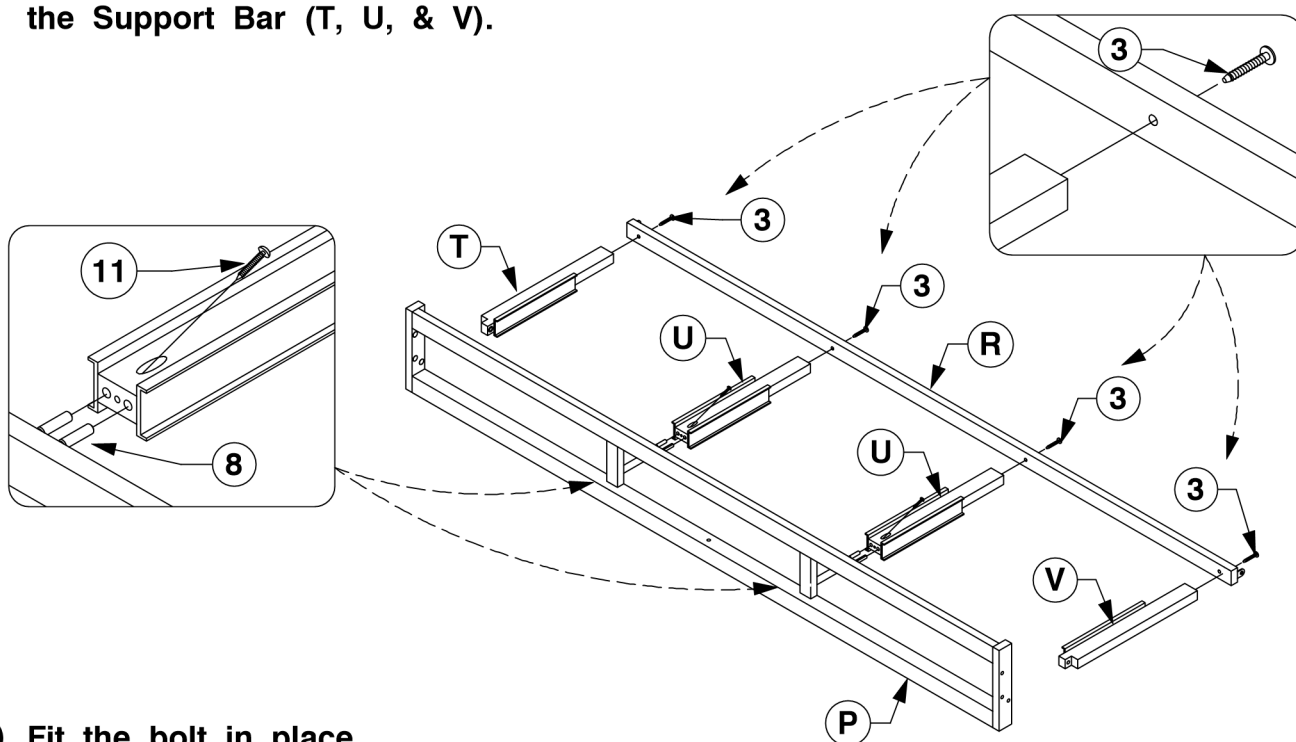

- 13** Fit the bolt in place.

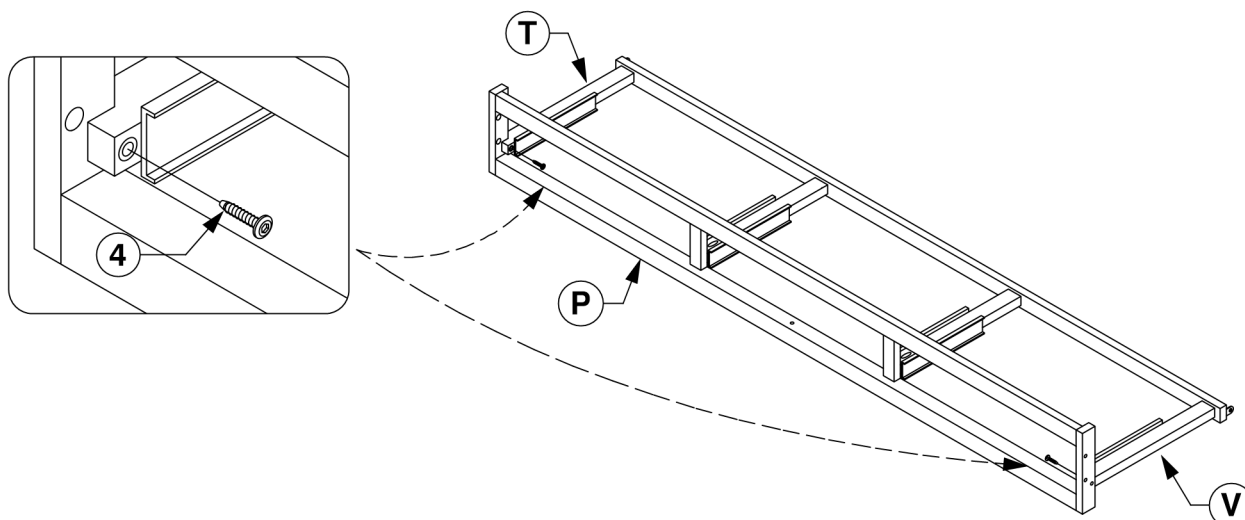


0110-7 Full Daybed


Assembly Instructions

WI-1225

- 14** Assemble the Side Panel (B & C) to the Back Panel (A) & Back Panel Lower Post (D & E).

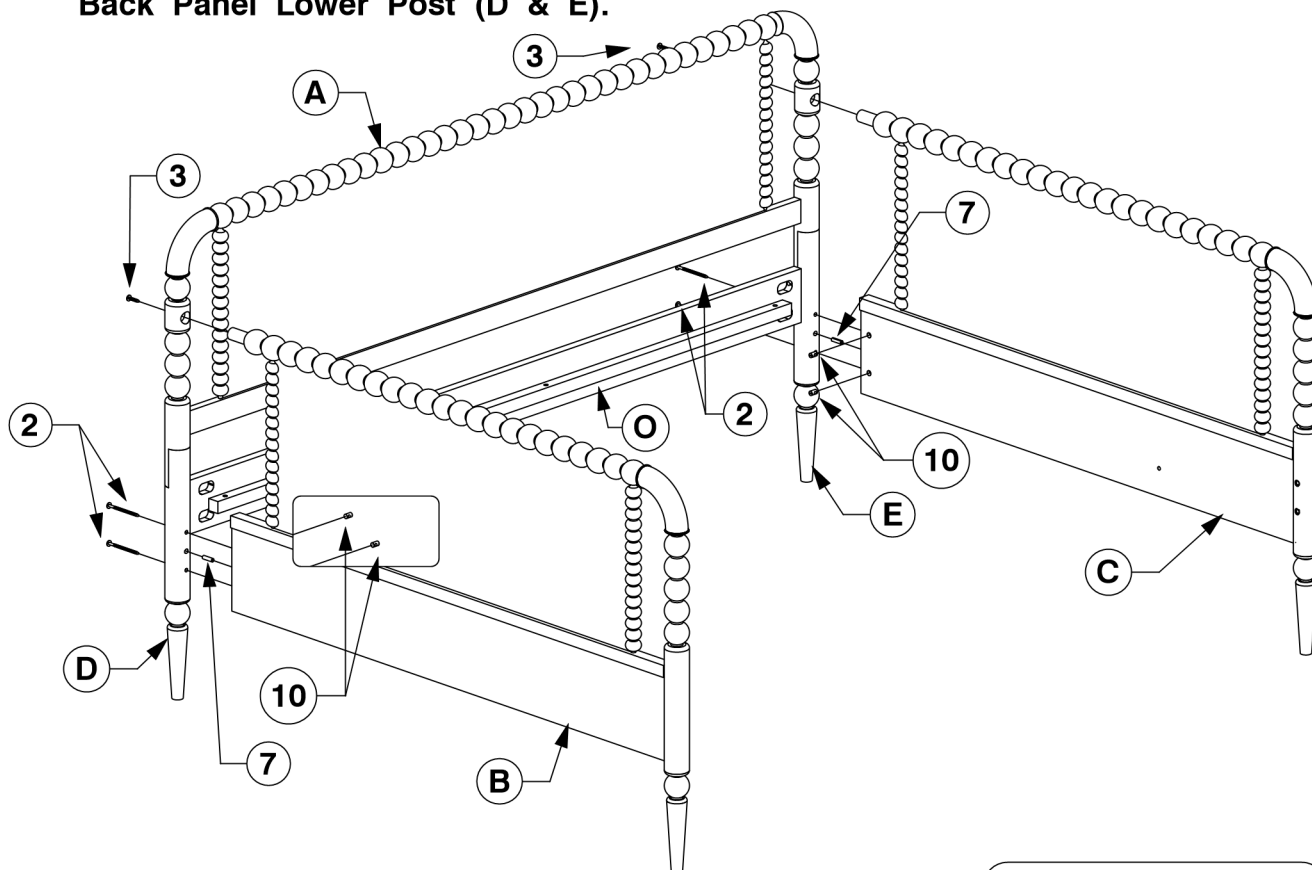

- 15** Attach Front Side Rail (P) & Support Rail (R) to the Side Panel (B & C).


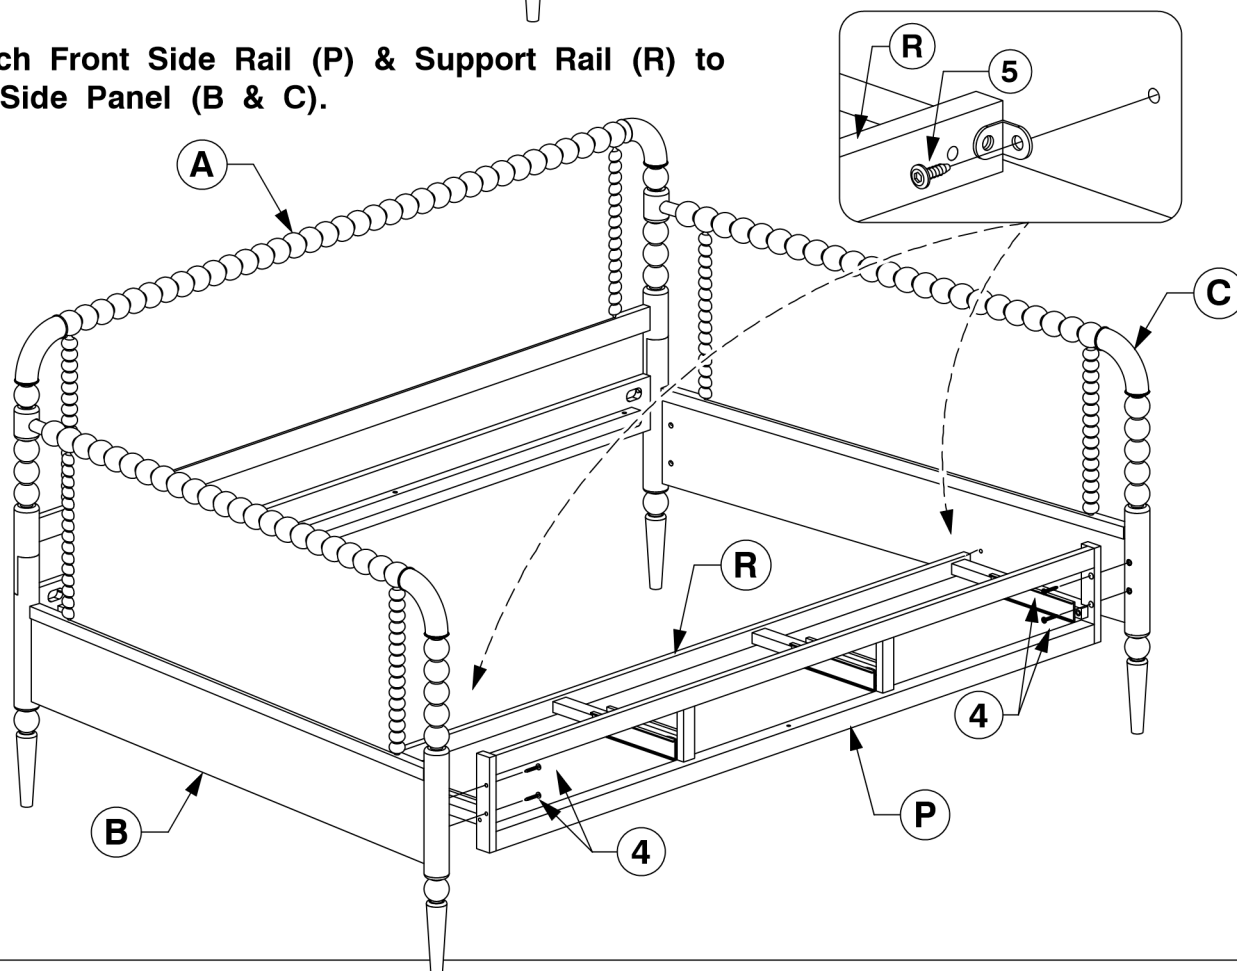


0110-7 Full Daybed


Assembly Instructions

WI-1225

- 16** Lift the Front Side Rail (P) and fit the Post (G) under the Front Side Rail (P).

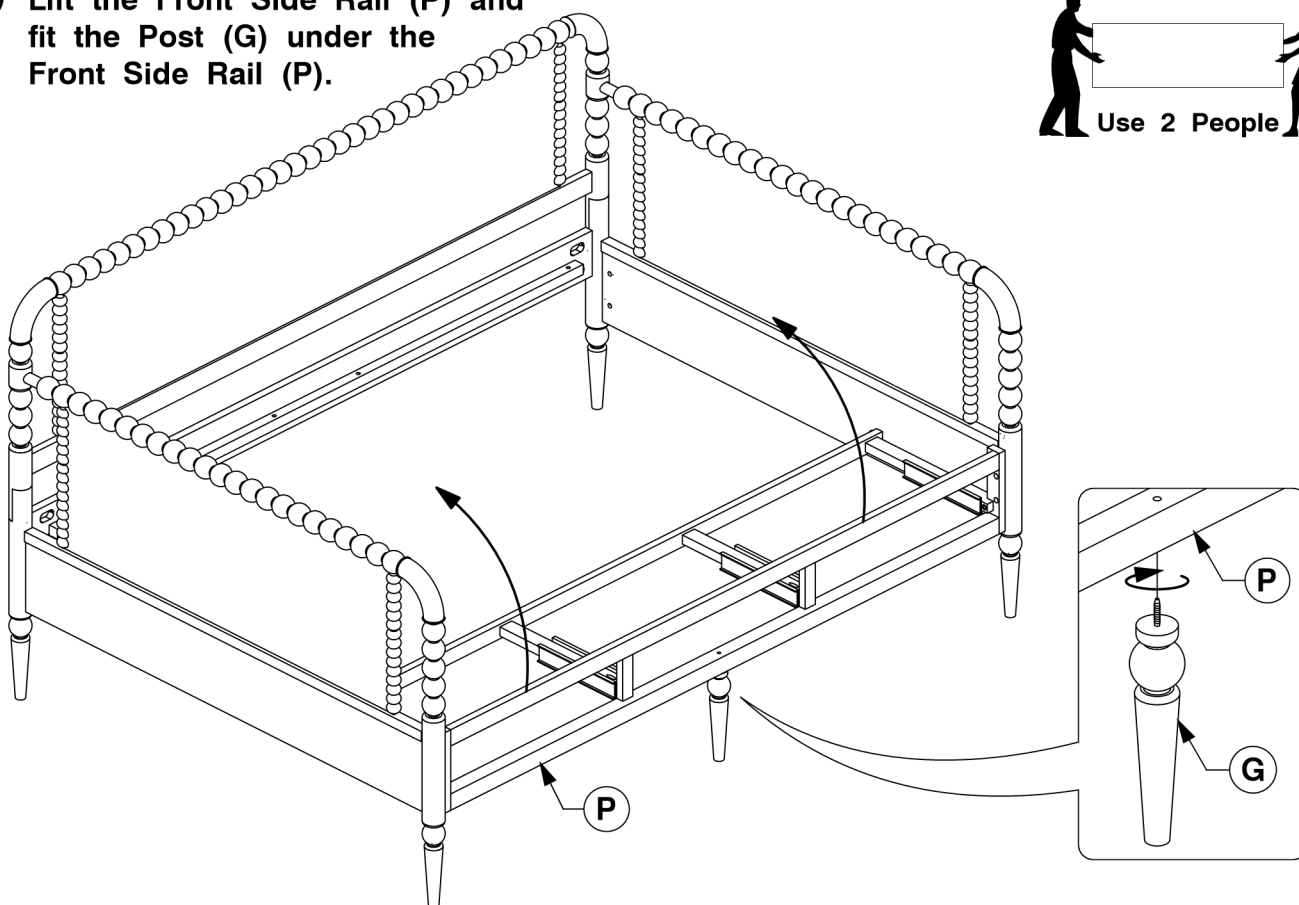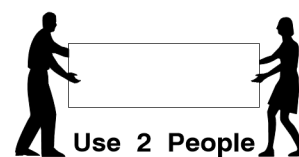

- 17** Fit the first Slat and assemble the Support Leg (S) to the Bed Slats (W). Bolt the Bed Slats (W) to the Front & Back Side Rail (O & P) & Long Support (Q).


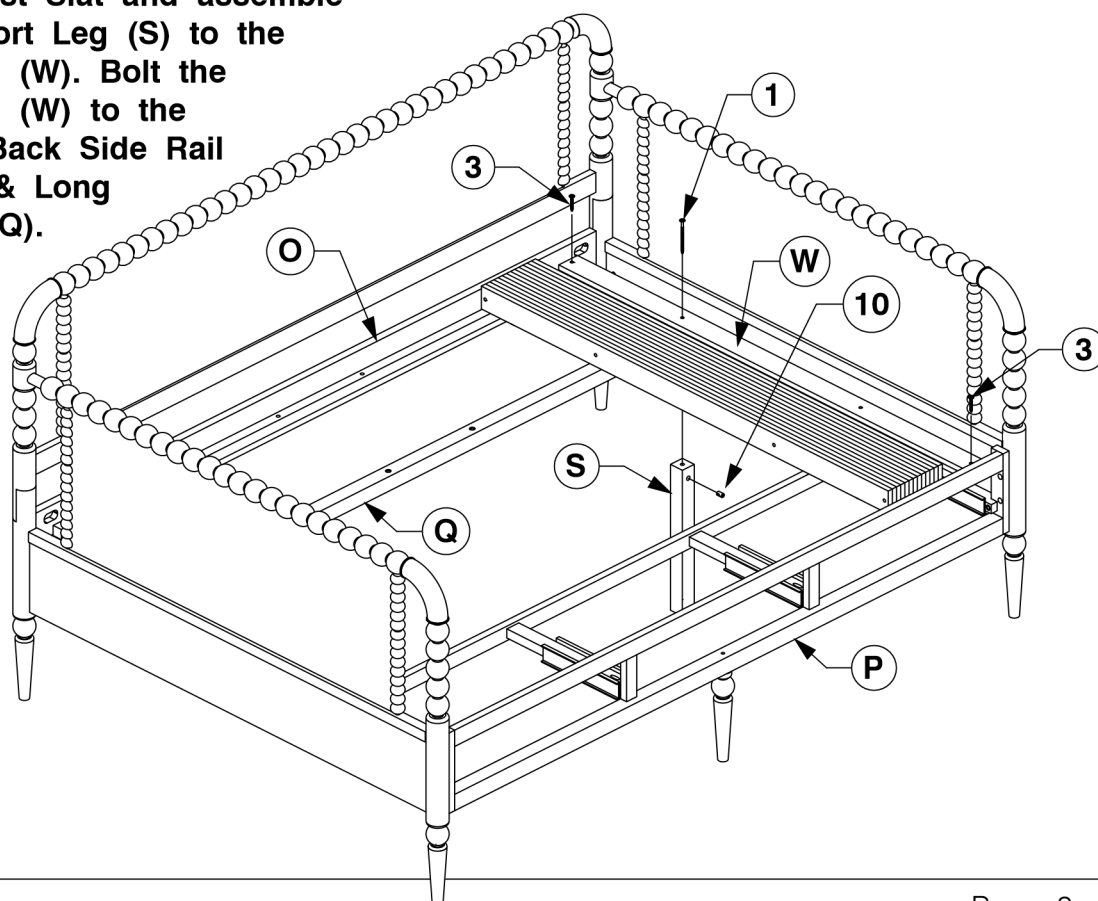


0110-7 Full Daybed


Assembly Instructions

WI-1225

- 18** Fit the other Slats out and assemble the Support Leg (S) to the Bed Slats (W). Bolt & screw the Bed Slats (W) to the Front & Back Side Rail (O & P) & Long Support (Q).

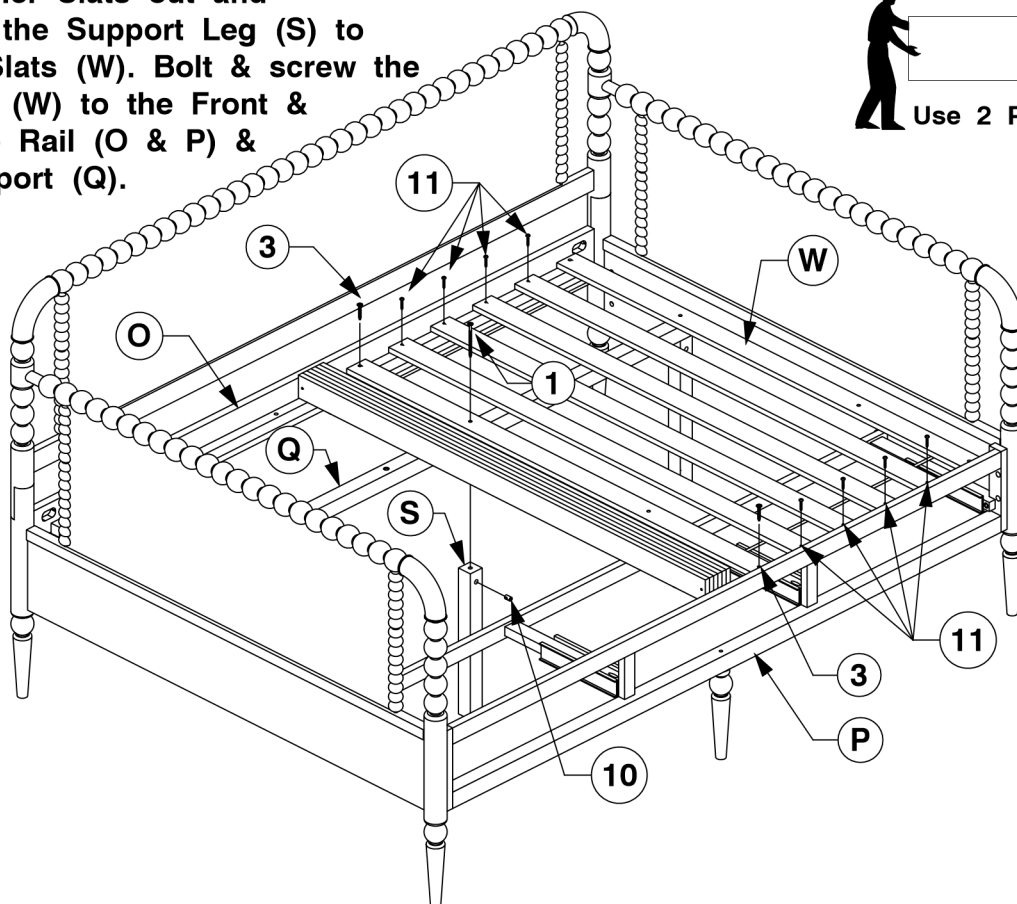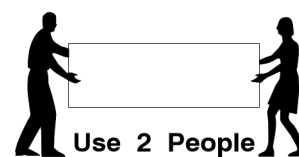

- 19** Fit the other Slats out and assemble the Support Leg (S) to the Bed Slats (W). Bolt & screw the Bed Slats (W) to the Front & Back Side Rail (O & P) & Long Support (Q).


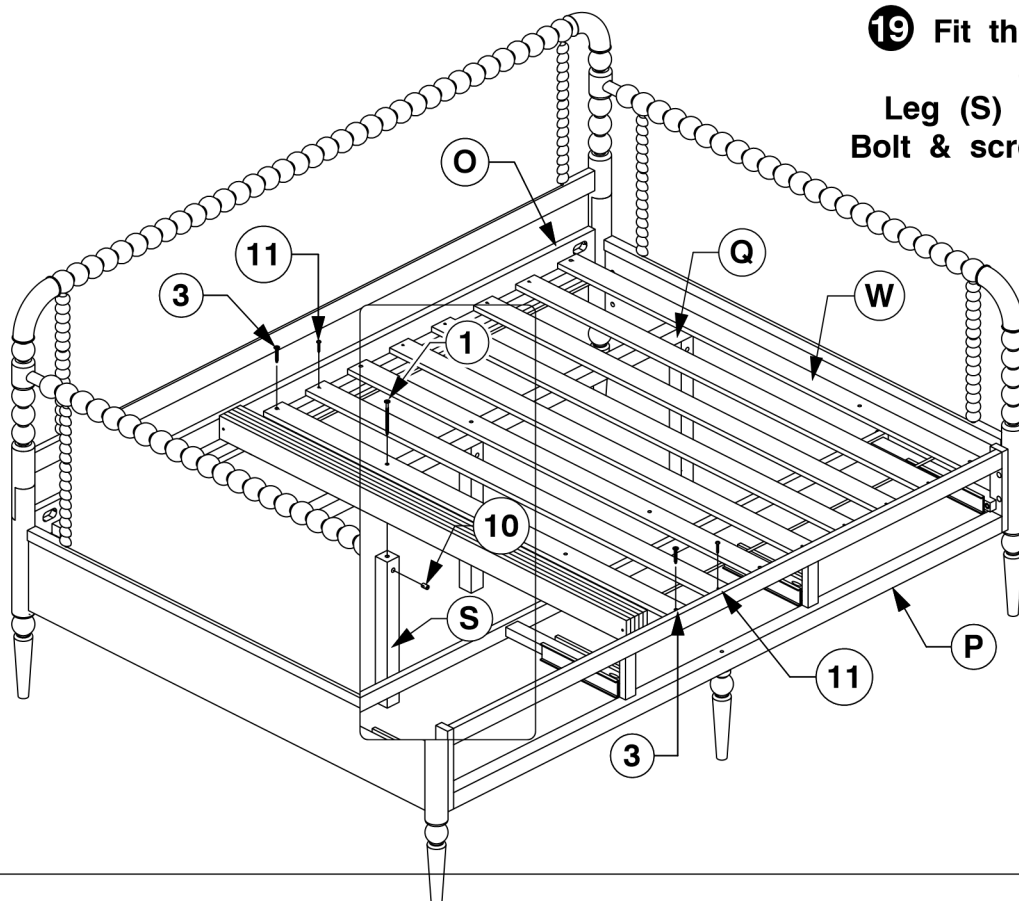


0110-7 Full Daybed

Assembly Instructions

WI-1225

- 20** Fit the Slats out and assemble the Support Leg (S) to the Bed Slats (W). Bolt & screw the remaining Bed Slats (W) to the Front & Back Side Rail (O & P) & Long Support (Q).

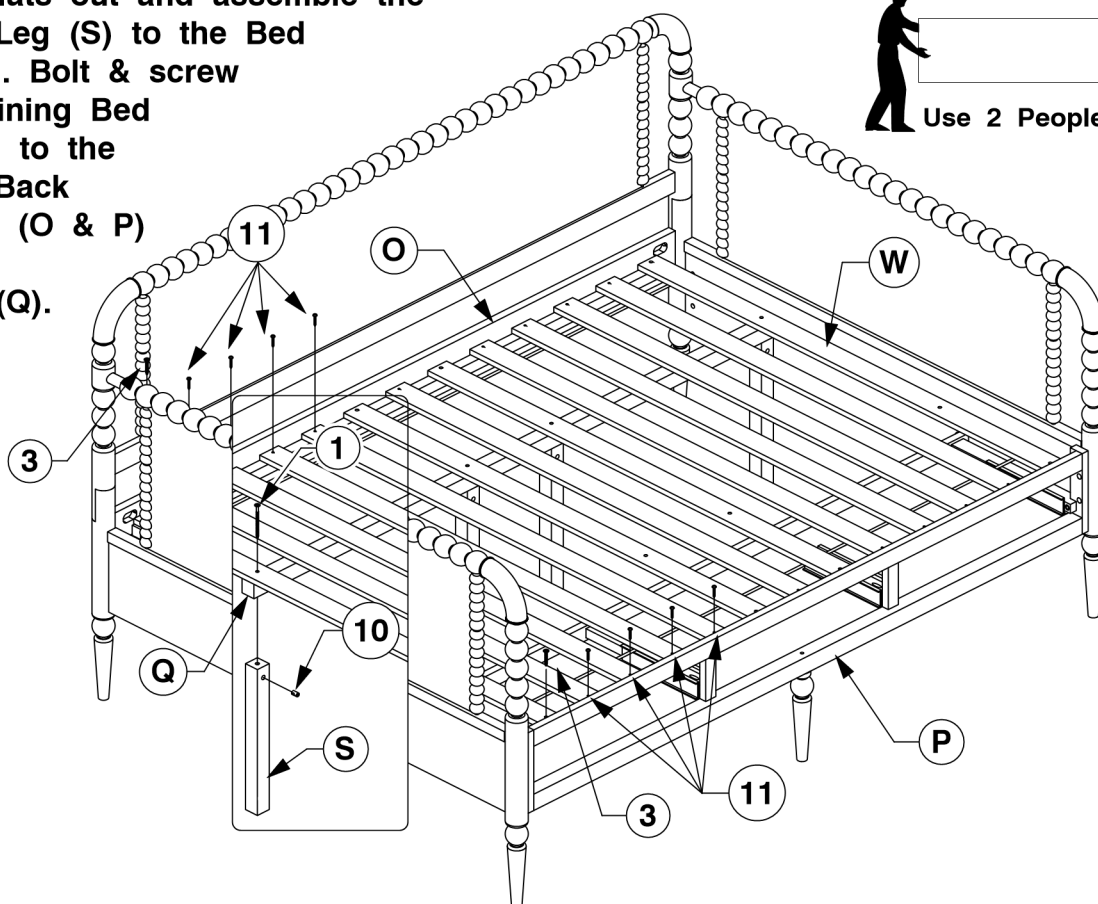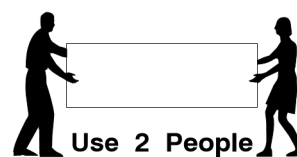

- 21** Finally, fit the assembled drawers.

