
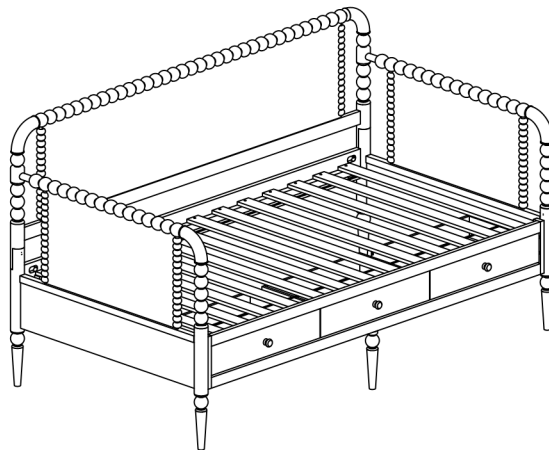


0110-7 Twin Daybed

Assembly Instructions


WI-1225

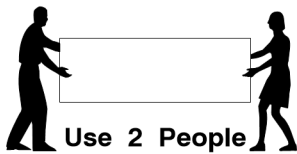


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List


Parts in Box A:

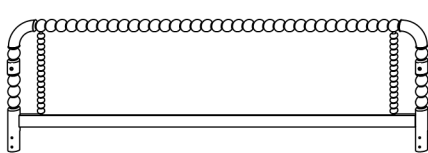

A
Back Panel x 1

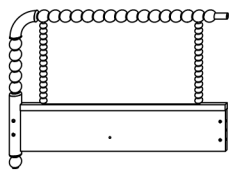

B
Side Panel (Left Hand) x 1

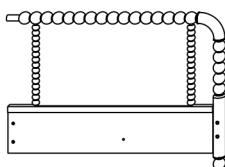

C
Side Panel (Right Hand) x 1



D
Back Panel Lower Post (Left Hand) x 1




E
Back Panel Lower Post (Right Hand) x 1



F
Side Panel Lower Post x 2




G
Center Post x 1

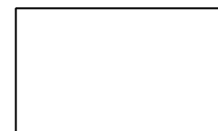

H Drawer Bottom x 3

Parts in Box B:




J Drawer Face x 3




K Drawer Back x 3



L Drawer Rail x 3

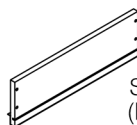


M Drawer Side Panel (Left Hand) x 3

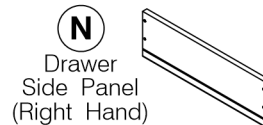

N Drawer Side Panel (Right Hand) x 3




O Back Side Rail x 1




P Front Side Rail x 1




Q Support Rail x 1



R Support Bar (Left Hand) x 1



S Support Bar (Center) x 2



T Support Bar (Right Hand) x 1


0110-7 Twin Daybed

Assembly Instructions

WI-1225

1 Parts List

Parts in Box C:

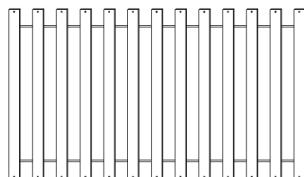

U
Set of
Bed Slats
x 1


2 Hardware List



1 M6 x
90mm JCB
x 4



2 M6 x
40mm JCB
x 22



3 M6 x
30mm JCB
x 6



4 M6 x
15mm
JCB **x 4**



5 Wood Dowel
(10 x 40mm) **x 4**




6 Wood Dowel
(8 x 30mm) **x 4**




7 Wood Dowel
(6 x 25mm) **x 12**



8 Barrel Nut
x 4



9 Wood Screw
(M4 x 32mm) **x 20**



10 Wood Screw
(M4 x 25mm) **x 30**



11 'L' Bracket
(5005-3) **x 2**



12 Spring
Washer **x 4**



13 Flat
Washer **x 4**



14 M4 x 25mm
Bolt **x 3**




15 Wood Knobs
(9901) **x 3**



16 Long Allen
Key **x 1**

3 Assemble the Drawer Sides (M & N) & Drawer Rail (L) to the Drawer Face (J).

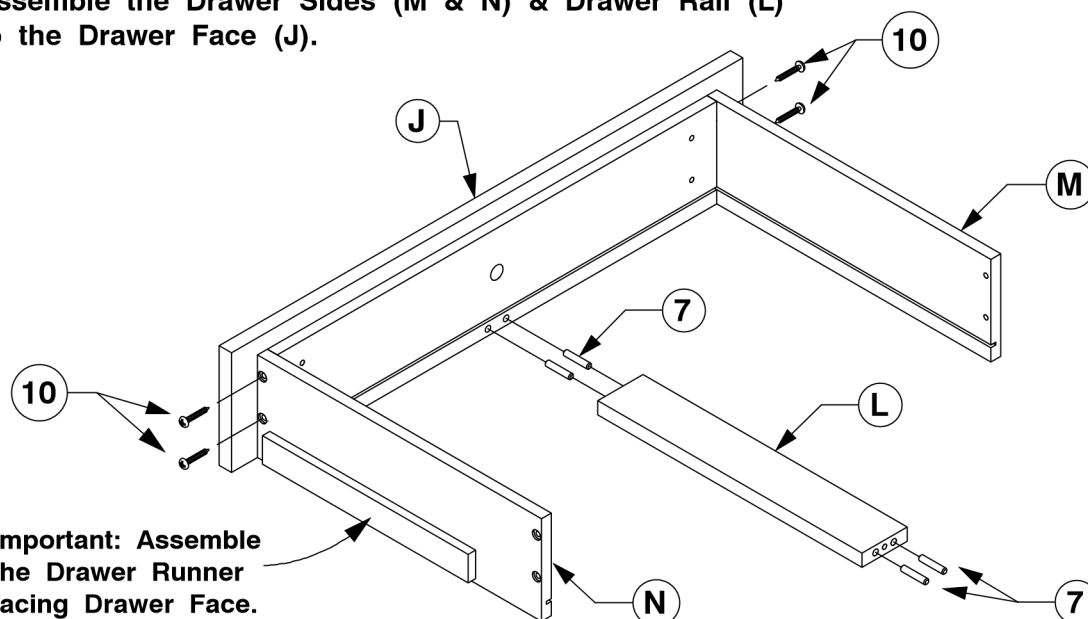


x3

0110-7 Twin Daybed


Assembly Instructions

WI-1225


- 4** Slide the Drawer Bottom (H) into the groove on the Drawer Sides (M & N).

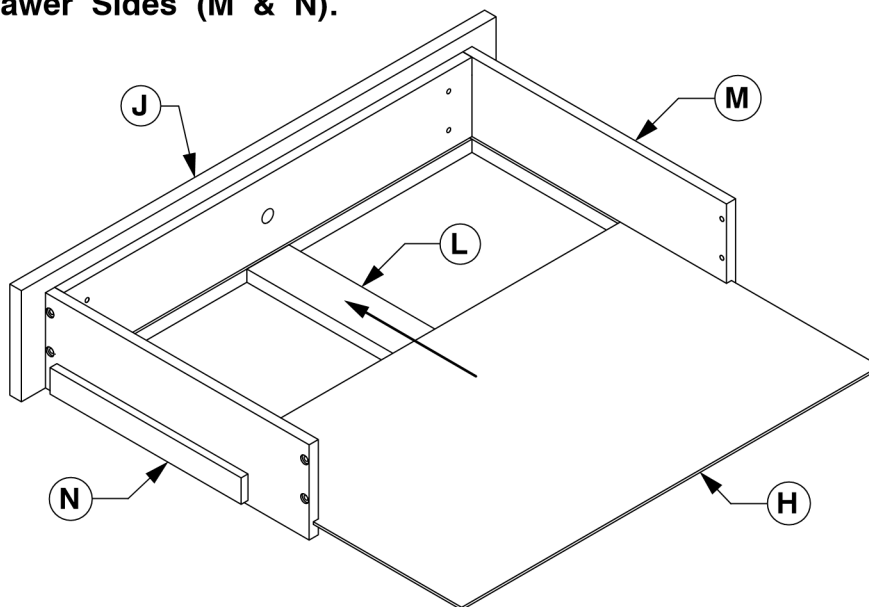

- 5** Assemble the Drawer Back (K) to the Drawer Sides (M & N). Fit the Handles to the Drawer Face (J).

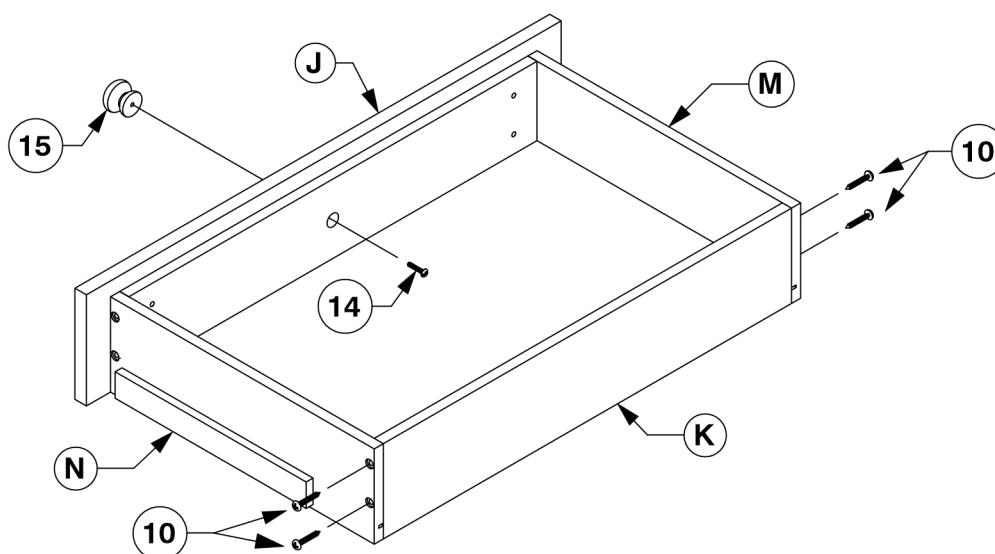

- 6** Turn the Drawer over to fit angled 25mm Wood screws (10) to the Drawer Rail (L).

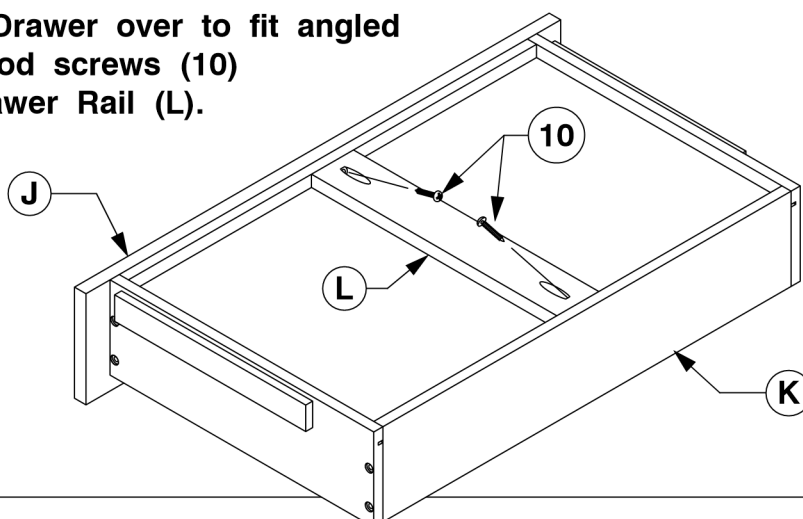



0110-7 Twin Daybed

Assembly Instructions


WI-1225

- 7** Fit the Side Panel Lower Post (F) to the Side Panel Left & Right (B & C).

LEFT HAND

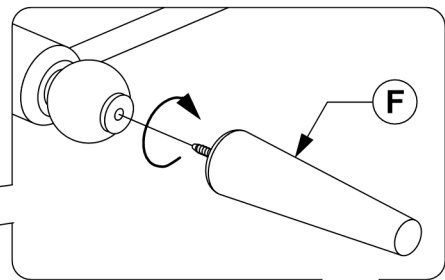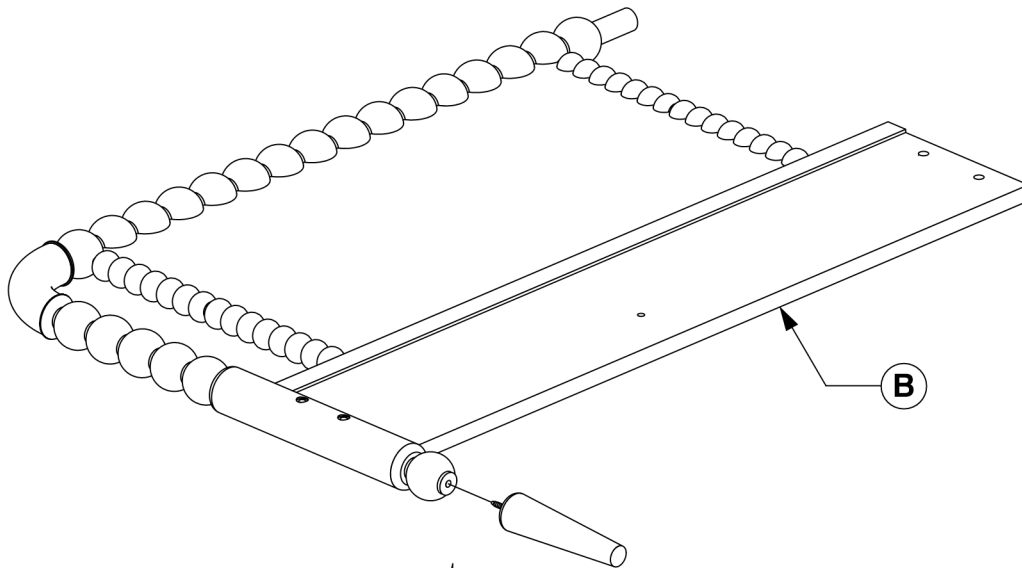

RIGHT HAND

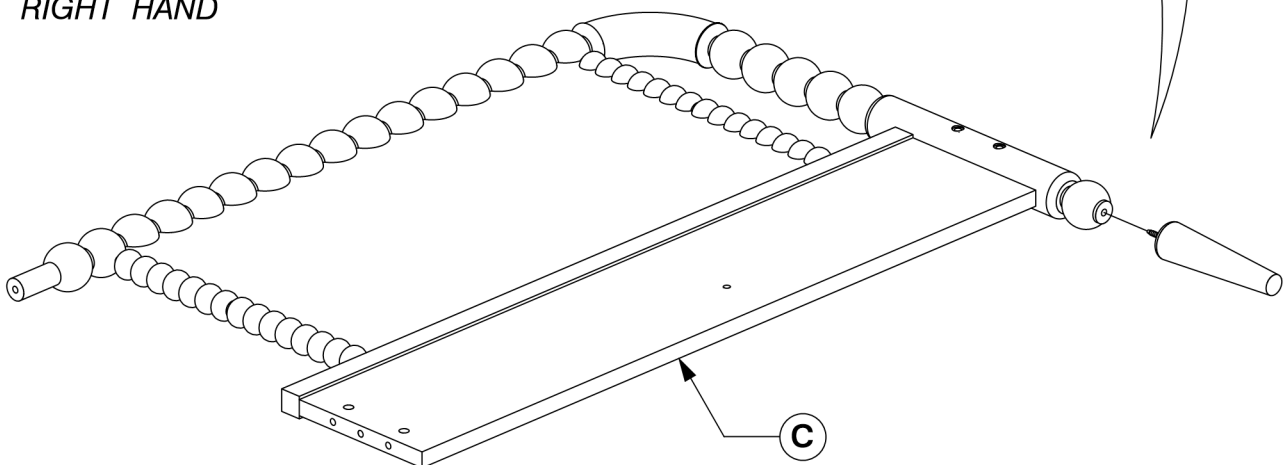


0110-7 Twin Daybed

Assembly Instructions


WI-1225

- 8 Assemble the Back Side Rail (O) to the Back Panel Lower Post (D & E).**

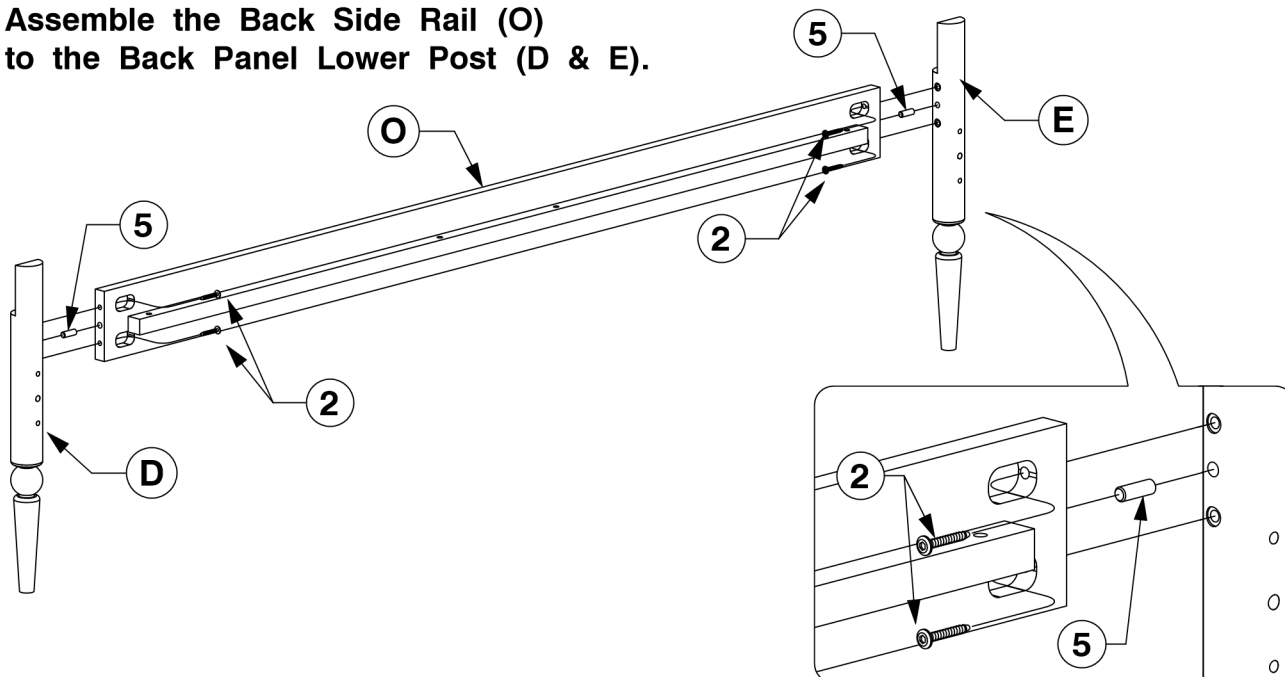


Step 1

Use the ***ball end*** of Allen key to start the bolt.

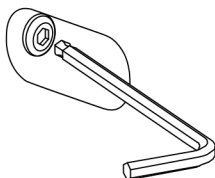


Step 2

Tighten fully with the ***straight end***.

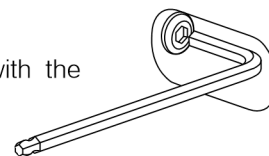

- 9 Assemble the Back Panel (A) to the Back Panel Lower Post (D & E).**

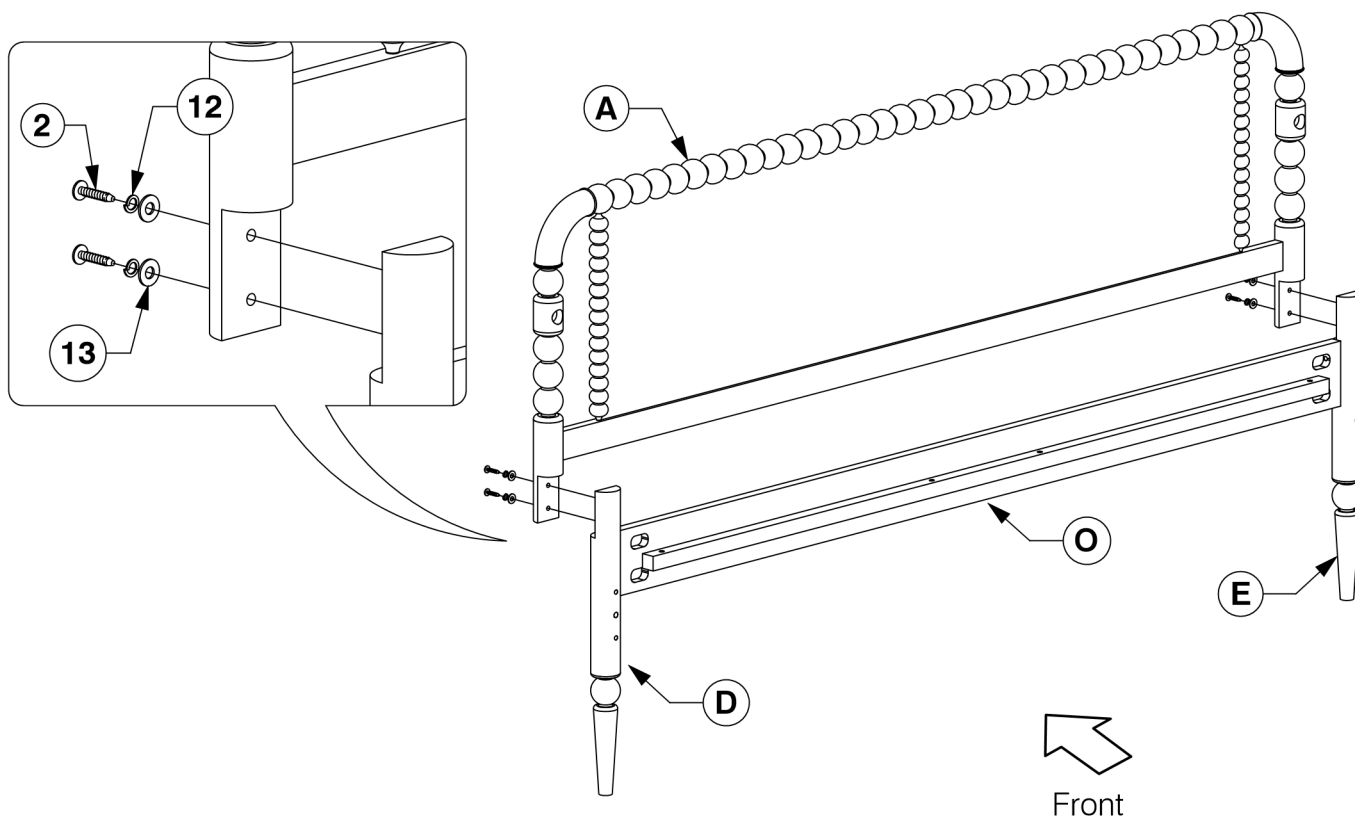


0110-7 Twin Daybed


Assembly Instructions

WI-1225


- 10** Fit the 'L' Bracket (11) to the Support Rail (Q).

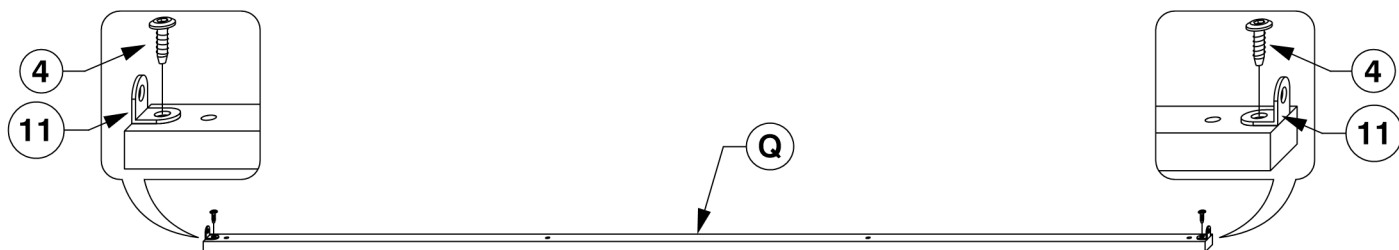

- 11** Fit the Front Side Rail (P) & Support Rail (Q) to the Support Bar (R, S, & T).

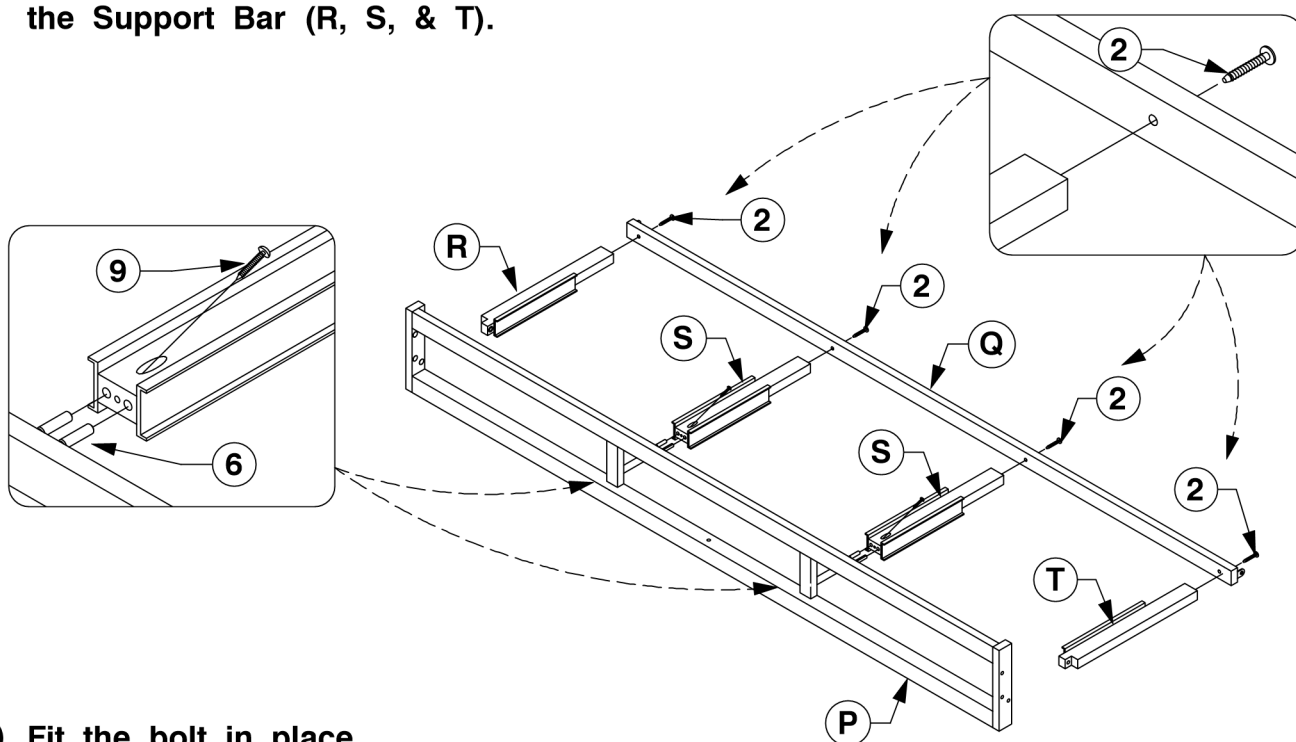

- 12** Fit the bolt in place.

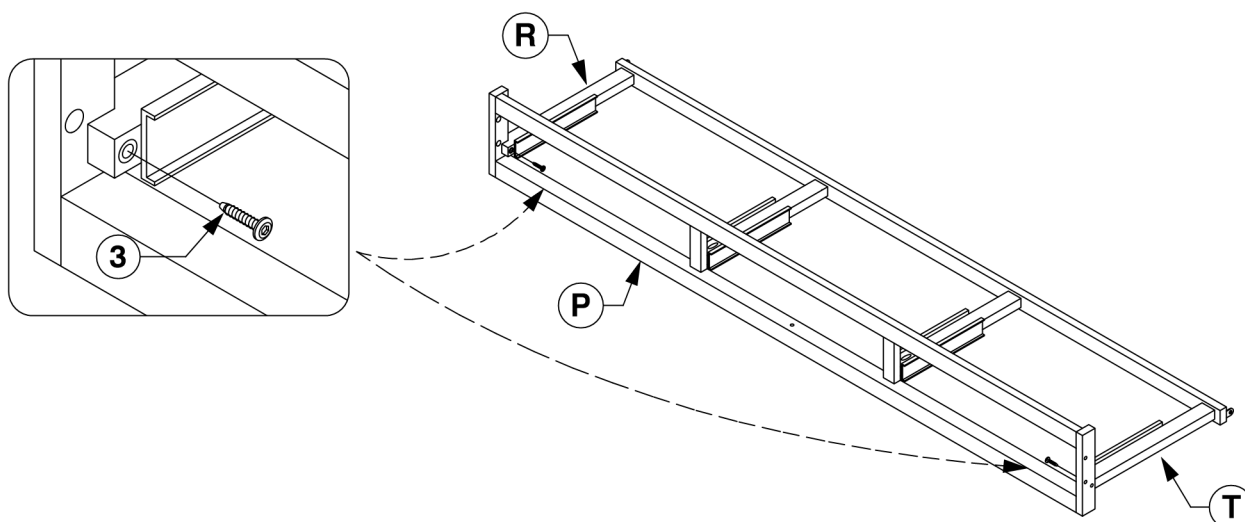


0110-7 Twin Daybed


Assembly Instructions

WI-1225

- 13** Assemble the Side Panel (B & C) to the Back Panel (A) & Back Panel Lower Post (D & E).

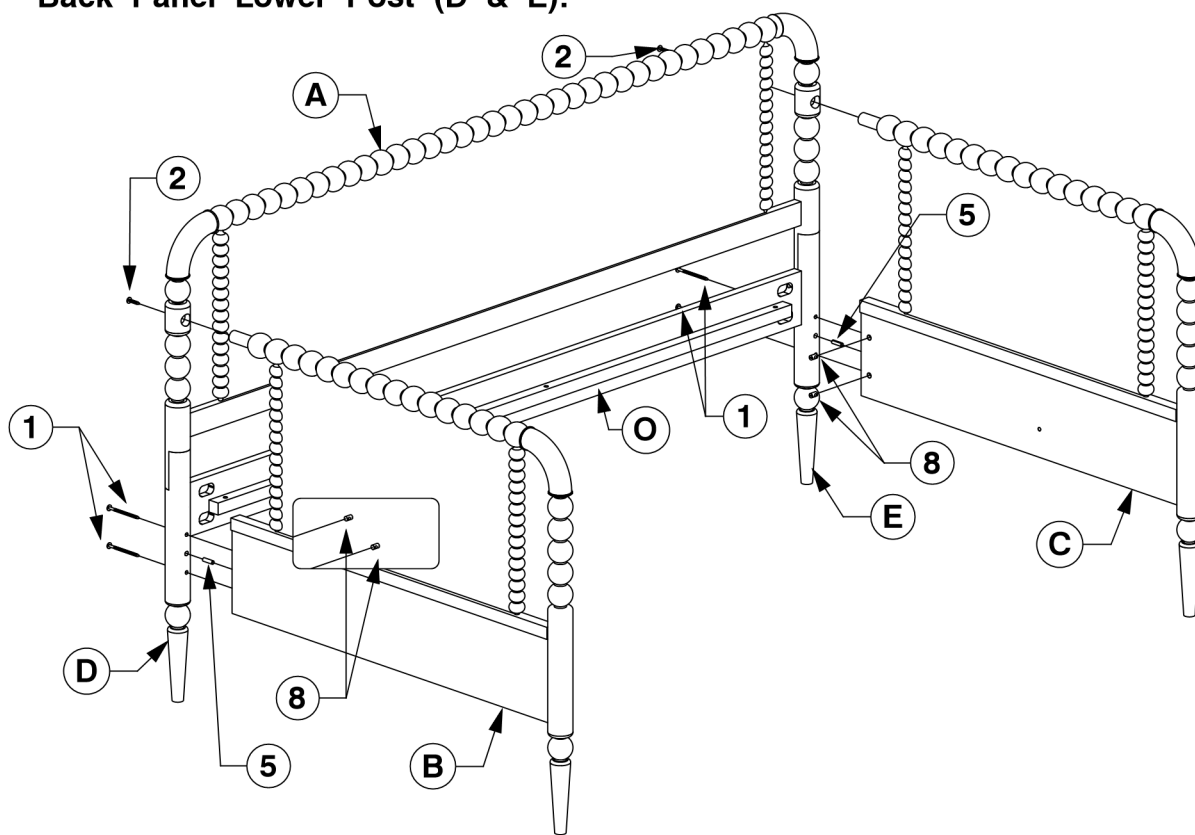

- 14** Attach Front Side Rail (P) & Support Rail (Q) to the Side Panel (B & C).

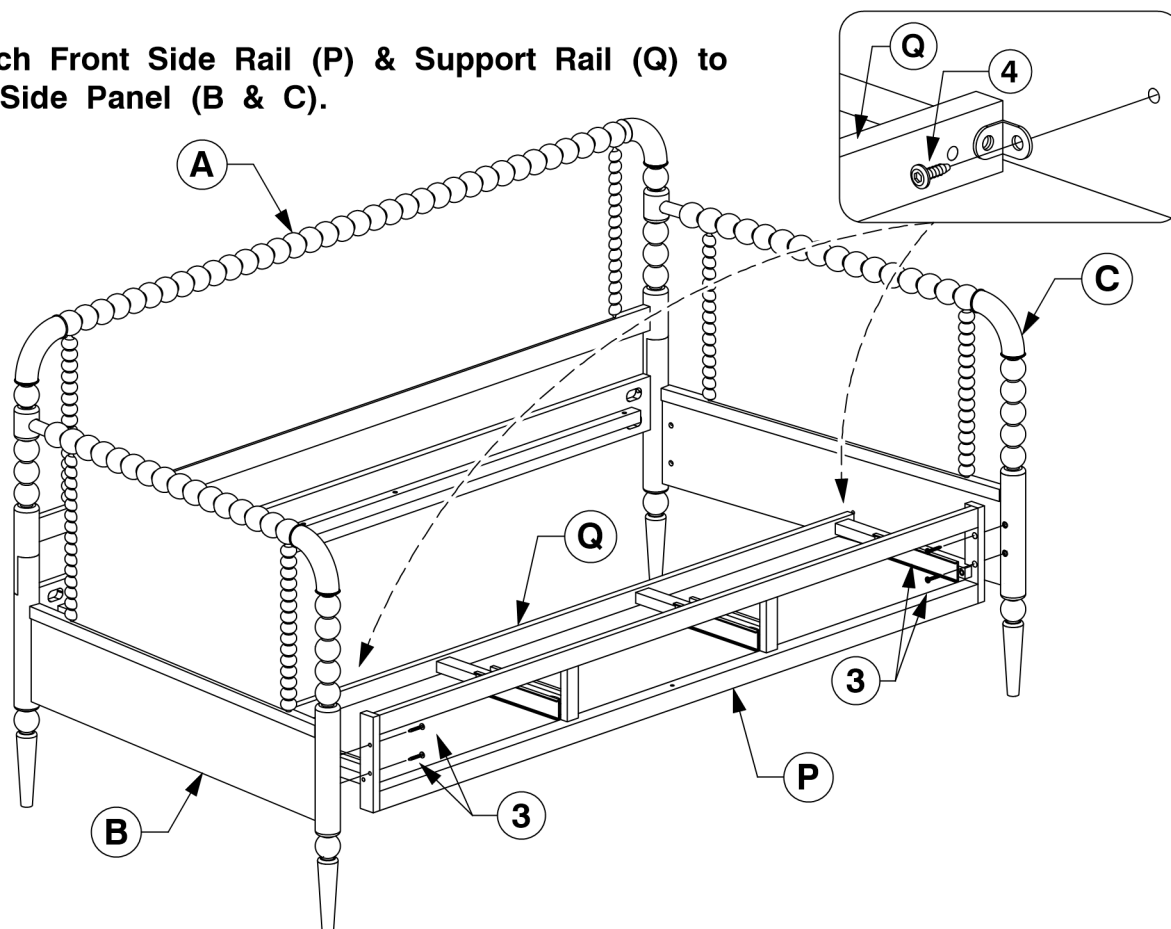


0110-8 Full Bed


Assembly Instructions

WI-1225

- 15** Assemble the Side Rail Frame (N) & Support Rail (P) to the Headboard Post (D & E), Headboard Lower Panel (C) & Footboard Panel (B).

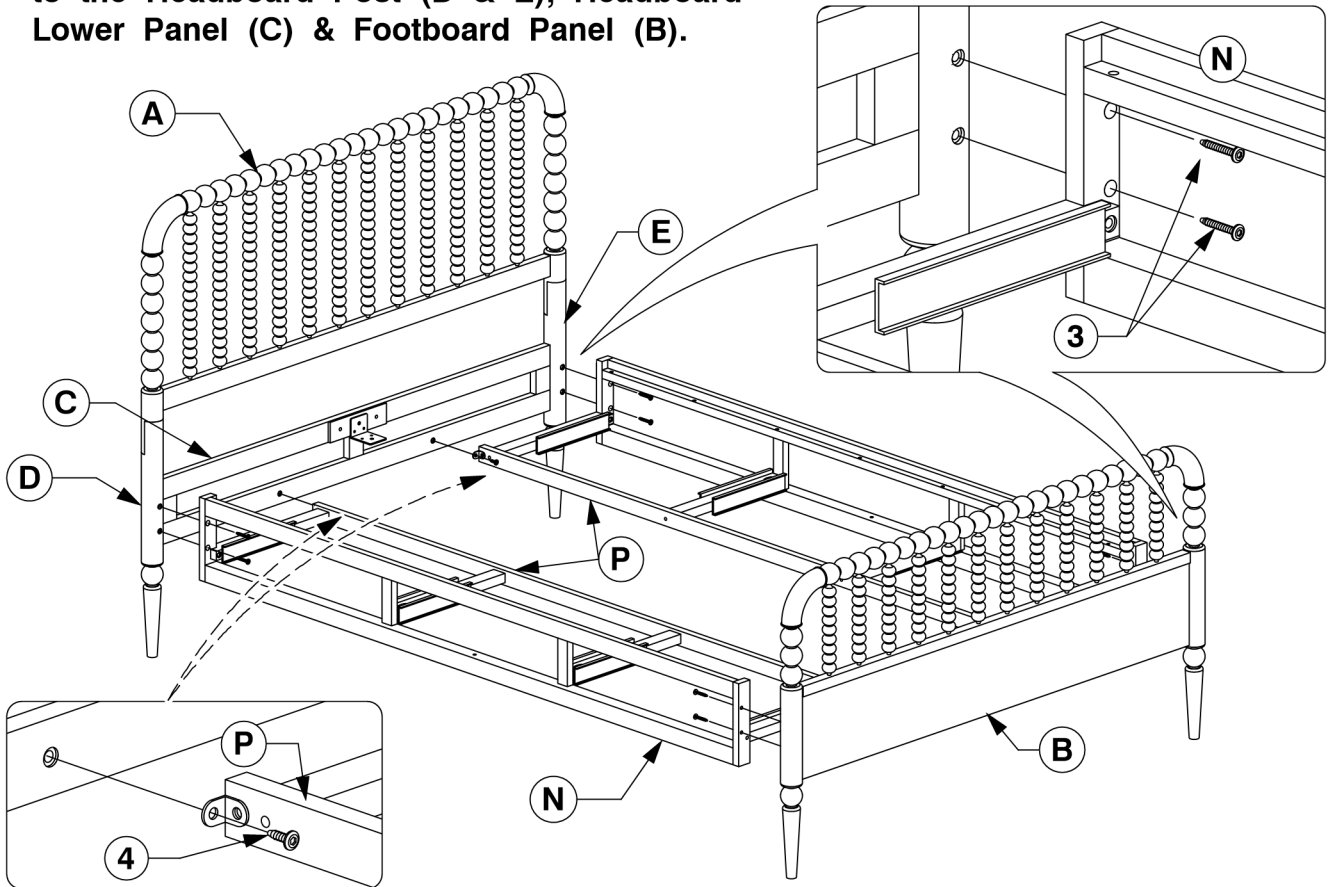

- 16** Lift the Side Rail Frame (N) on one side and fit the Post (F) under it. Repeat the same step on the other side.

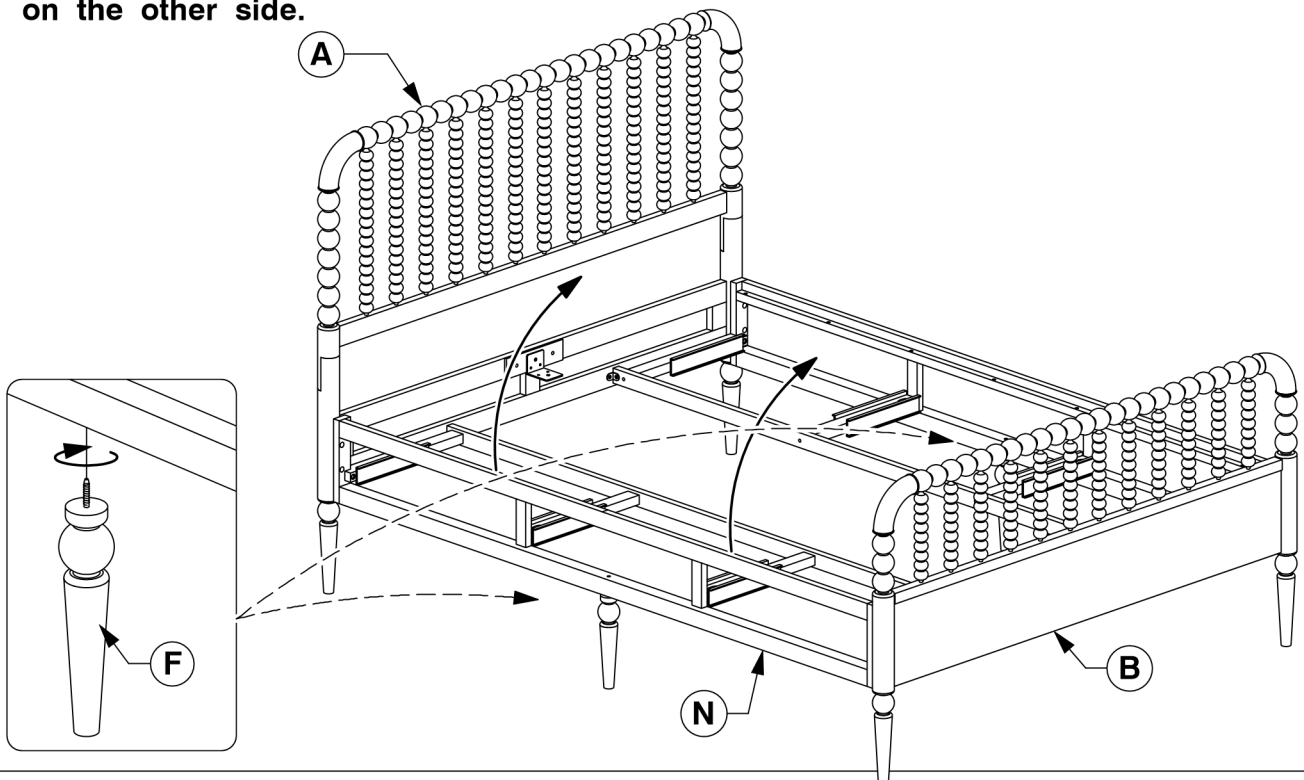


0110-7 Twin Daybed


Assembly Instructions

WI-1225

- 15** Lift the Front Side Rail (P) and fit the Post (G) under the Front Side Rail (P).

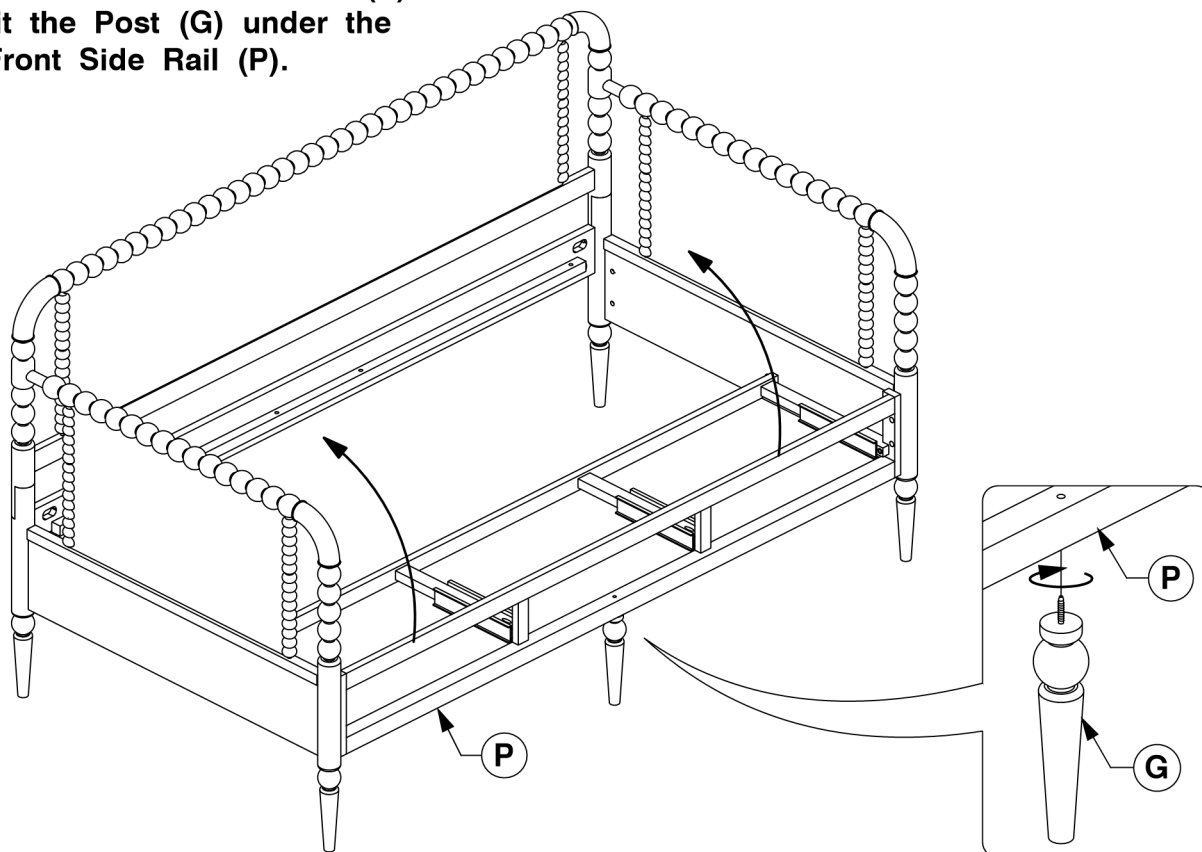

- 16** Bolt & Screw the Slats (U) to the Front and Back Side Rail Frame (O & P).

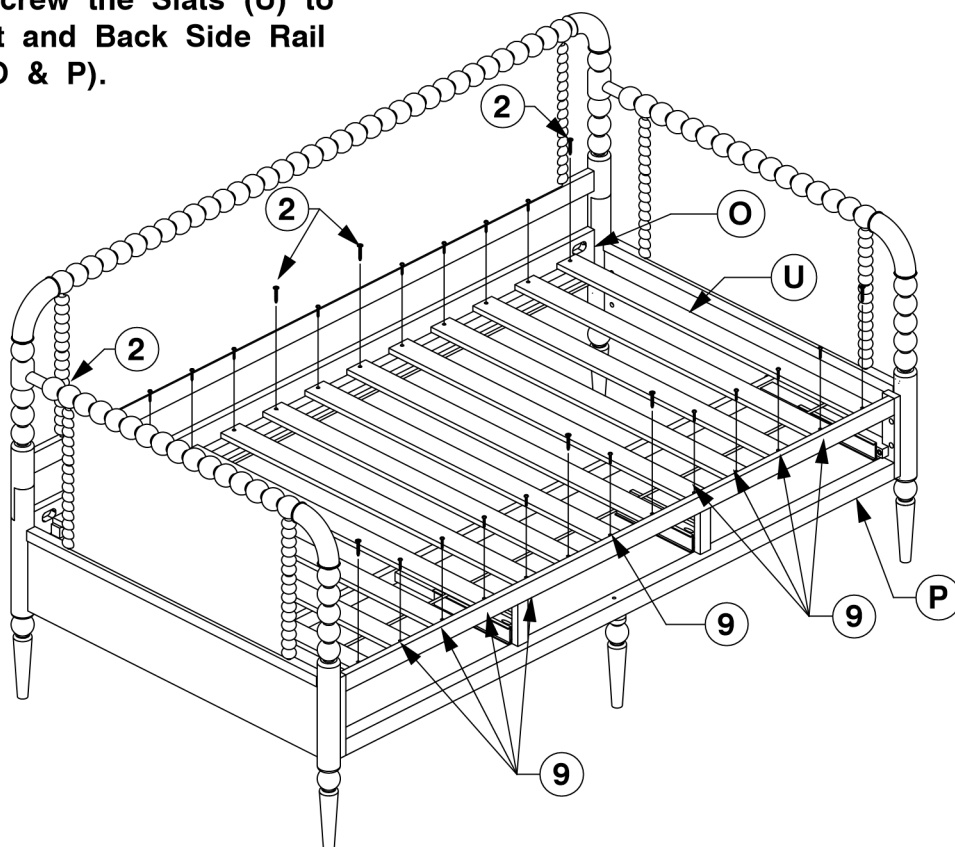

0110-7 Twin Daybed

Assembly Instructions

WI-1225

- 17** Finally, fit the assembled drawers.

