


0262-1 Daybed

Assembly Instructions

WI-1225

1 Assembled View

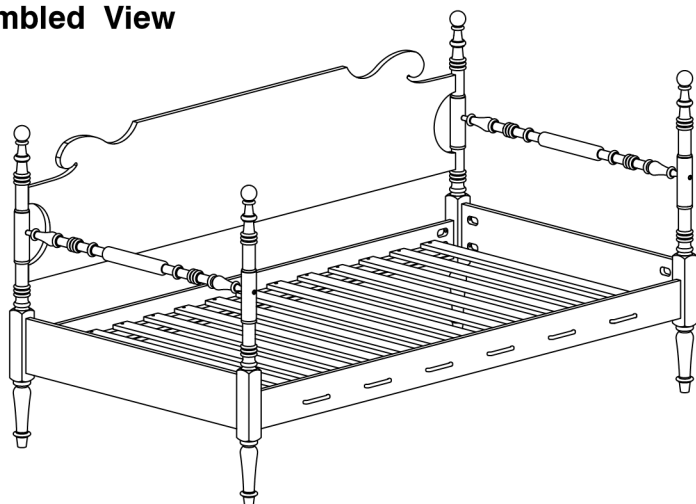


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts in this Box




A Side Panel x 2



B Side Support Bar x 2



C Back Panel x 1




D Front Side Rail x 1




E Rear Side Rail x 1

Slats are packed in separately in Box B

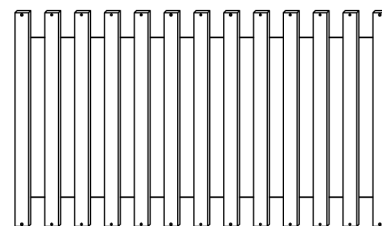


K Set of Slats x 1

3 Hardware in this Box



1 M6 x 40mm JCB x 32




2 Wood Screw (M4 x 32mm) x 18



3 Wood Dowel (10 x 40mm) x 8



4 Allen Key (Long) x 1

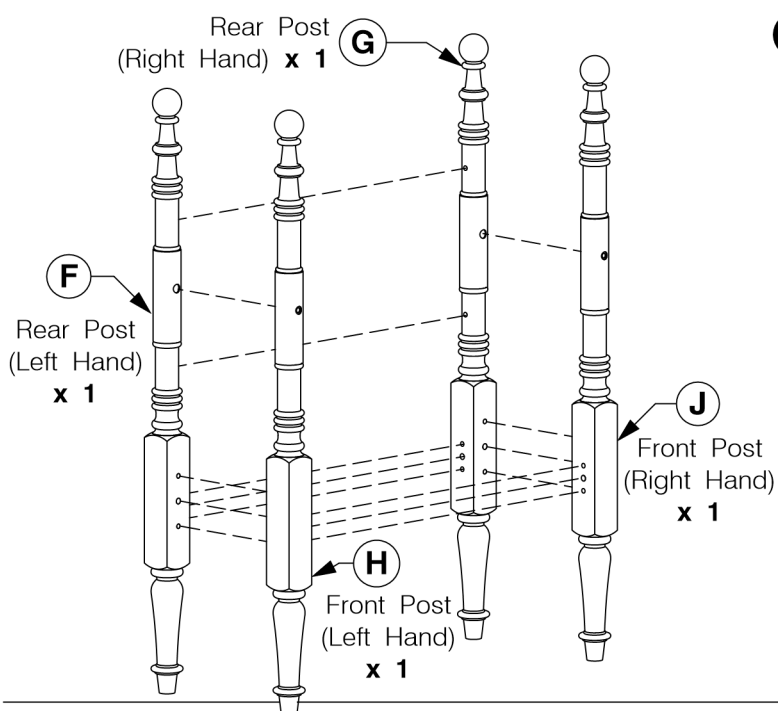


0262-1 Daybed

Assembly Instructions


WI-1225

- 4 Assemble the Post (F & H) to the Side Panel (A) & Side Support Bar (B).**

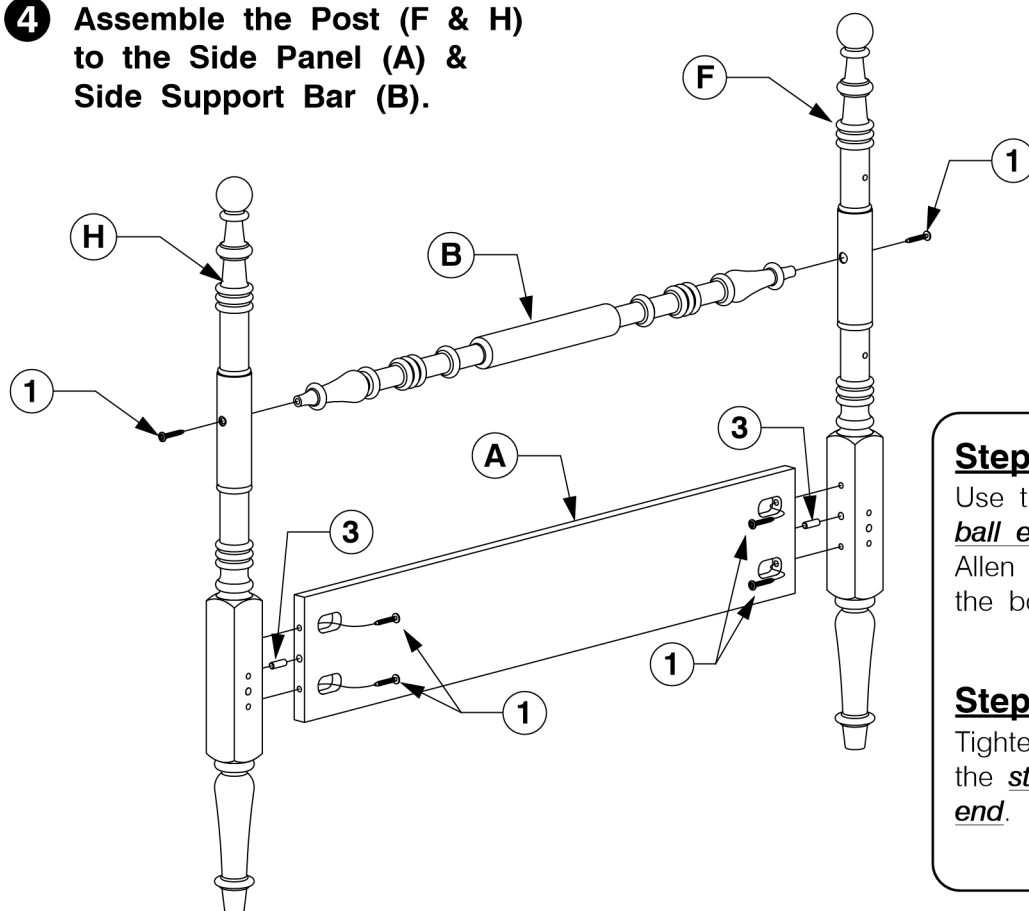


Step 1

Use the **ball end** of Allen key to start the bolt.

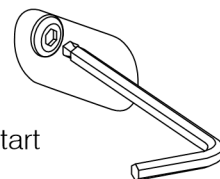


Step 2

Tighten fully with the **straight end**.

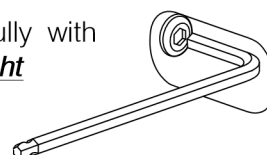


- 5 Assemble the Post (G & J) to the Side Panel (A) & Side Support Bar (B).**

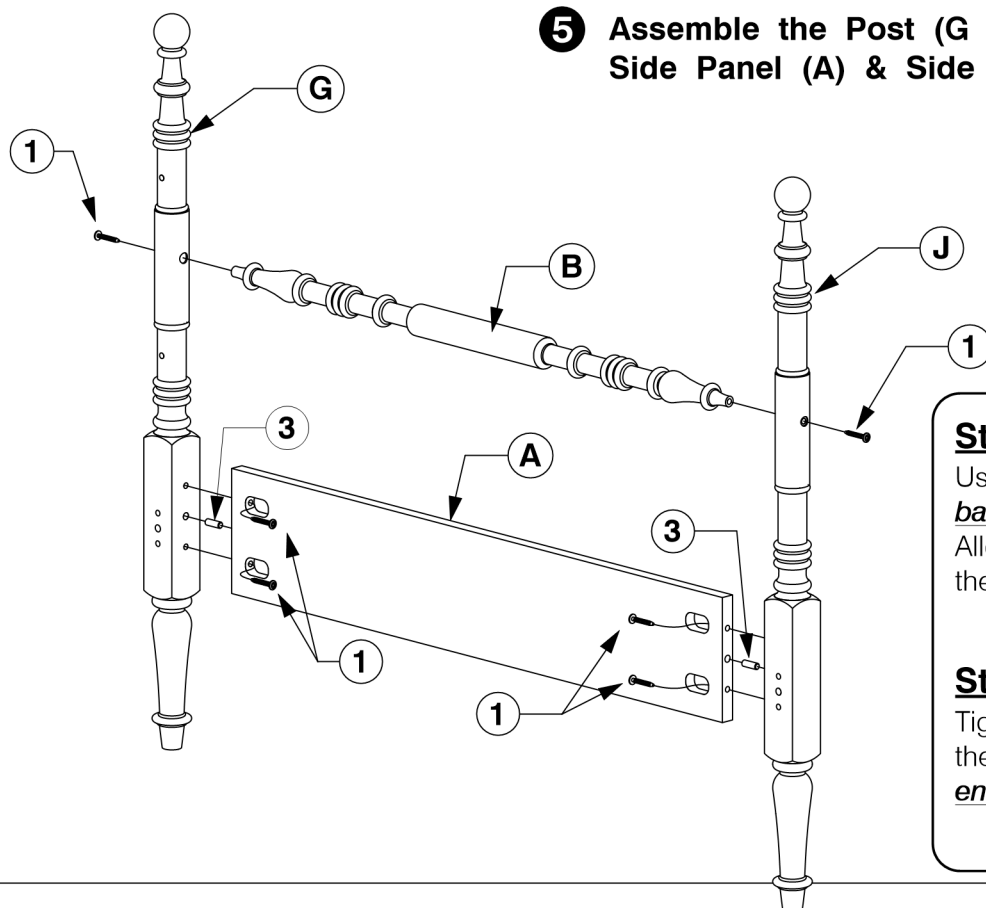


Step 1

Use the **ball end** of Allen key to start the bolt.

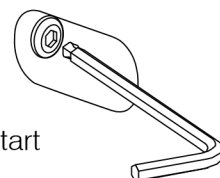

Step 2

Tighten fully with the **straight end**.


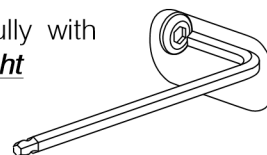


0262-1 Daybed

Assembly Instructions


WI-1225

- 6 Assemble the Rear Post (F & G) to the Back Panel (C) & Rear Side Rail (E).**

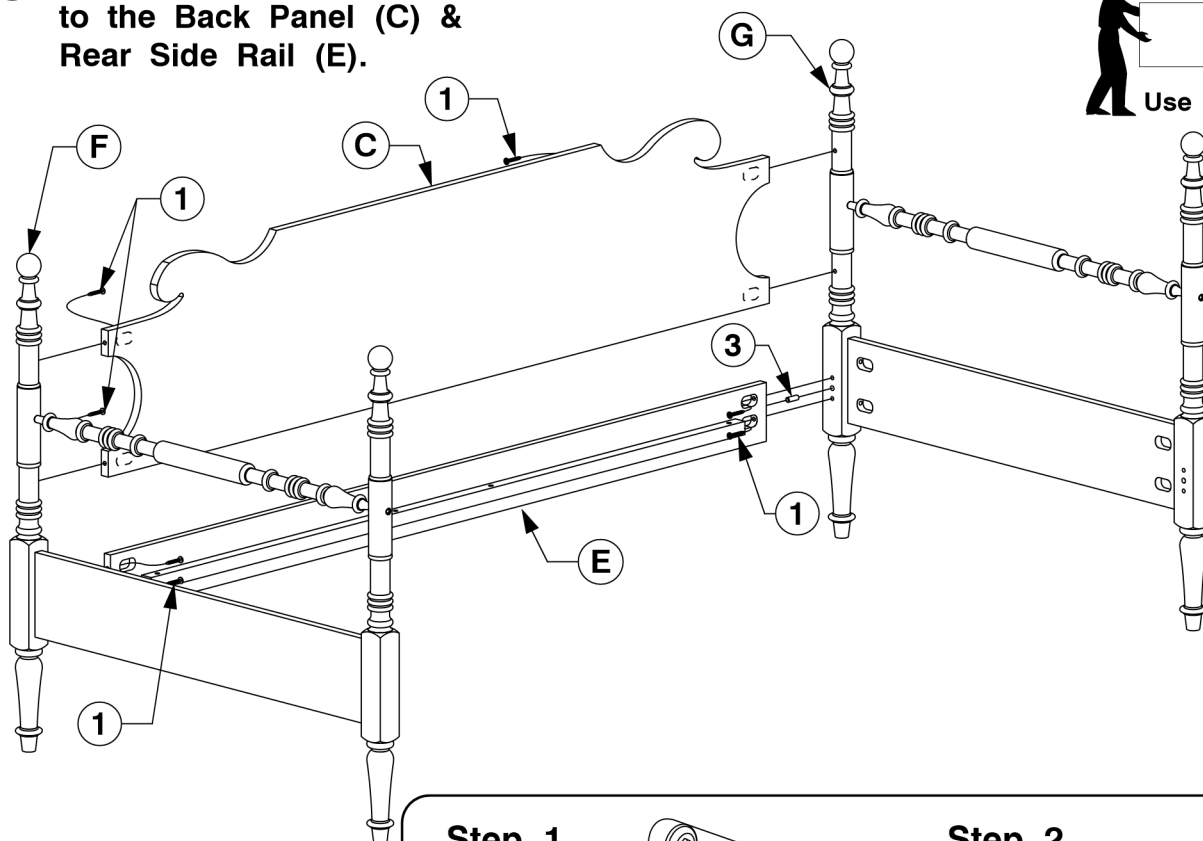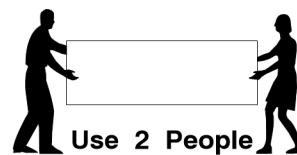


Step 1

Use the ball end of Allen key to start the bolt.

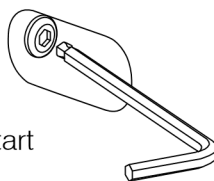


Step 2

Tighten fully with the straight end.

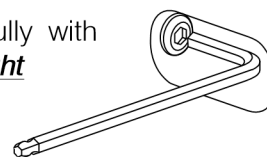

- 7 Assemble the Front Side Rail (D) to the Front Post (H & J).**

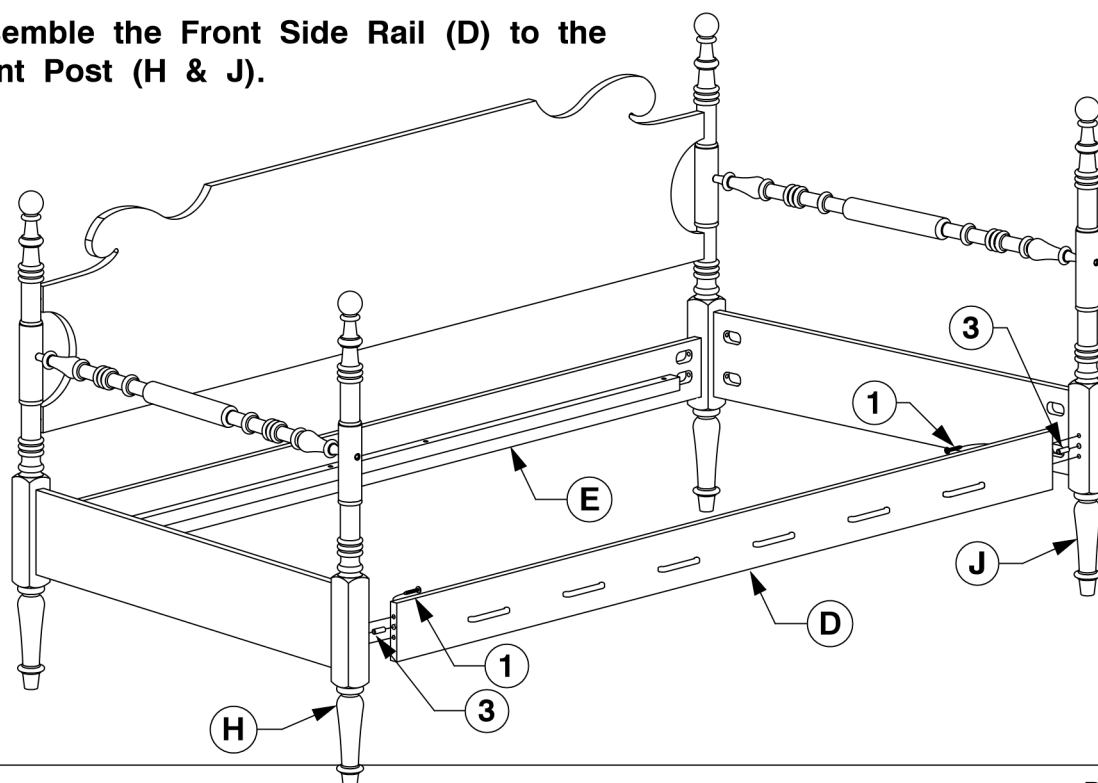


0262-1 Daybed

Assembly Instructions

WI-1225

- 8 Bolt the Set of Slats (K) between the Side Rail (D & E).**

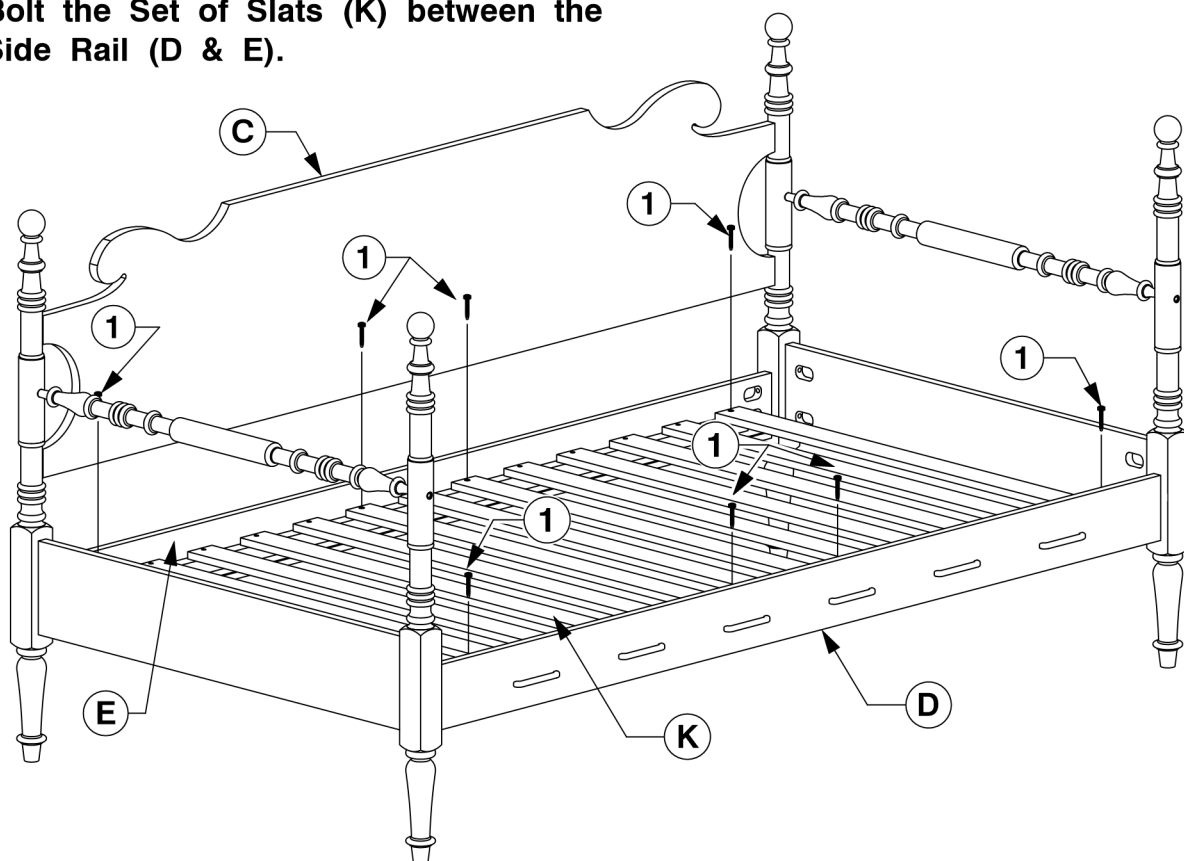

- 9 Screw the Set of Slats (K) between the Side Rail (D & E).**

