
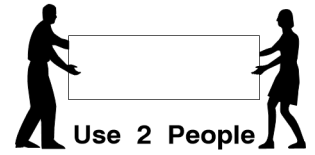


0264 Queen Bed

Assembly Instructions

WI-1225


1 Assembled View

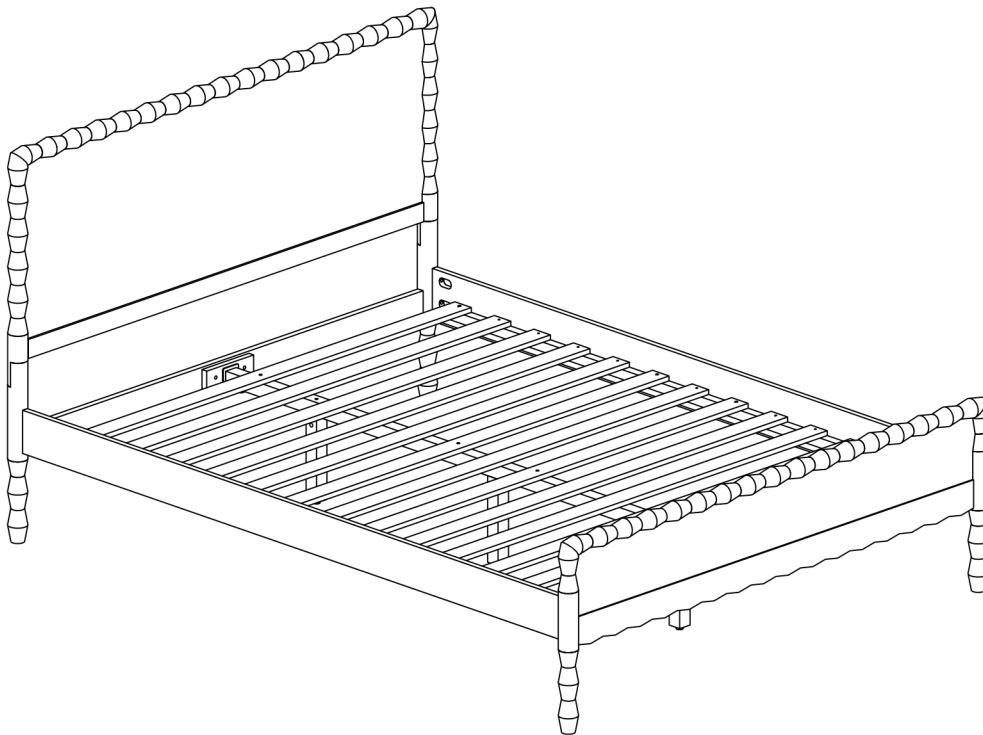

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List


Parts in Box A:

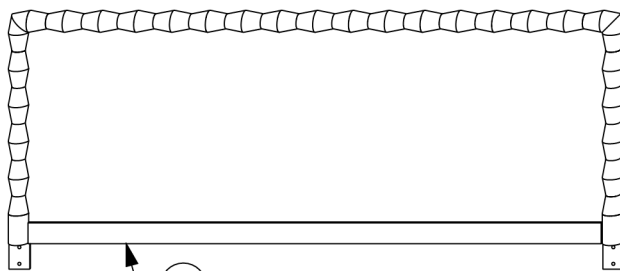

A Headboard Panel x 1




B Headboard Support x 1

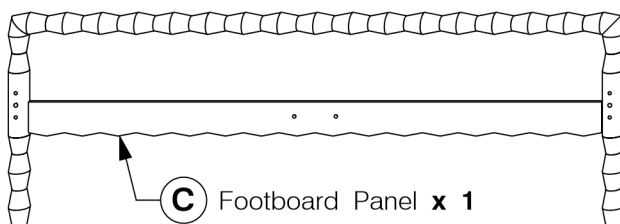

C Footboard Panel x 1



D
Headboard
Post
(Left Hand)
x 1



E
Headboard
Post
(Right Hand)
x 1

0264 Queen Bed

Assembly Instructions

WI-1225

2 Parts List

Parts in Box B:




(F) Side Rail x 2




(G) Long Support x 1



(H) Support Leg x 3



(J) HB/FB Support Bar x 2

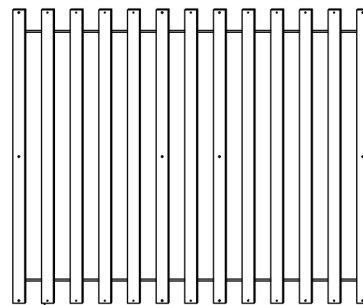


(K) Set of Bed Slats x 1


3 Hardware List



(1) M4 Long Allen Key x 1

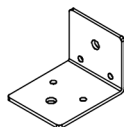


(2) Center Rail Bracket x 2



(3) Adjustable Foot x 3



(4) Barrel Nut x 3



(5) Wood Screw (M4 x 32mm) x 18



(6) Wood Dowel (10 x 40mm) x 4



(7) Spring Washer x 4



(8) Flat Washer x 4



(9) M6 x 15mm JCB x 4



(10) M6 x 30mm JCB x 4




(11) M6 x 40mm JCB x 28



(12) M6 x 90mm JCB x 3

4 Fit the Center Rail Bracket to the HB/FB Support Bar (J).

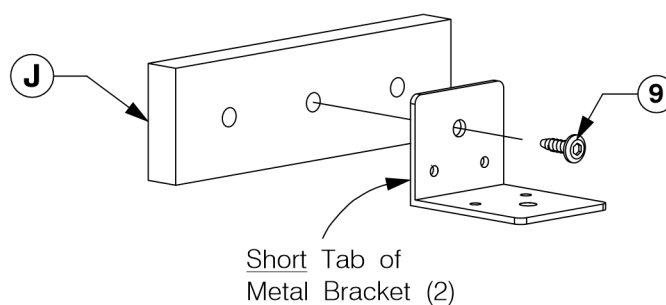


0264 Queen Bed


Assembly Instructions

WI-1225


- 5** Assembled the Support Leg (H) to the Long Support (G).

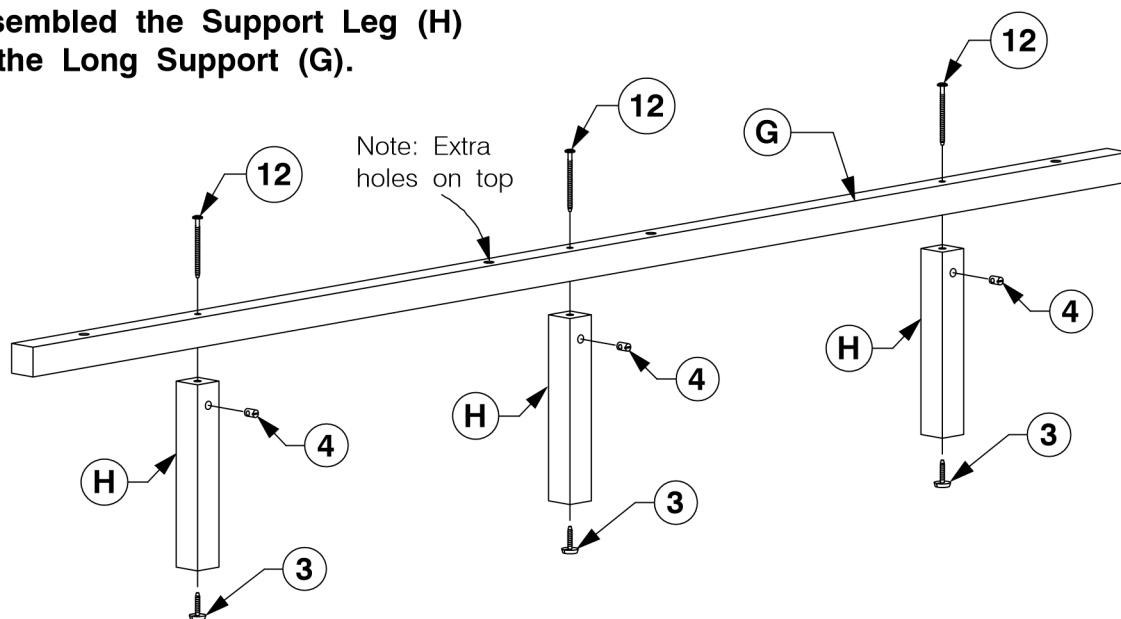

- 6** Fit the HB / FB Support (J) to the Headboard Support (B).

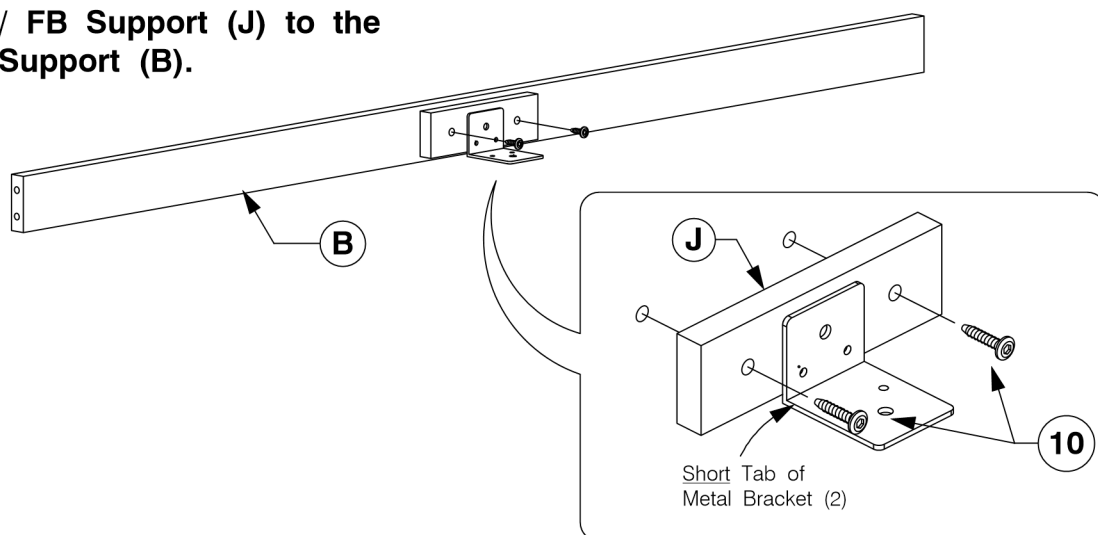

- 7** Fit the HB/FB Support (J) to the Footboard Panel (C).

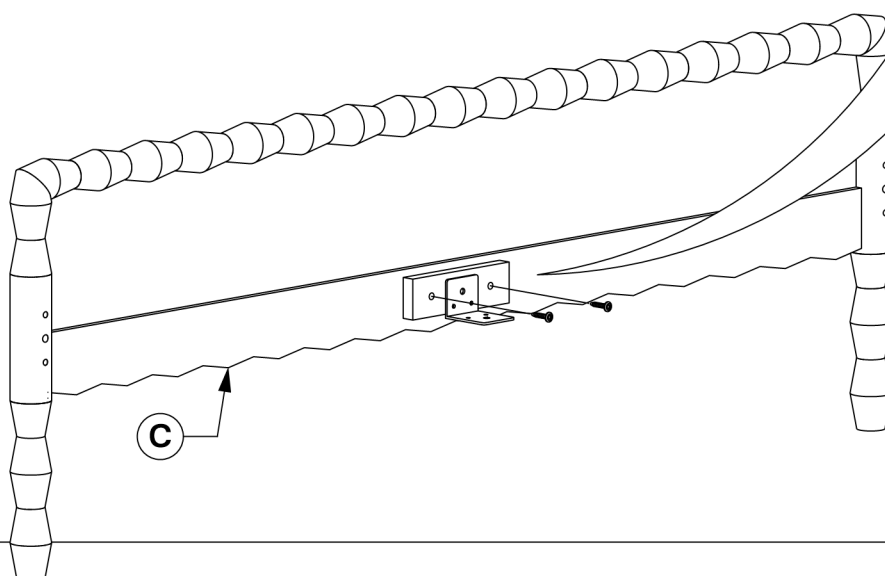


0264 Queen Bed

Assembly Instructions


WI-1225

- 8** Assemble the Headboard Support (B) to the Headboard Post (D & E).

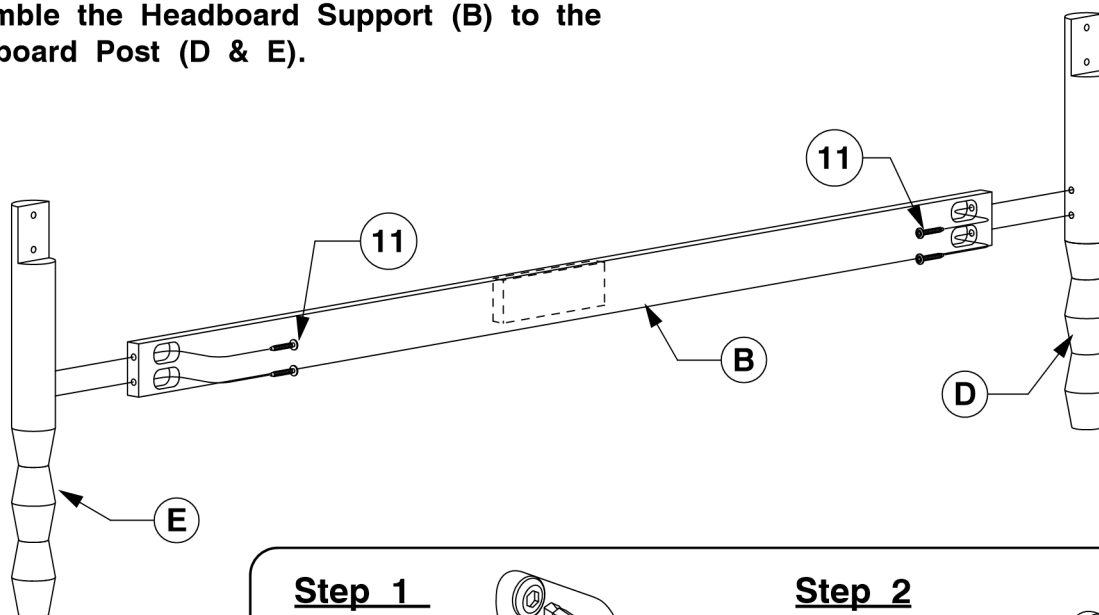


Step 1

Use the ball end of Allen key to start the bolt.


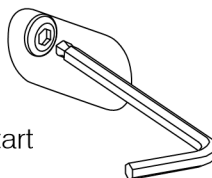


Step 2

Tighten fully with the straight end.

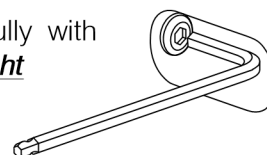

- 9** Assemble the Headboard Panel (A) to the Headboard Post (D & E).

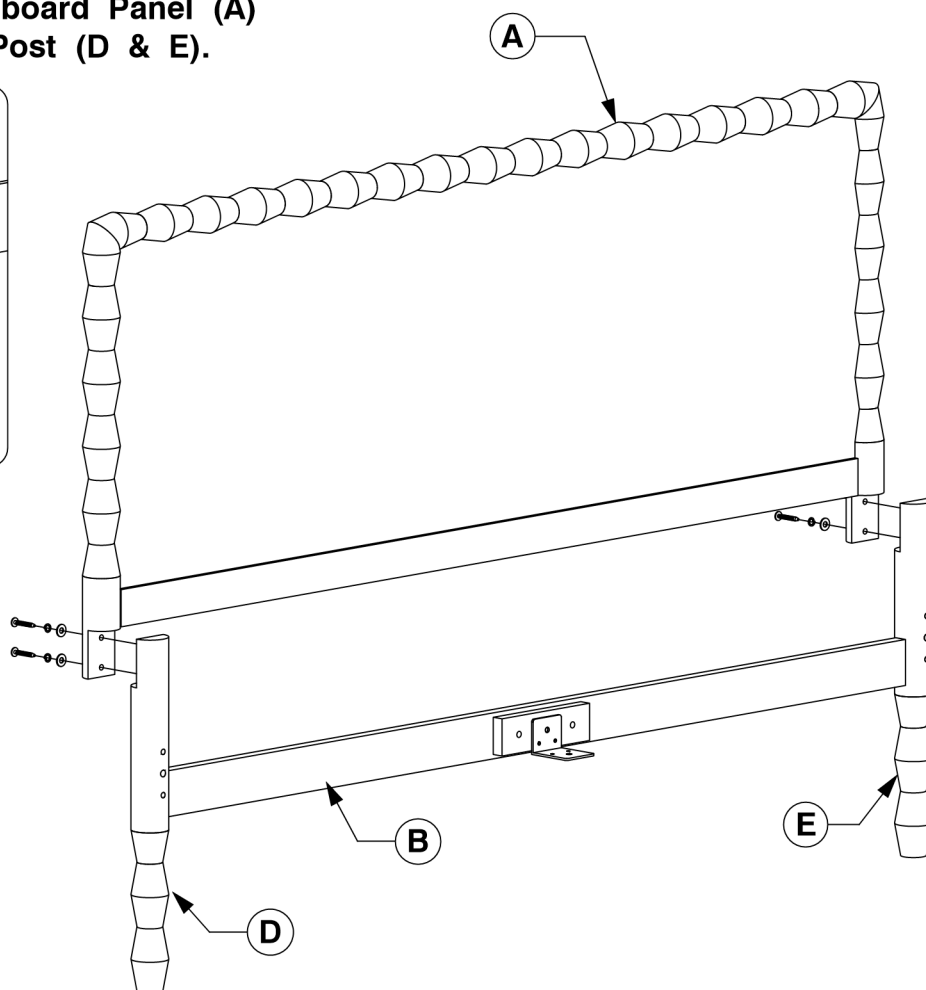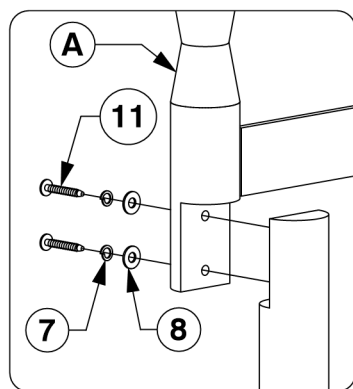


0264 Queen Bed

Assembly Instructions


WI-1225

- 10** Assemble the Side Rail (F) to the Headboard & Footboard Post.

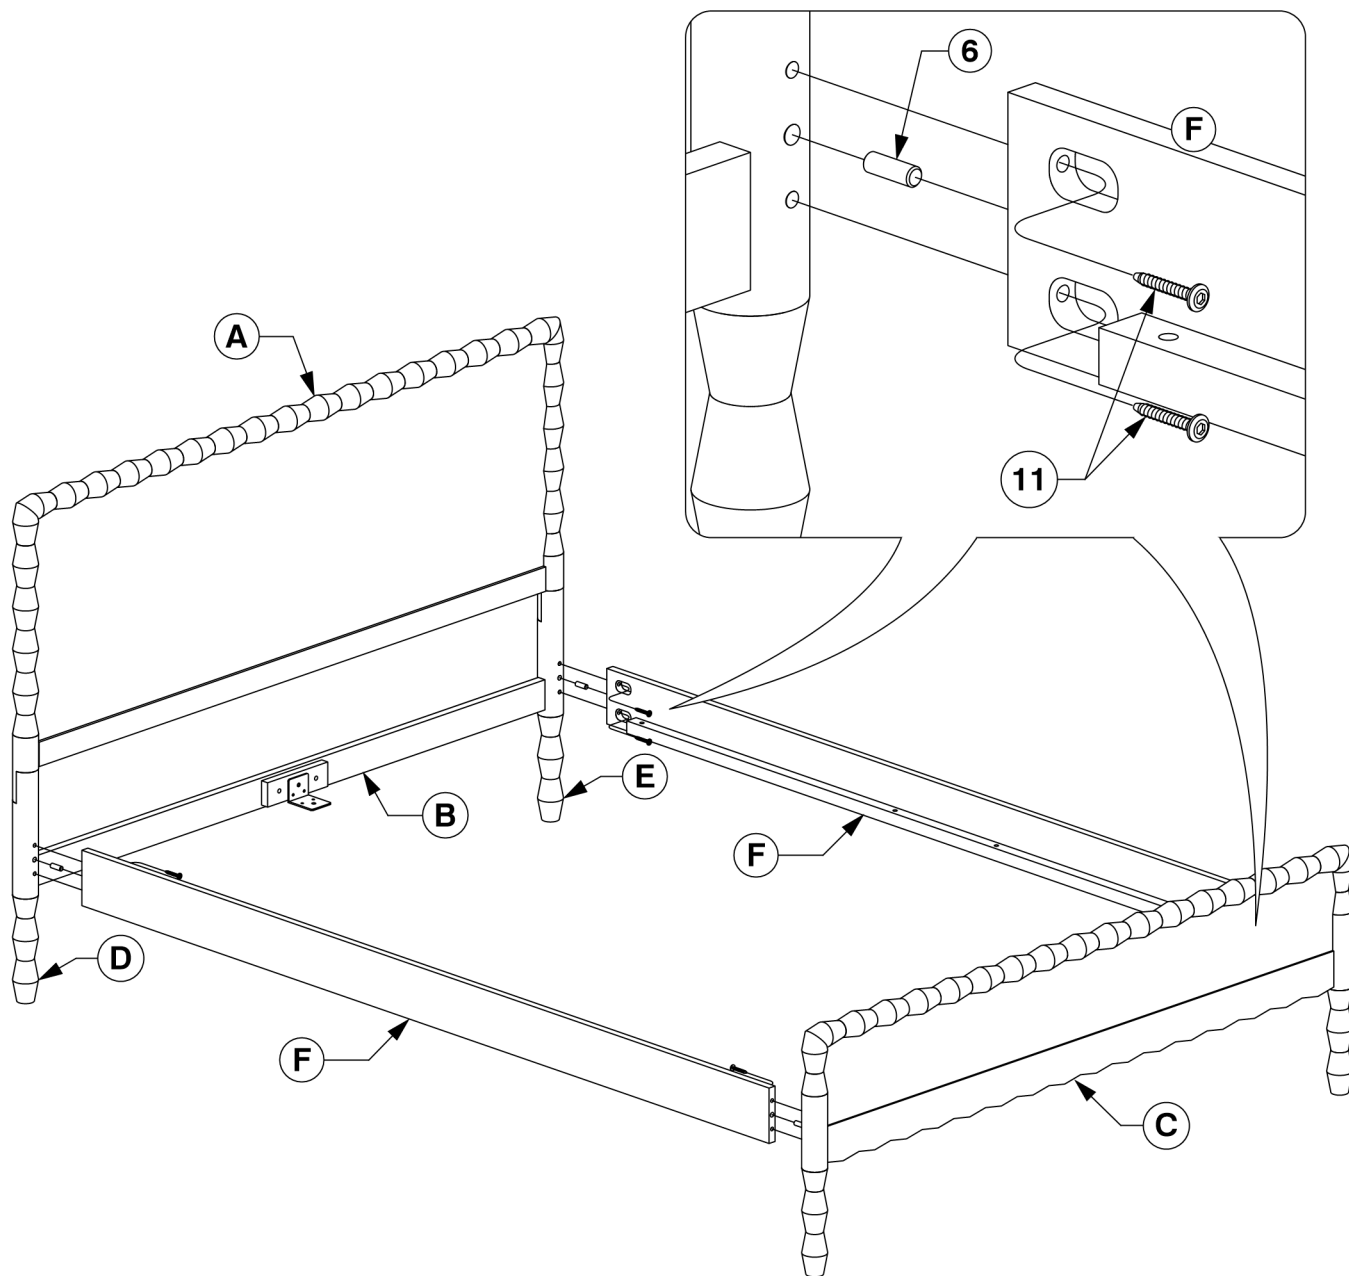


Step 1

Use the ***ball end*** of the Allen key to start the bolt.

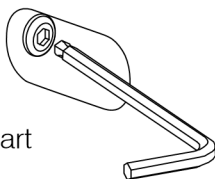

Step 2

Tighten fully with the ***straight end***.

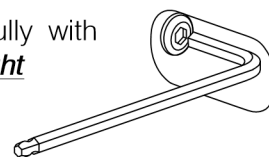


0264 Queen Bed


Assembly Instructions

WI-1225

- 11 Bolt the Long Support (G) to the Center Rail Brackets on the Headboard & Footboard Panel.**

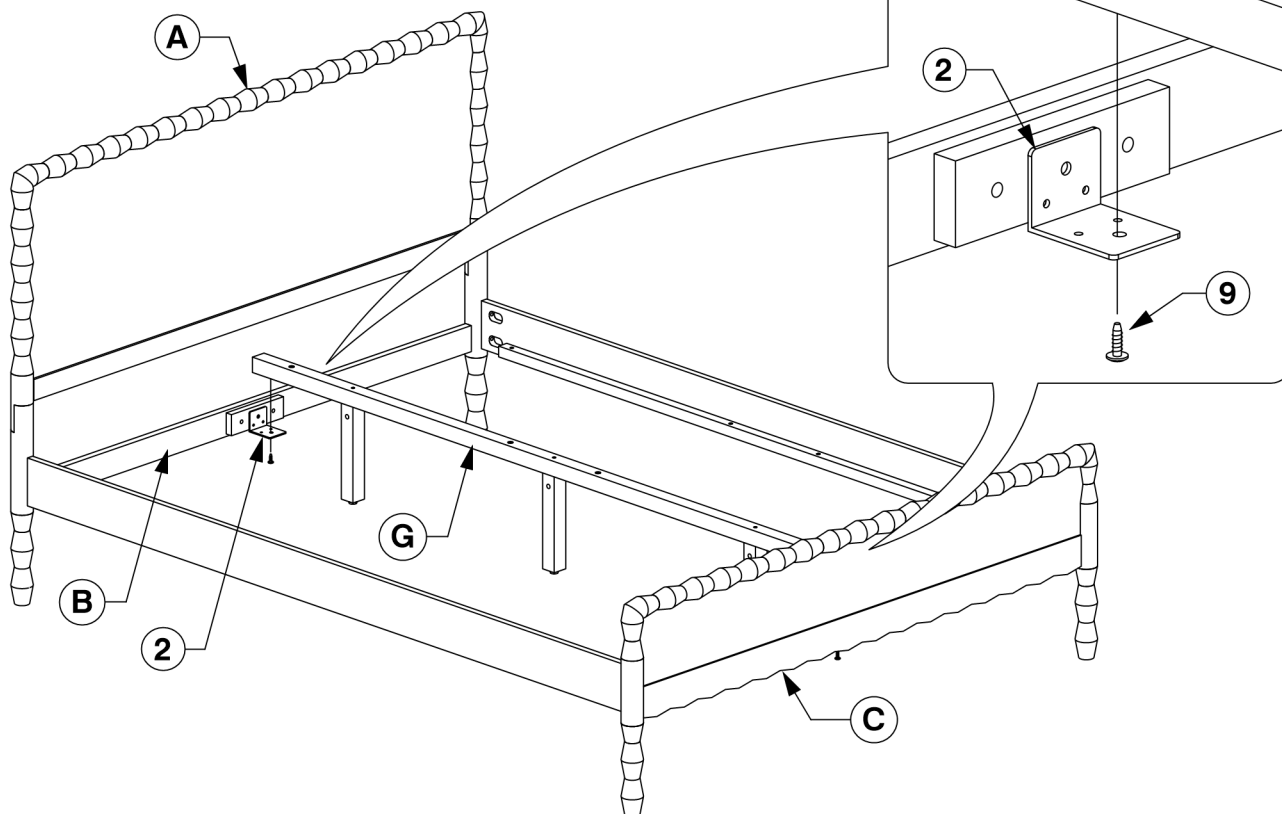


- 12 Bolt & screw the Bed Slats (K) to the Side Rails (F).**

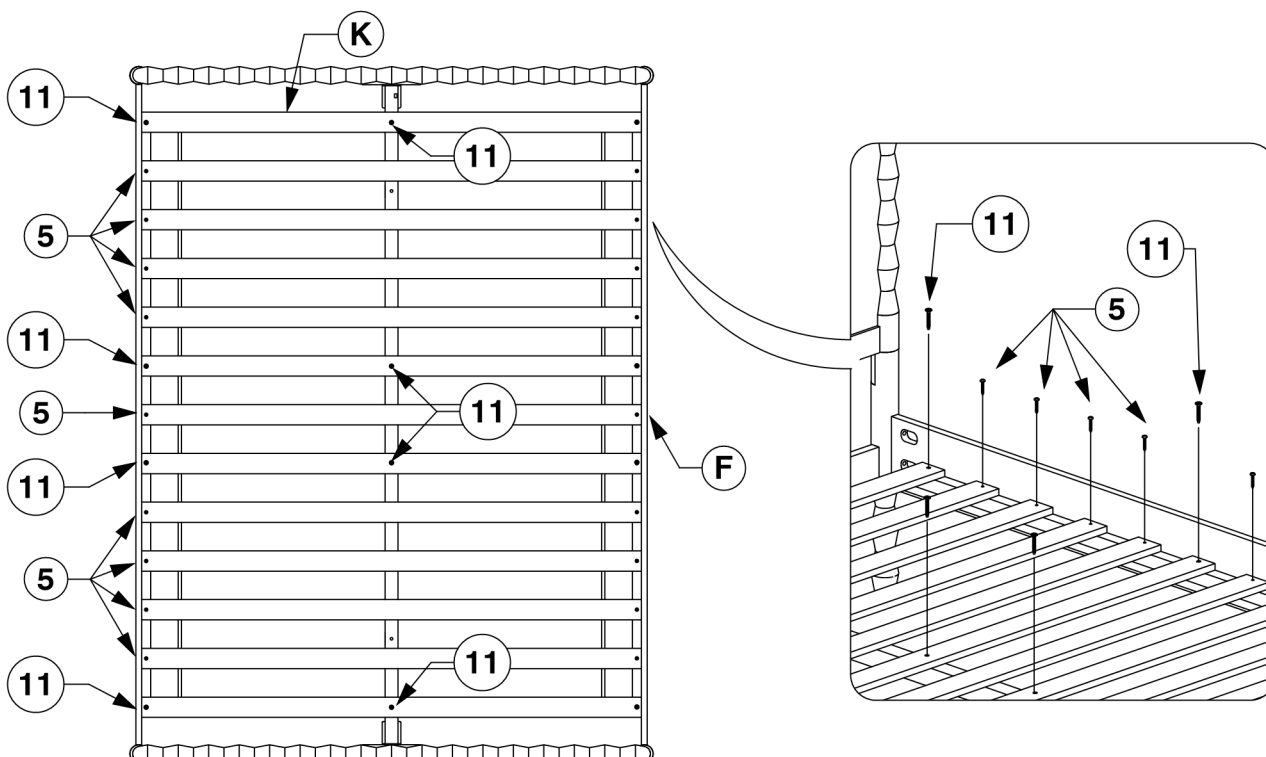


9028 6 Drawer Dresser

Assembly Instructions


WI-1225

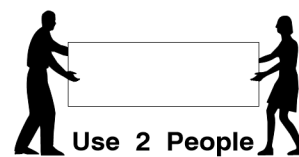

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

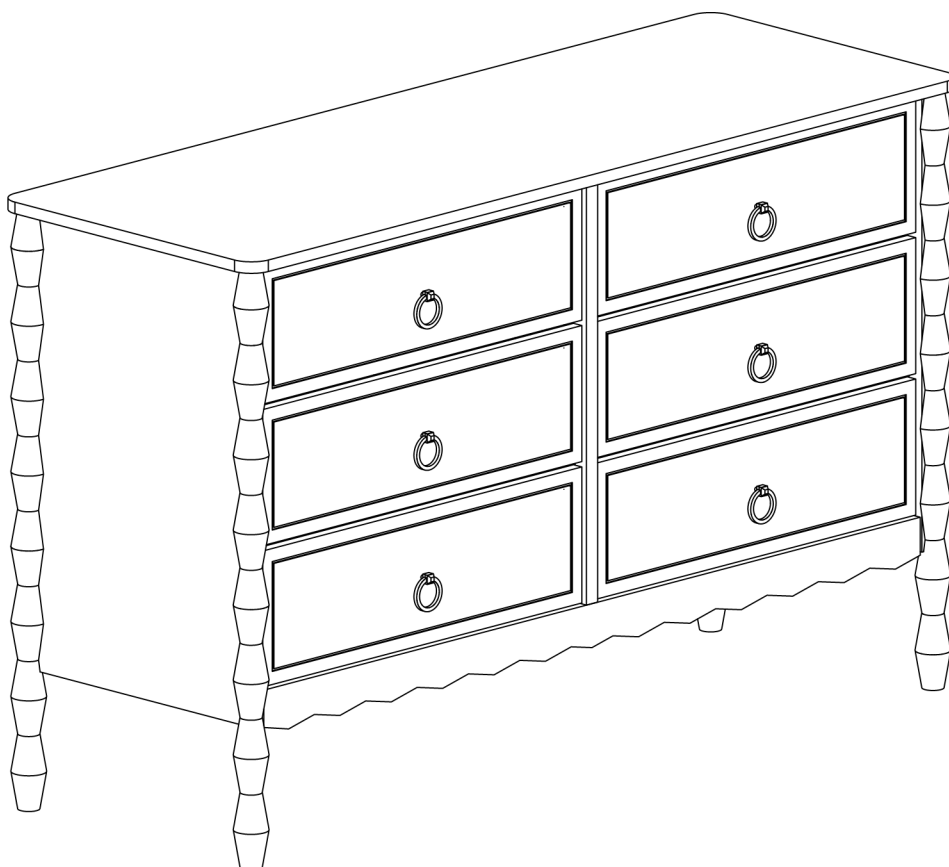

WARNING

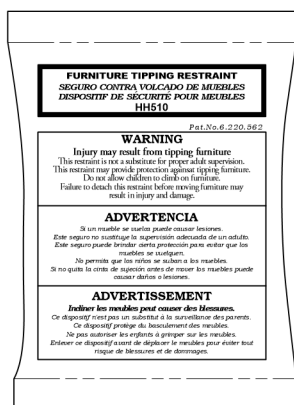

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9028 6 Drawer Dresser

Assembly Instructions

WI-1225

1 Parts List

Parts in Box A:




A Top Panel x 1




B Upper Support Bar x 2



C Bottom Front Support Bar x 1




D Bottom Rear Support Bar x 1

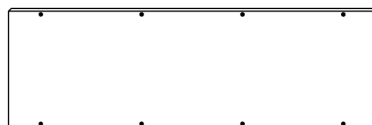


E Back Panel (Wider) x 1



F Back Panel (Narrow) x 1



G Drawer Face x 6



H Drawer Back x 6




J Drawer Bottom x 6




K Drawer Rail x 6


Parts in Box B:

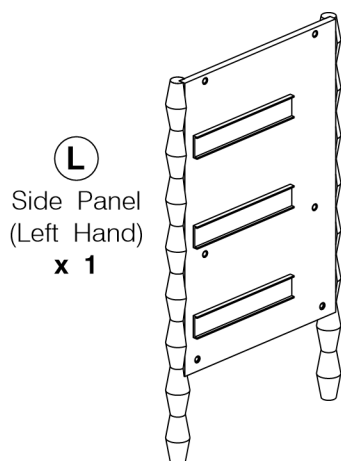

L Side Panel (Left Hand) x 1

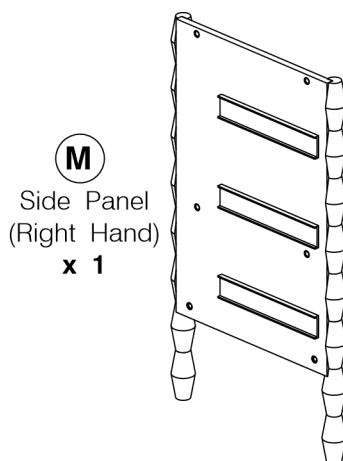


M Side Panel (Right Hand) x 1

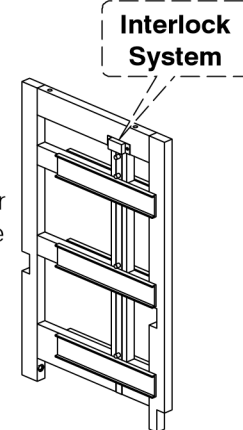


N Center Frame x 1


Parts for LEFT Side Drawer

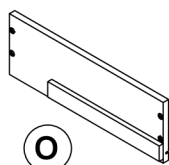



O LEFT Drawer Side (Left Hand) x 3

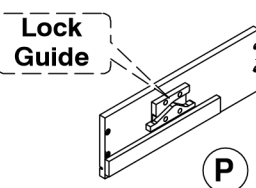


P LEFT Drawer Side (Right Hand) x 3

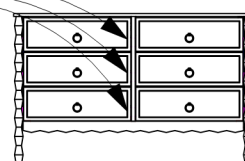

Parts for RIGHT Side Drawer

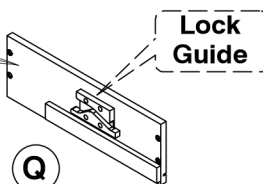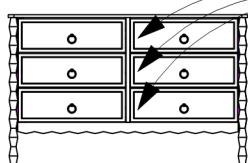

Q RIGHT Drawer Side (Left Hand) x 3

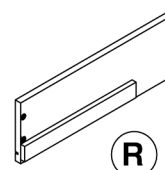






R RIGHT Drawer Side (Right Hand) x 3

9028 6 Drawer Dresser

Assembly Instructions

WI-1225


2 Hardware List

- | | | | |
|--|--|---|--|
| 
1 M6 x
15mm JCB
x 24 | 
2 M6 x
30mm JCB
x 4 | 
3 M6 x
60mm JCB
x 2 | 
4 Wood Screw
(M4 x 32mm) x 16 |
| 
5 Wood Screw
(M4 x 20mm) x 24 | 
6 Wood Screw
(M4 x 25mm) x 60 | 
7 M6 x 25mm
Wood Dowel x 24 | 
8 'L' Bracket
(5005-3) x 12 |
| 
9 Handle
(087) x 6 | 
10 M4 x 22mm
Wood Screw x 6 | 
11 Allen Key
x 1 | |


3 Assemble the Drawers.

STEP 3.1

LEFT

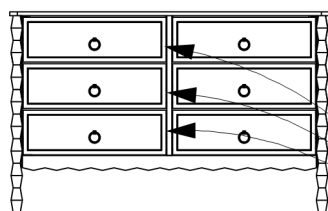

**Important: Assemble the
Drawer Runner facing
Drawer Face.**

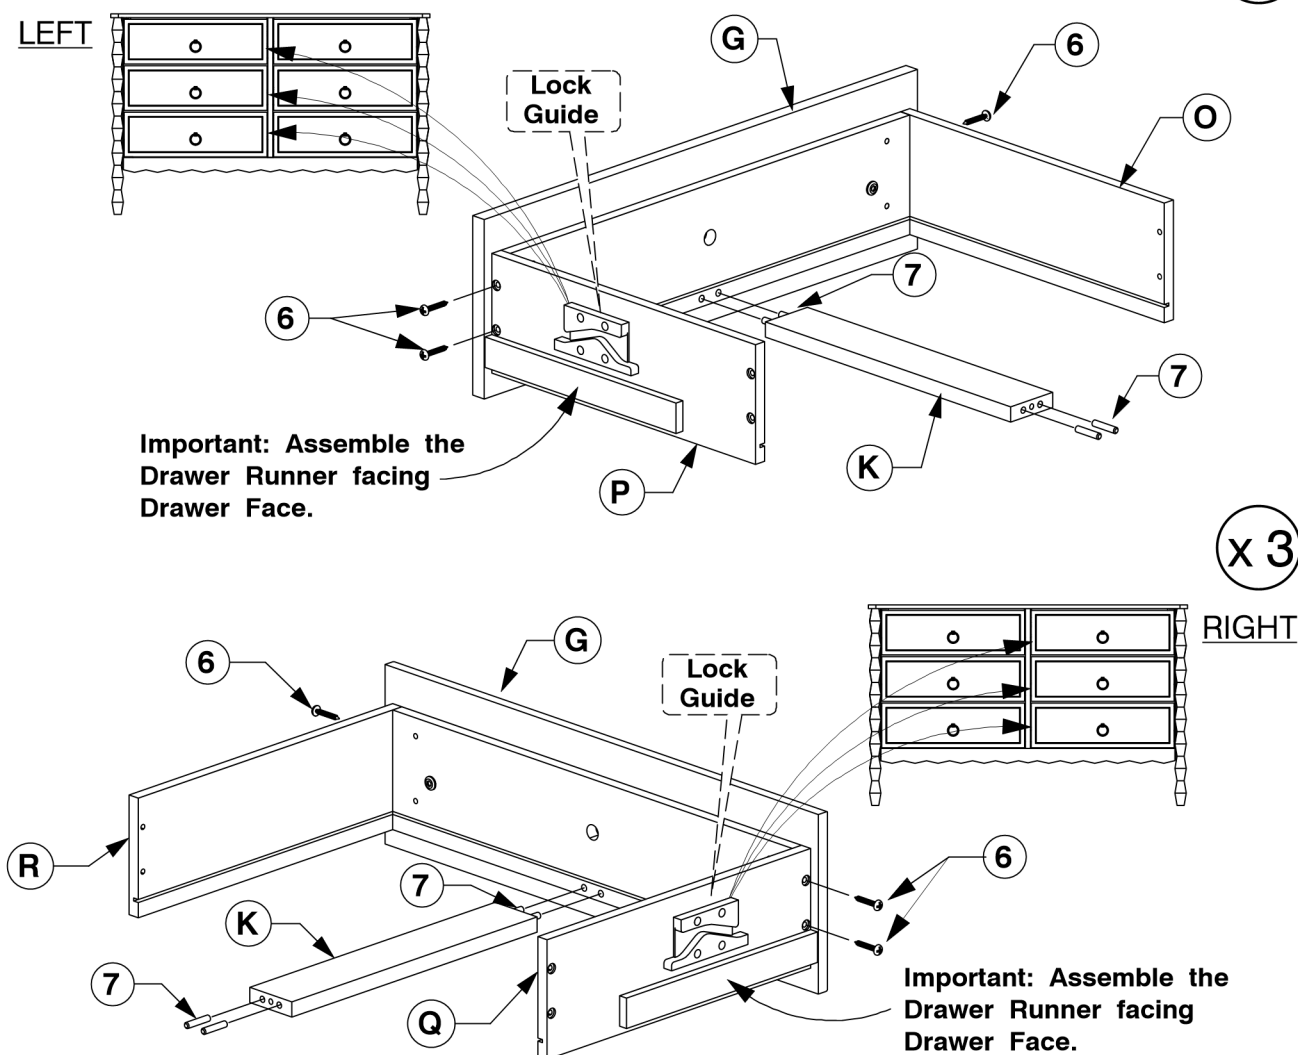

RIGHT

**Important: Assemble the
Drawer Runner facing
Drawer Face.**

9028 6 Drawer Dresser


Assembly Instructions

WI-1225


③ Assemble the Drawers.

STEP 3.2


* 3 Assemble the left and right drawers as shown below

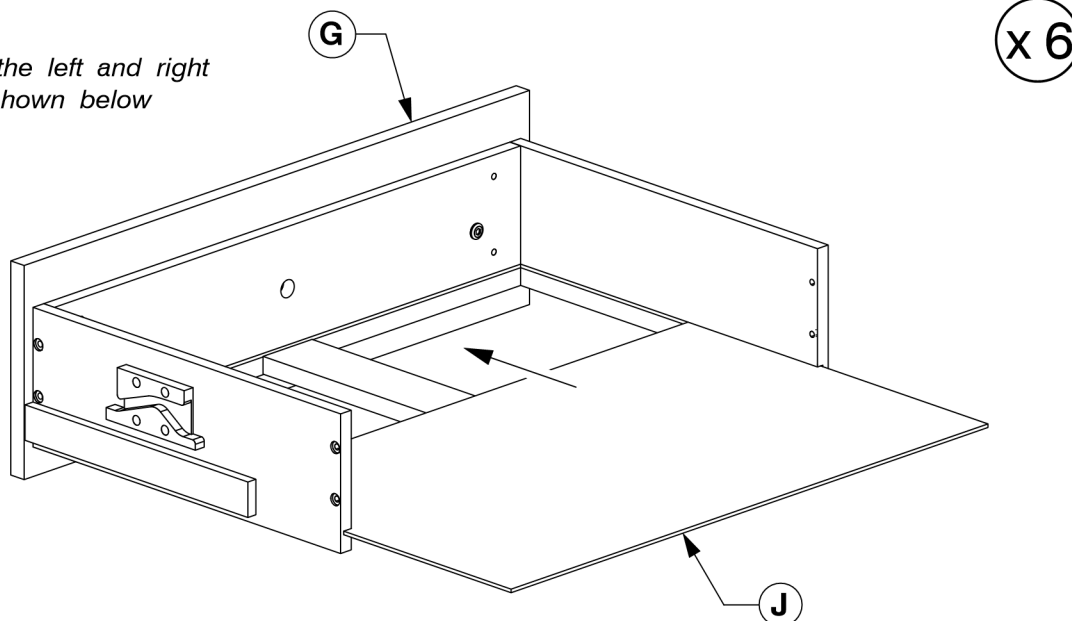

STEP 3.3

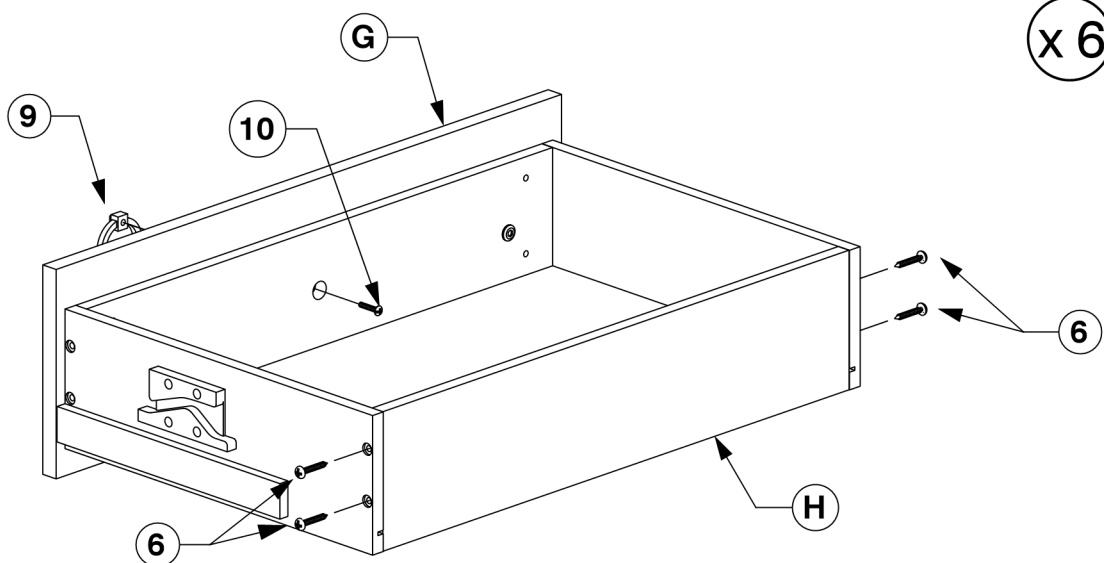

STEP 3.4

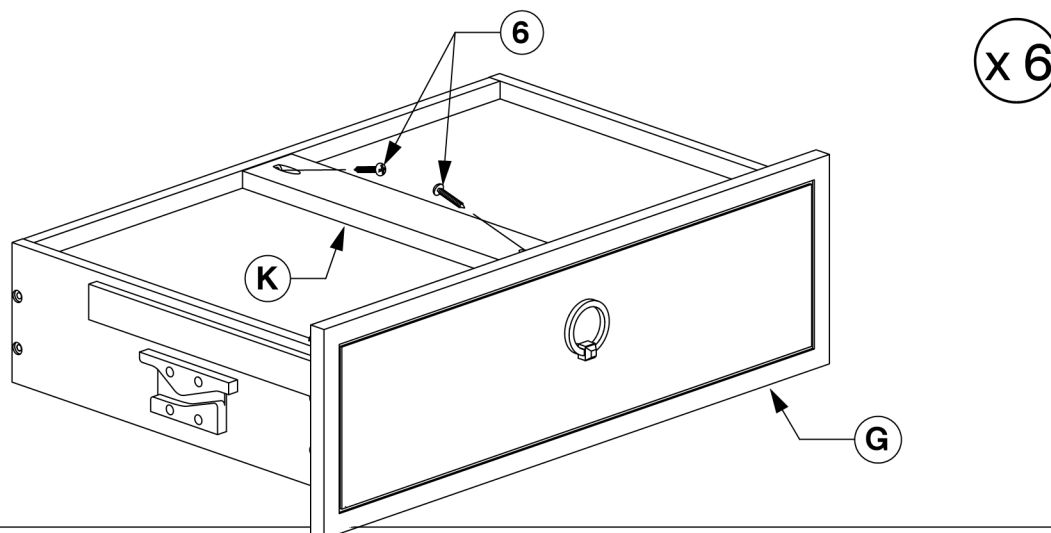


9028 6 Drawer Dresser


Assembly Instructions

WI-1225

4 Fit the 'L' Bracket to the Side Panel (L & M).

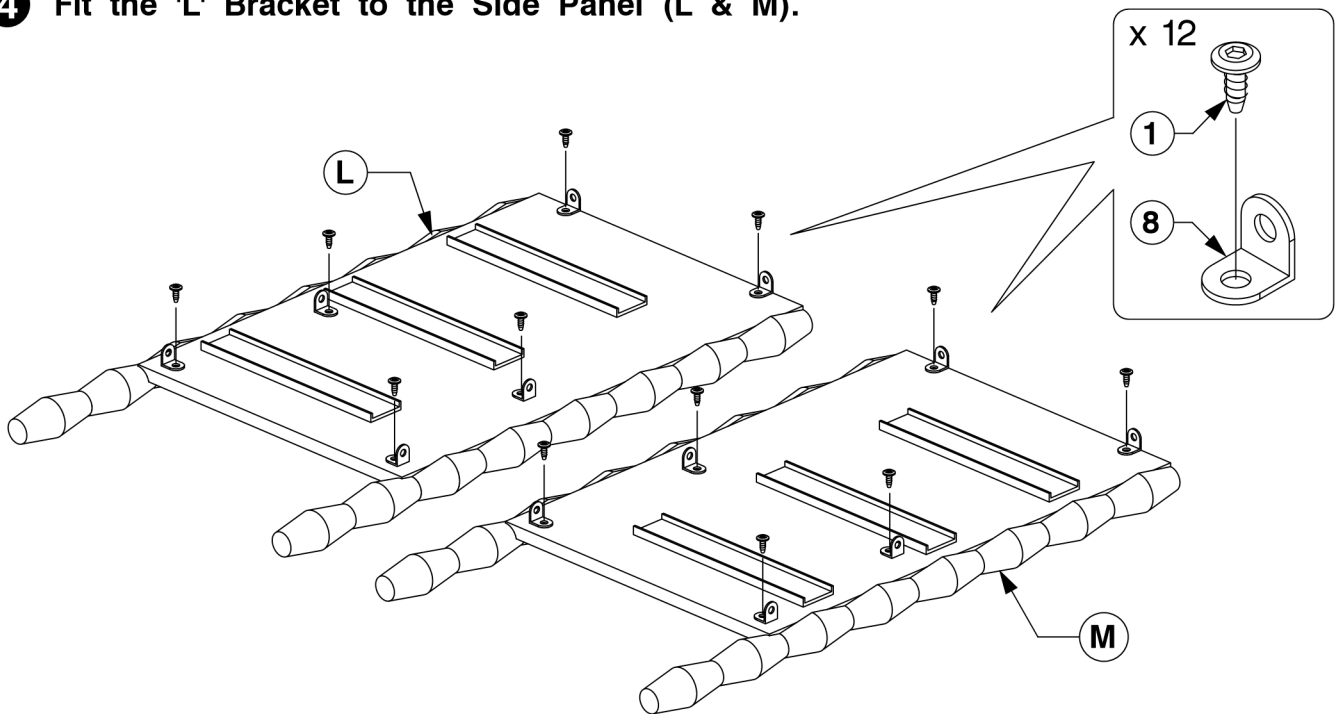

5 Fit the Side Panel- Right Hand (M) & Center Frame (N) to the Top Panel (A).

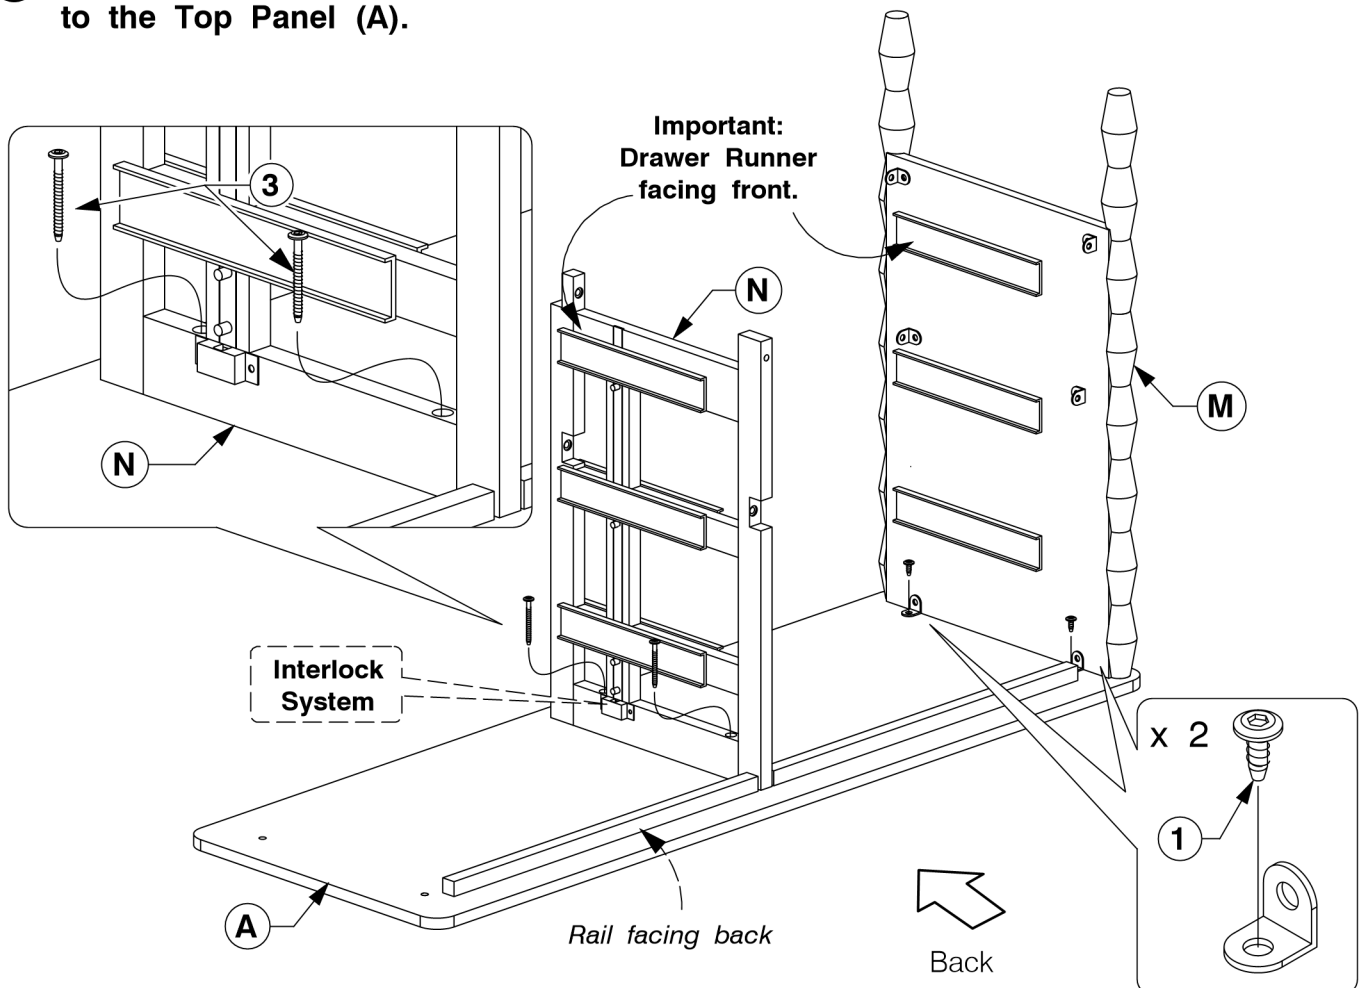


9028 6 Drawer Dresser


Assembly Instructions

WI-1225

- 6** Attach the following parts to the Right-Hand Side Panel (M) and the Center Frame (N), as shown:
Upper Support Bar (B)
Bottom Front Support Bar (C)
Bottom Rear Support Bar (D)

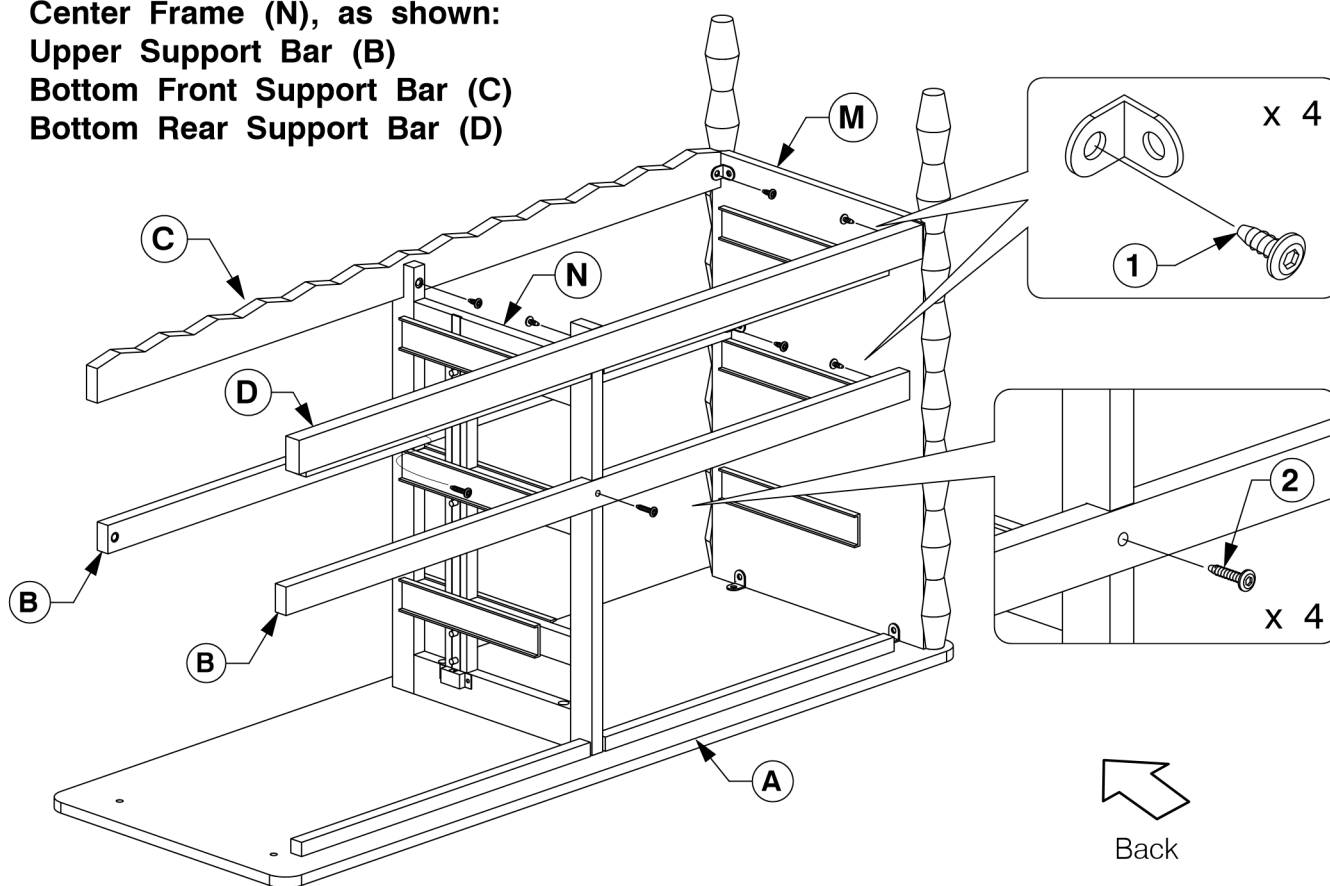

- 7** Fit the Left-Hand Side Panel (L) to the:
Upper Support Bar (B)
Bottom Front Support Bar (C)
Bottom Rear Support Bar (D)

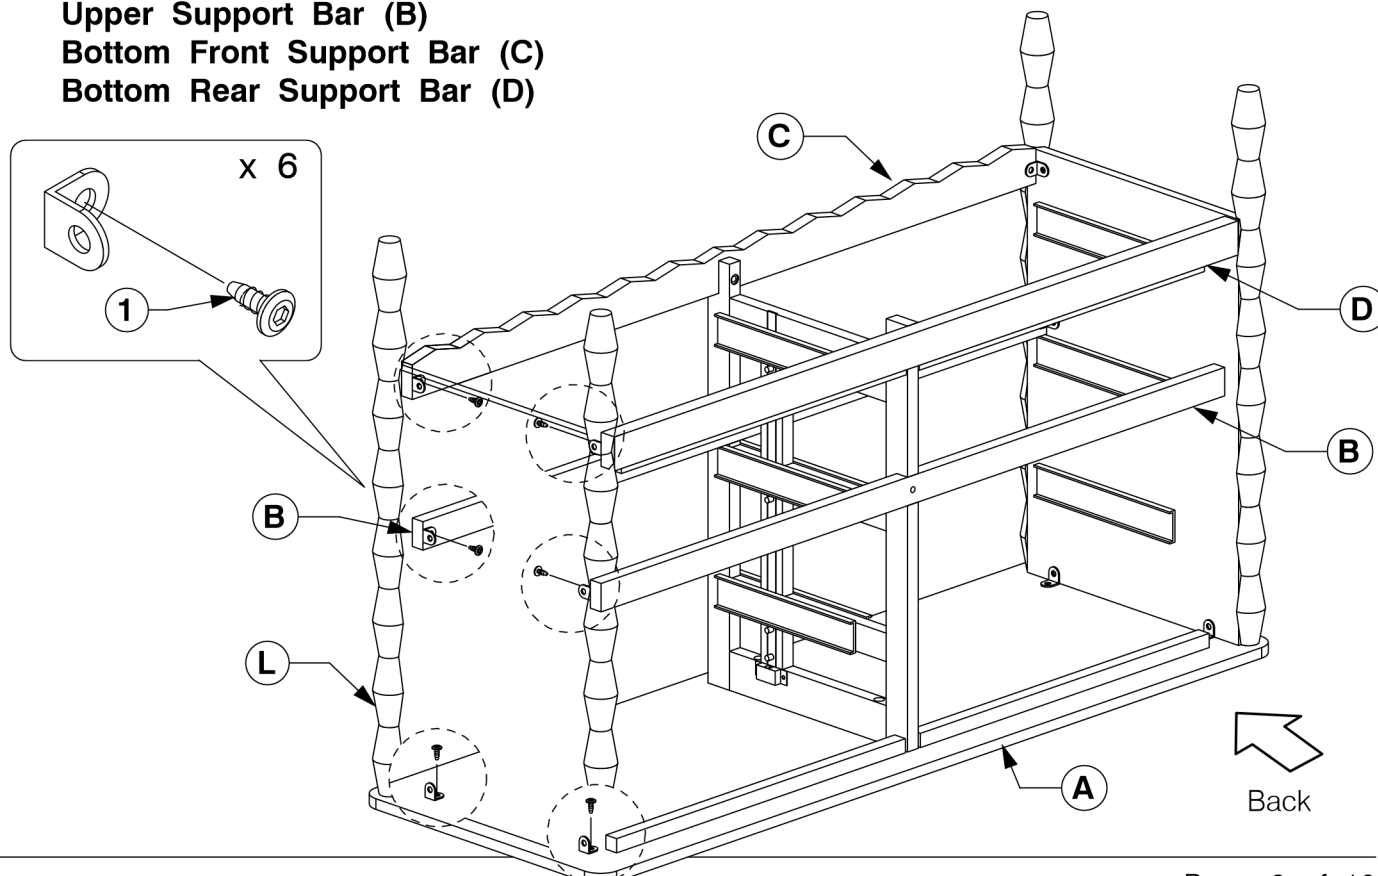


9028 6 Drawer Dresser


Assembly Instructions

WI-1225

- 8** Attached the Back Panel- Wider (E) to the back of the frame.

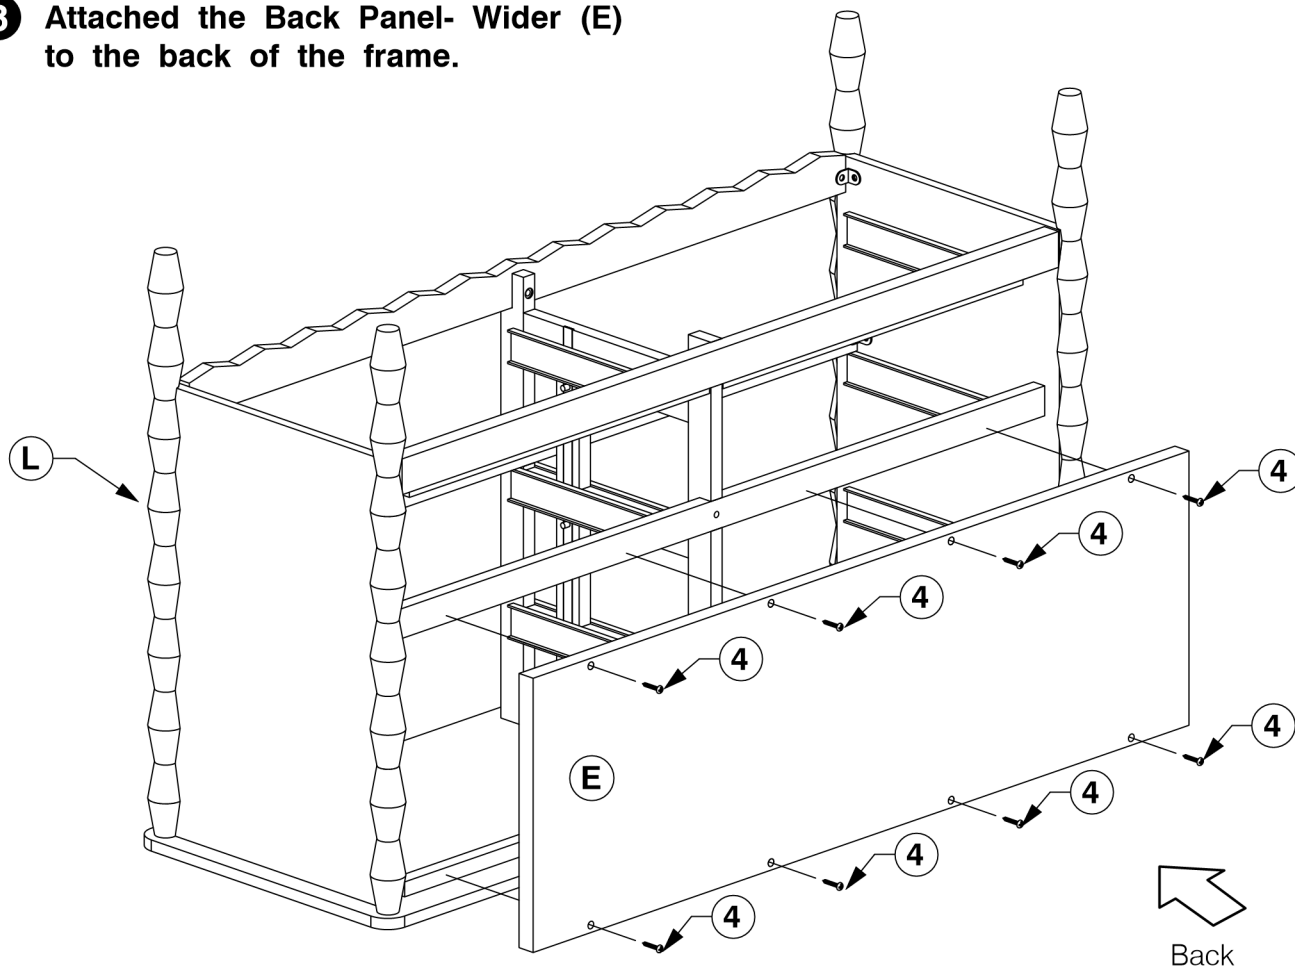

- 9** Attached the Back Panel- Narrow (F) to the back of the frame.

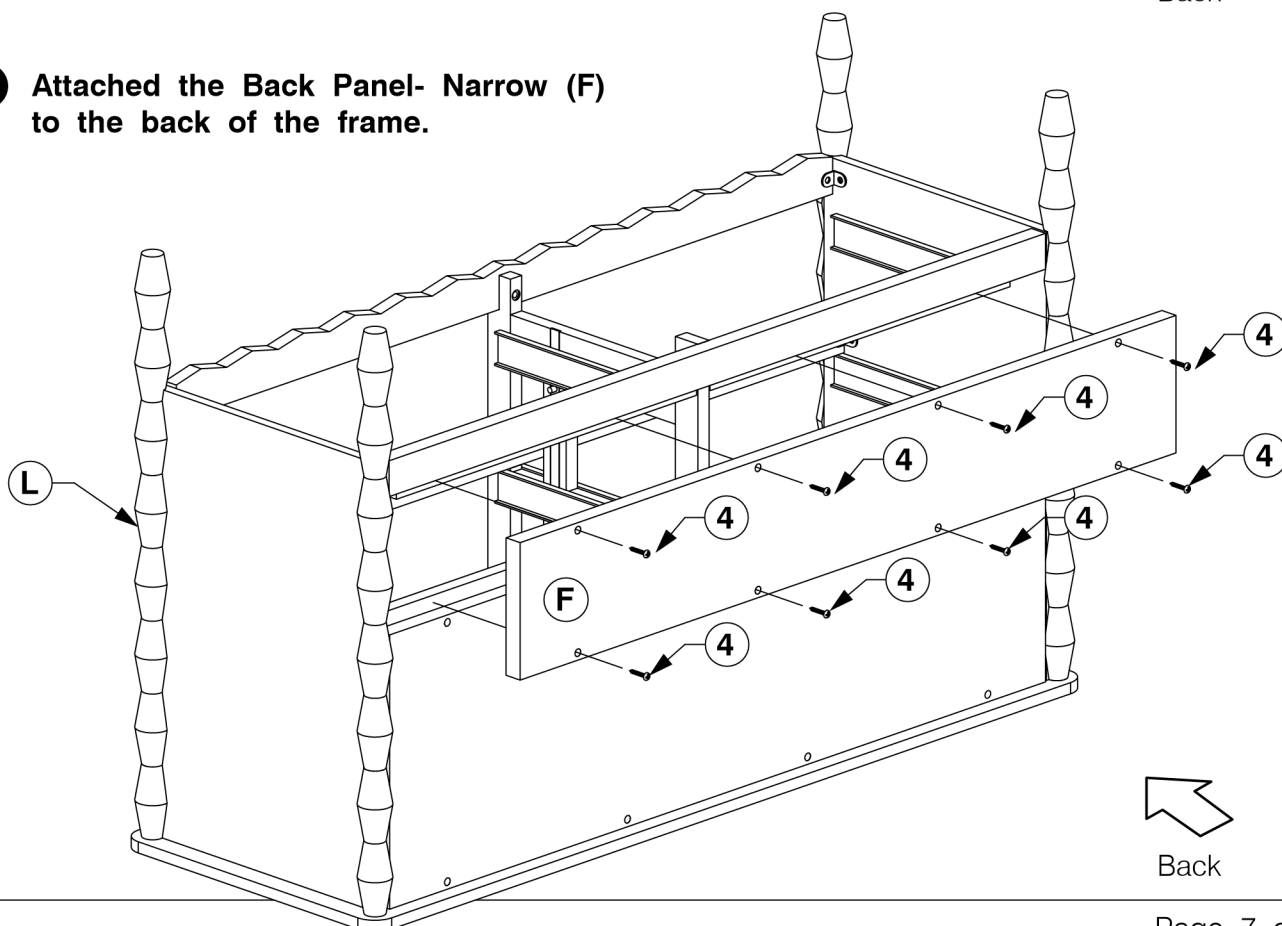


9028 6 Drawer Dresser

Assembly Instructions




WI-1225

10 Install the Drawers.


LEFT

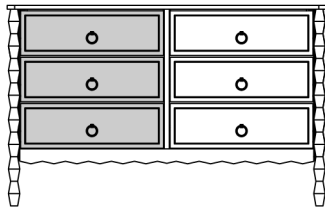




- Push the interlock bar **upwards** before inserting the drawers.

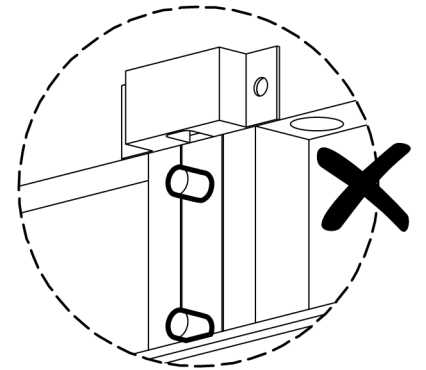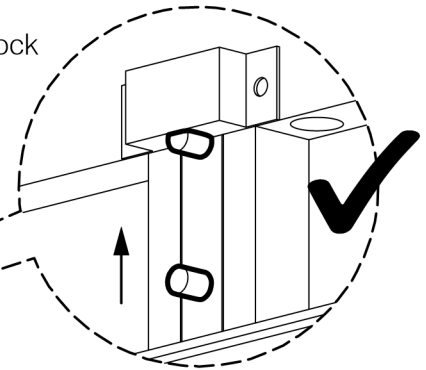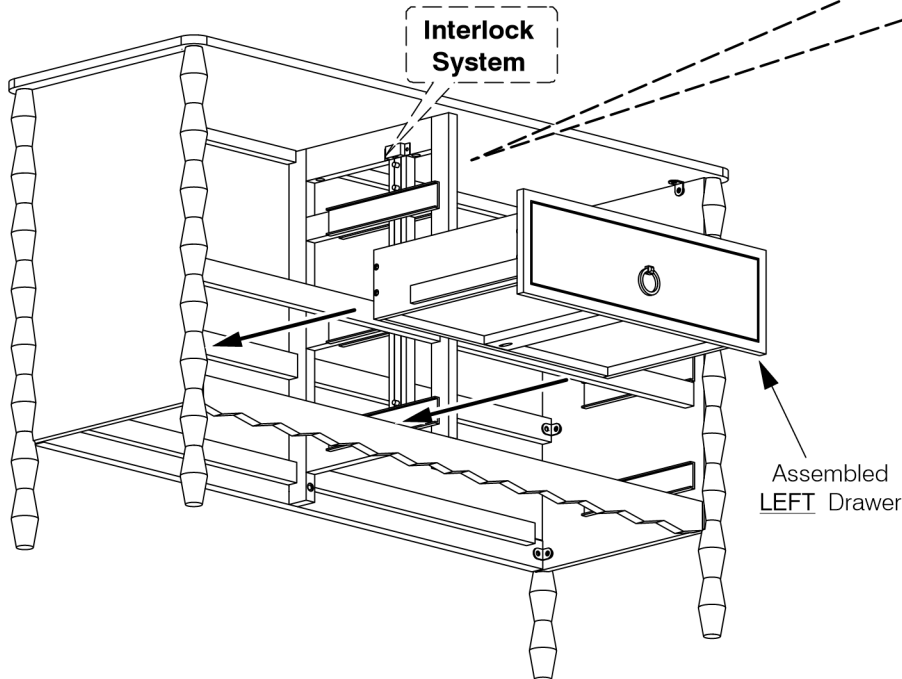

RIGHT

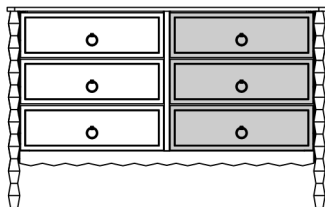

- Push the interlock bar **upwards** before inserting the drawers.

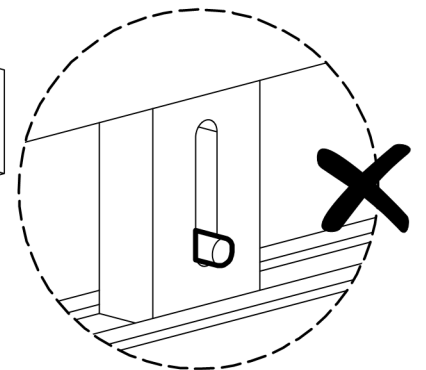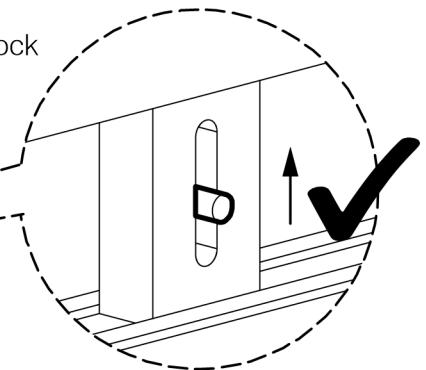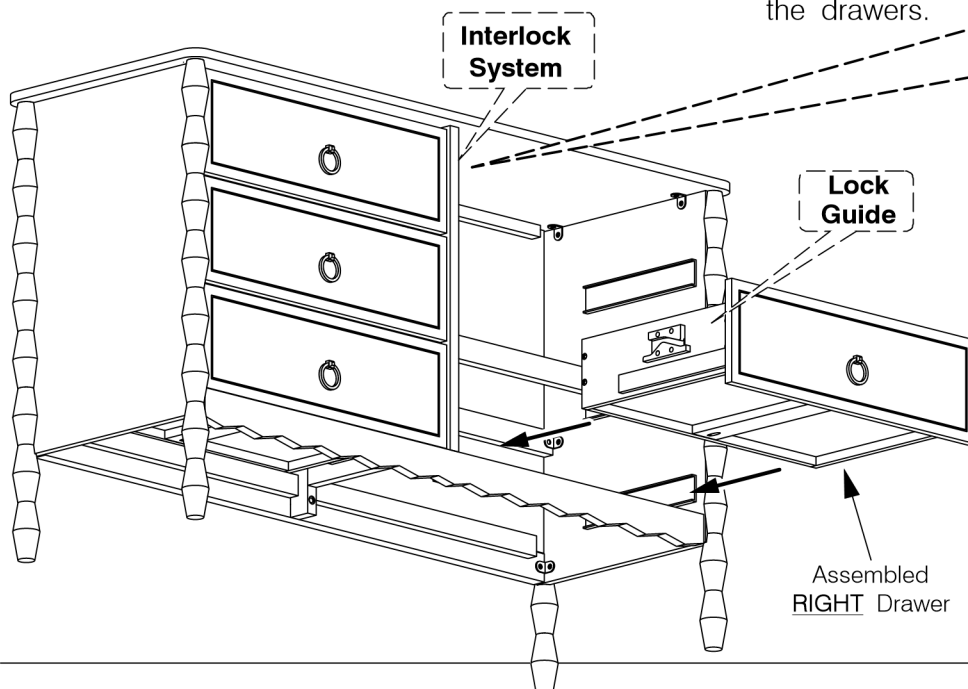


9028 6 Drawer Dresser

Assembly Instructions


WI-1225

11 Adjust the Drawer Face (G).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.


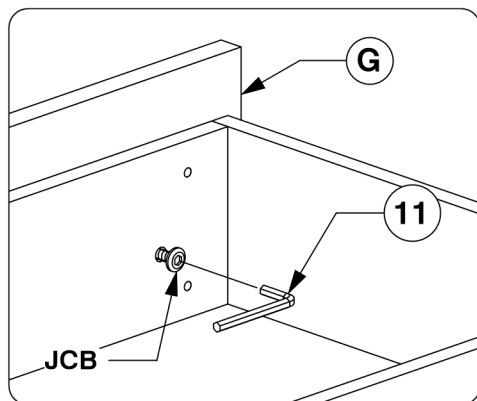


* NOTE: Only one drawer
can be open at a time.

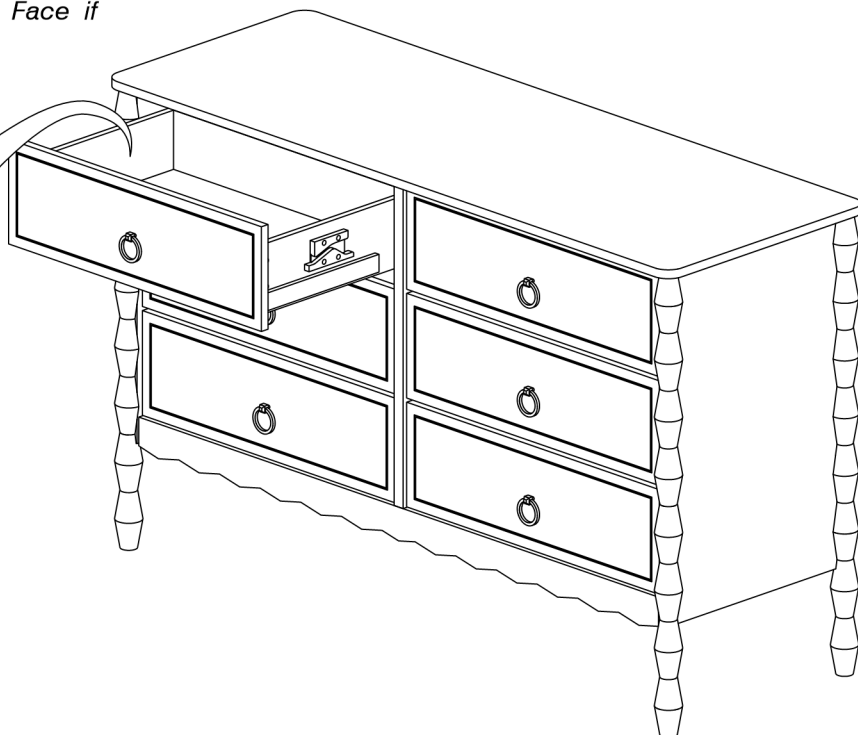

12 After the Drawer Faces (G) are aligned, secure with wood screws.

* NOTE: Only one drawer
can be open at a time.

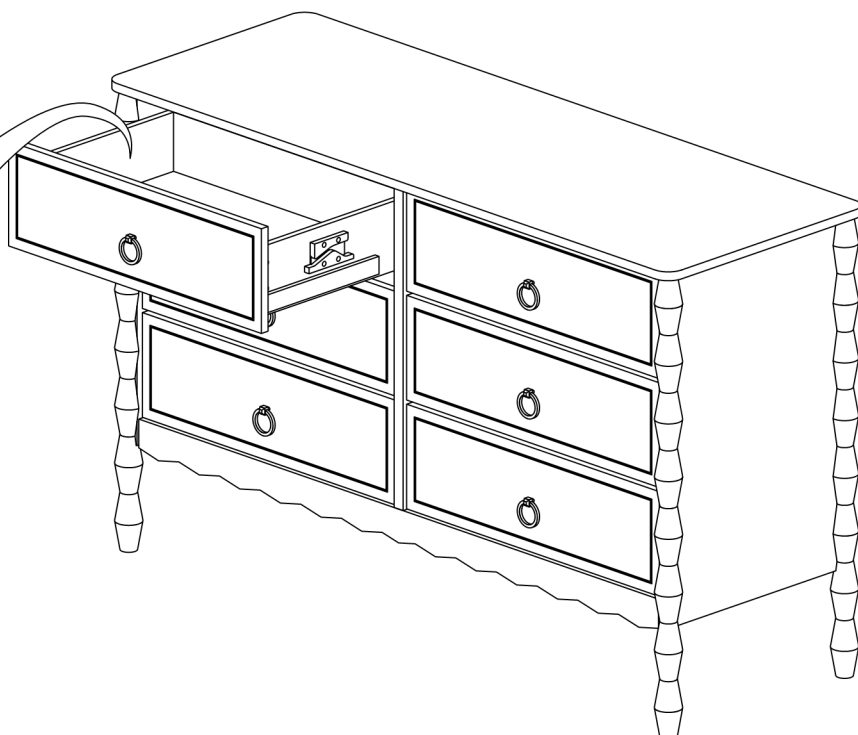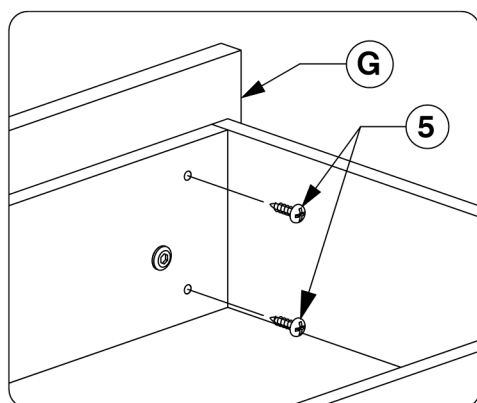





9028 6 Drawer Dresser

Assembly Instructions


WI-1225

13 Remove the Drawers.

- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

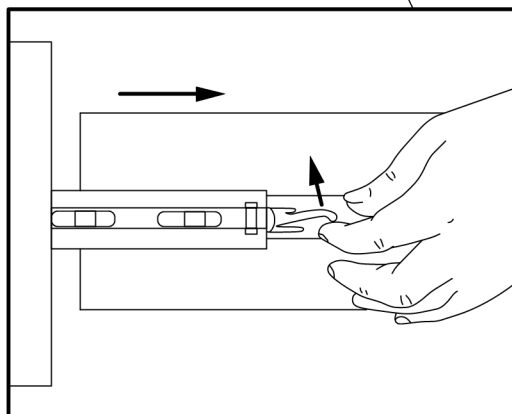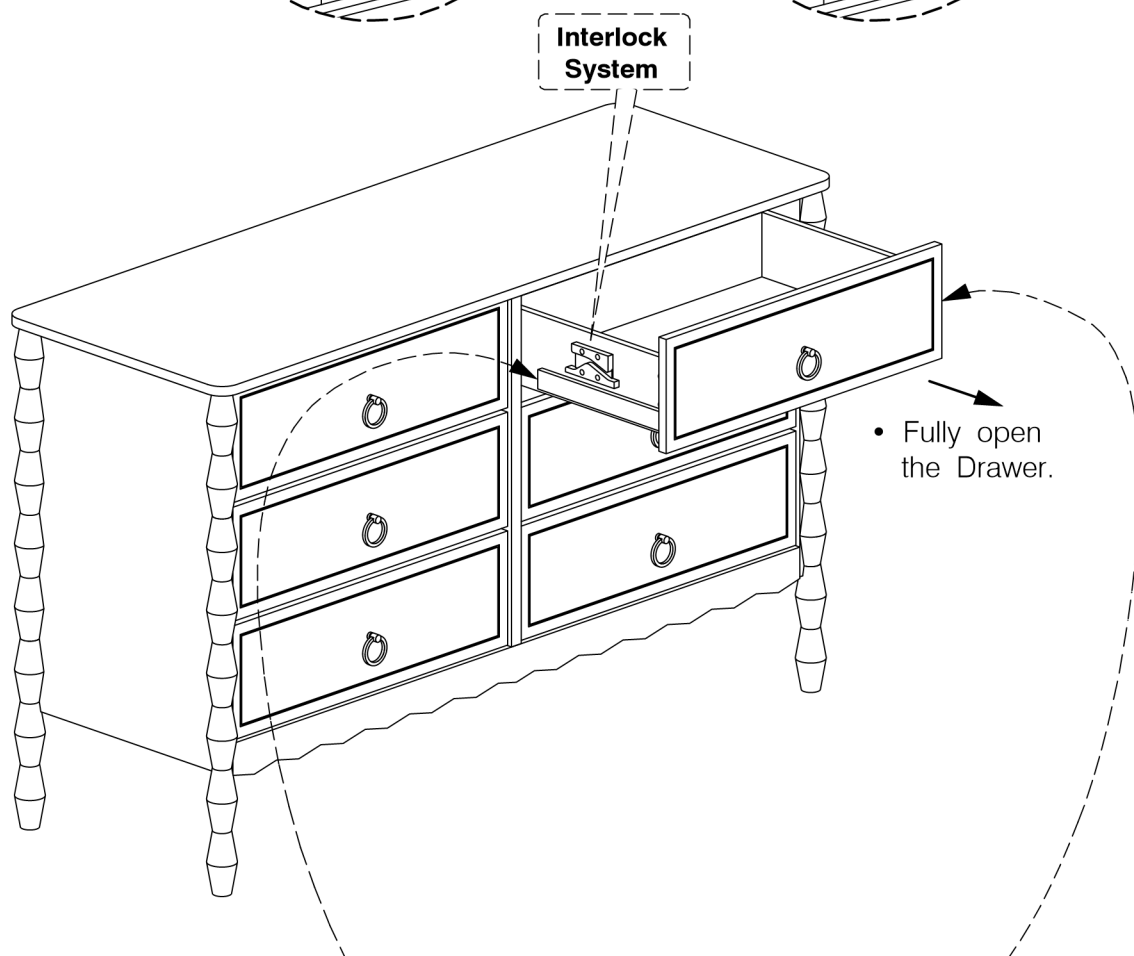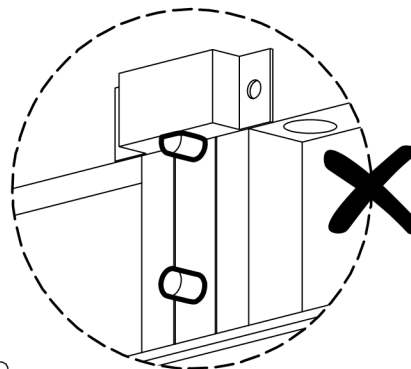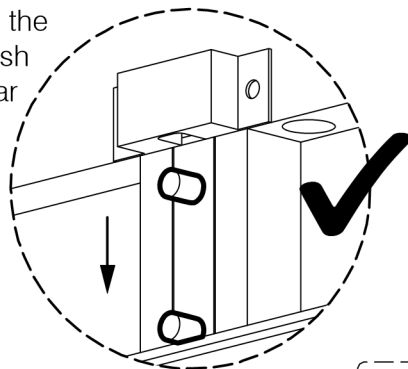

- Lift the **LEFT** side clip up.


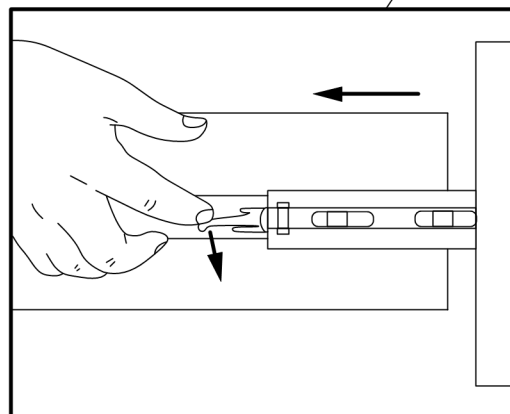


- Push **RIGHT** side clip down.

9028 2 Drawer Nightstand


Assembly Instructions

WI-1225

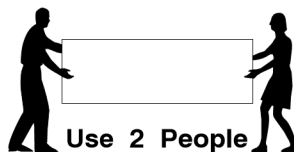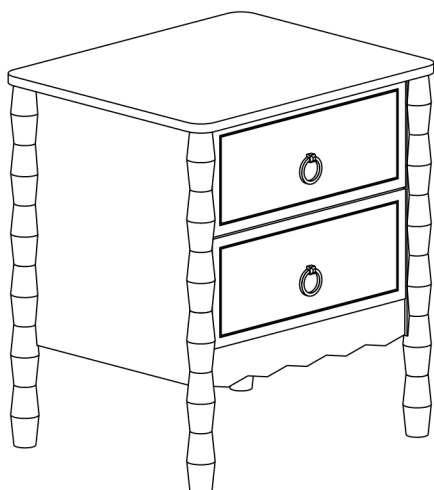

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

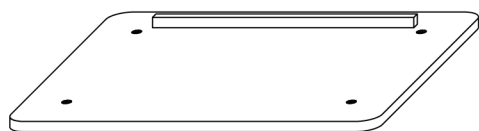


A Top Panel x 1




B Upper Support x 2




C Bottom Front Support x 1

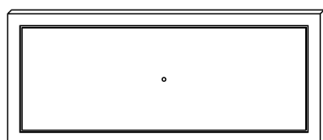

H Drawer Face x 2




K Drawer Side (Left Hand) x 2

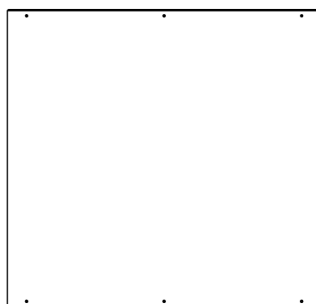


D Back Panel x 1




E Bottom Rear Support x 1




J Drawer Back x 2



L Drawer Side (Right Hand) x 2

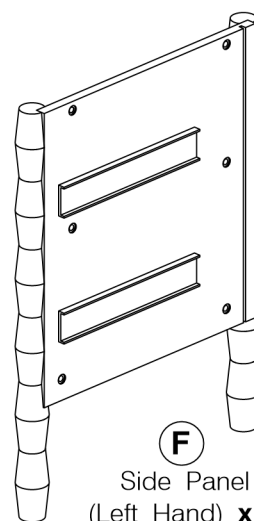

F Side Panel (Left Hand) x 1

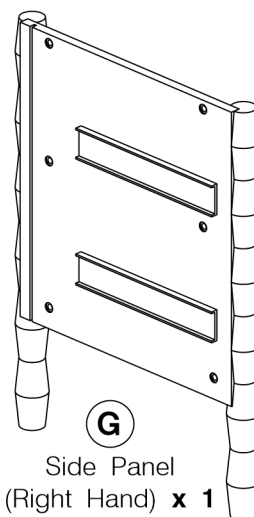

G Side Panel (Right Hand) x 1



M Drawer Bottom x 2

9028 2 Drawer Nightstand


Assembly Instructions

WI-1225


2 Hardware List

- | | | | |
|--|--|---|---|
| 
1 M6 x 15mm
JCB x 24 | 
2 M4 x 25mm
Wood
Screw x 16 | 
3 M4 x 20mm
Wood
Screw x 8 | 
4 M4 x 16mm
Wood
Screw x 6 |
| 
5 'L' Bracket
(5005-3)
x 12 | 
6 M4 x 22mm
Wood Screw
x 2 | 
7 Handle
(087)
x 2 | 
8 Allen Key
x 1 |


3 Assemble the Drawer Sides (K & L) to the Drawer Face (H).

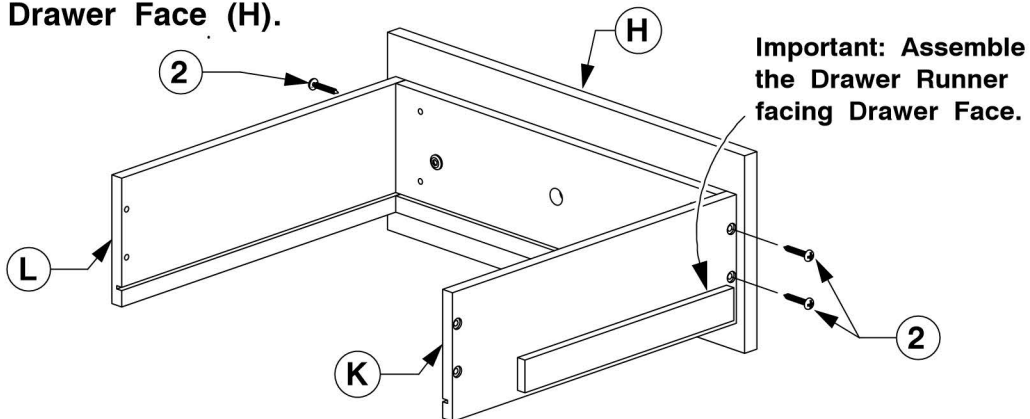

4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

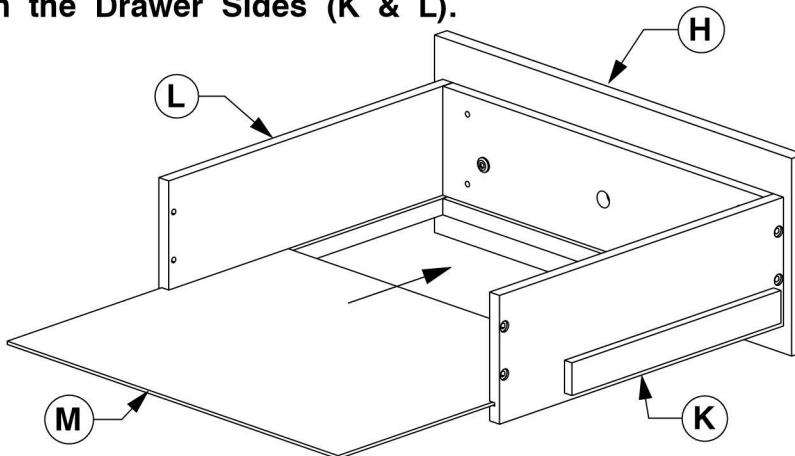

5 Assemble the Drawer Back (J) to the Drawer Sides (K & L). Fit the Handle to the Drawer Face (H).

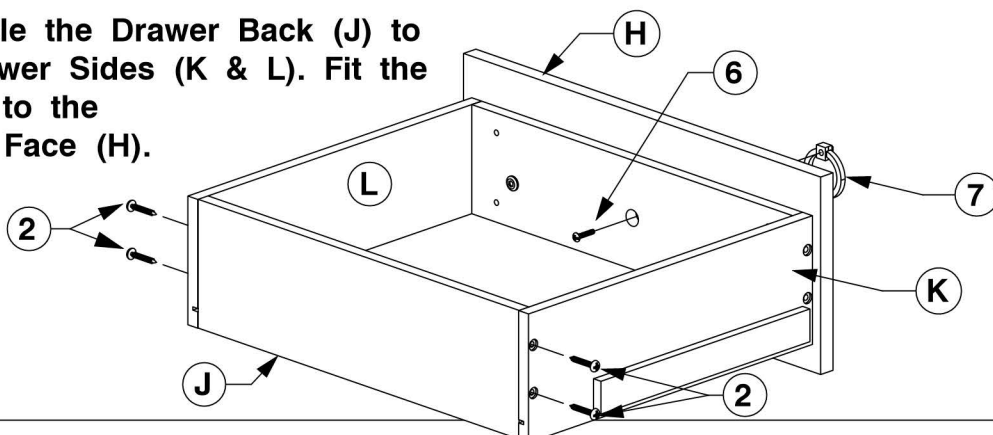


9028 2 Drawer Nightstand


Assembly Instructions

WI-1225

- 6** Fit the 'L' Bracket to the Side Panel (F & G).

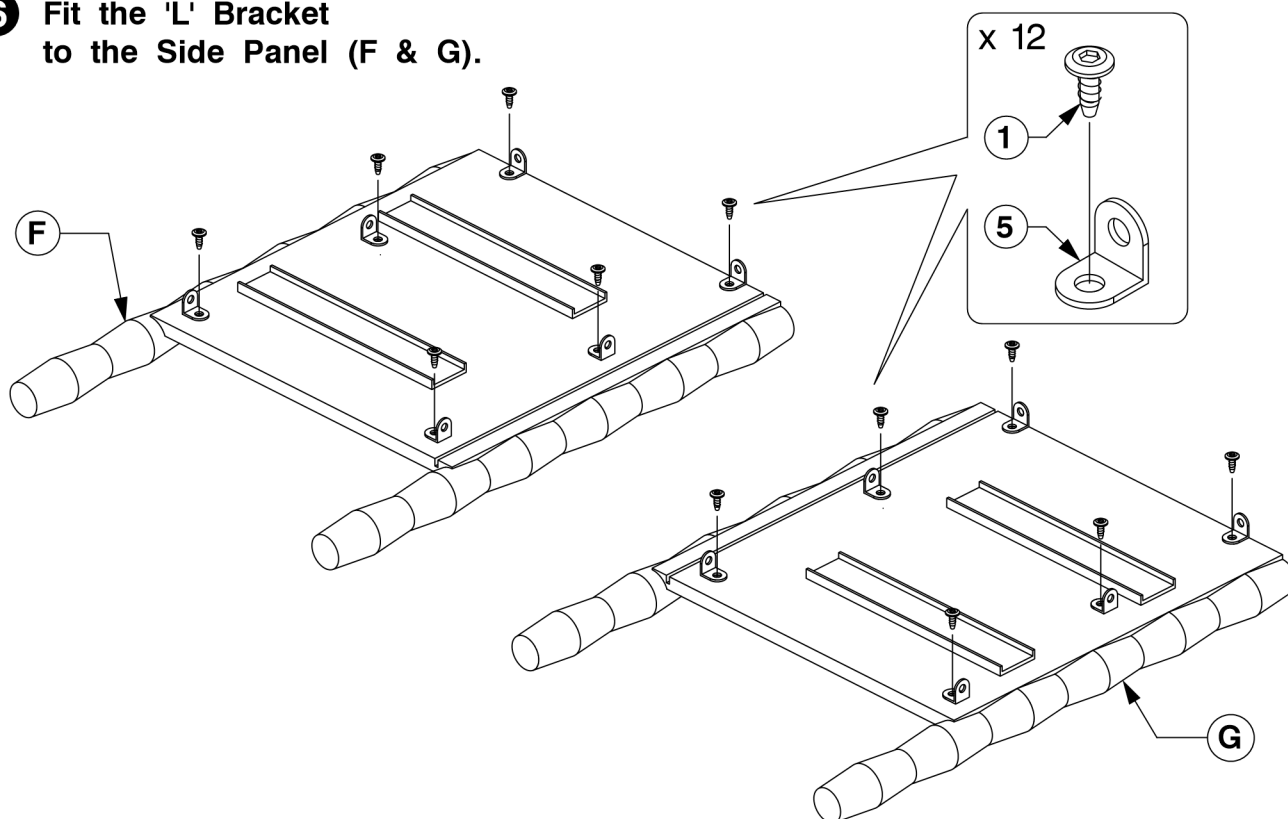

- 7** Assembled the Side Panel (F & G) to the Top Panel (A).

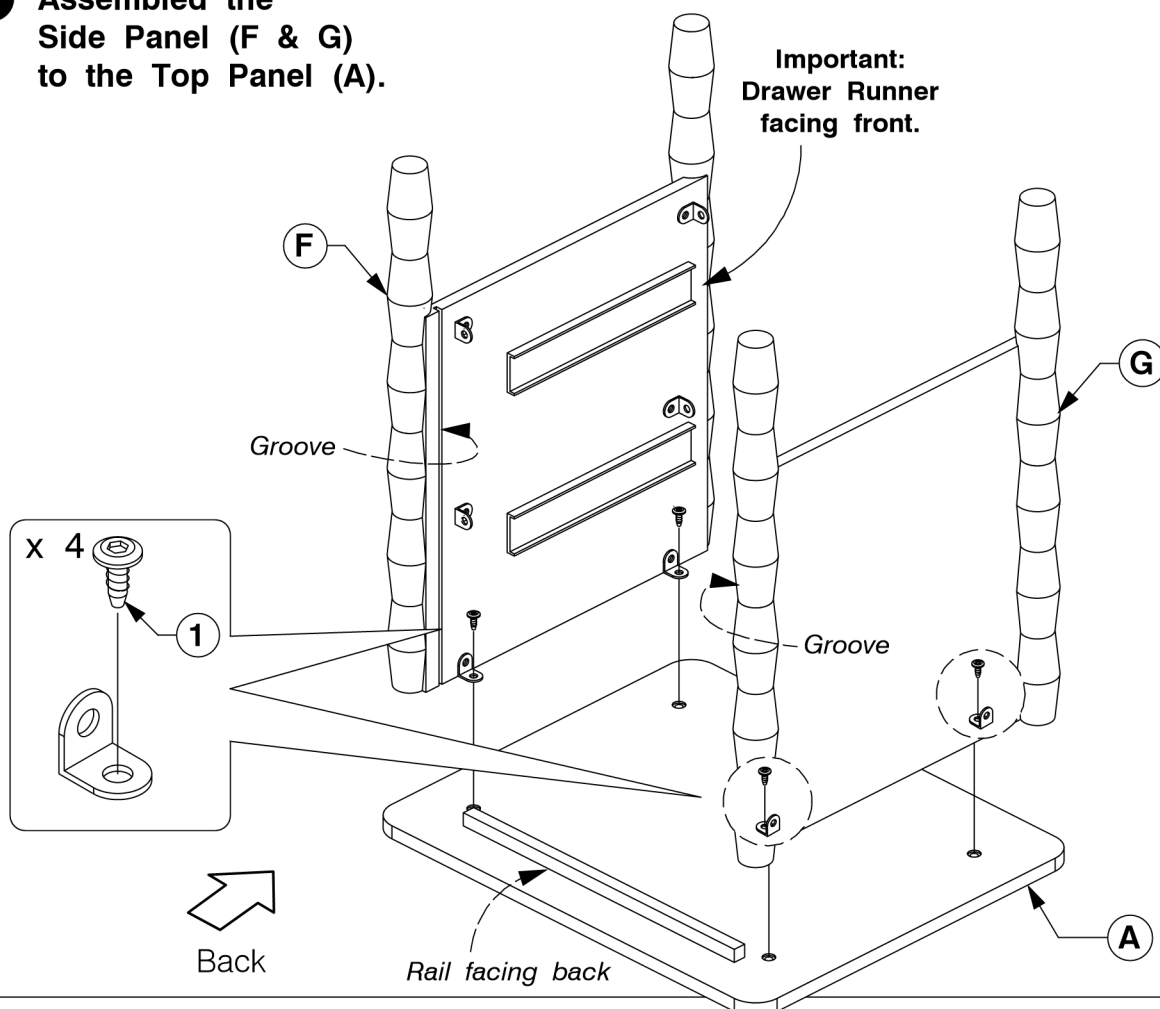


9028 2 Drawer Nightstand


Assembly Instructions

WI-1225

- 8** Fit the Upper Support Bar (B), Bottom Front & Rear Support (C & E) to the Side Panel (F & G).

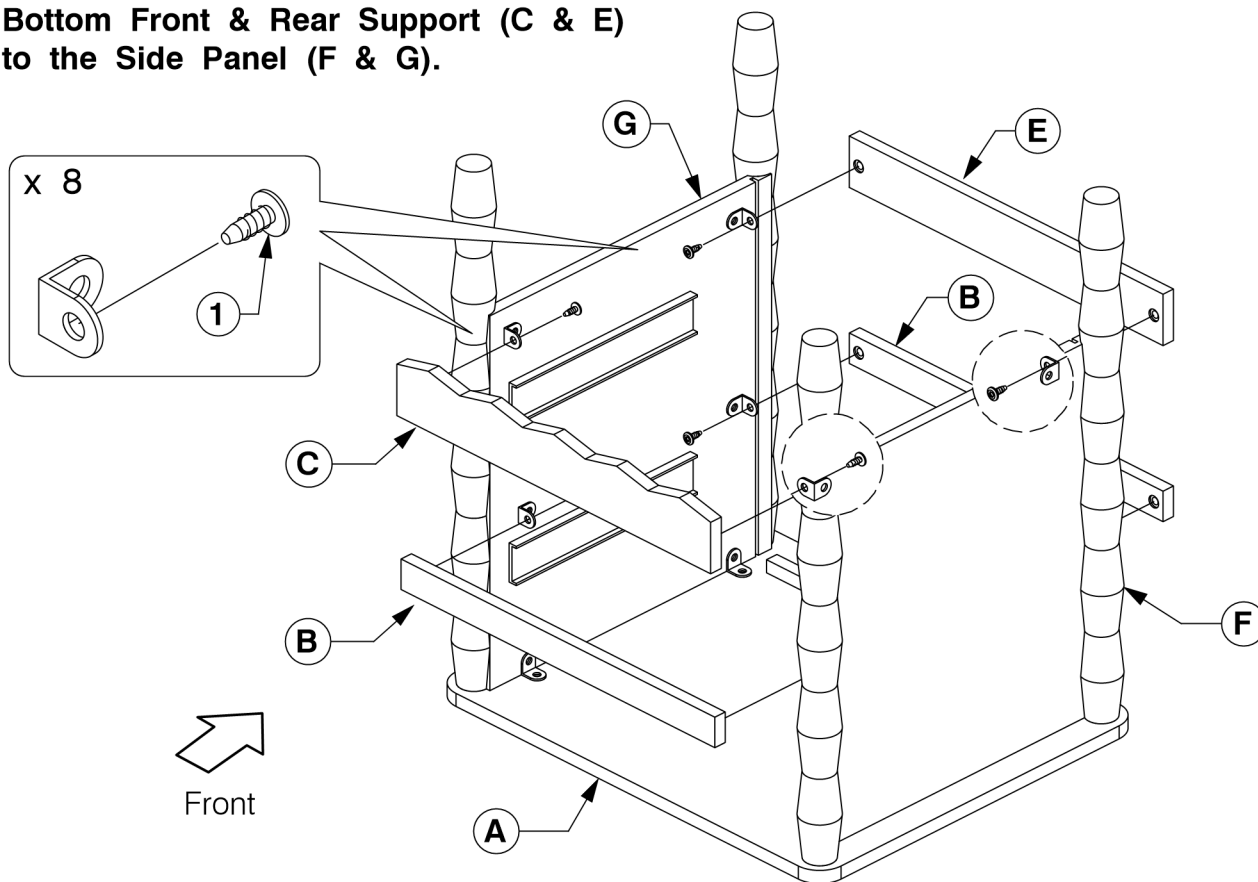

- 9** Slide the Back Panel (D) into the groove on the back of the Side Panel (F & G).

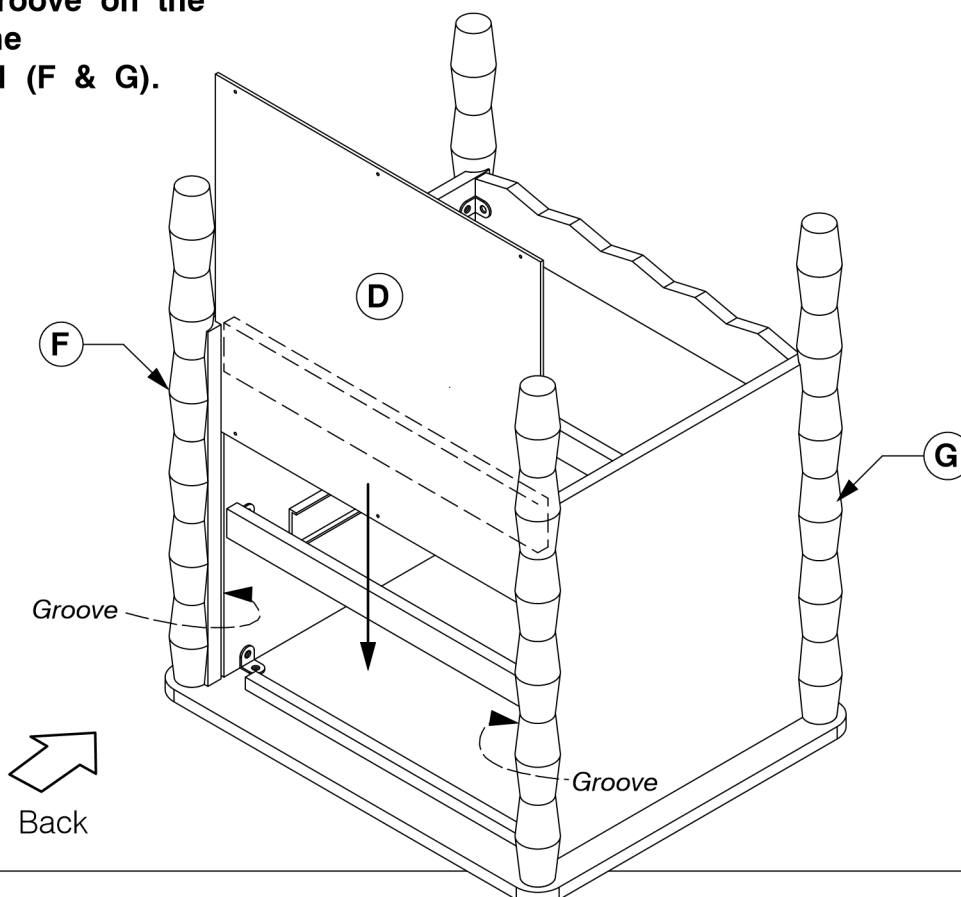


9028 2 Drawer Nightstand


Assembly Instructions

WI-1225

- 10** Use screws to tighten the Back Panel (D).

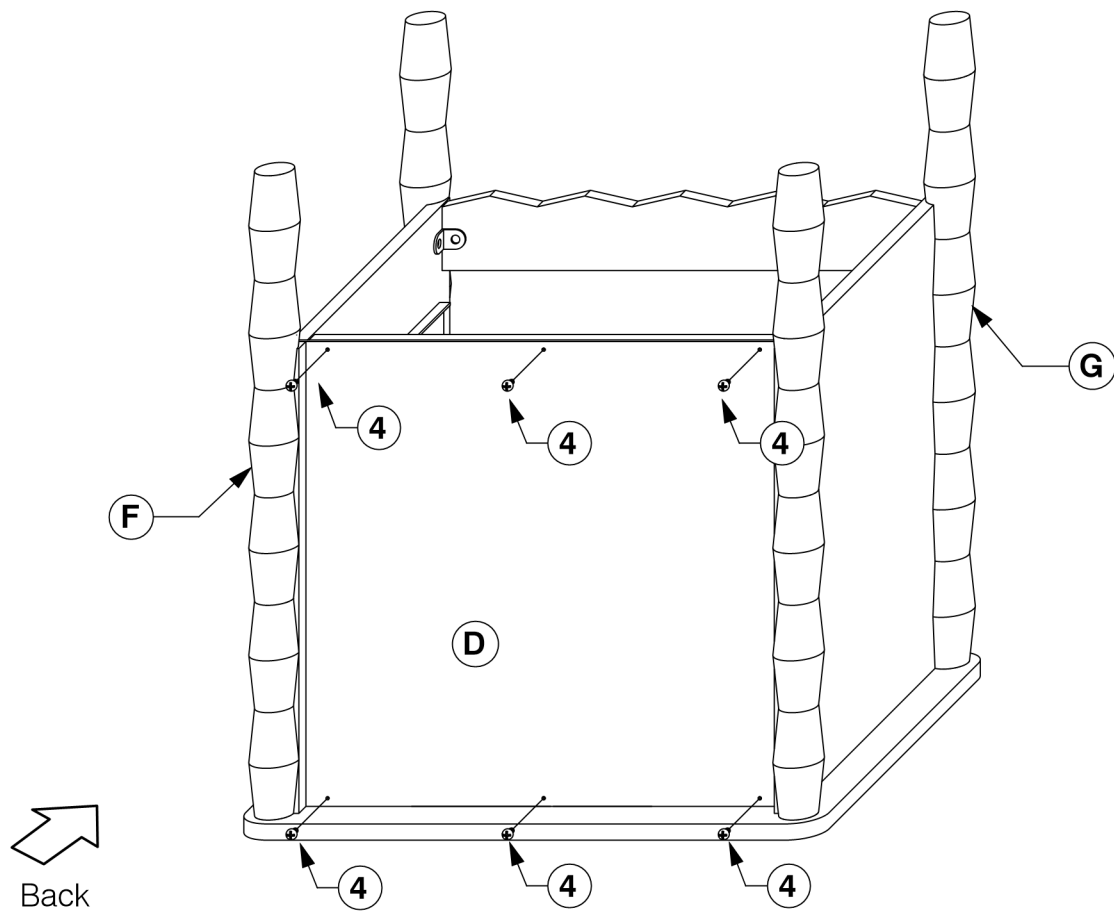

- 11** Fit the Drawer Box to the Casegood Body.

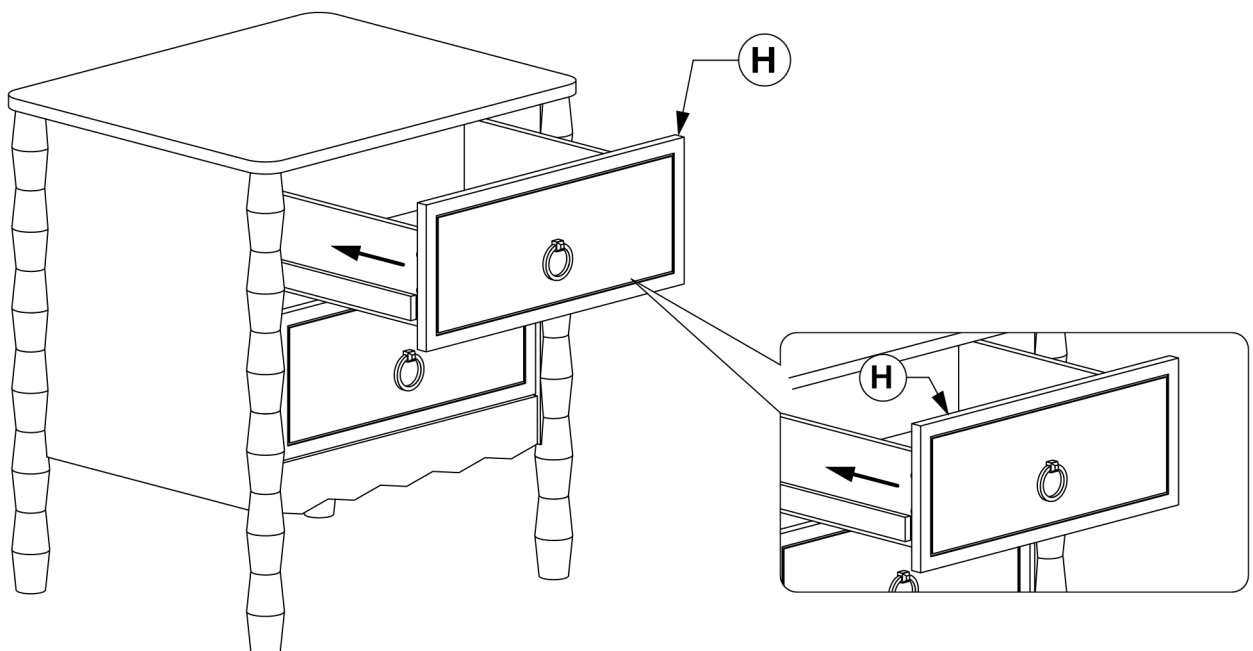


9028 2 Drawer Nightstand

Assembly Instructions


WI-1225

12 Fit and adjust the Drawer Face (H).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

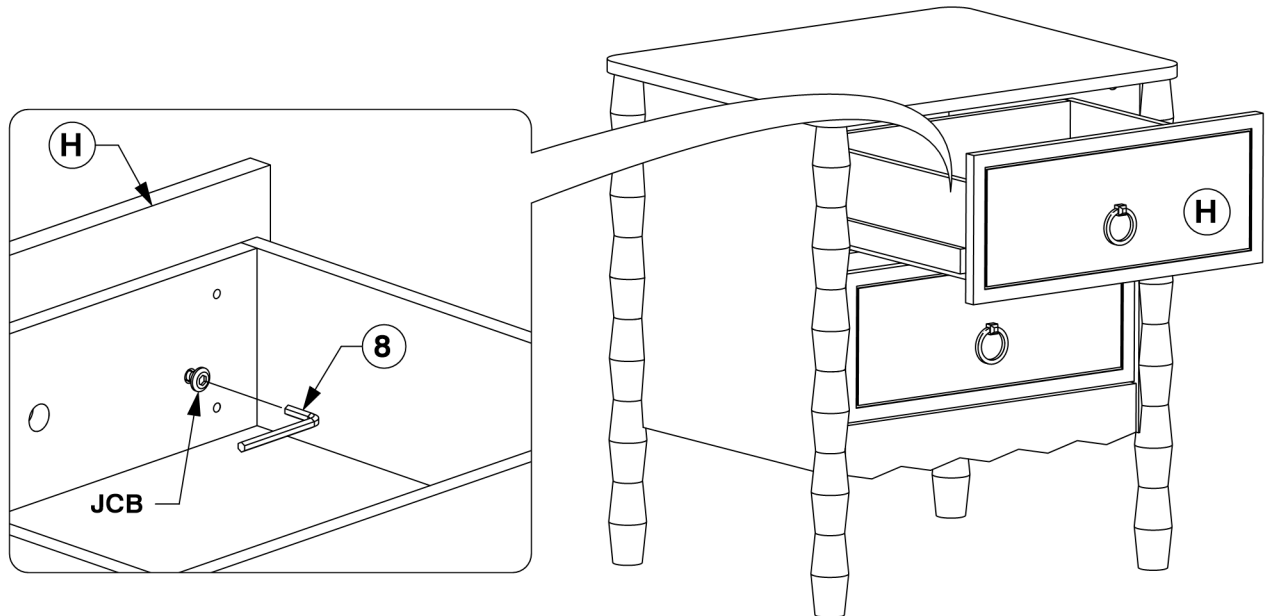



13 After the Drawer Faces (H) are aligned, secure with wood screws.

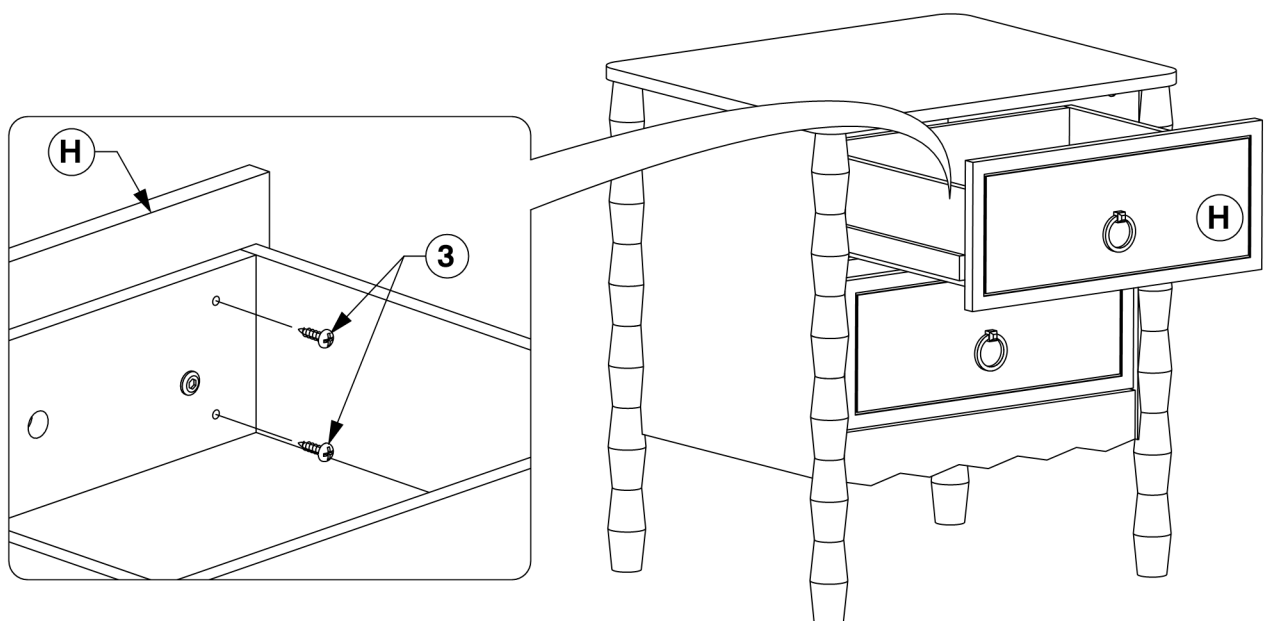

9028 4 Drawer Chest


Assembly Instructions

WI-1225

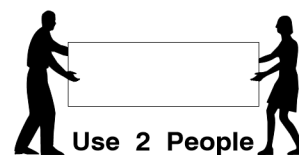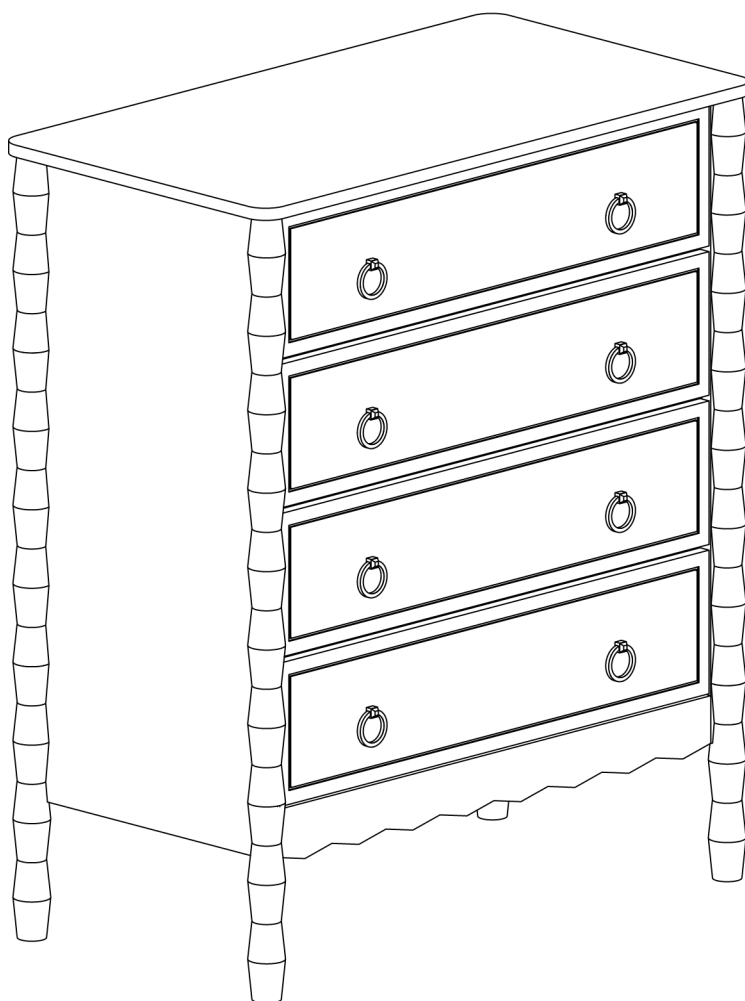

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

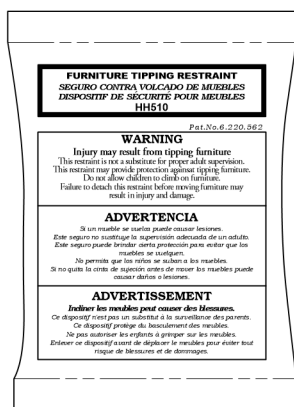

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.









9028 4 Drawer Chest

Assembly Instructions





WI-1225

1 Parts List

Parts in Box A:

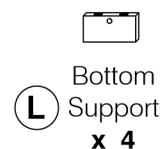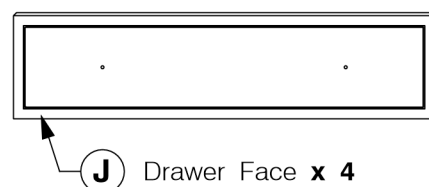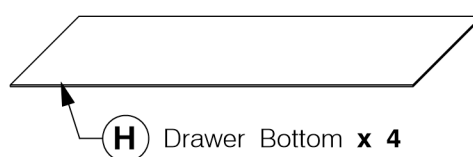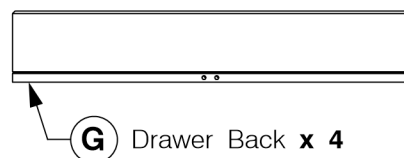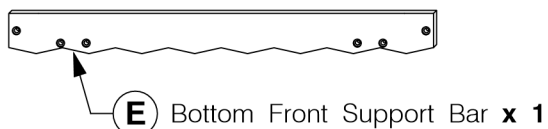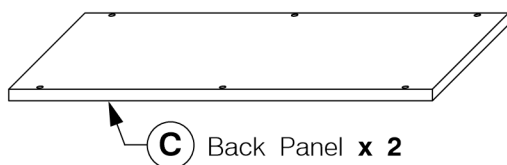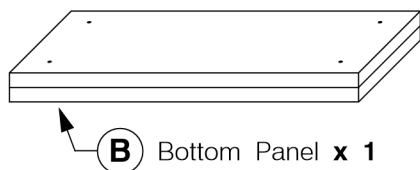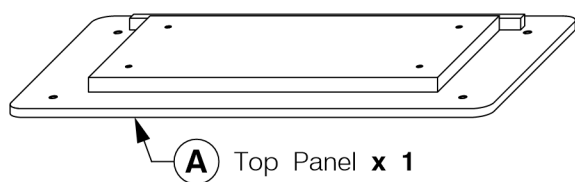

Parts in Box B:

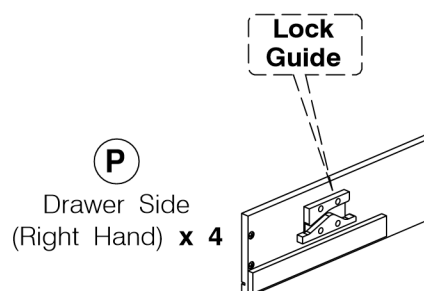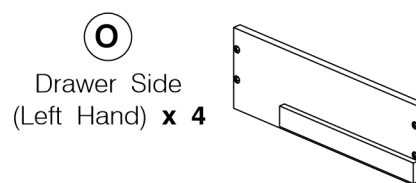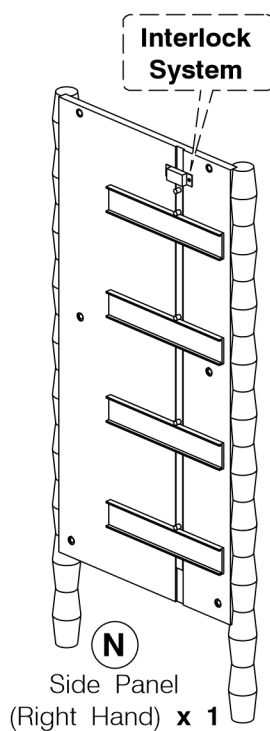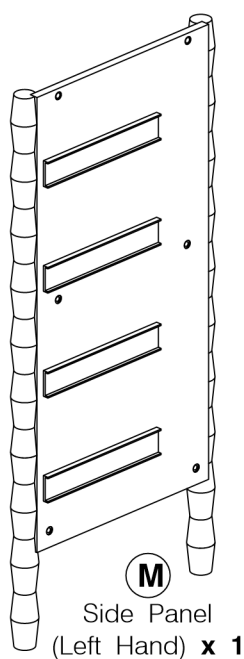


9028 4 Drawer Chest


Assembly Instructions

WI-1225

2 Hardware List

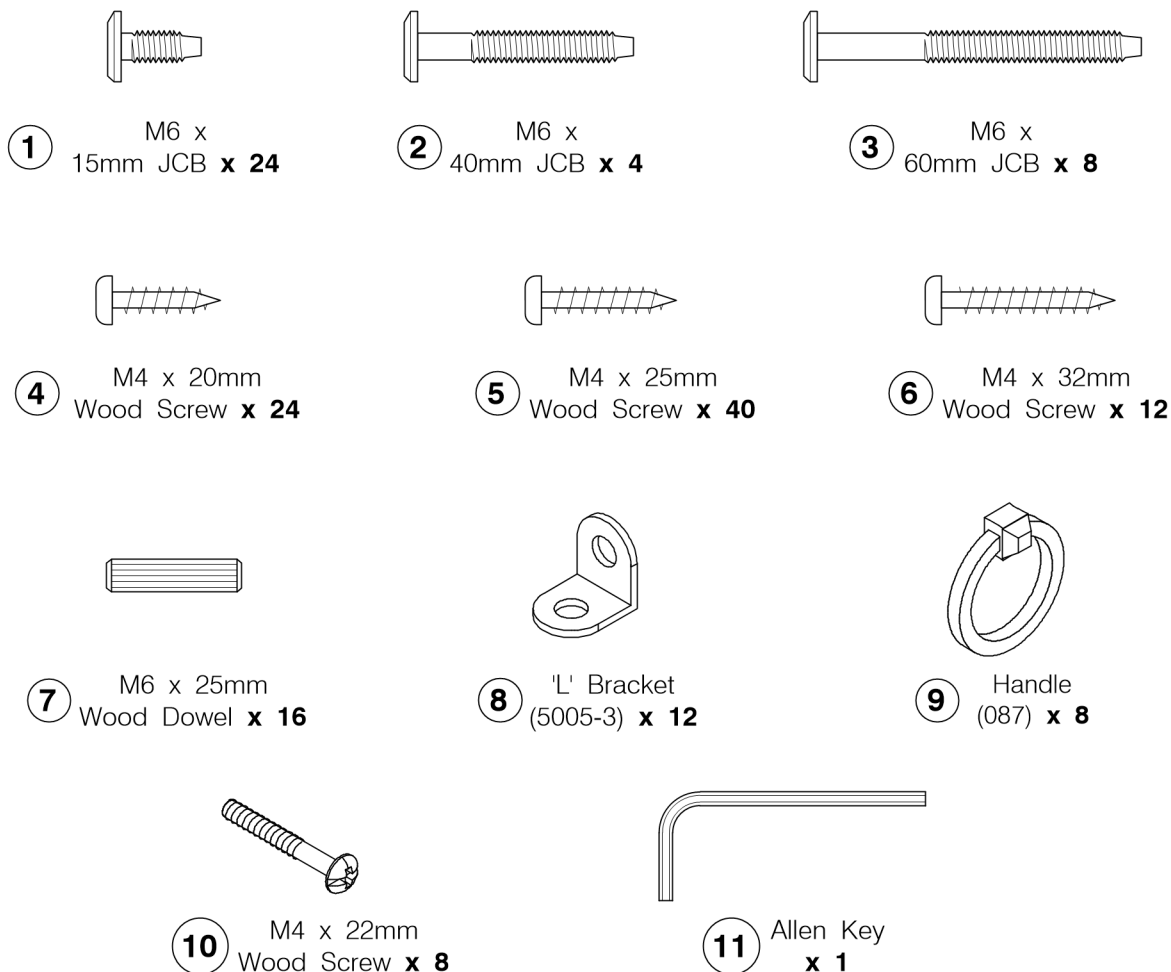

3 Assemble the Drawer Sides (O & P) & Drawer Rail (K) to the Drawer Face (J).

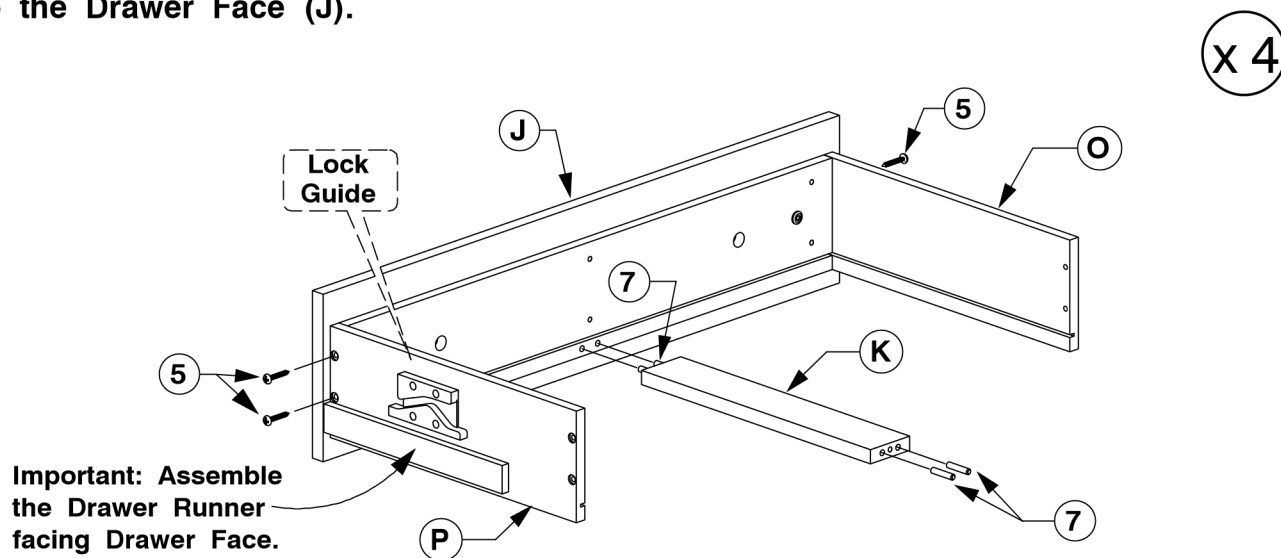


9028 4 Drawer Chest

Assembly Instructions

WI-1225


- 4** Slide the Drawer Bottom (H) into the groove on the Drawer Sides (O & P).

x 4

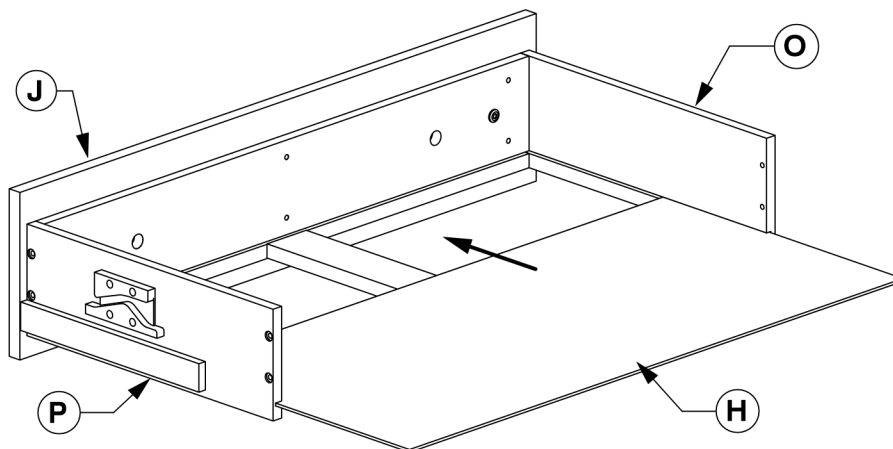


- 5** Assemble the Drawer Back (G) to the Drawer Sides (O & P). Fit the Handles to the Drawer Face (J).

x 4

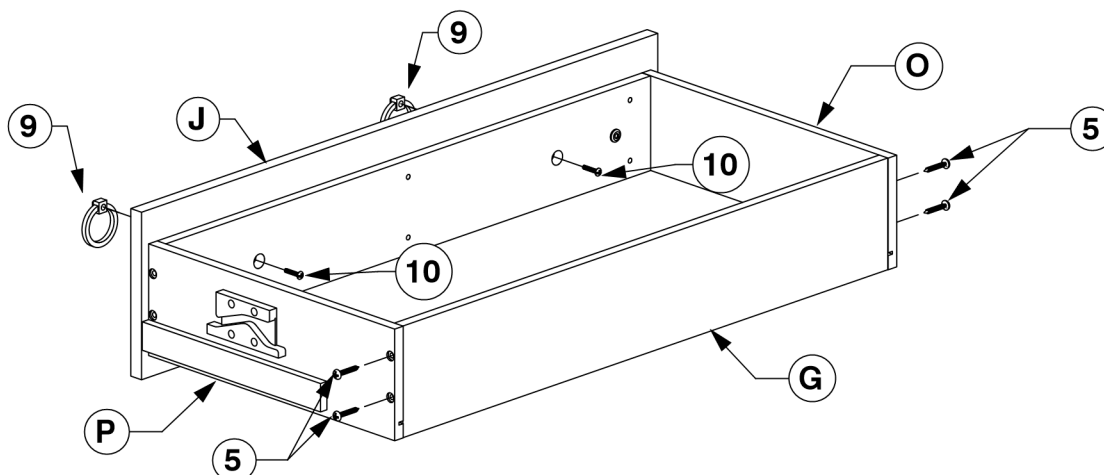

- 6** Turn the Drawer over to fit angled 25mm Wood screws (5) to the Drawer Rail (K).

x 4

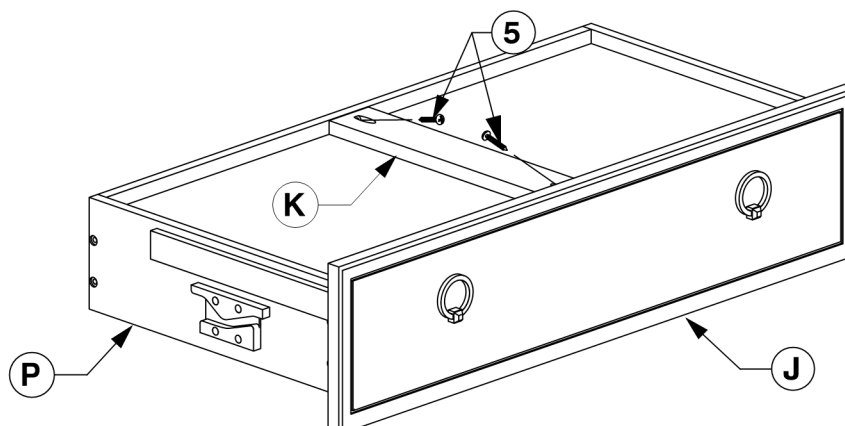


9028 4 Drawer Chest


Assembly Instructions

WI-1225

- 7** Fit the 'L' Bracket (8) to the Side Panel (M & N).

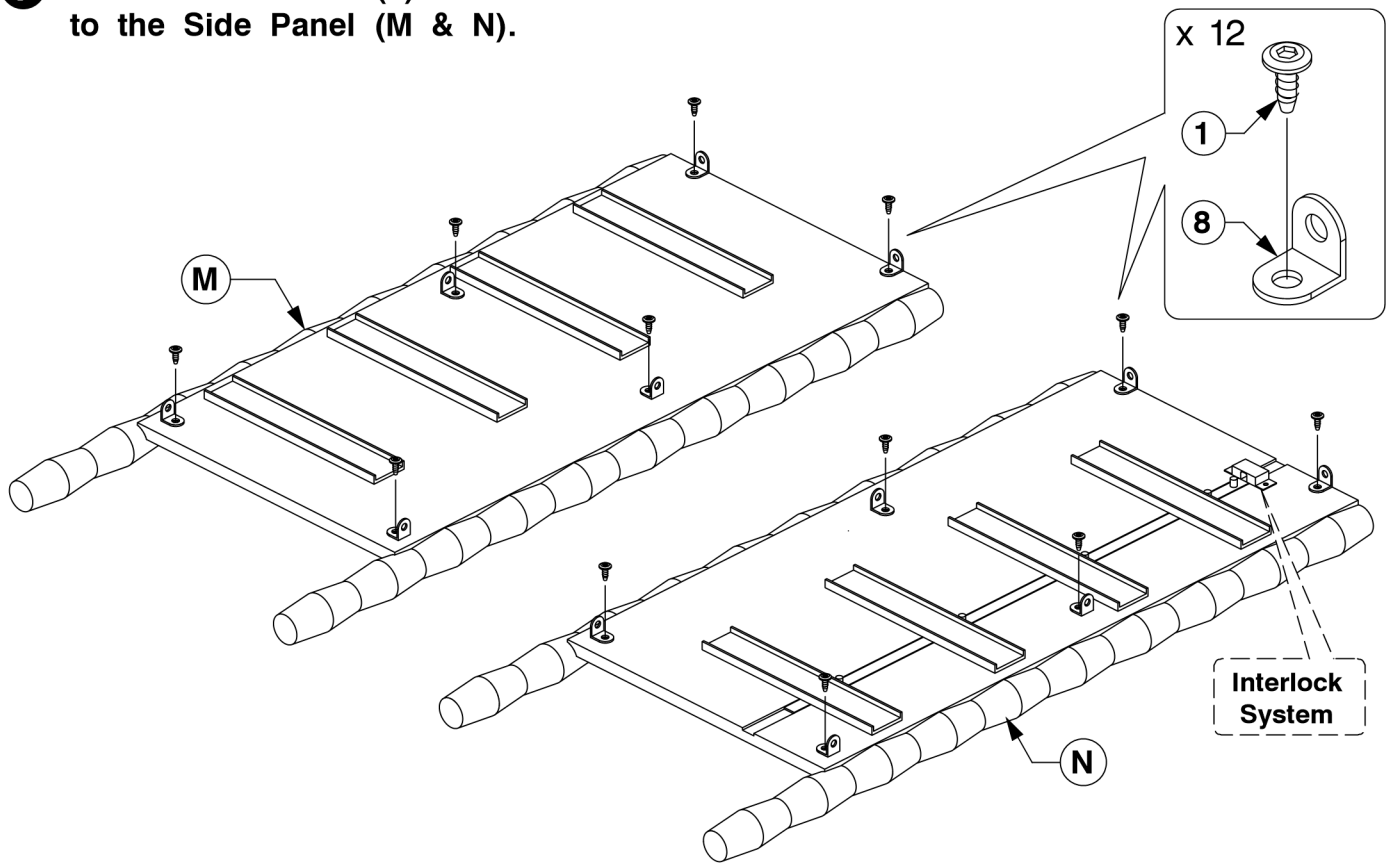

- 8** Assemble the Top Panel (A) to the Side Panel (M & N).

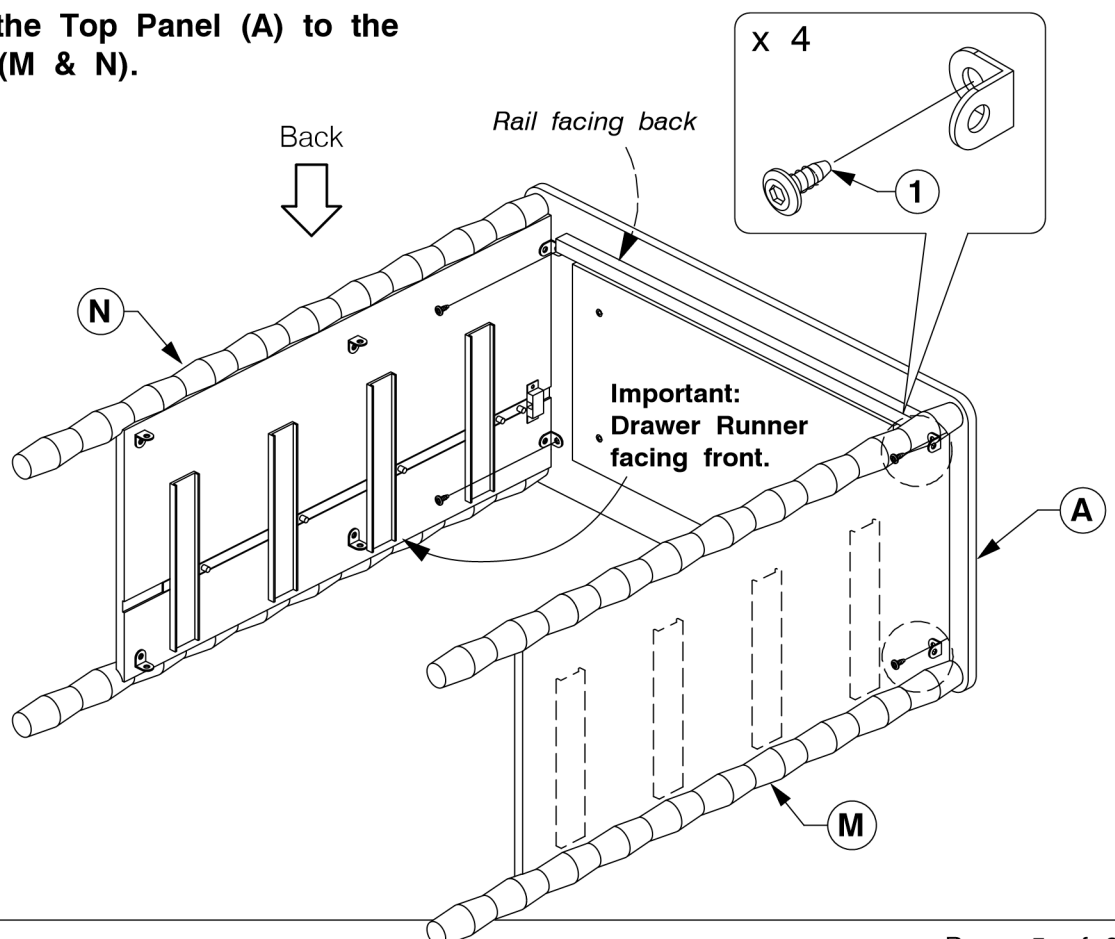


9028 4 Drawer Chest


Assembly Instructions

WI-1225

- 9** Fit the Support Bar Upper & Bottom (D, E & F) to the Side Panel (M & N) as shown.

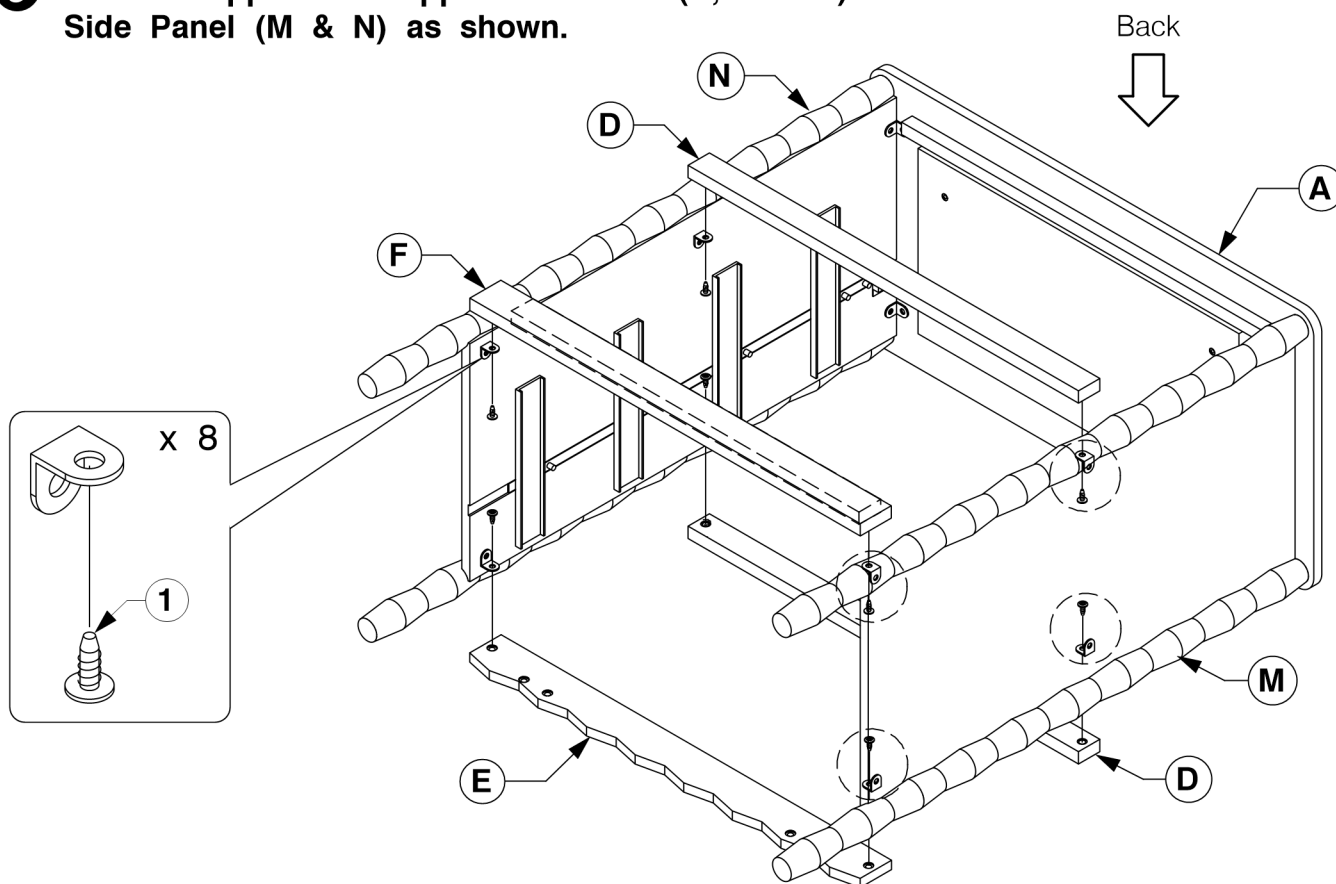

- 10** Assembled the Bottom Support (L) to the Bottom Front & Rear Support Bar (E & F) as shown.

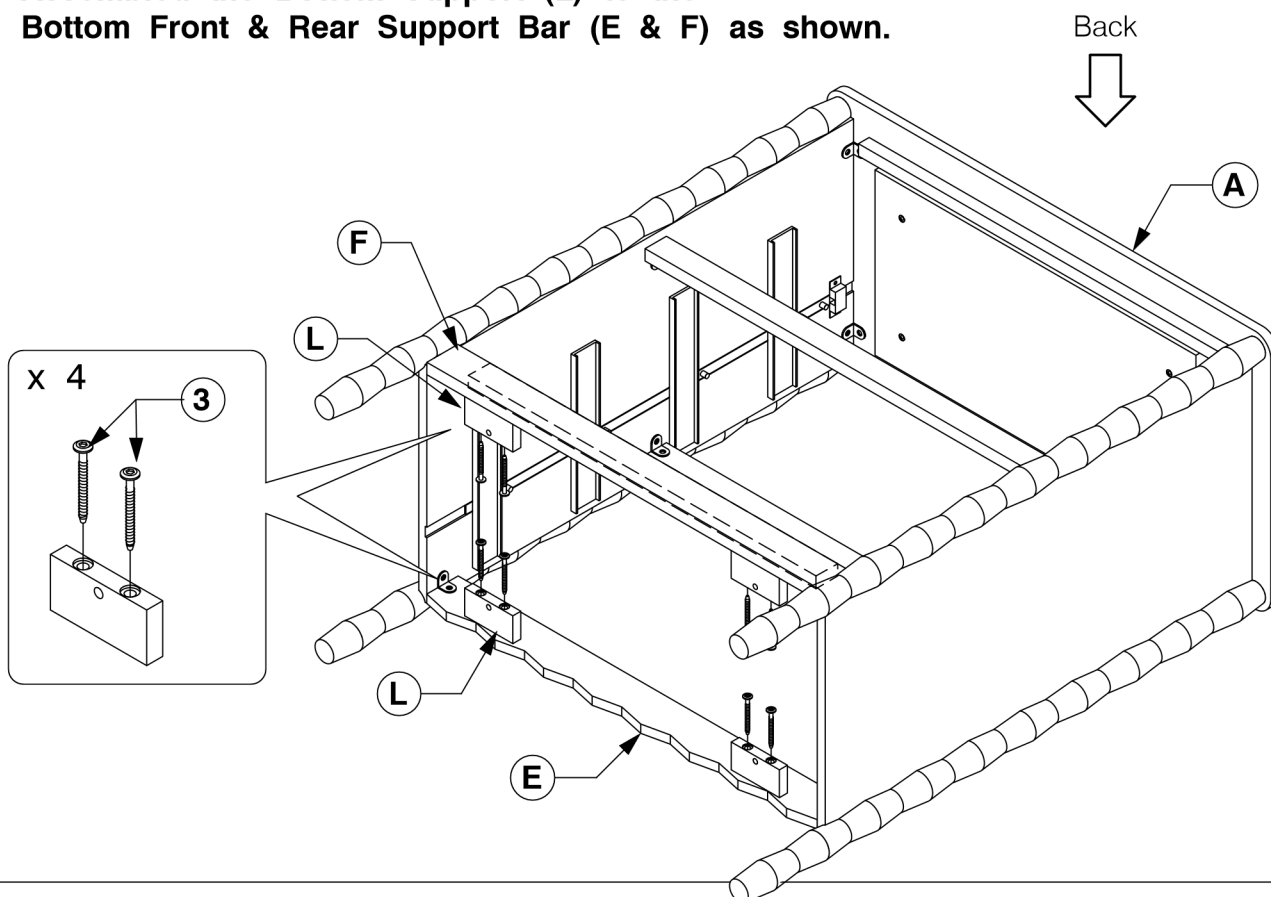


9028 4 Drawer Chest


Assembly Instructions

WI-1225

- 11** Bolt the Bottom Support (L) to the Bottom Panel (B) as shown.

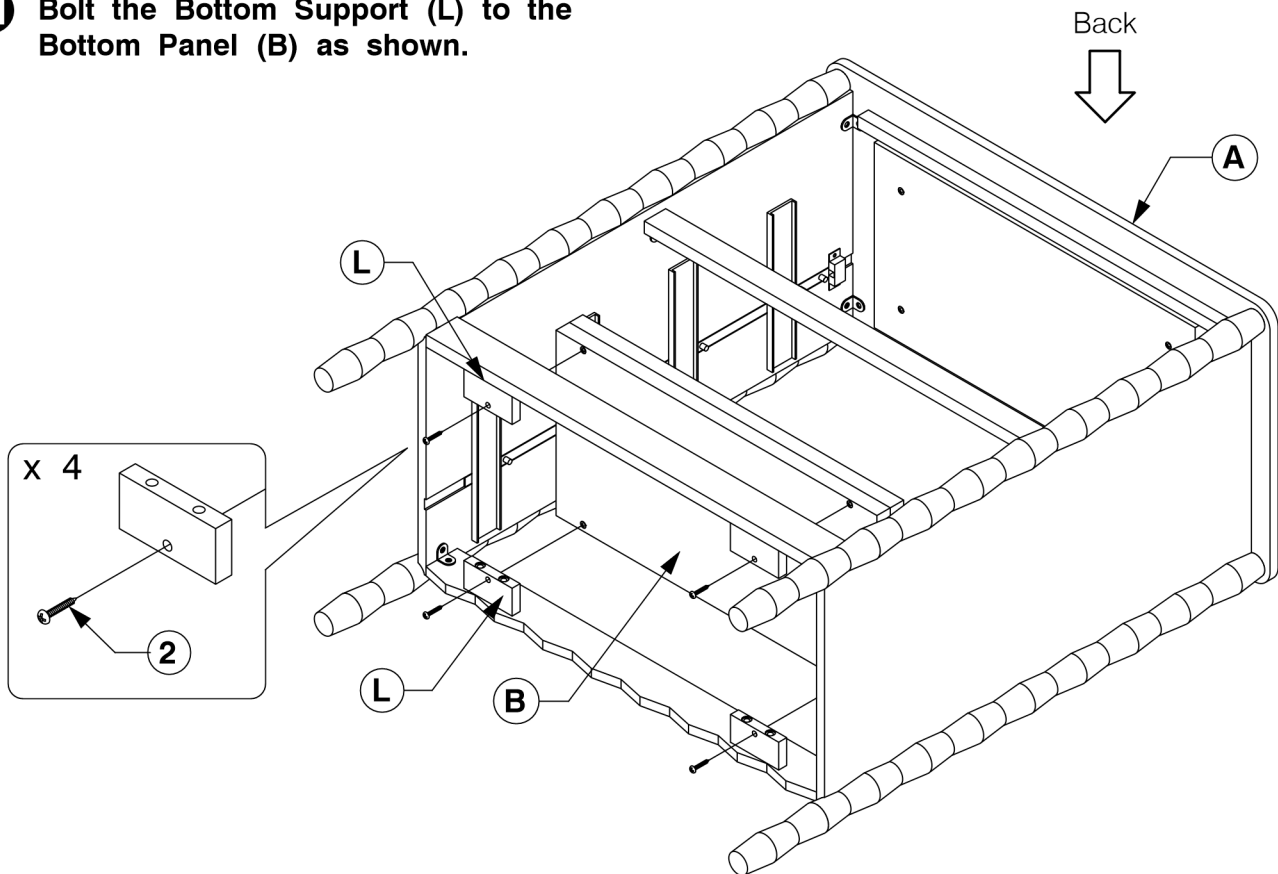

- 12** Attached the Back Panel (C) to the back of the frame.

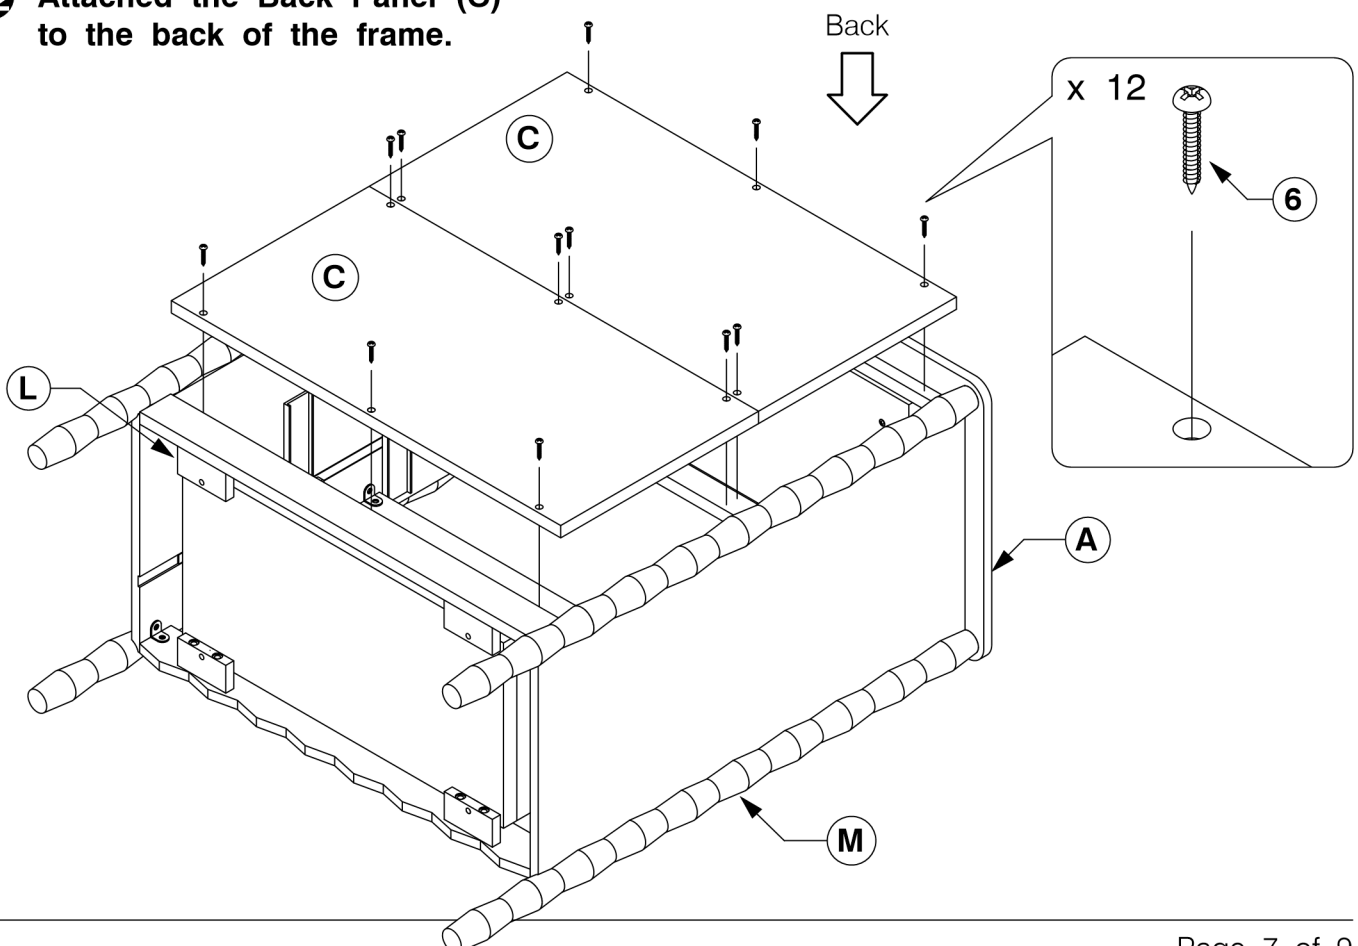


9028 4 Drawer Chest


Assembly Instructions

WI-1225

13 Install the Drawer.

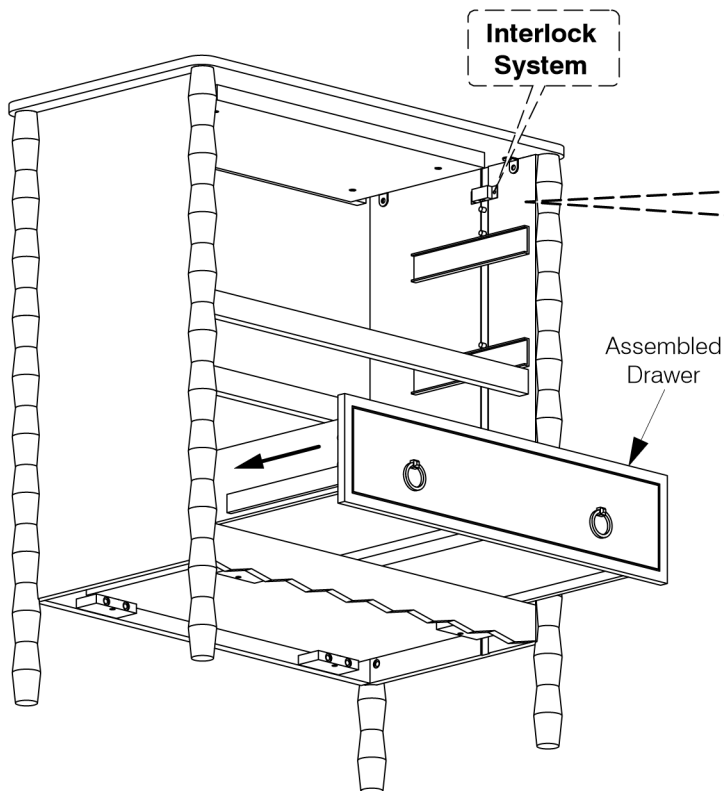


- Push the interlock bar **upwards** before inserting the drawers.

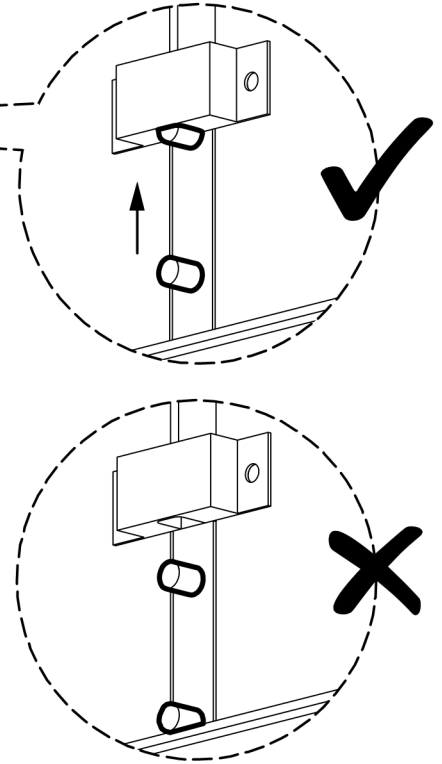


14 Fit and adjust the Drawer Face (J).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

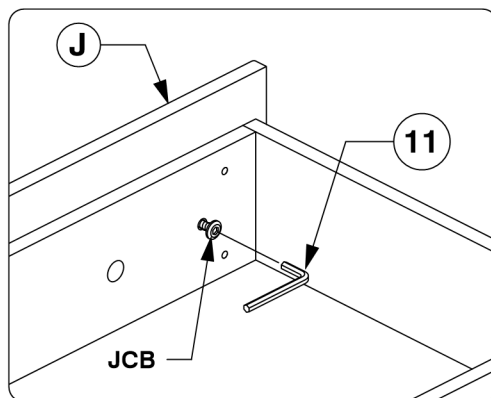

* NOTE: Only one drawer
can be open at a time.

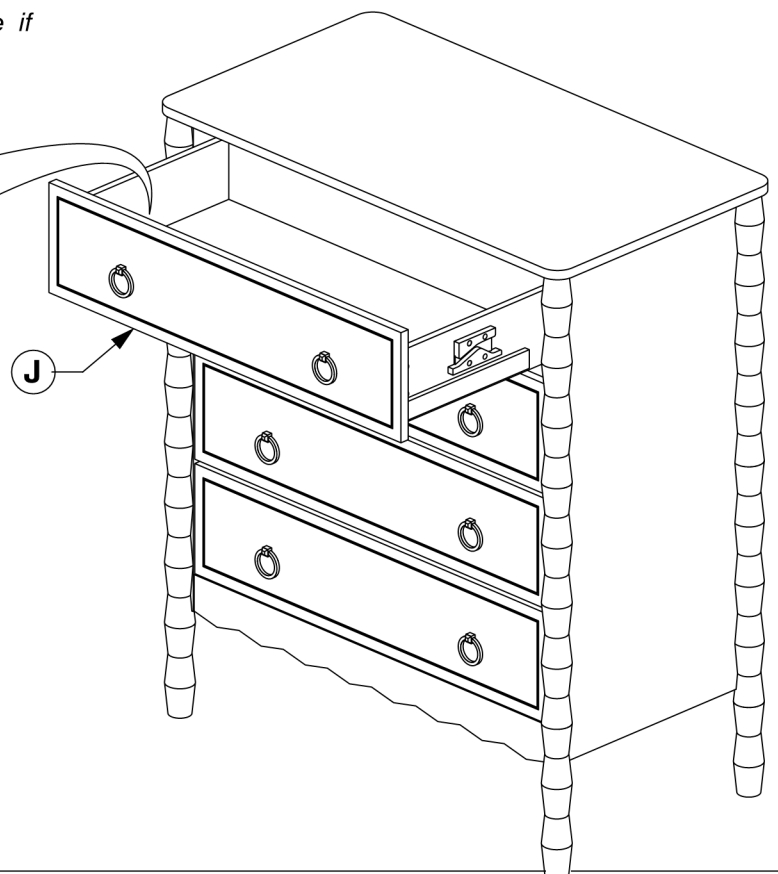



9028 4 Drawer Chest

Assembly Instructions


WI-1225

- 15** After the Drawer Faces (J) are aligned, secure with wood screws.

* NOTE: Only one drawer can be open at a time.

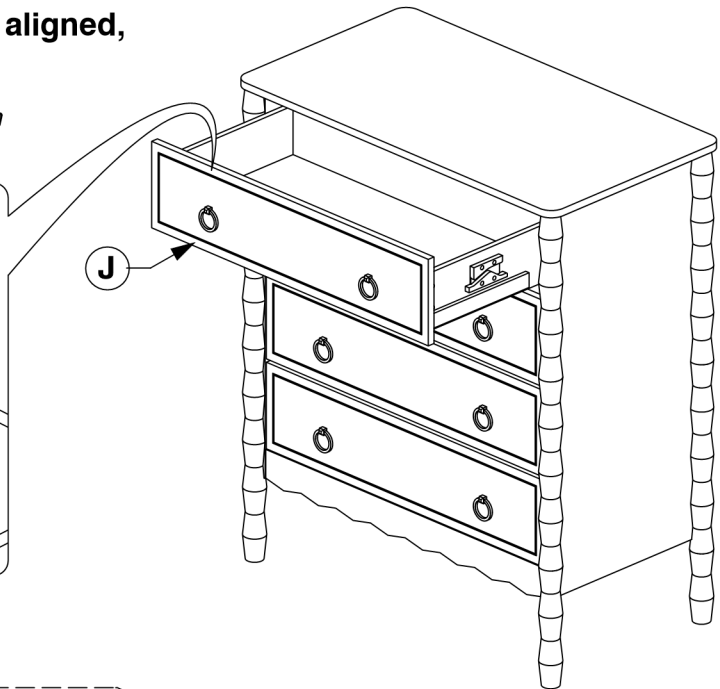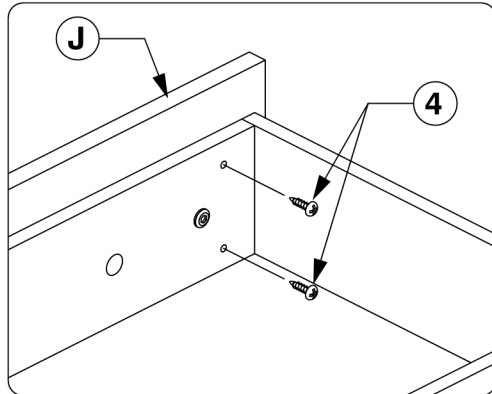

- 16** Remove the Drawers.

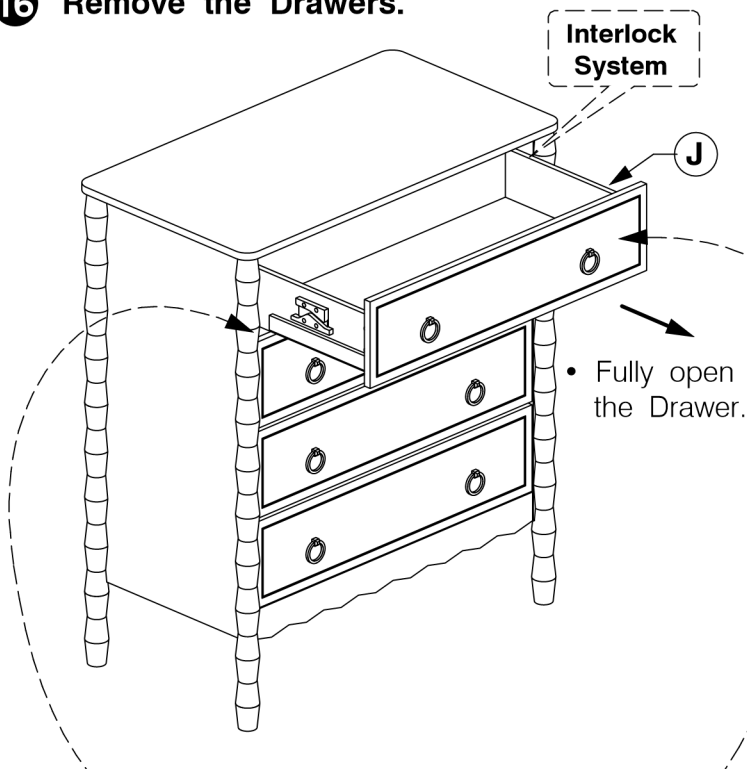

- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

