
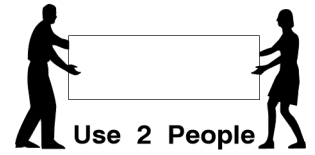


0264 Queen Bed

Assembly Instructions

WI-1225


1 Assembled View

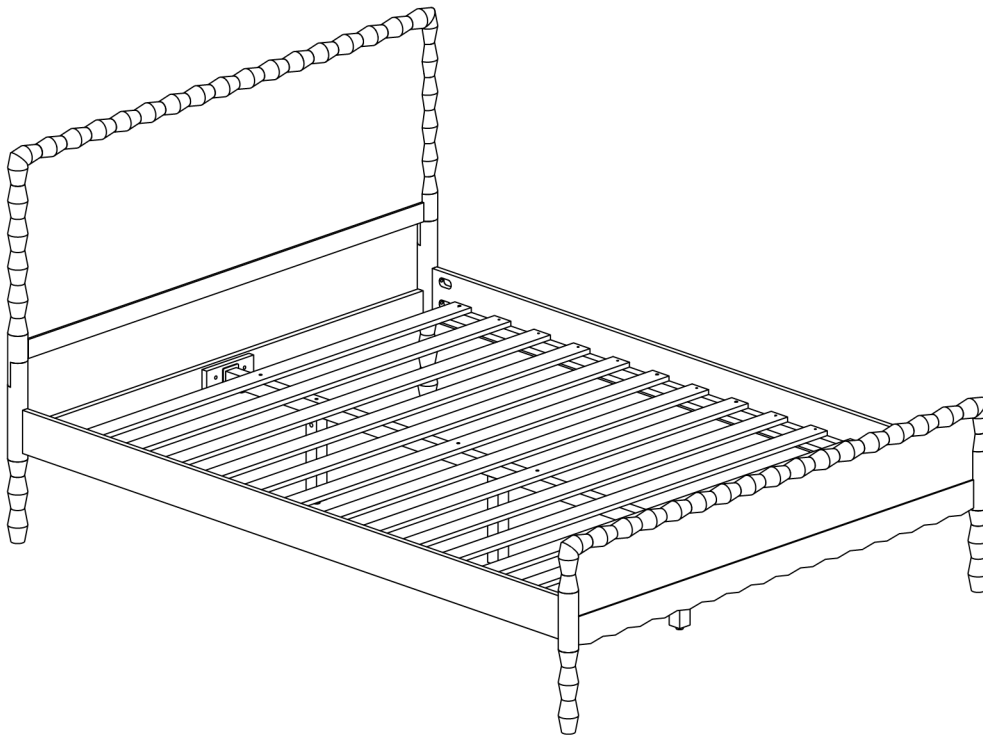

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List


Parts in Box A:

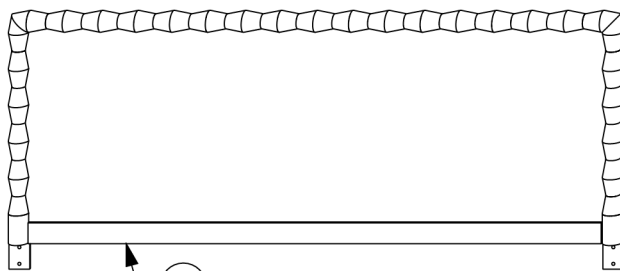

A Headboard Panel x 1




B Headboard Support x 1

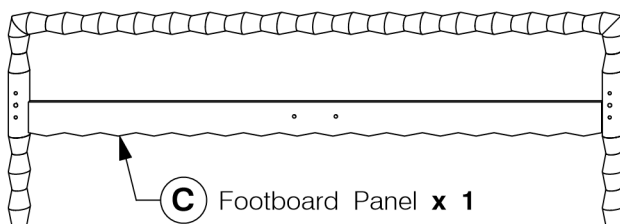

C Footboard Panel x 1



D
Headboard
Post
(Left Hand)
x 1



E
Headboard
Post
(Right Hand)
x 1

0264 Queen Bed

Assembly Instructions

WI-1225

2 Parts List

Parts in Box B:




(F) Side Rail x 2




(G) Long Support x 1



(H) Support Leg x 3



(J) HB/FB Support Bar x 2

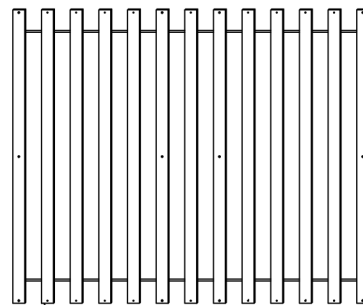


(K) Set of Bed Slats x 1


3 Hardware List



(1) M4 Long Allen Key x 1

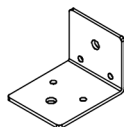


(2) Center Rail Bracket x 2



(3) Adjustable Foot x 3



(4) Barrel Nut x 3



(5) Wood Screw (M4 x 32mm) x 18



(6) Wood Dowel (10 x 40mm) x 4



(7) Spring Washer x 4



(8) Flat Washer x 4



(9) M6 x 15mm JCB x 4



(10) M6 x 30mm JCB x 4




(11) M6 x 40mm JCB x 28



(12) M6 x 90mm JCB x 3

4 Fit the Center Rail Bracket to the HB/FB Support Bar (J).

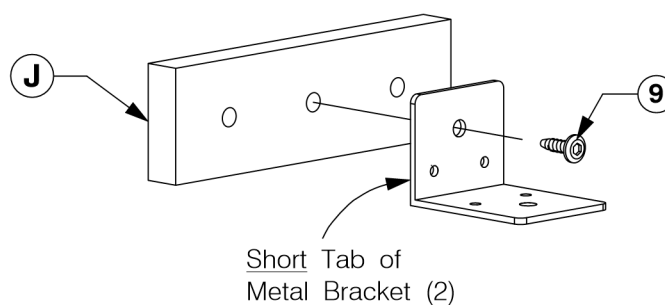


0264 Queen Bed


Assembly Instructions

WI-1225


- 5** Assembled the Support Leg (H) to the Long Support (G).

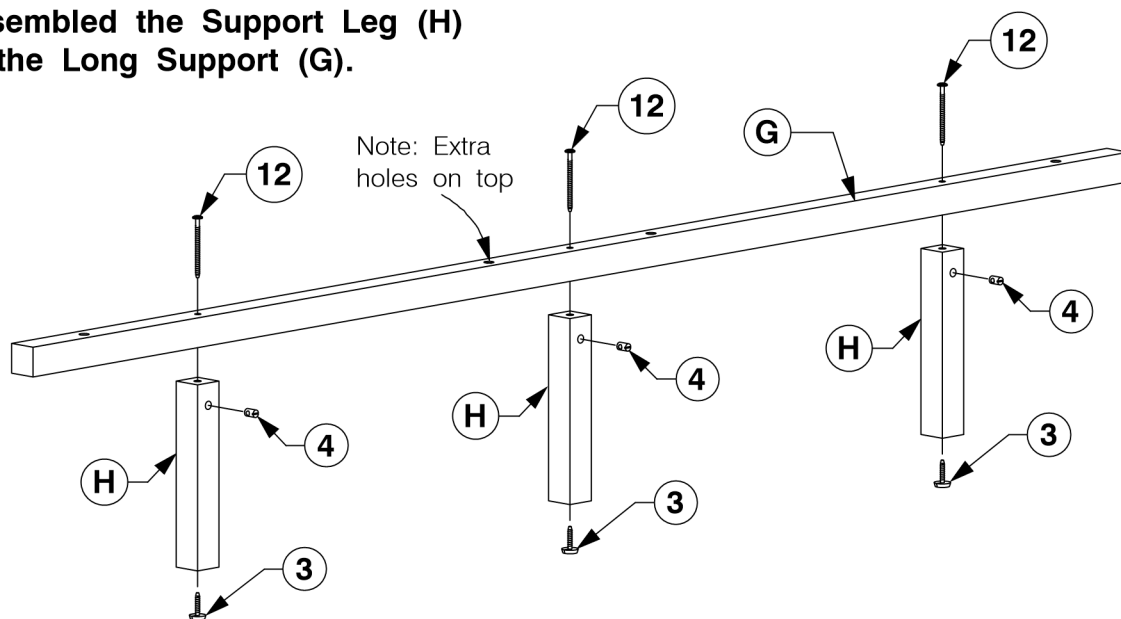

- 6** Fit the HB / FB Support (J) to the Headboard Support (B).

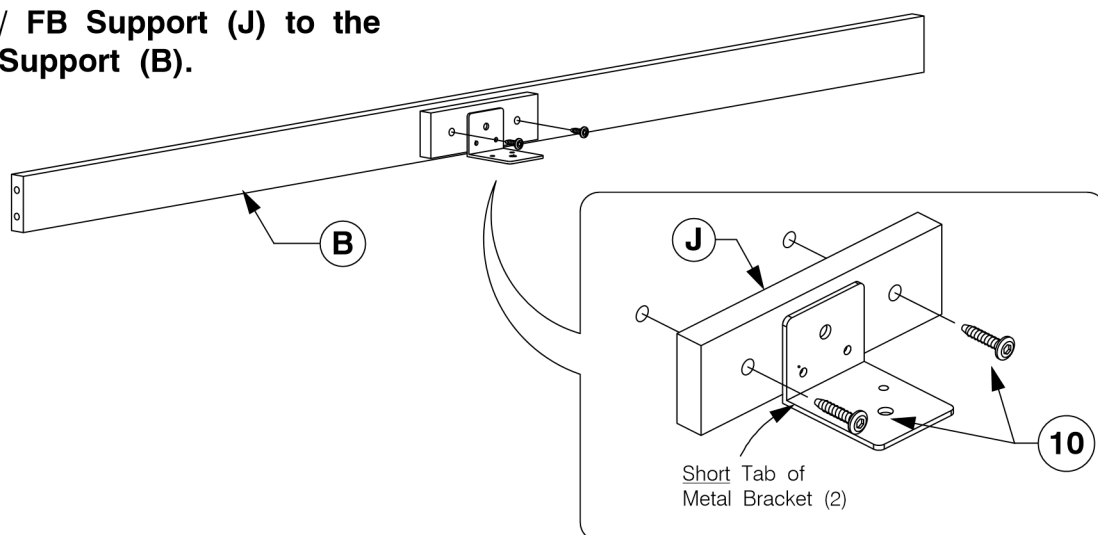

- 7** Fit the HB/FB Support (J) to the Footboard Panel (C).

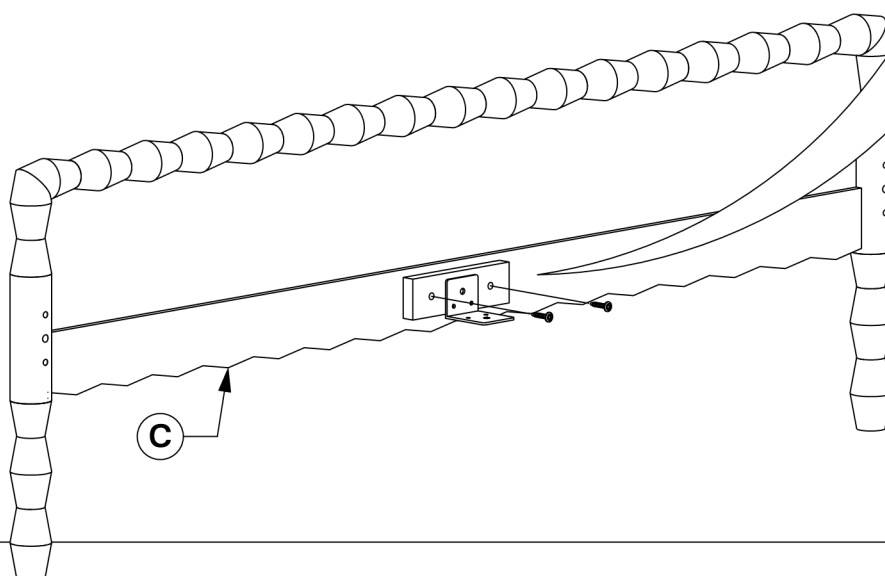


0264 Queen Bed

Assembly Instructions


WI-1225

- 8** Assemble the Headboard Support (B) to the Headboard Post (D & E).

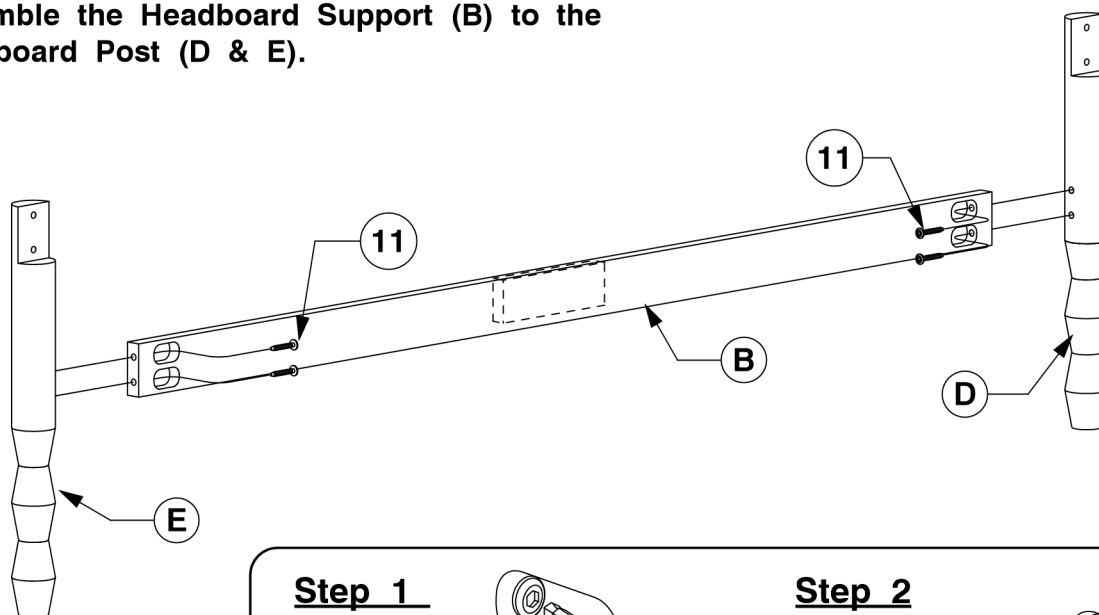


Step 1

Use the ball end of Allen key to start the bolt.


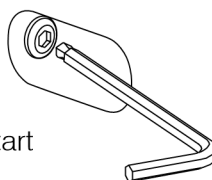


Step 2

Tighten fully with the straight end.

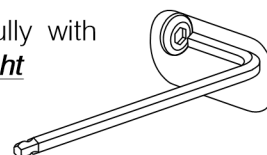

- 9** Assemble the Headboard Panel (A) to the Headboard Post (D & E).

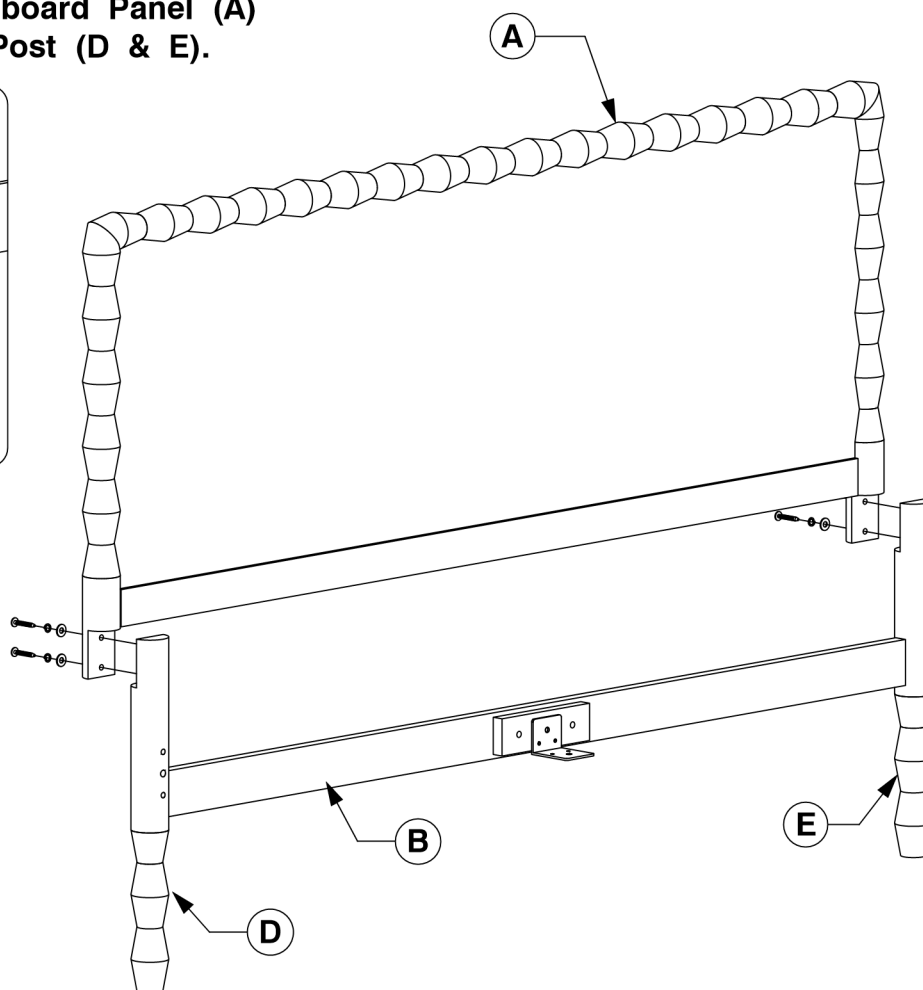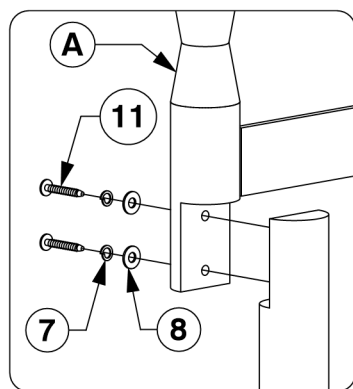


0264 Queen Bed

Assembly Instructions


WI-1225

- 10** Assemble the Side Rail (F) to the Headboard & Footboard Post.

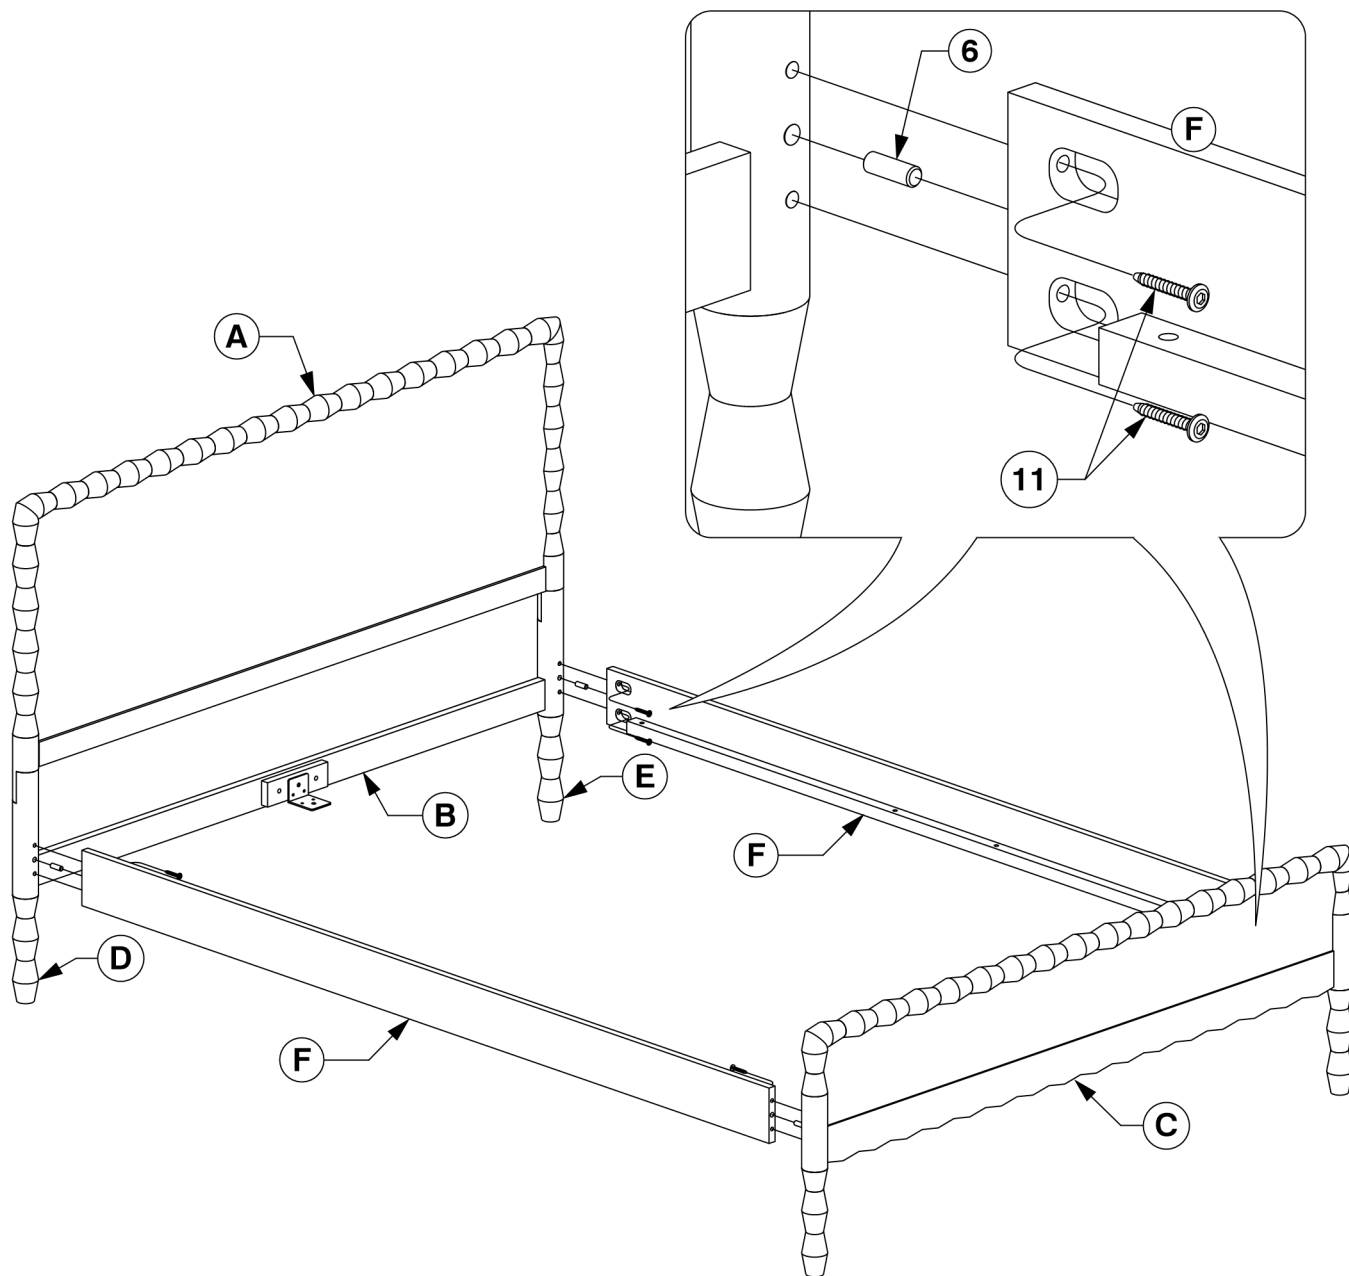


Step 1

Use the ***ball end*** of the Allen key to start the bolt.

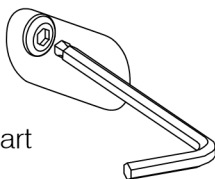

Step 2

Tighten fully with the ***straight end***.

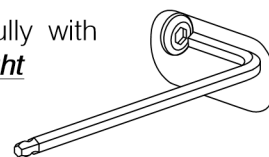


0264 Queen Bed

Assembly Instructions

WI-1225

- 11** Bolt the Long Support (G) to the Center Rail Brackets on the Headboard & Footboard Panel.

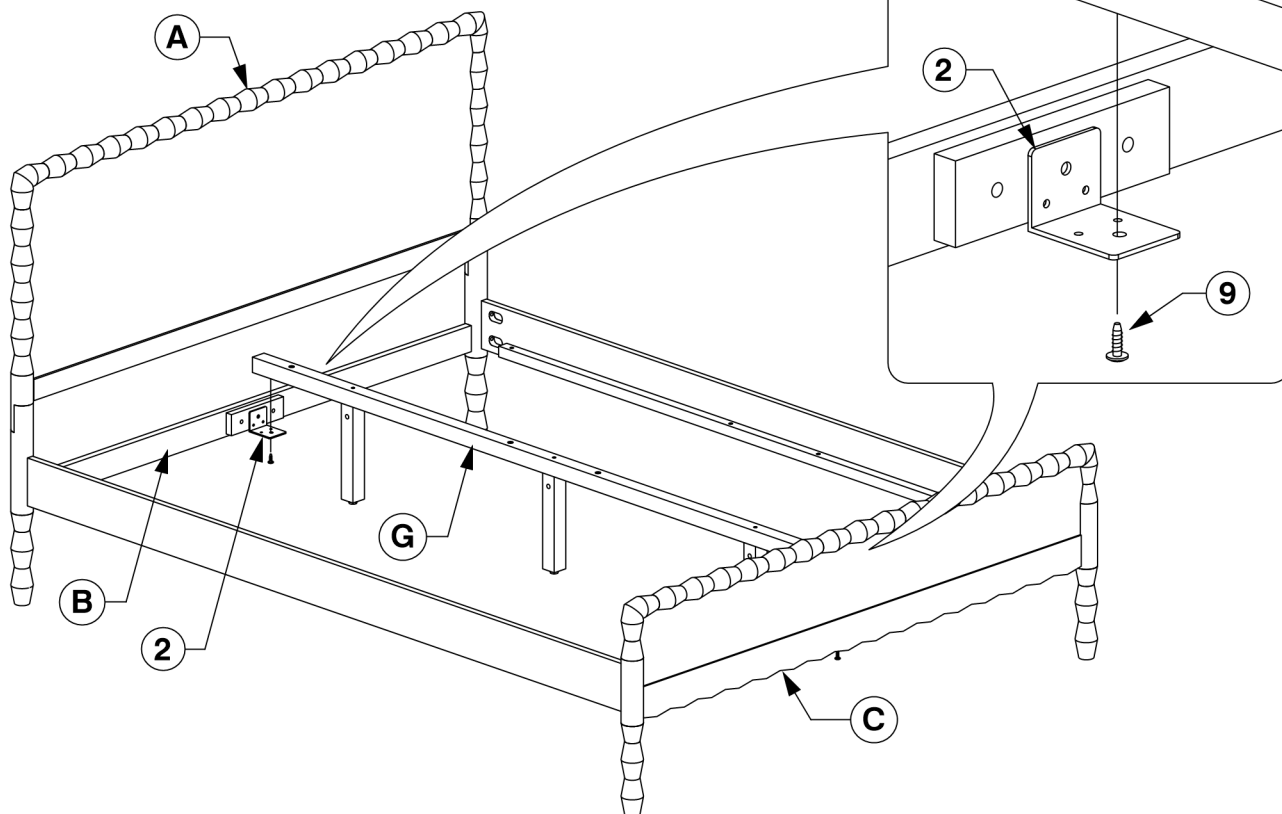

- 12** Bolt & screw the Bed Slats (K) to the Side Rails (F).

