
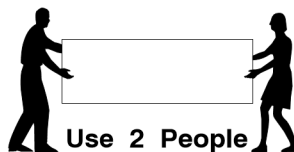


9028 2 Drawer Nightstand


Assembly Instructions

WI-1225

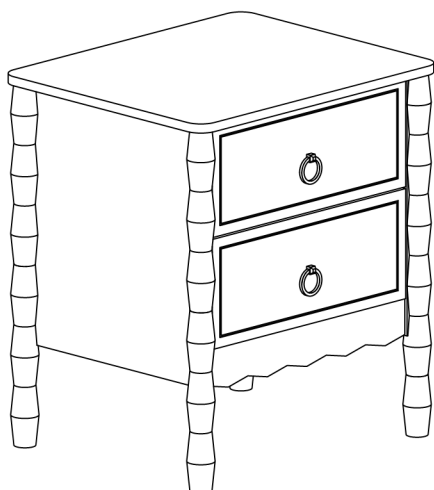

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

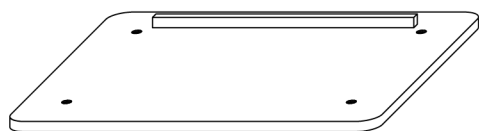


A Top Panel x 1




B Upper Support x 2




C Bottom Front Support x 1

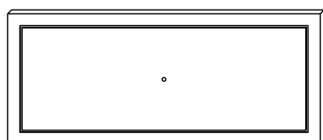

H Drawer Face x 2




K Drawer Side (Left Hand) x 2

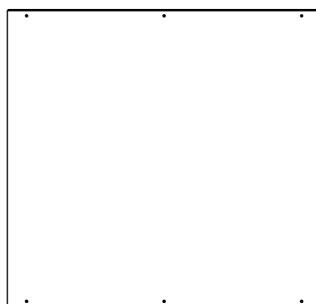


D Back Panel x 1




E Bottom Rear Support x 1




J Drawer Back x 2



L Drawer Side (Right Hand) x 2

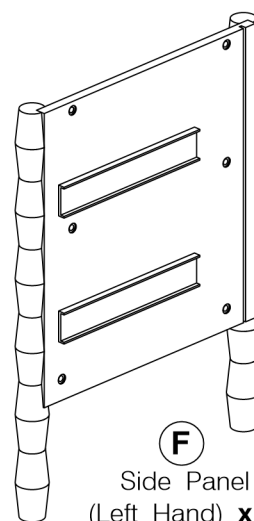

F Side Panel (Left Hand) x 1

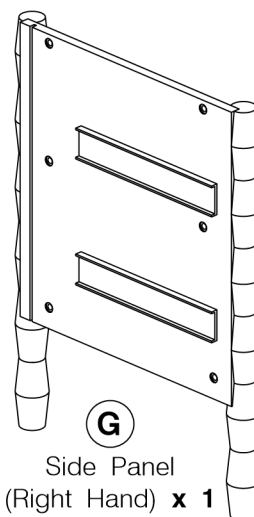

G Side Panel (Right Hand) x 1



M Drawer Bottom x 2

9028 2 Drawer Nightstand


Assembly Instructions

WI-1225


2 Hardware List

- | | | | |
|---|---|---|---|
|  |  |  |  |
| ① M6 x 15mm
JCB x 24 | ② M4 x 25mm
Wood
Screw x 16 | ③ M4 x 20mm
Wood
Screw x 8 | ④ M4 x 16mm
Wood
Screw x 6 |
|  |  |  |  |
| ⑤ 'L' Bracket
(5005-3)
x 12 | ⑥ M4 x 22mm
Wood Screw
x 2 | ⑦ Handle
(087)
x 2 | ⑧ Allen Key
x 1 |


3 Assemble the Drawer Sides (K & L) to the Drawer Face (H).

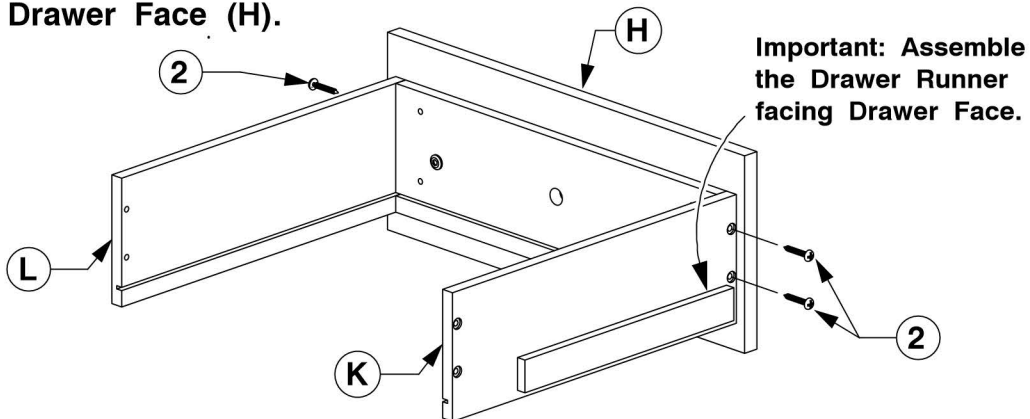

4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

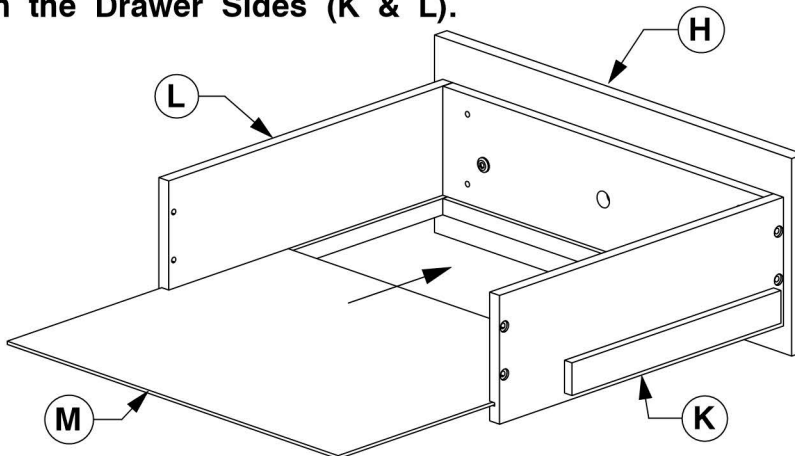

5 Assemble the Drawer Back (J) to the Drawer Sides (K & L). Fit the Handle to the Drawer Face (H).

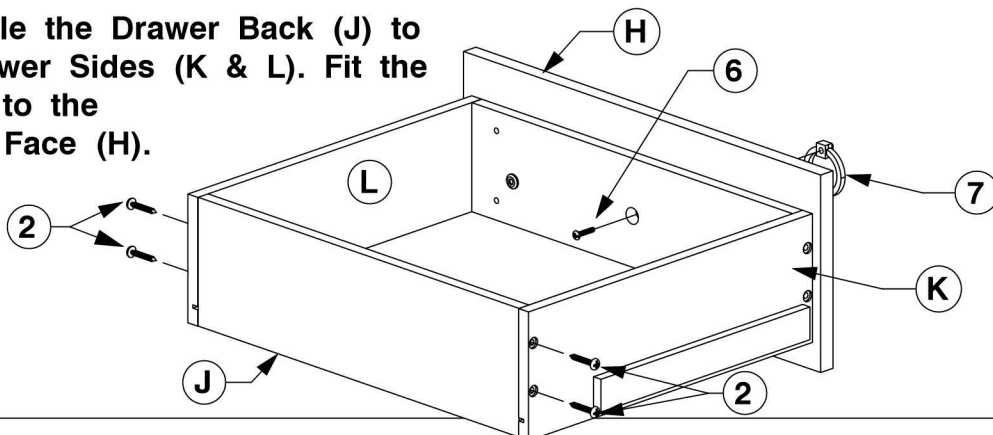


9028 2 Drawer Nightstand


Assembly Instructions

WI-1225

- 6** Fit the 'L' Bracket to the Side Panel (F & G).

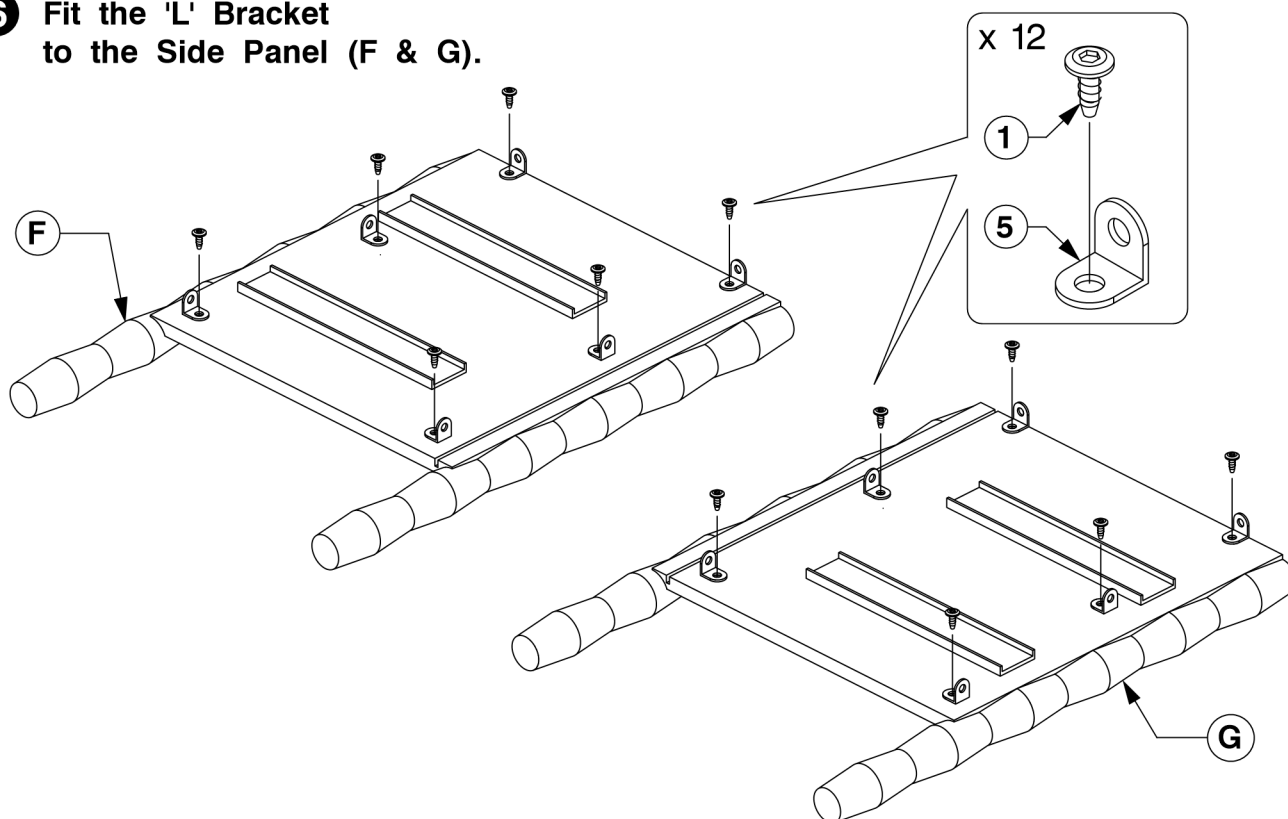

- 7** Assembled the Side Panel (F & G) to the Top Panel (A).

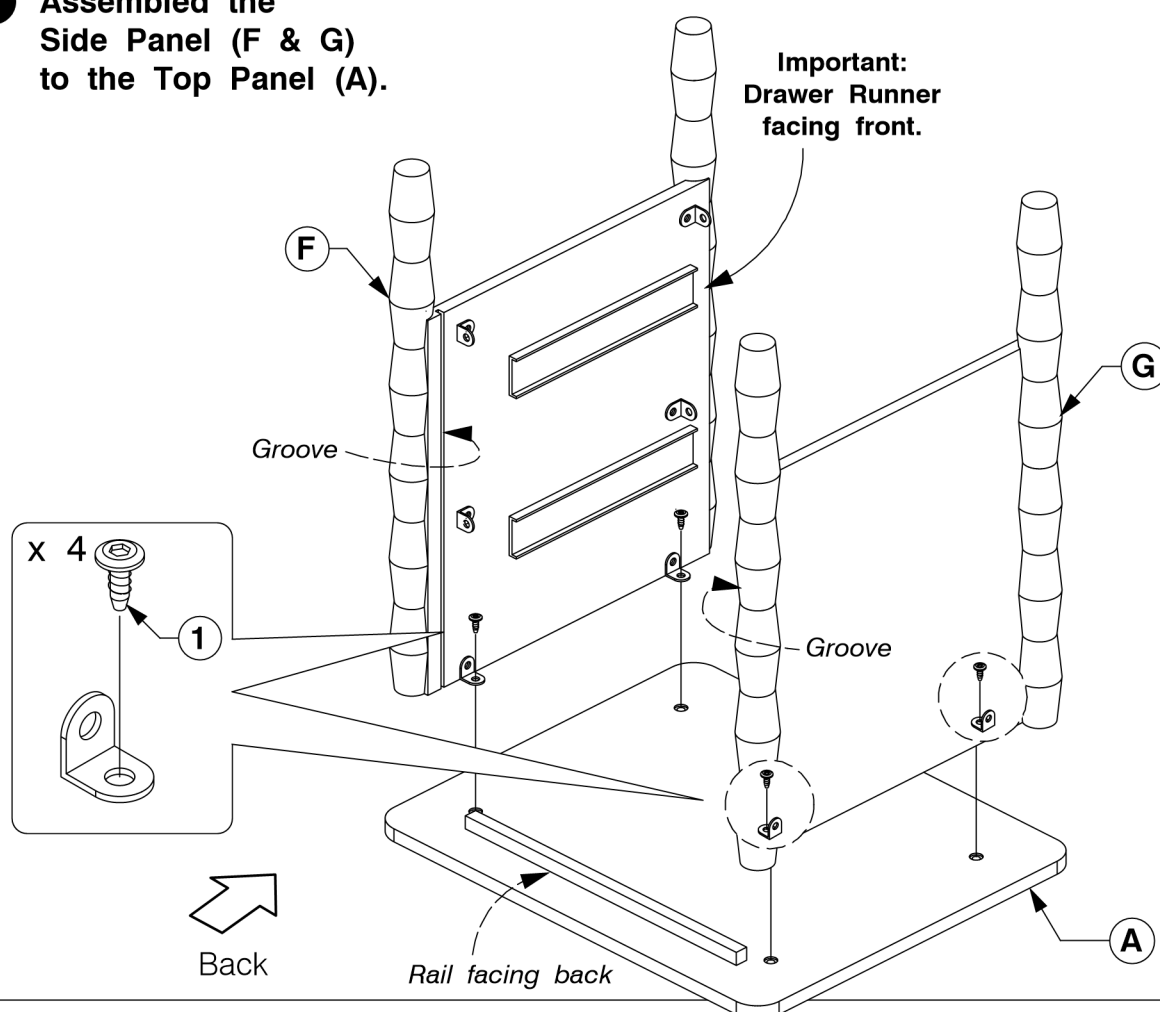


9028 2 Drawer Nightstand


Assembly Instructions

WI-1225

- 8** Fit the Upper Support Bar (B), Bottom Front & Rear Support (C & E) to the Side Panel (F & G).

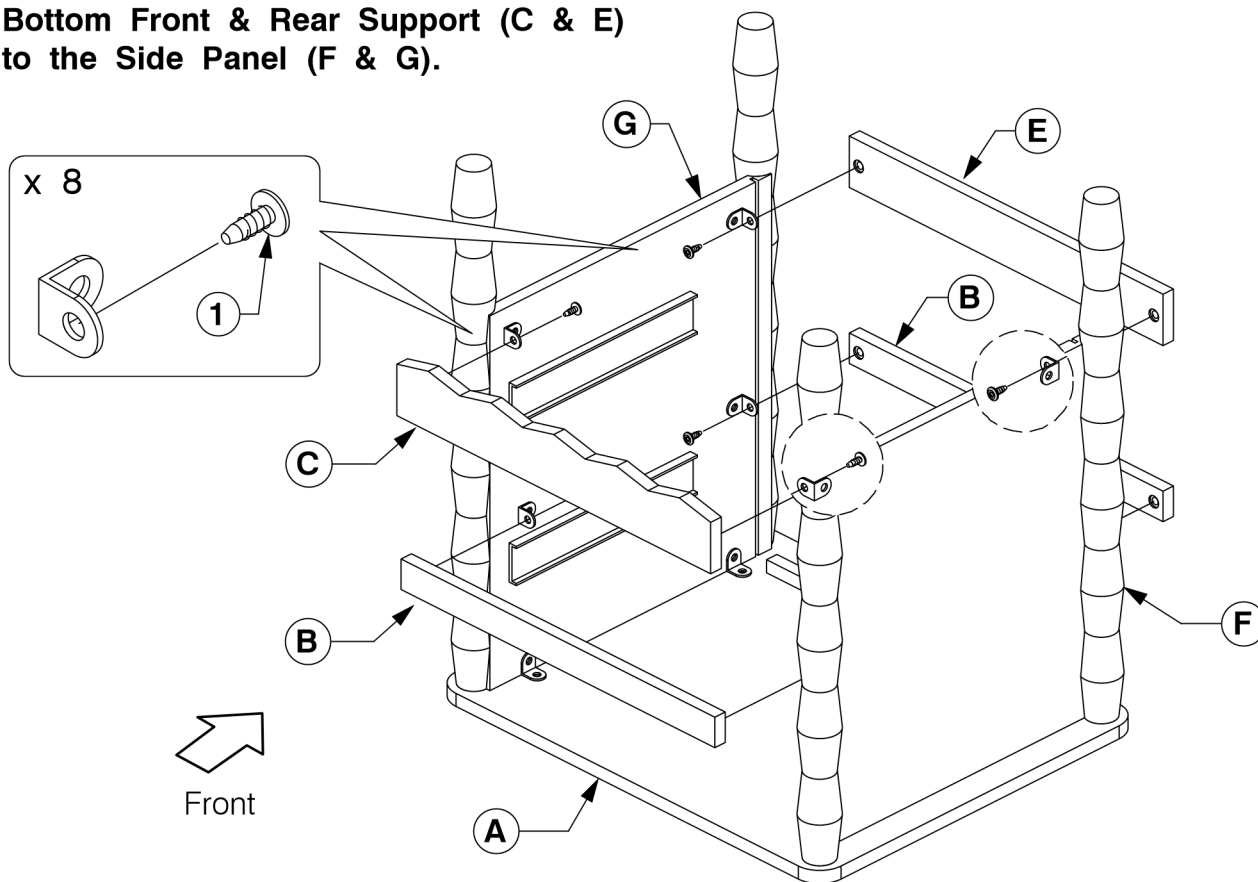

- 9** Slide the Back Panel (D) into the groove on the back of the Side Panel (F & G).

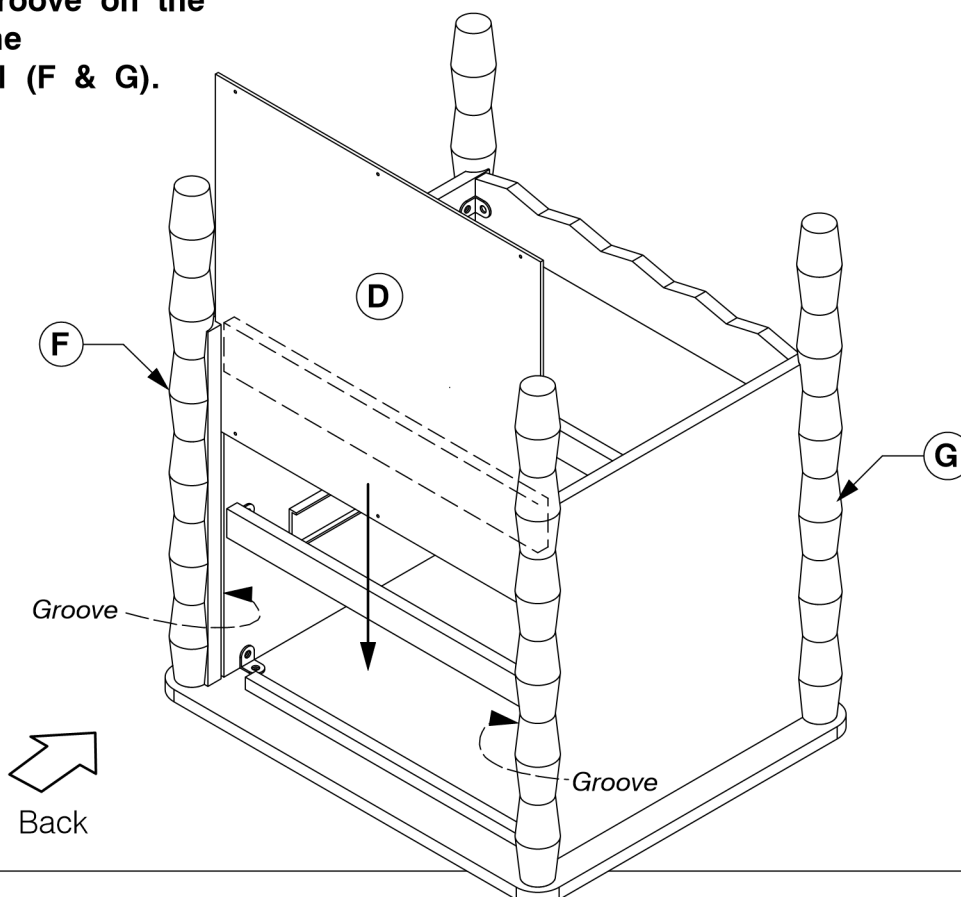


9028 2 Drawer Nightstand


Assembly Instructions

WI-1225

- 10** Use screws to tighten the Back Panel (D).

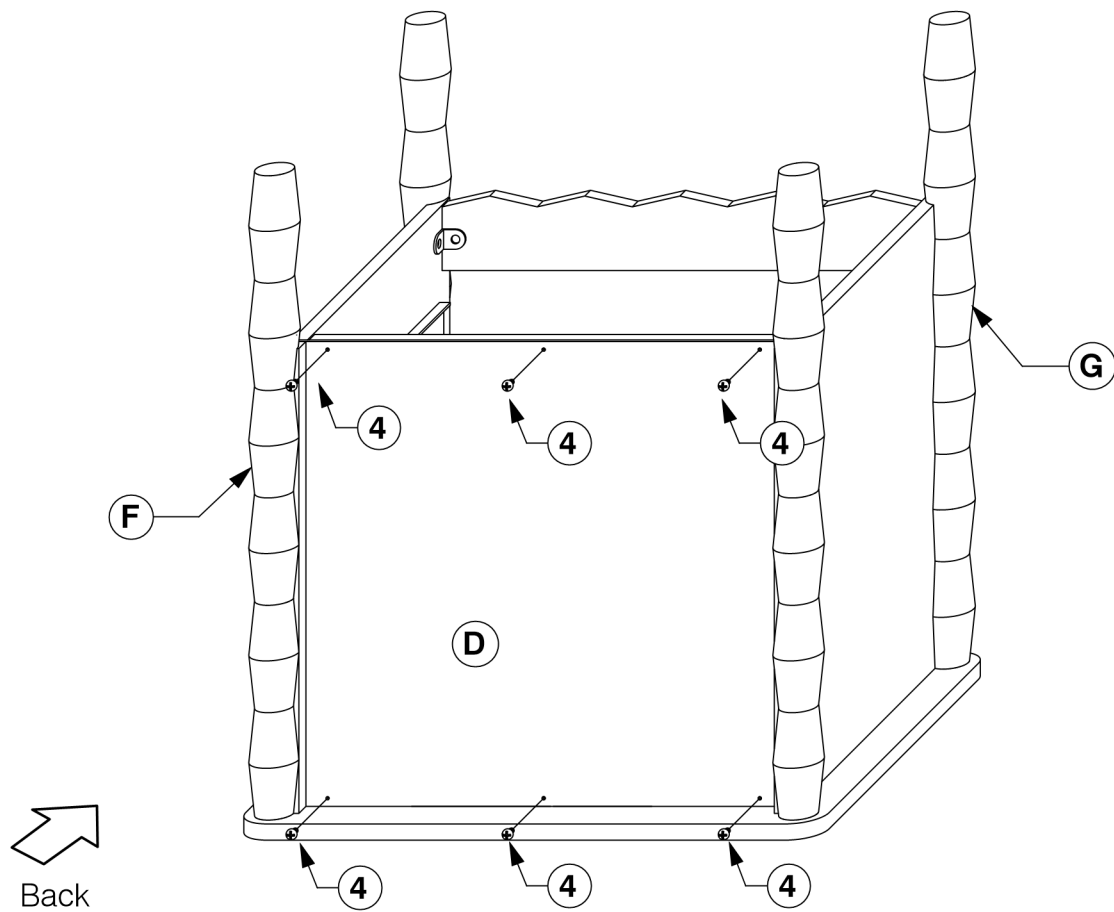

- 11** Fit the Drawer Box to the Casegood Body.

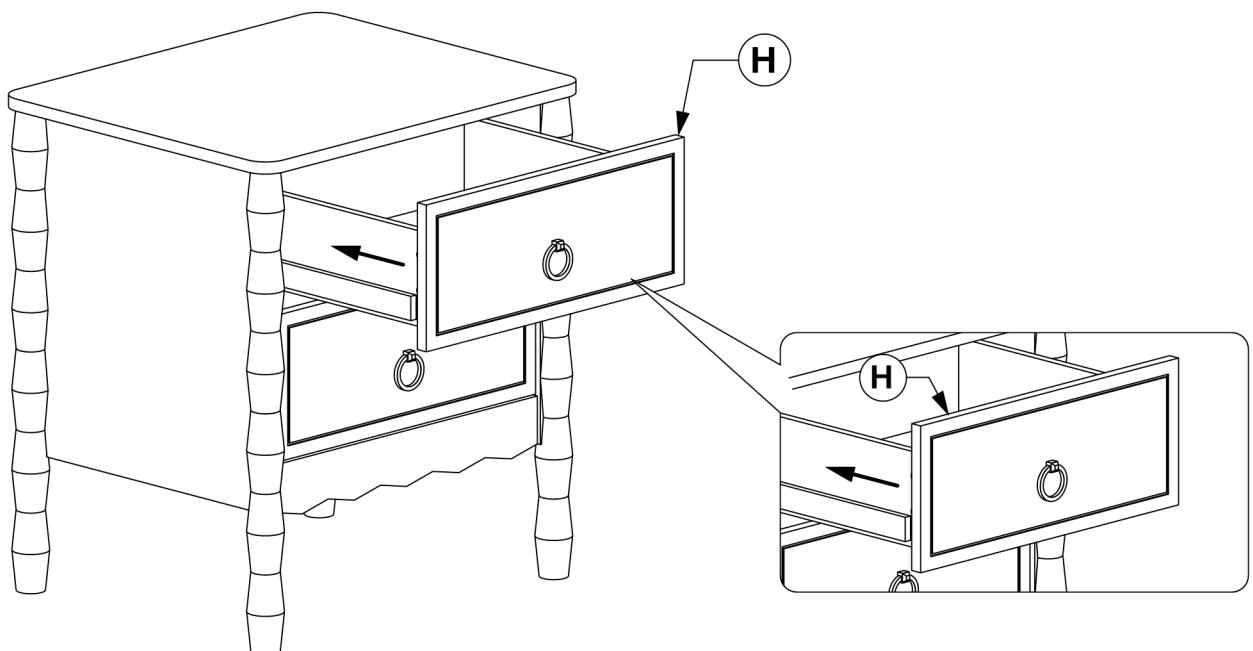


9028 2 Drawer Nightstand

Assembly Instructions

WI-1225

12 Fit and adjust the Drawer Face (H).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

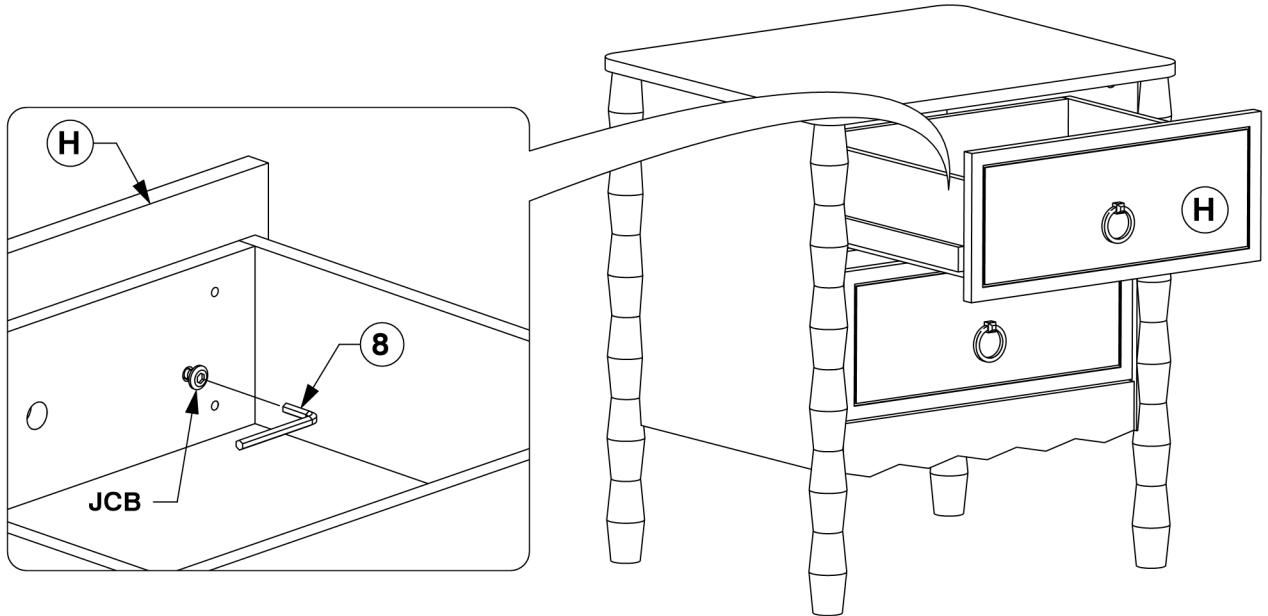

13 After the Drawer Faces (H) are aligned, secure with wood screws.

