


0110-8 Full Bed

Assembly Instructions







WI-1225

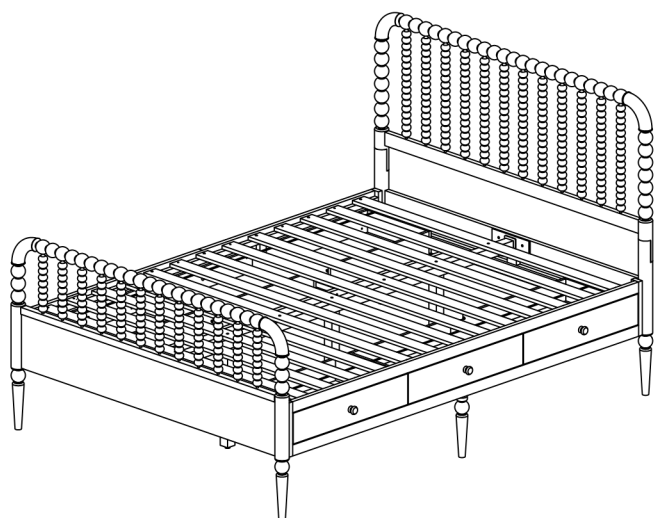










Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

Parts in Box A:

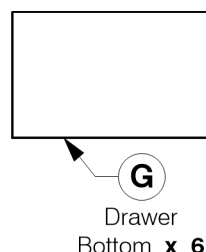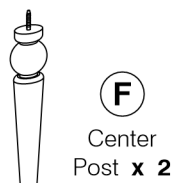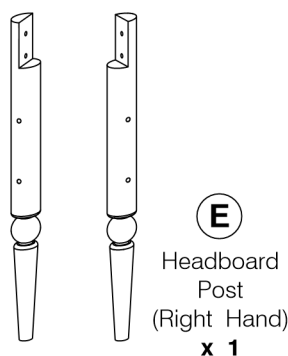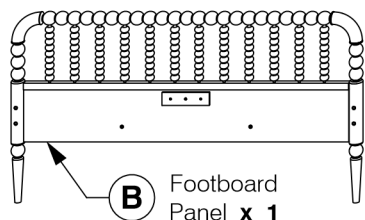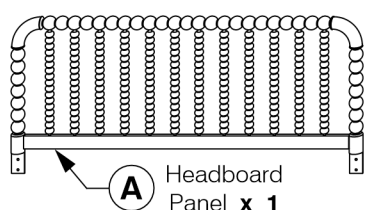

Parts in Box B:

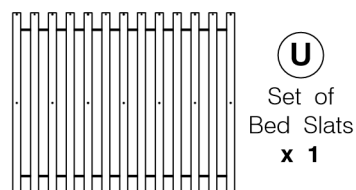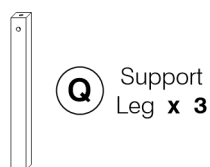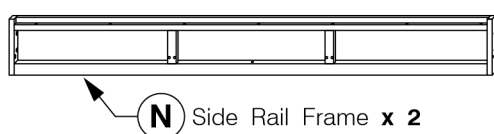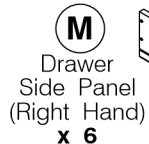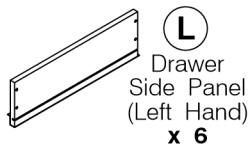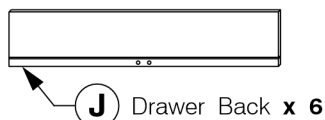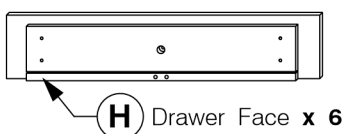

0110-8 Full Bed

Assembly Instructions

WI-1225


2 Hardware List



1 M6 x 100mm JCB
x 3




2 M6 x 40mm JCB
x 34




3 M6 x 30mm JCB
x 12



4 M6 x 15mm JCB
x 12



5 Adjustable
Foot x 3

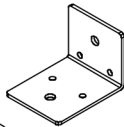

6 Center Rail
Bracket x 2



7 Wood Dowel
(8 x 30mm) x 8



8 Wood Dowel
(6 x 25mm) x 24



9 Barrel
Nut x 3



10 Wood Screw
(M4 x 32mm) x 16



11 Wood Screw
(M4 x 25mm) x 60




12 'L' Bracket
(5005-3) x 4



13 Spring
Washer x 4



14 Flat
Washer
x 4



15 M4 x 25mm
Bolt x 6




16 Wood Knobs
(9901) x 6



17 Long Allen
Key x 1

3 Assemble the Drawer Sides (L & M) & Drawer Rail (K) to the Drawer Face (H).

x6

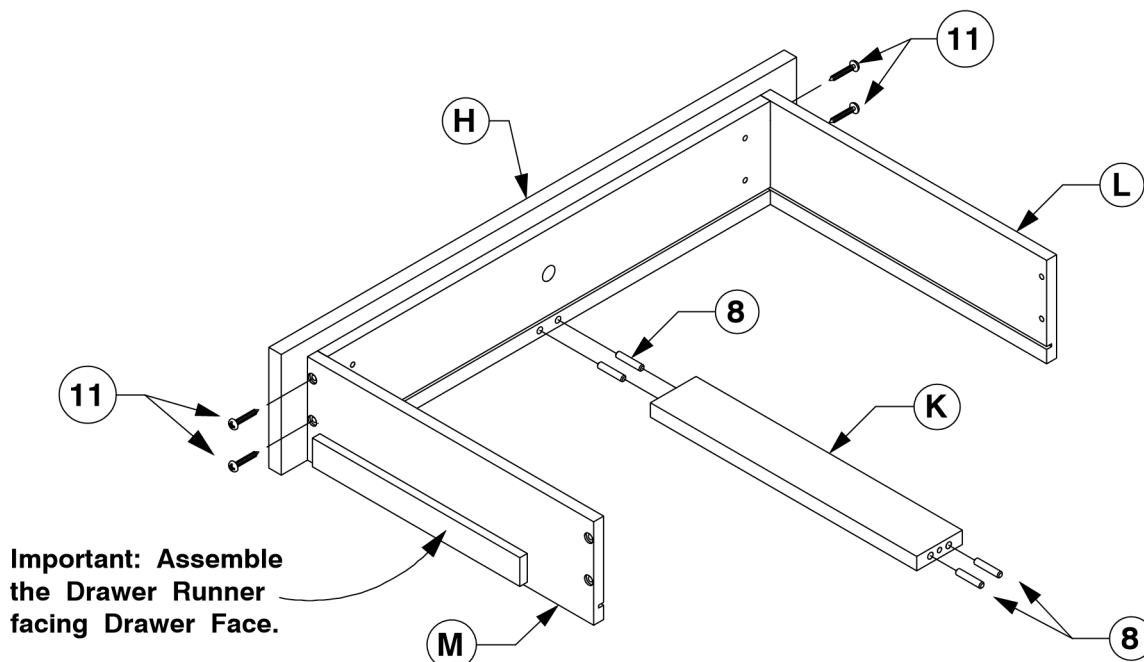


0110-8 Full Bed

Assembly Instructions


WI-1225

- 4** Slide the Drawer Bottom (G) into the groove on the Drawer Sides (L & M).

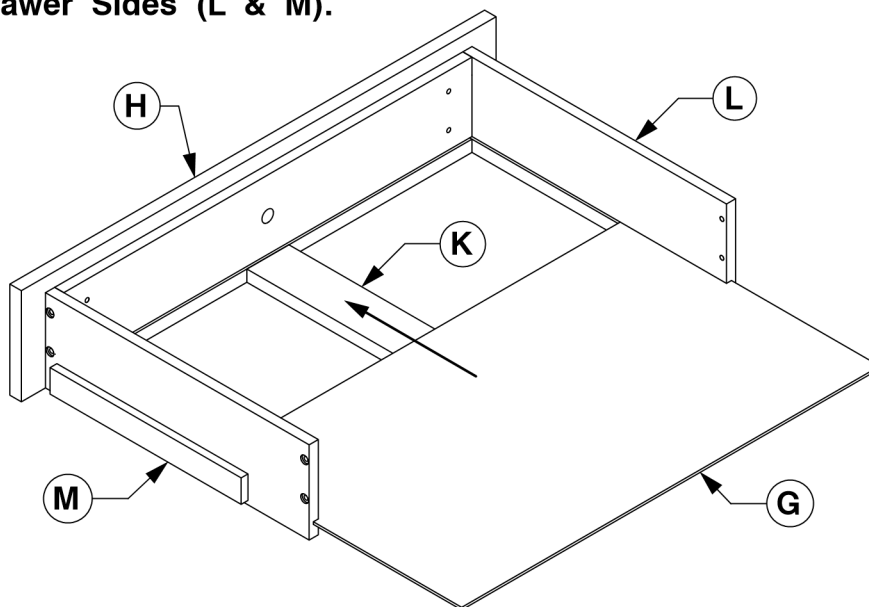


x6

- 5** Assemble the Drawer Back (J) to the Drawer Sides (L & M). Fit the Handles to the Drawer Face (H).

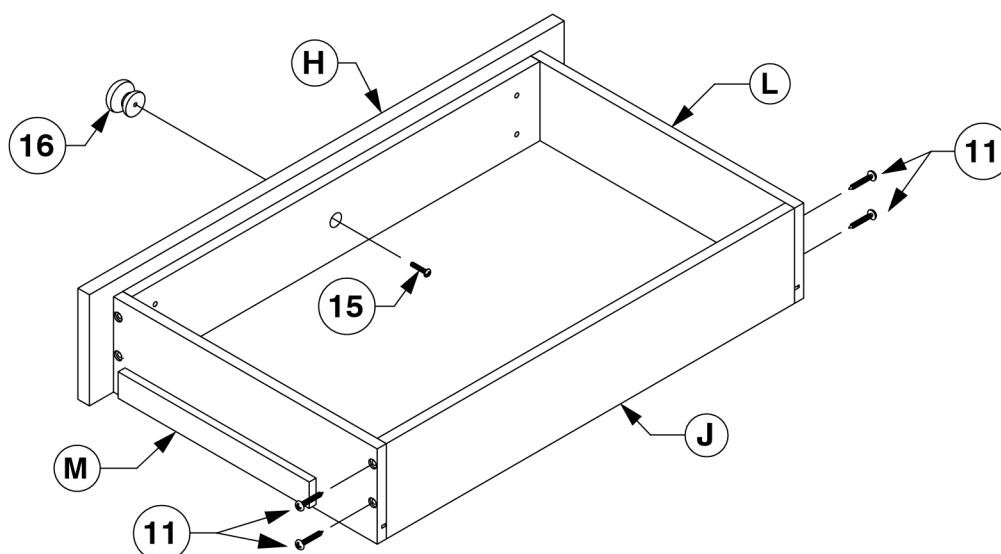

x6

- 6** Turn the Drawer over to fit angled 25mm Wood screws (11) to the Drawer Rail (K).

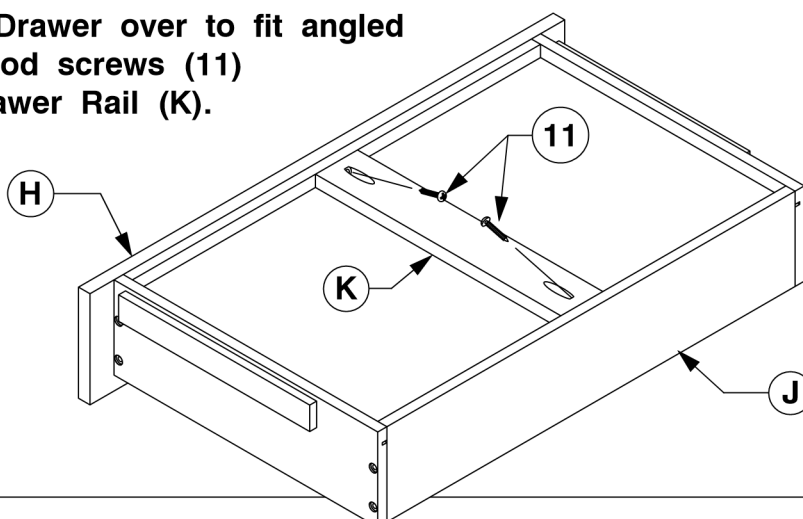


x6

0110-8 Full Bed

Assembly Instructions


WI-1225

- 7** Fix the Adjustable foot to the bottom of the Support Leg (Q).

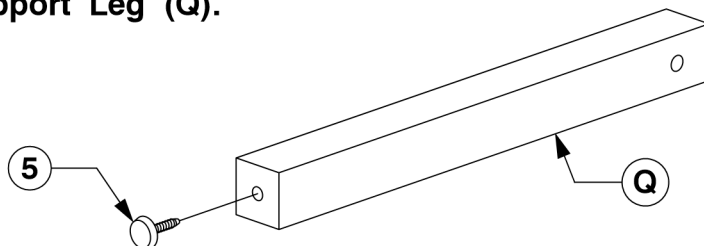


x3

- 8** Fit the Center Rail Bracket to the Footboard Panel (B).

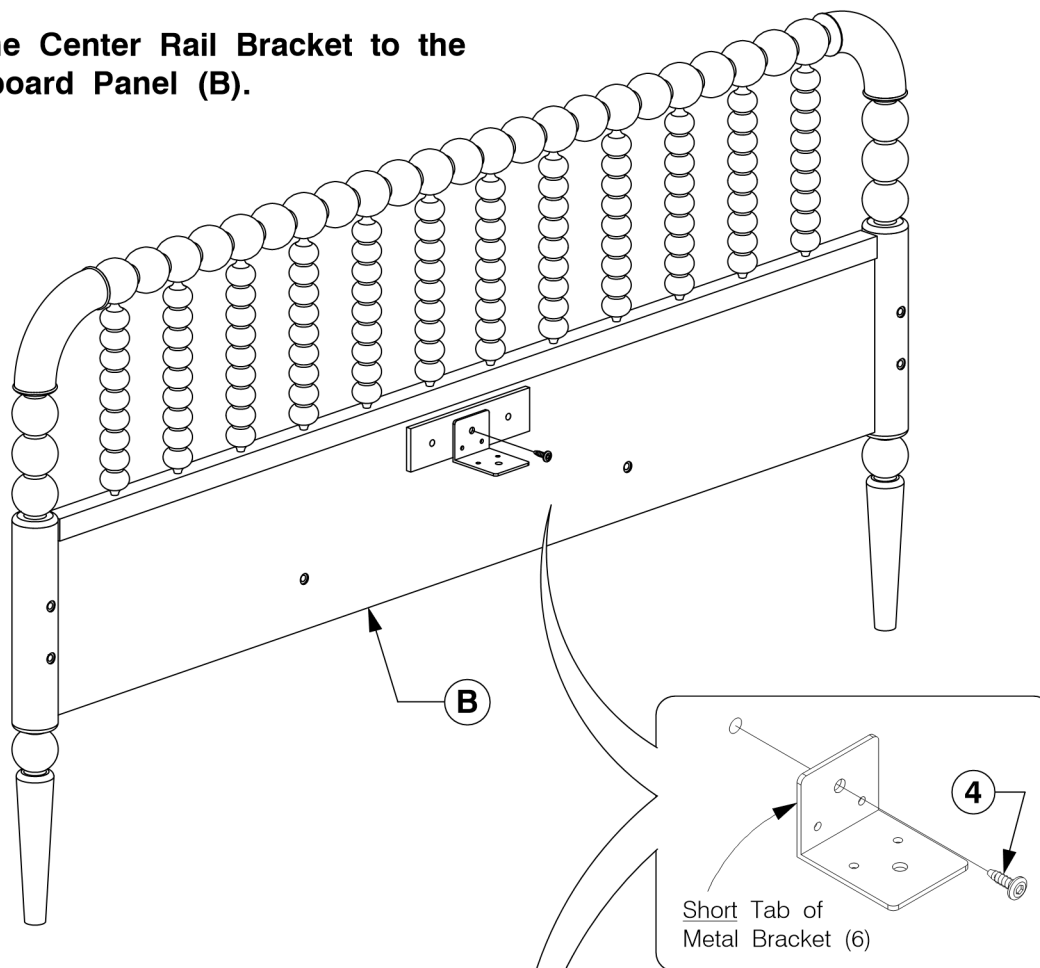

- 9** Fit the Center Rail Bracket to the Headboard Lower Panel (C).

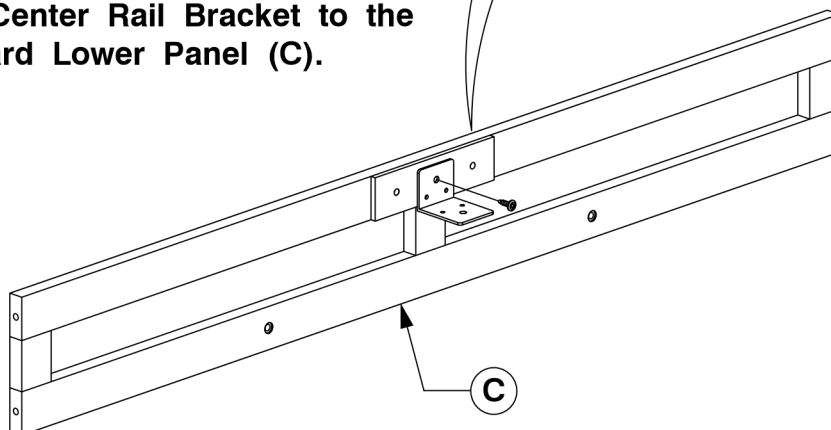


0110-8 Full Bed

Assembly Instructions


WI-1225

- 10** Assemble the Headboard Lower Panel (C) to the Headboard Post (D & E).

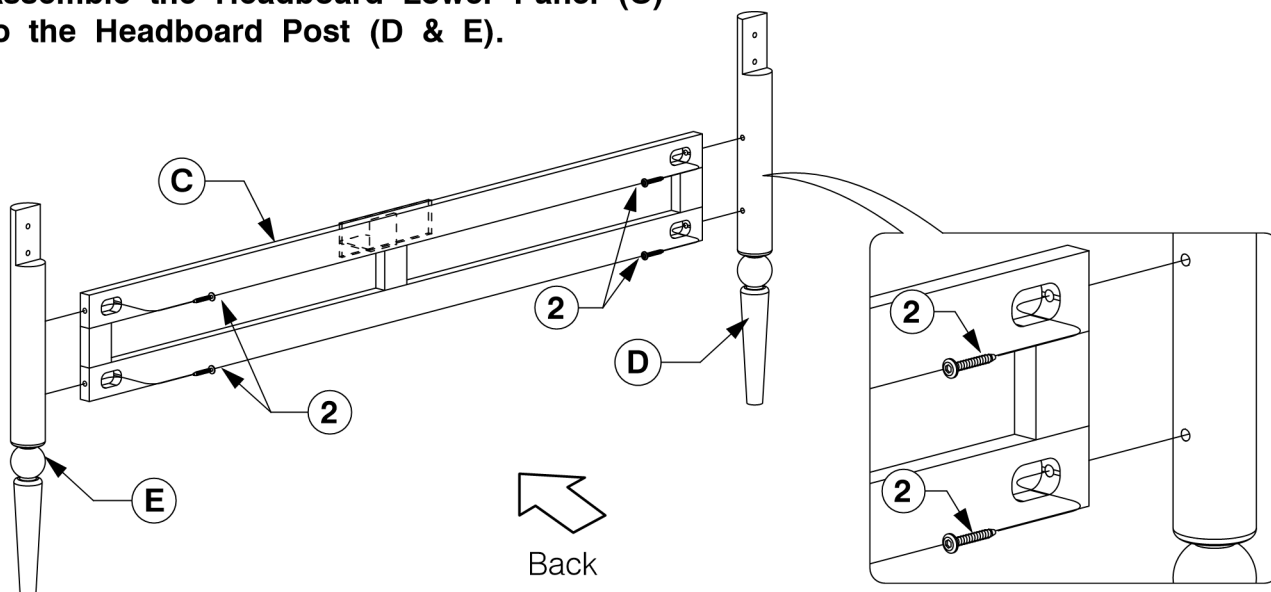


Step 1

Use the ball end of Allen key to start the bolt.

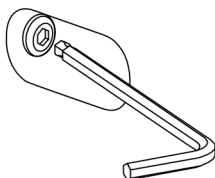


Step 2

Tighten fully with the straight end.

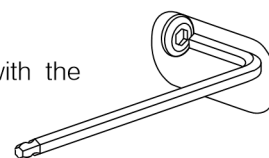

- 11** Assemble the Headboard Panel (A) to the Headboard Post (D & E).

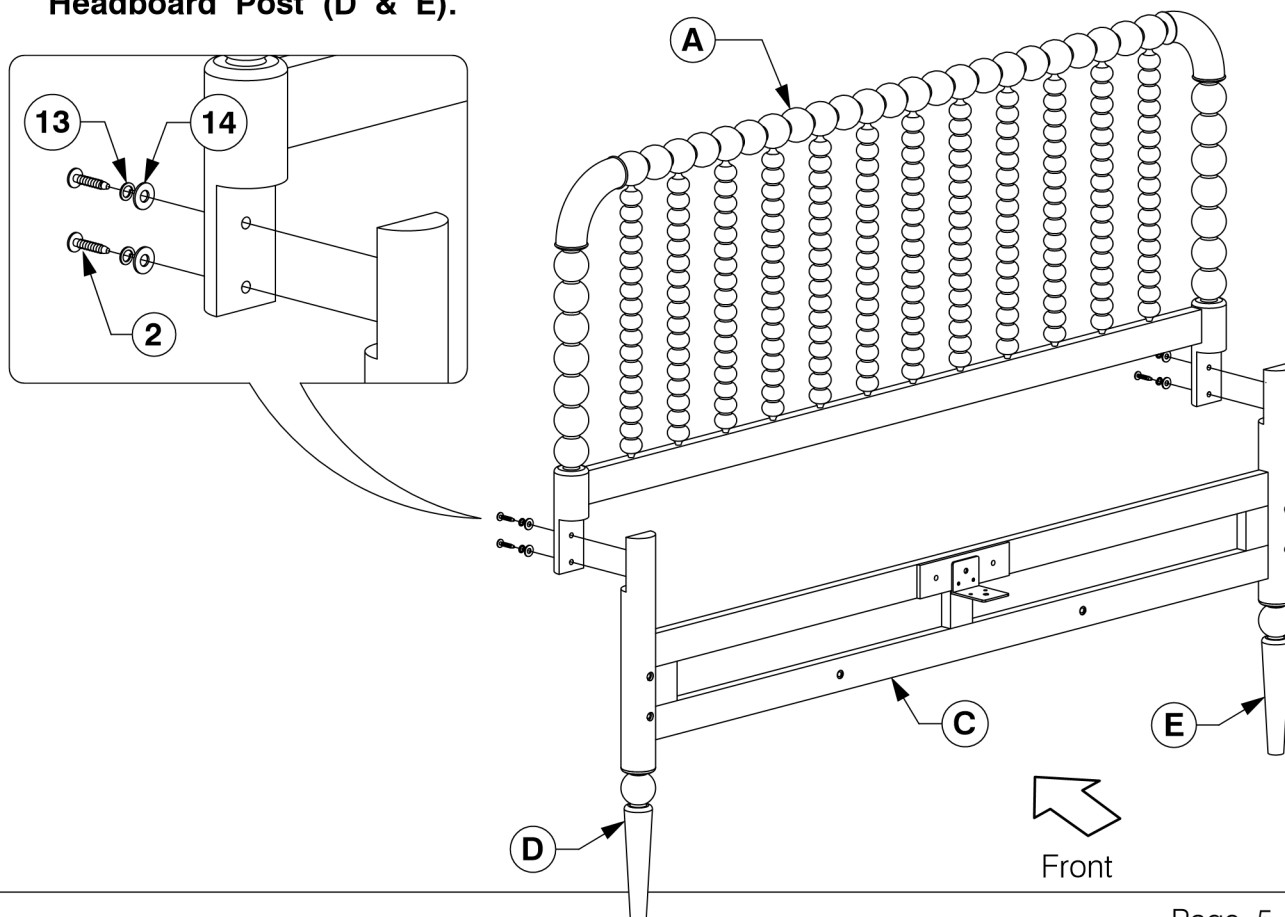


0110-8 Full Bed


Assembly Instructions

WI-1225


- 12** Fit the 'L' Bracket (12) to the Support Rail (P).
Assembly required ×2 (Left & Right).

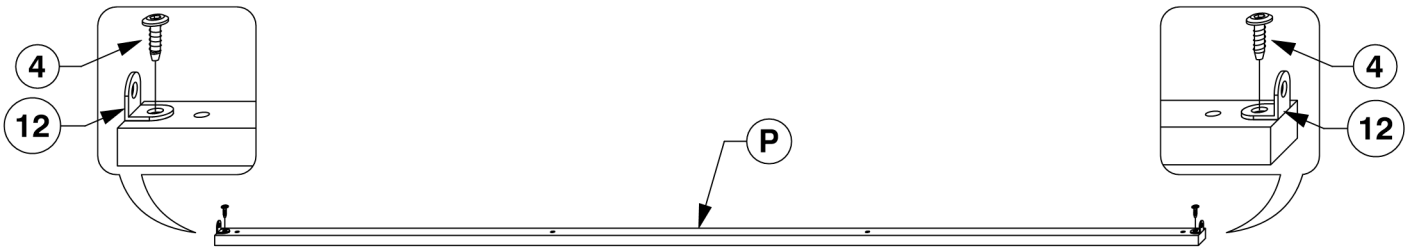

- 13** Fit the Side Rail Frame (N) & Support Rail (P) to the Support Bar (R, S, & T).
Assembly required ×2 (Left & Right).

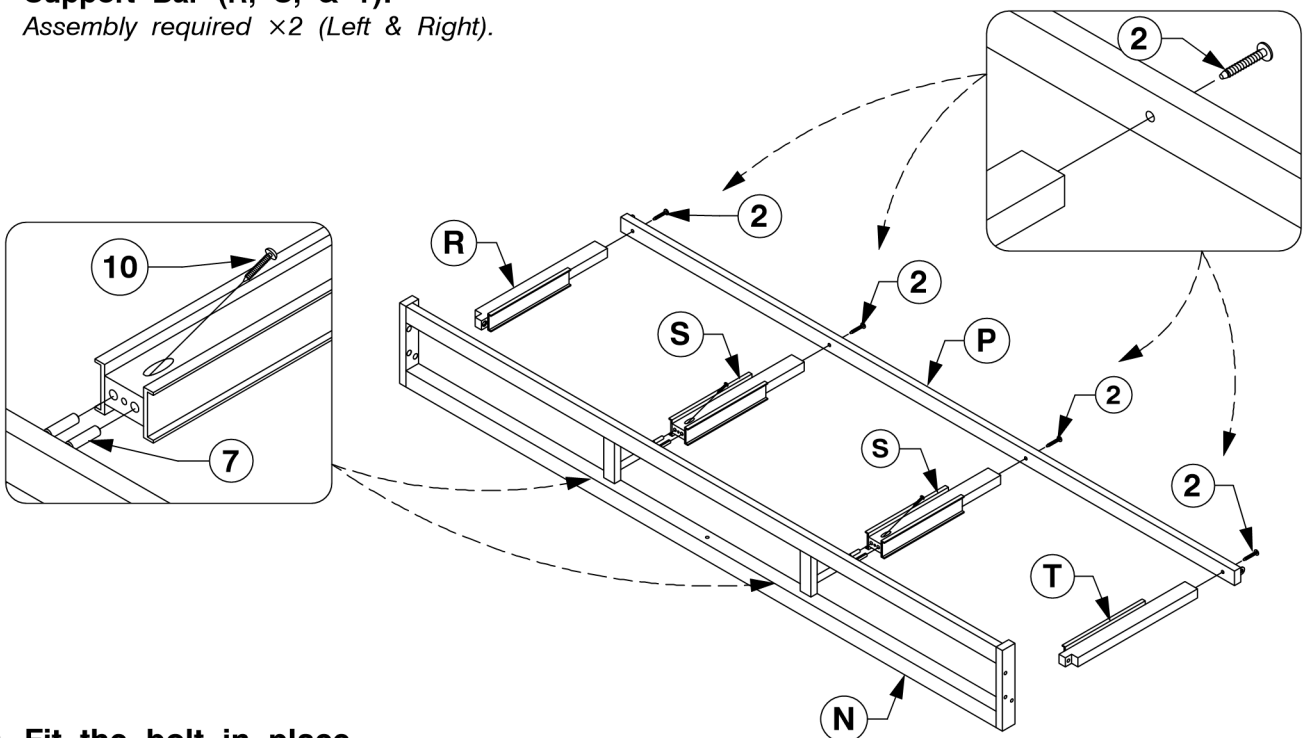

- 14** Fit the bolt in place.
Assembly required ×2 (Left & Right).

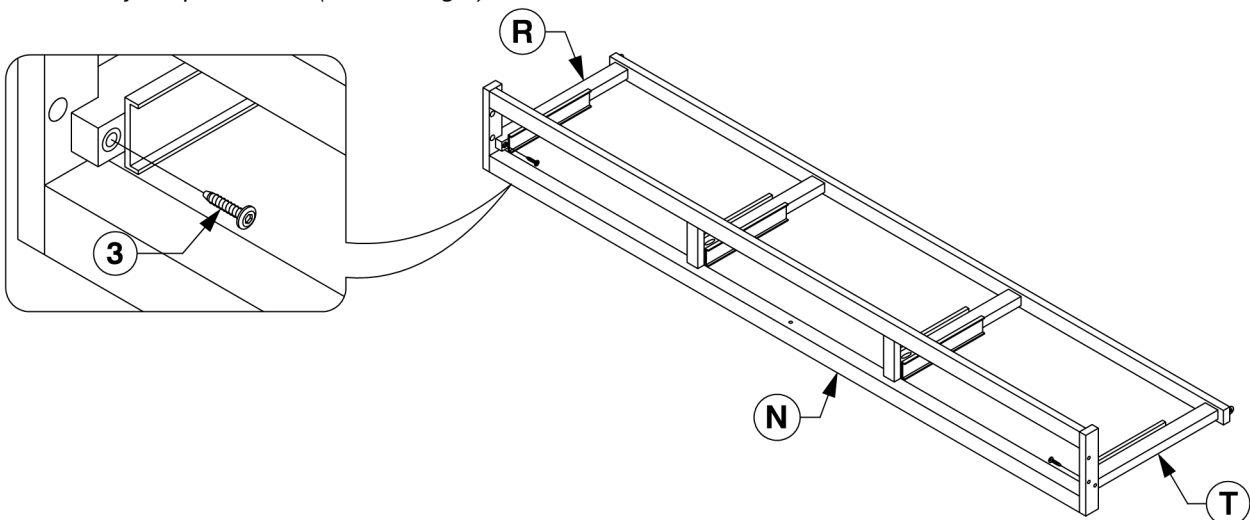


0110-8 Full Bed


Assembly Instructions

WI-1225

- 15** Assemble the Side Rail Frame (N) & Support Rail (P) to the Headboard Post (D & E), Headboard Lower Panel (C) & Footboard Panel (B).

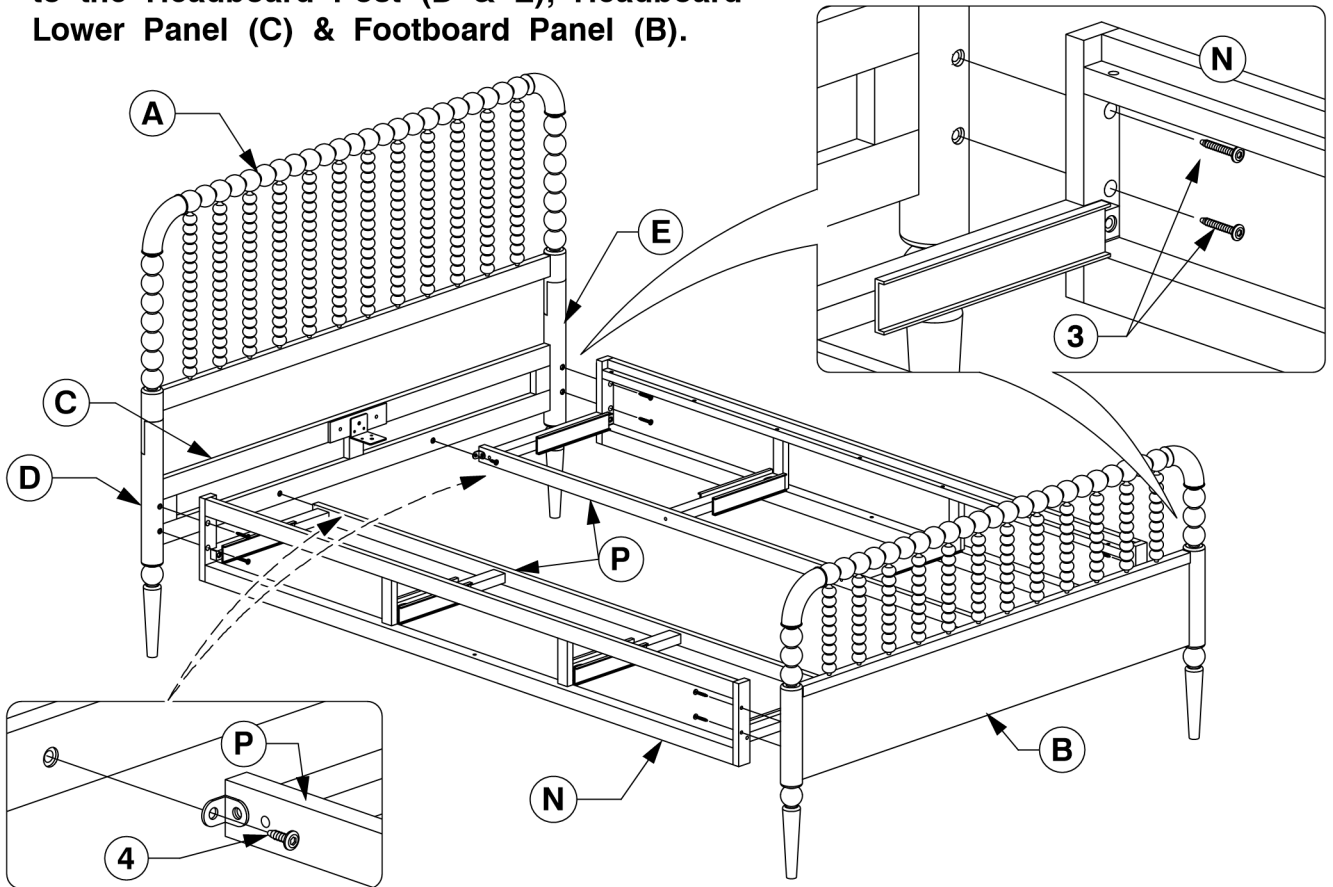

- 16** Lift the Side Rail Frame (N) on one side and fit the Post (F) under it. Repeat the same step on the other side.

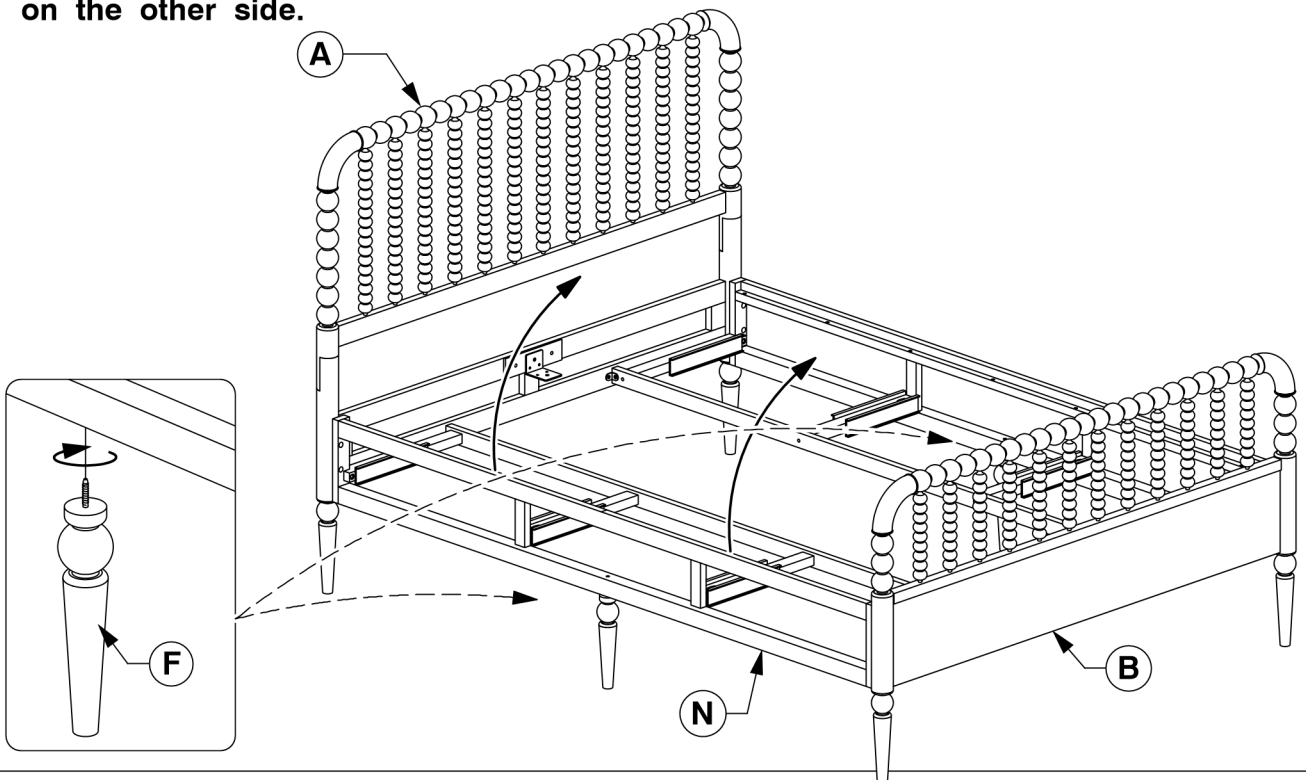


0110-8 Full Bed


Assembly Instructions

WI-1225

- 17** Fit the Long Support (O) to the Headboard Lower Panel (C) & Footboard Panel (B).

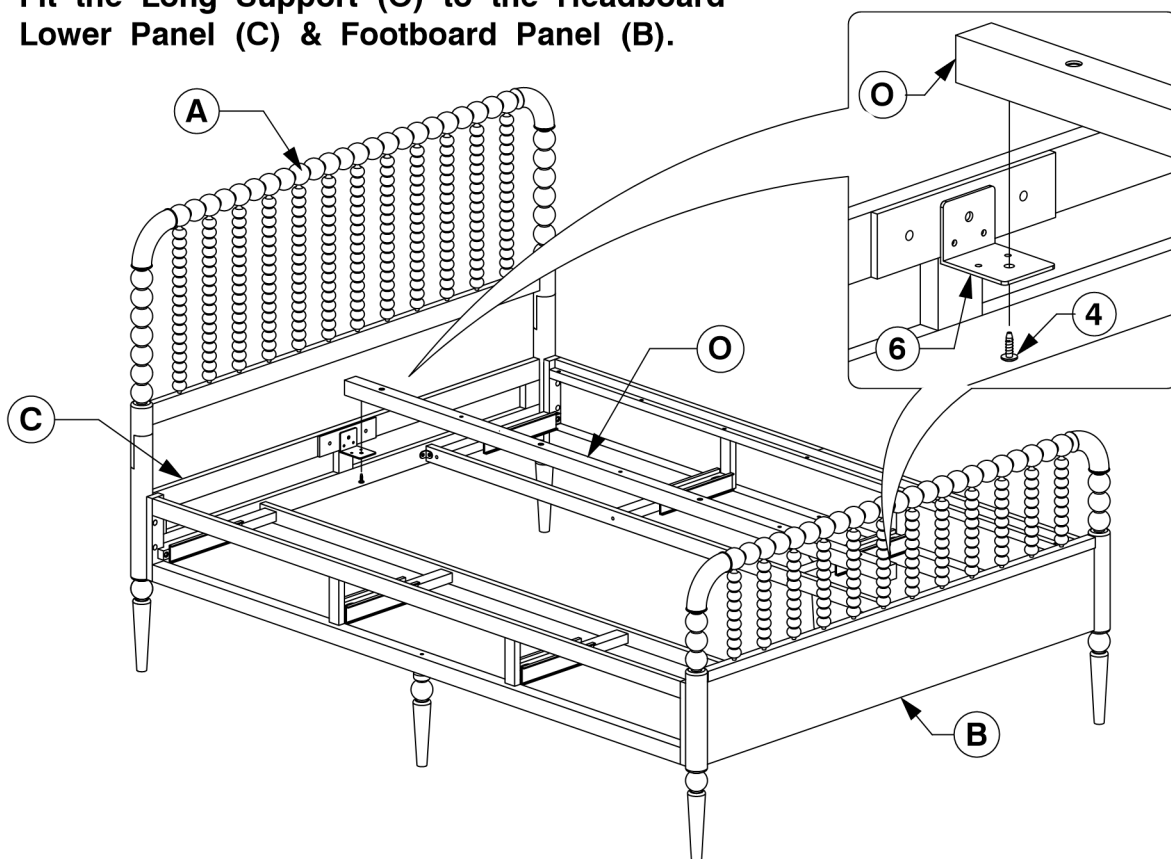

- 18** Fit the first 3 Slats and assemble the Support Leg (Q) to the Bed Slat (U). Bolt & screw the Bed Slats (U) to the Side Rail Frame (N) & Long Support (O).


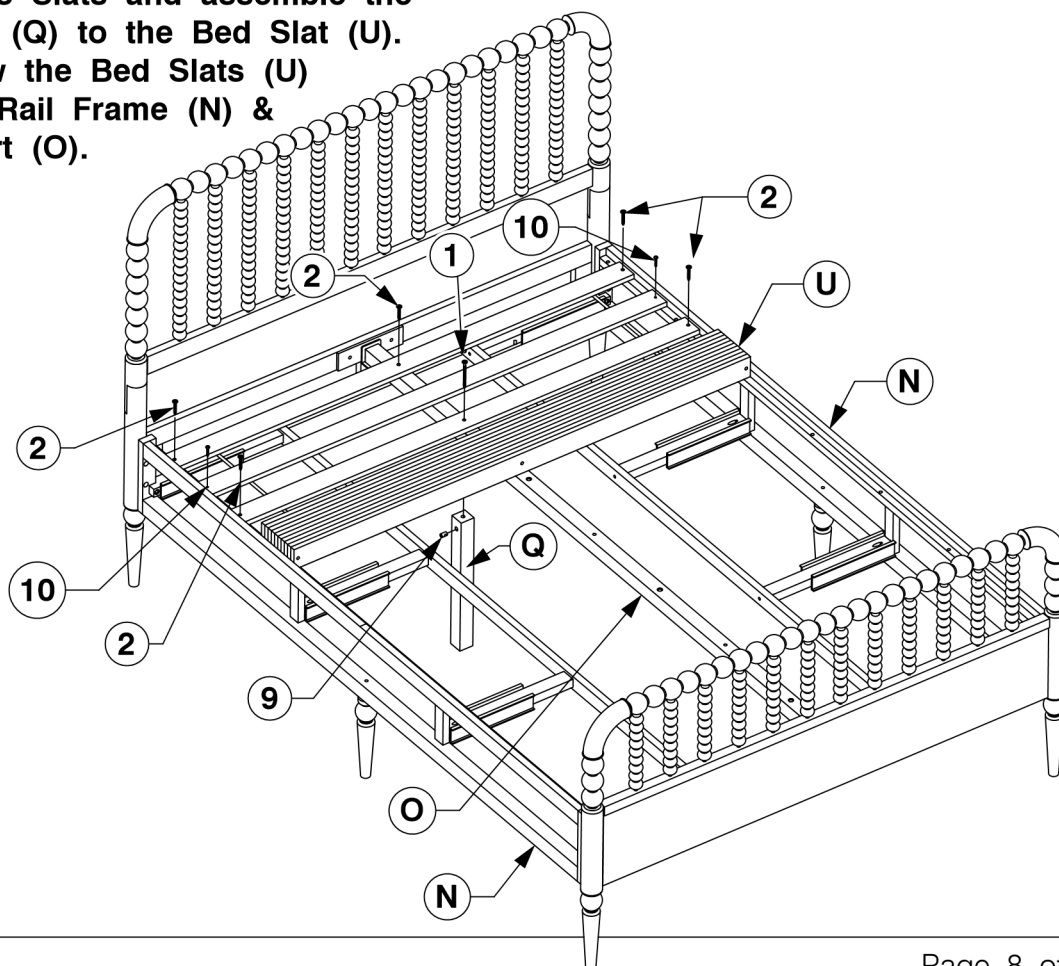


0110-8 Full Bed


Assembly Instructions

WI-1225

- 19** Fit the other Slats out and assemble the Support Leg (Q) to the Bed Slat (U). Bolt & screw the Bed Slats (U) to the Side Rail Frame (N) & Long Support (O).

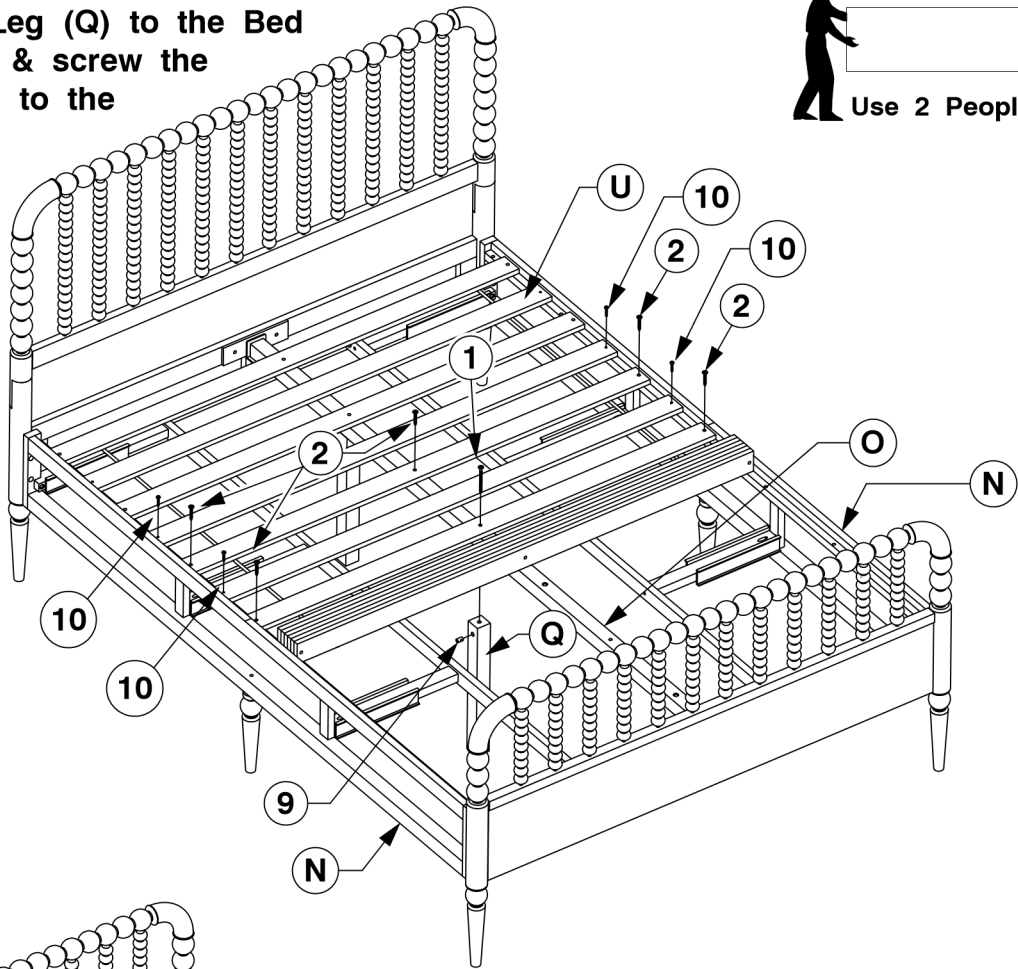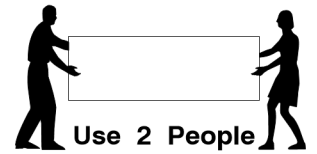

- 20** Fit the other Slats out and assemble the Support Leg (Q) to the Bed Slat (U). Bolt & screw the Bed Slats (U) to the Side Rail Frame (N) & Long Support (O).

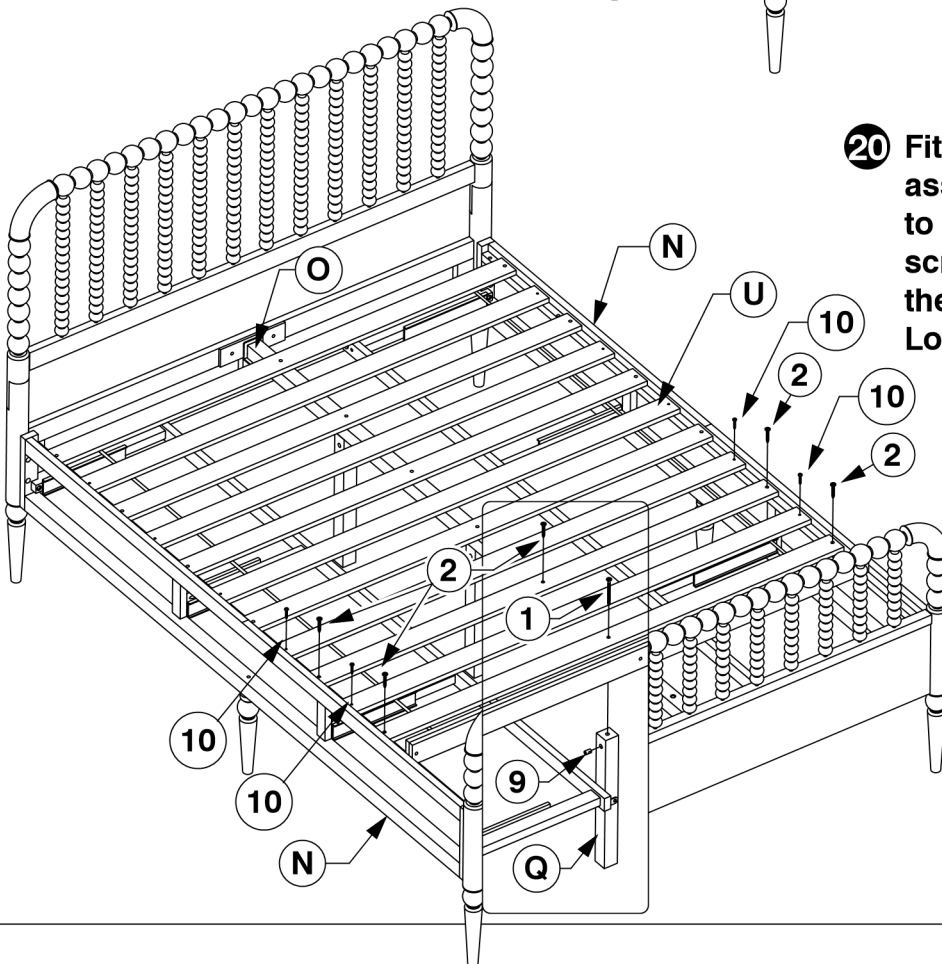


0110-8 Full Bed


Assembly Instructions

WI-1225

- 21** Bolt & screw the remaining Bed Slats (U) to the Side Rail Frame (N).

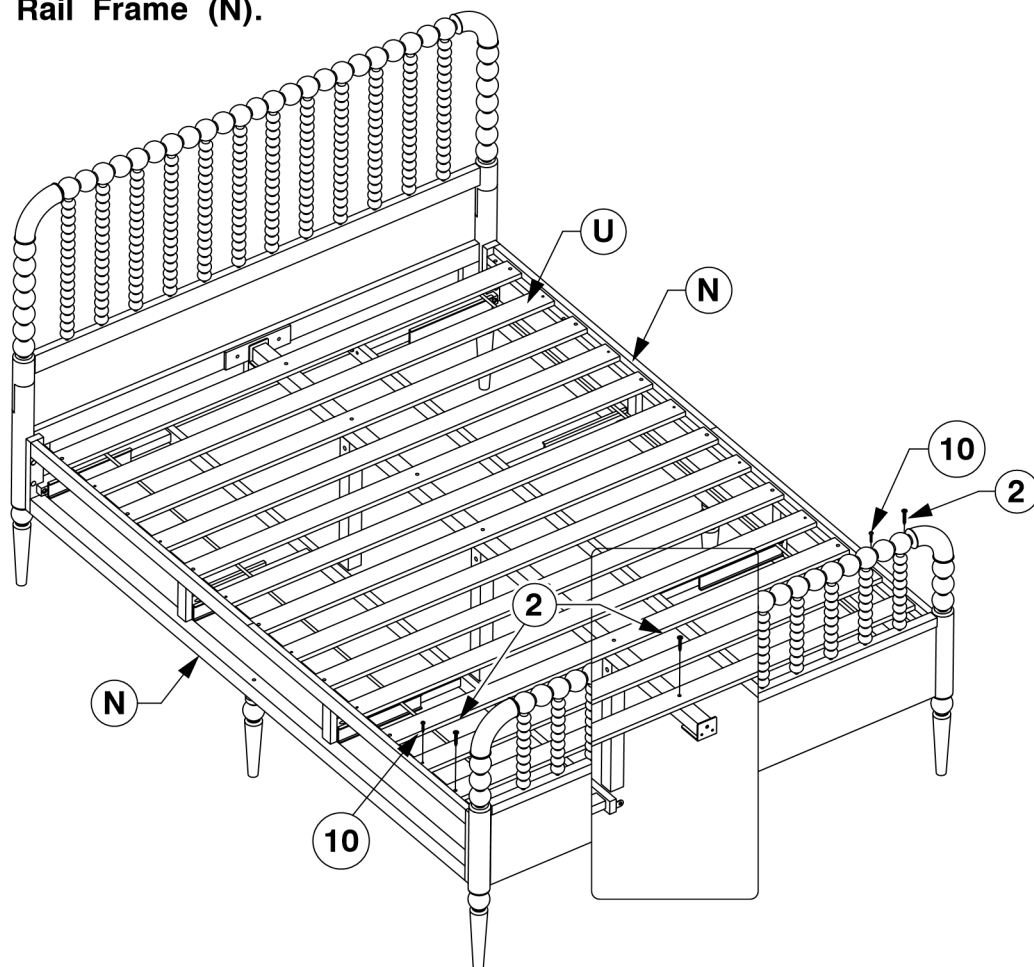



- 22** Fit all assembled drawers on both sides.

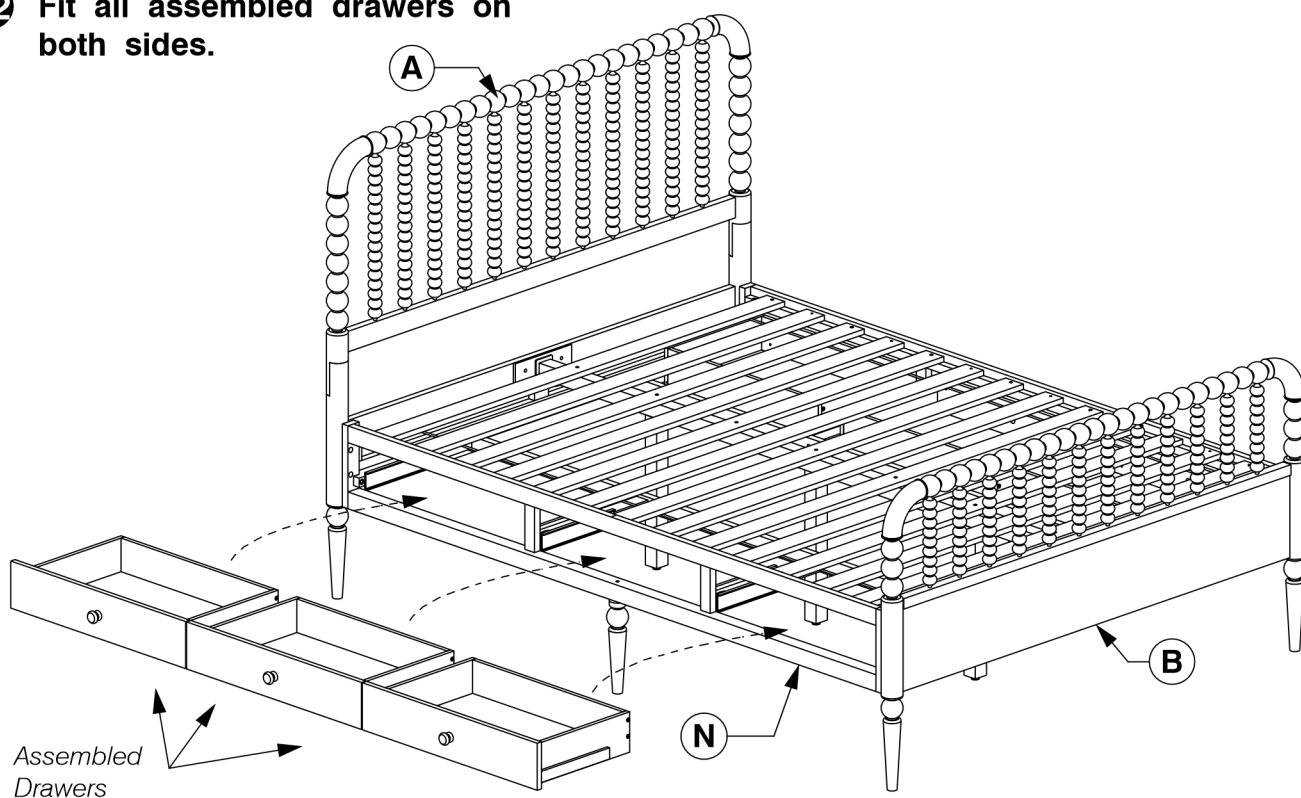

9025 1 Drawer Night Stand












Assembly Instructions

WI-1025

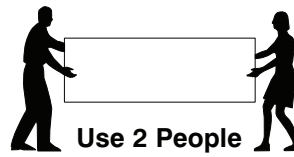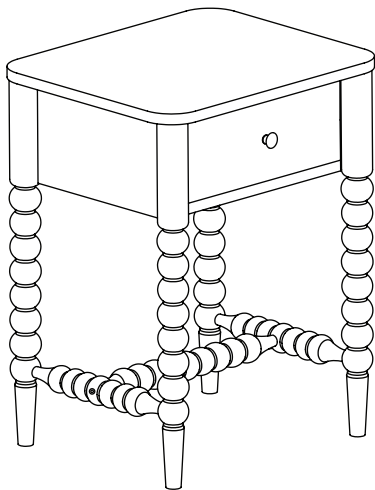

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

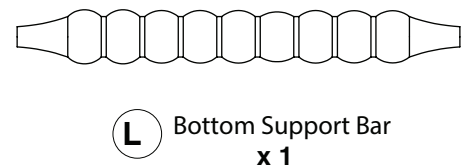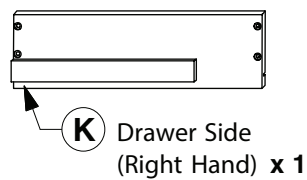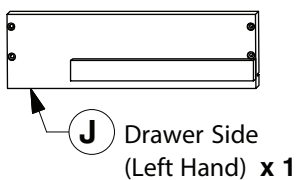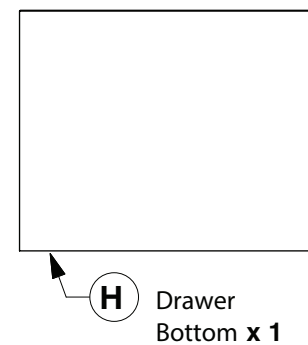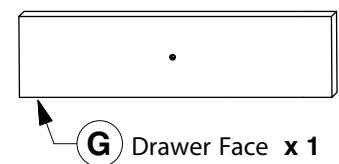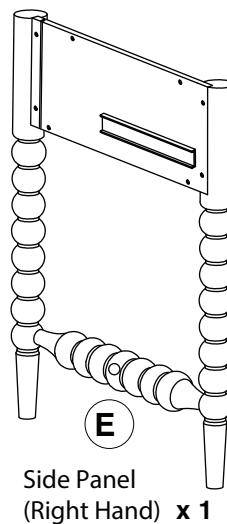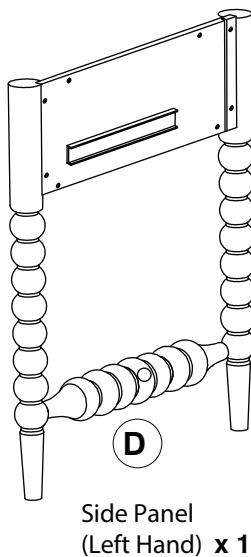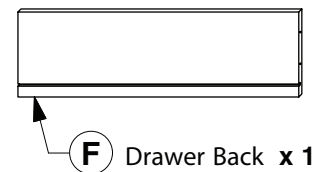
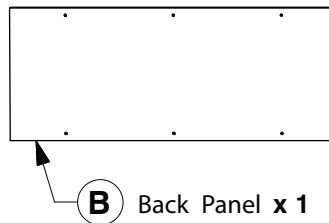
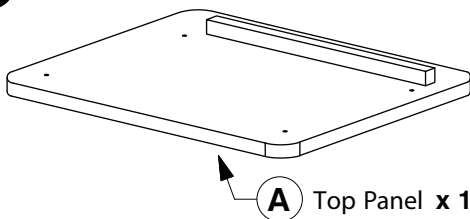


9025 1 Drawer Night Stand


Assembly Instructions

WI-1025


2 Hardware List

- | | | | | |
|---|---|---|---|---|
|  |  |  |  |  |
| 1 M6 x 15mm JCB x 8 | 2 M6 x 30mm JCB x 4 | 3 'L' Bracket (5005-3) x 4 | 4 M4 x 20mm Wood Screw x 4 | 5 M4 x 16mm Wood Screw x 6 |
|  |  |  |  |  |
| 6 M4 x 25mm Wood Screw x 8 | 7 M6 X50mm JCBC W x 2 | 8 Handle x 1 | 9 M4 x 22mm Wood Screw x 1 | 10 Allen Key x 1 |


3 Assemble the Drawer Sides (J & K) to the Drawer Face (G).

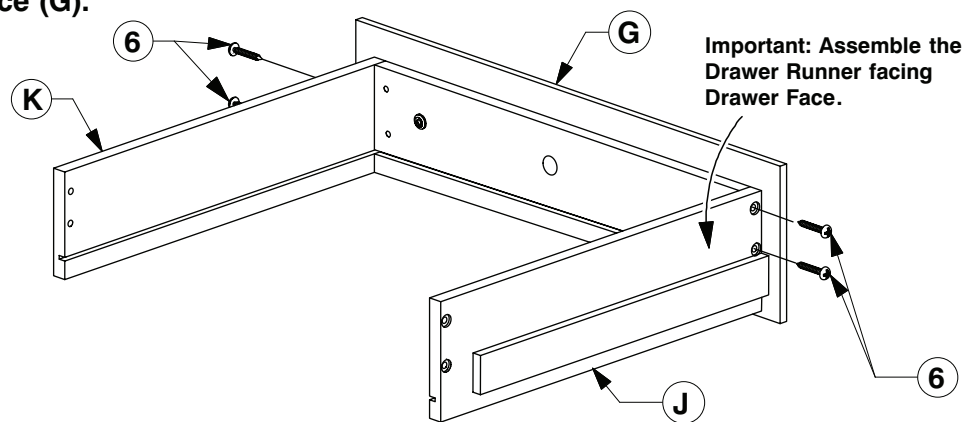

4 Slide the Drawer Bottom (H) into the groove on the Drawer Sides (J & K).

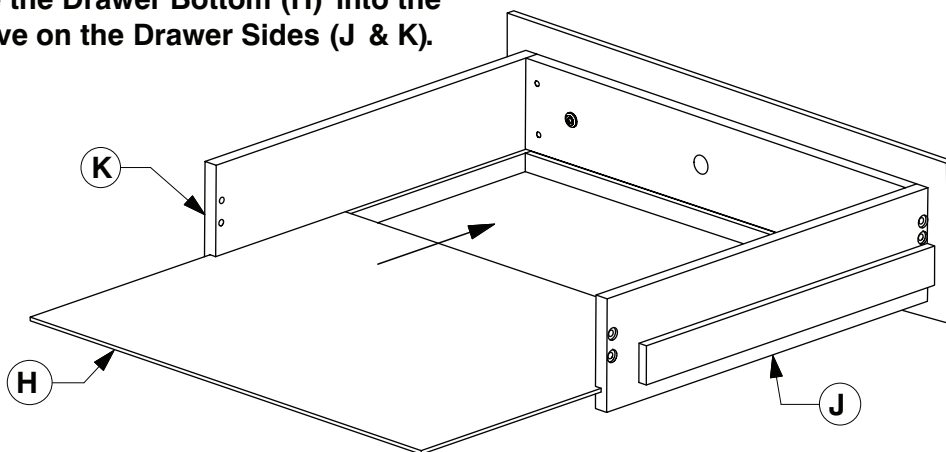

5 Assemble the Drawer Back (F) to the Drawer Sides (J & K). Fit the Handle to the Drawer Face (G).

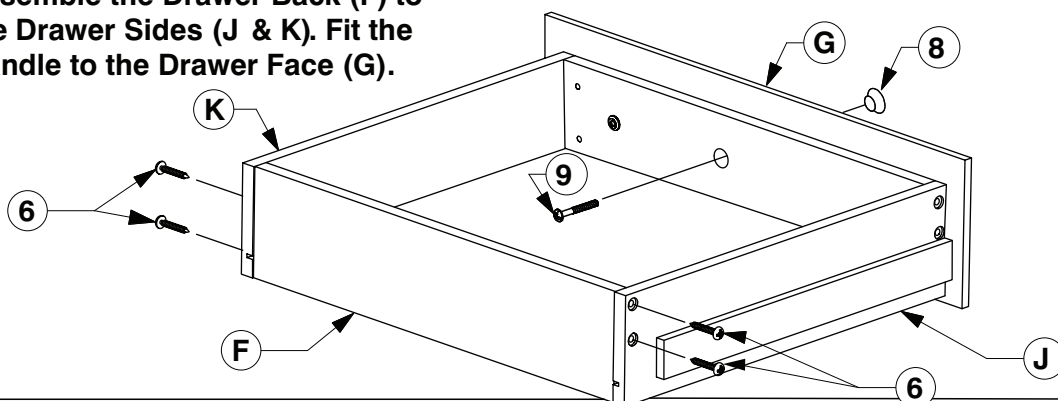


9025 1 Drawer Night Stand


Assembly Instructions

WI-1025

- 6** Fit the 'L' Bracket (3) to the Side Panel (D & E).

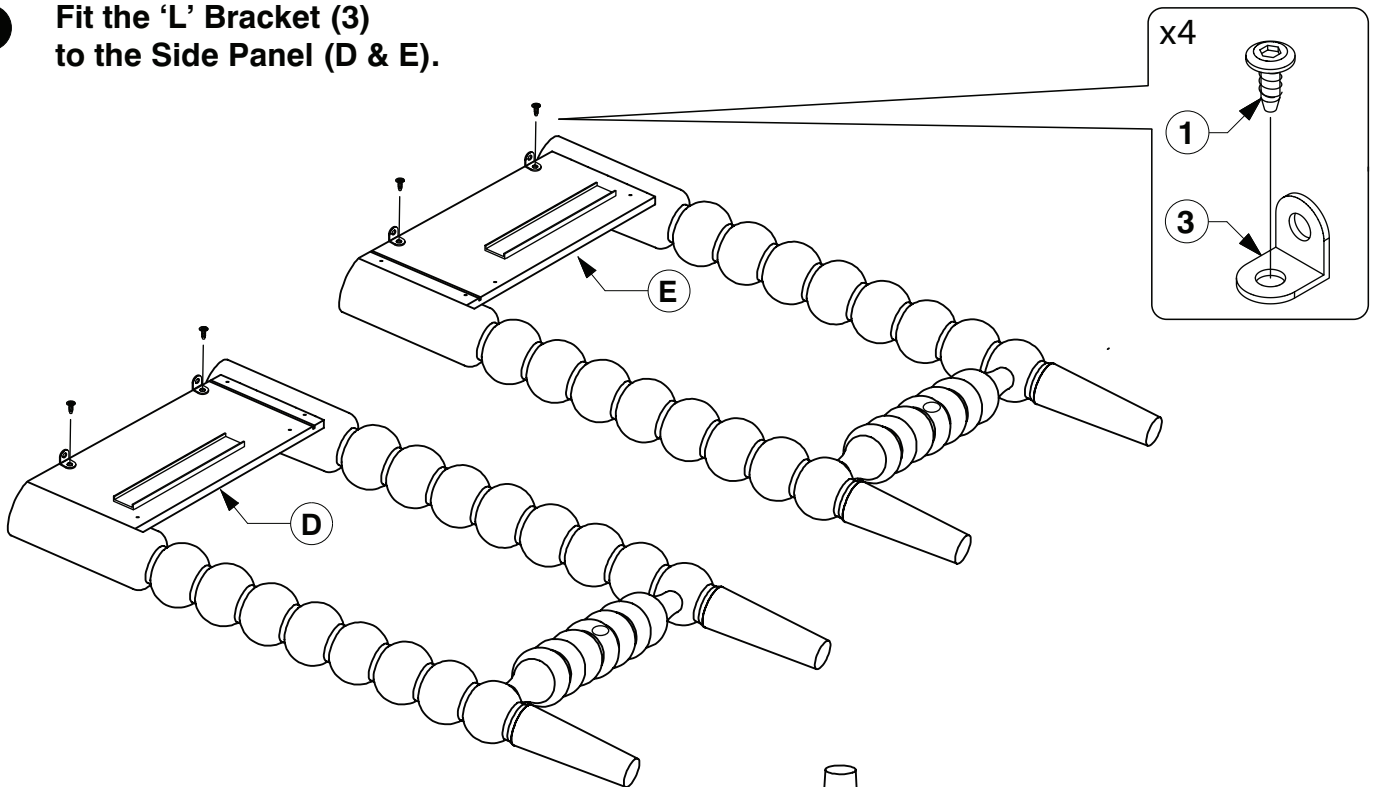

- 7** Assemble the Side Panel (D) to the Top Panel (A).

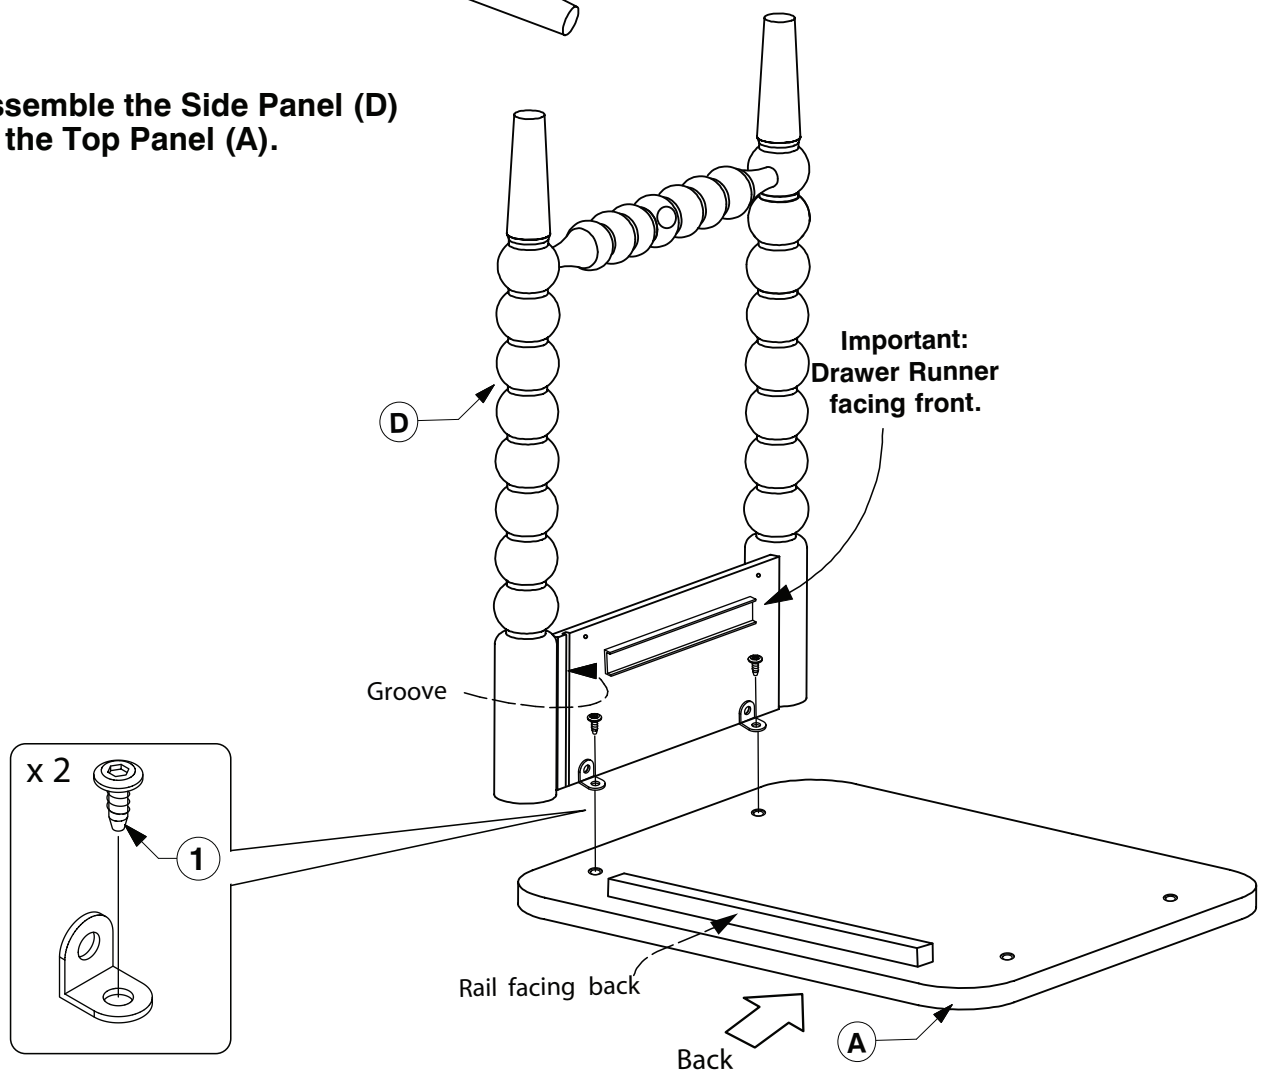


9025 1 Drawer Night Stand

Assembly Instructions

WI-1025

8 Fit the Bottom Support Bar (L) & Support Bar (C) to the Side Panel (D).

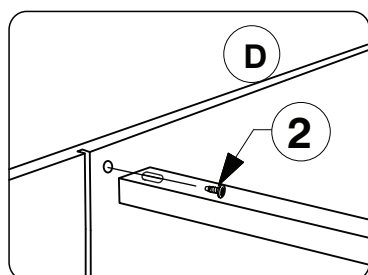


Step 1

Use the **ball end** of Allen key to start the bolt.

Step 2

Tighten fully with the **straight end**.

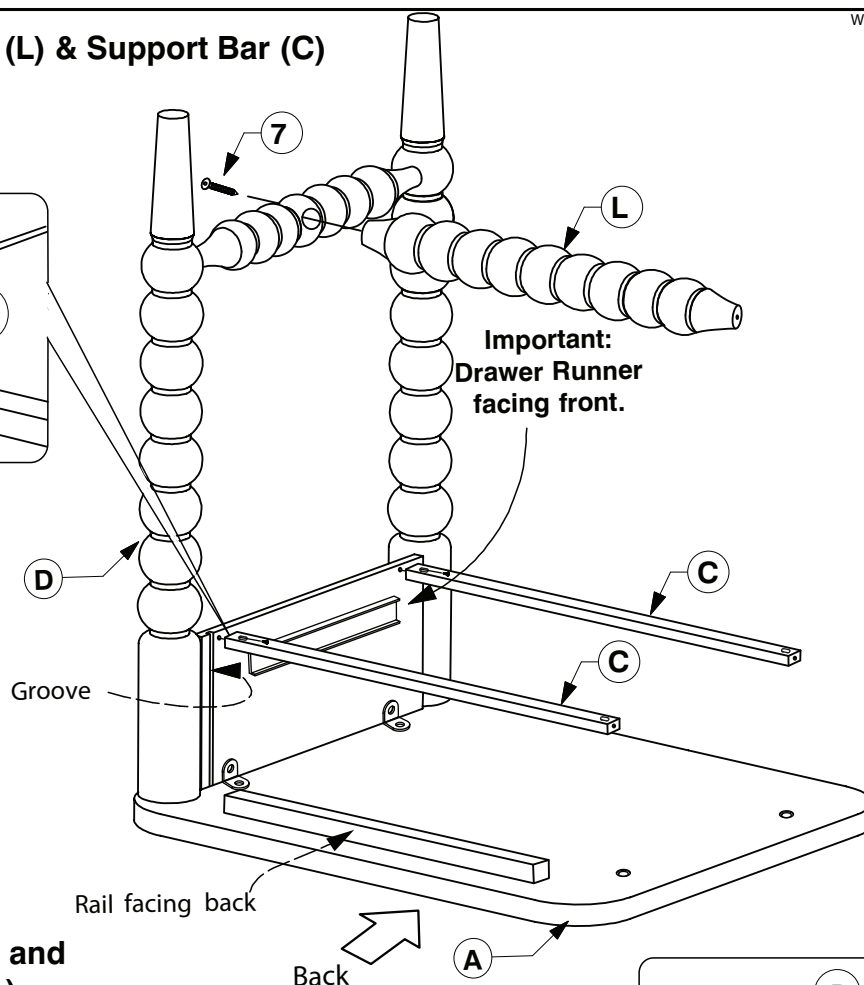



9 Assemble the Side Panel (E) and to the Bottom Support Bar (L) and Support Bar (C) Top Panel (A).

Step 1


Use the **ball end** of Allen key to start the bolt.

Step 2

Tighten fully with the **straight end**.

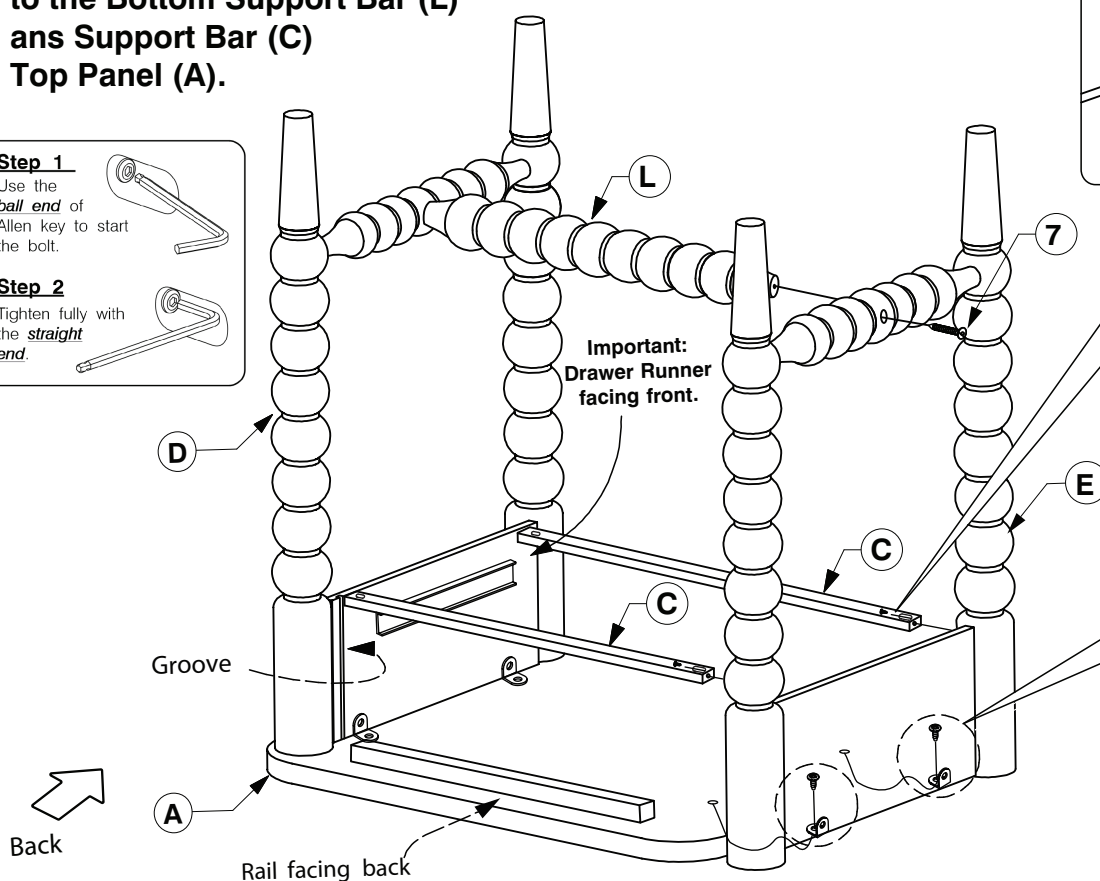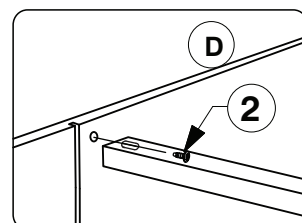

x 2

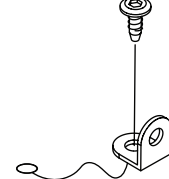


9025 1 Drawer Night Stand


Assembly Instructions

WI-1025

- 10** Slide the Back Panel (B) into the groove on the back of the Side Panel (D & E)

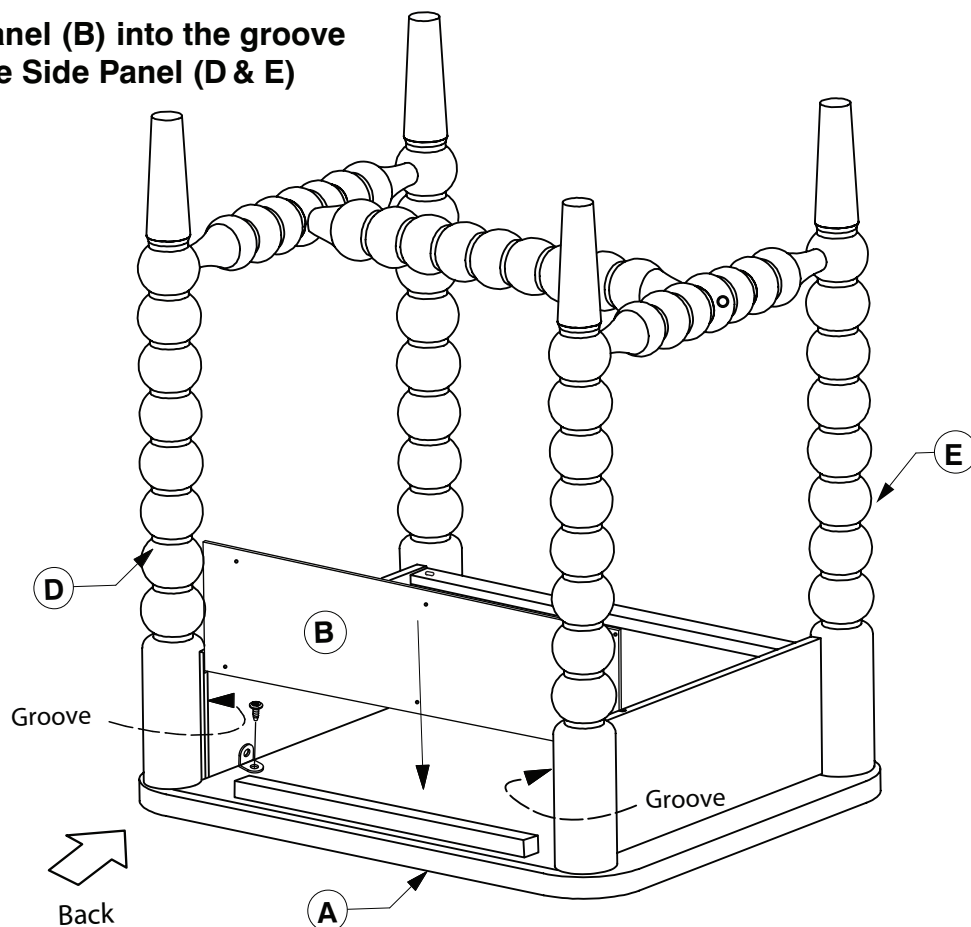

- 11** Screw the Back Panel (B) to the Side Panel (D & E).

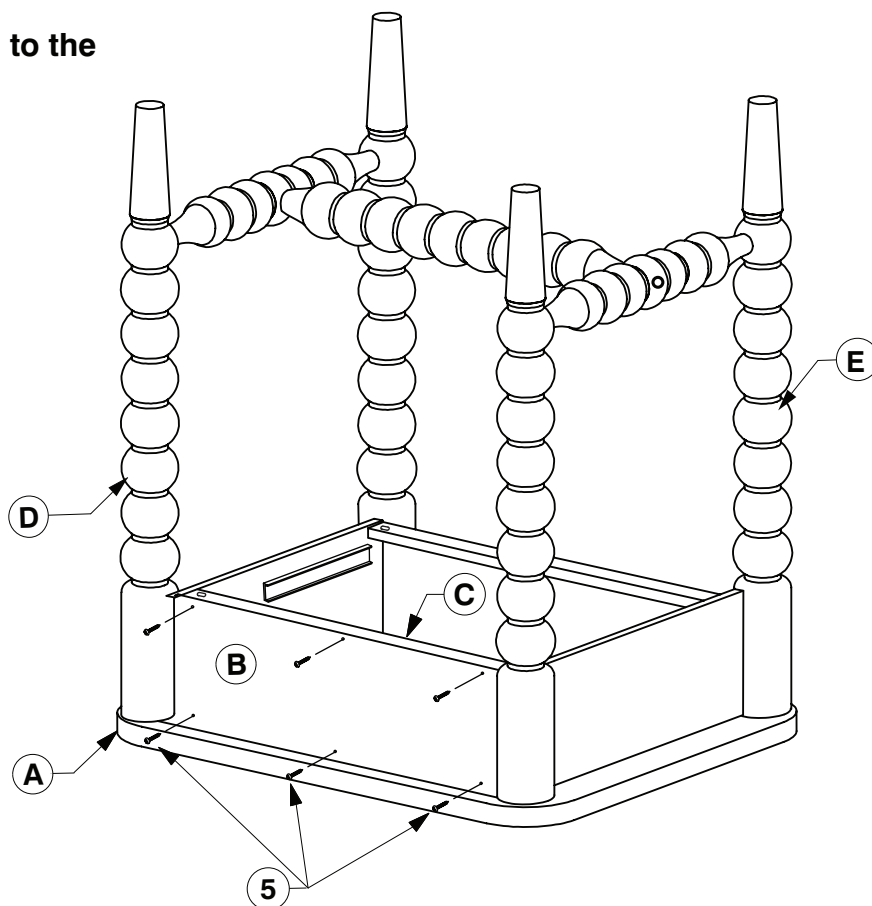


9025 1 Drawer Night Stand

Assembly Instructions


WI-1025

12 Fit the Drawer Box to the Casegood Body.

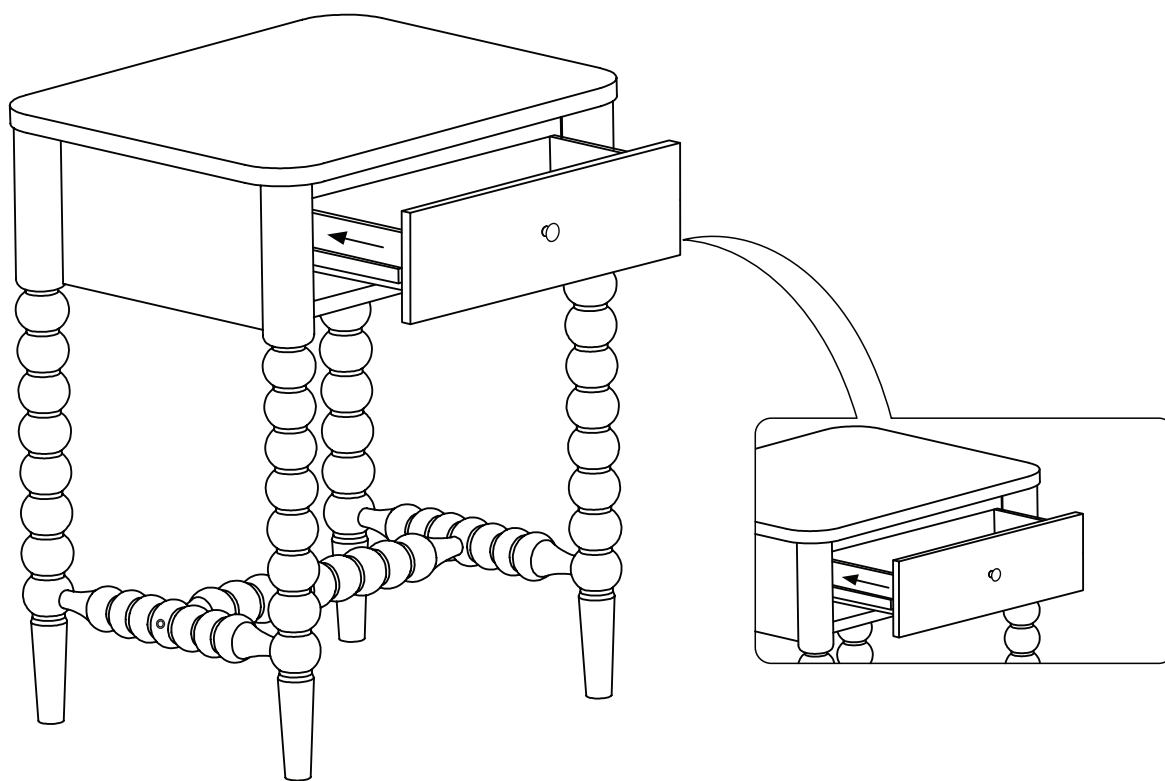

13 Adjust the Drawer Face (G).

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

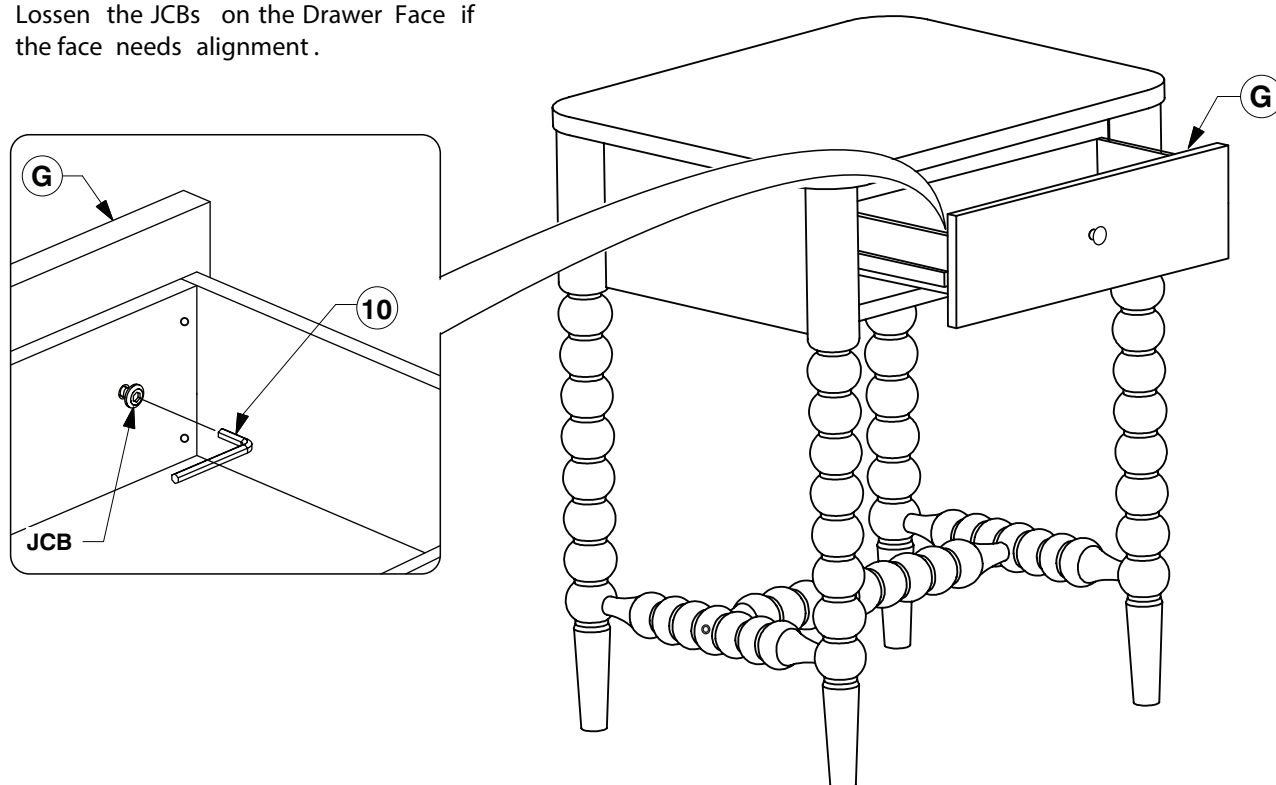


9025 1 Drawer Night Stand

Assembly Instructions

WI-1025



- 14** After the Drawer Faces (G) are aligned, secure with wood screws.

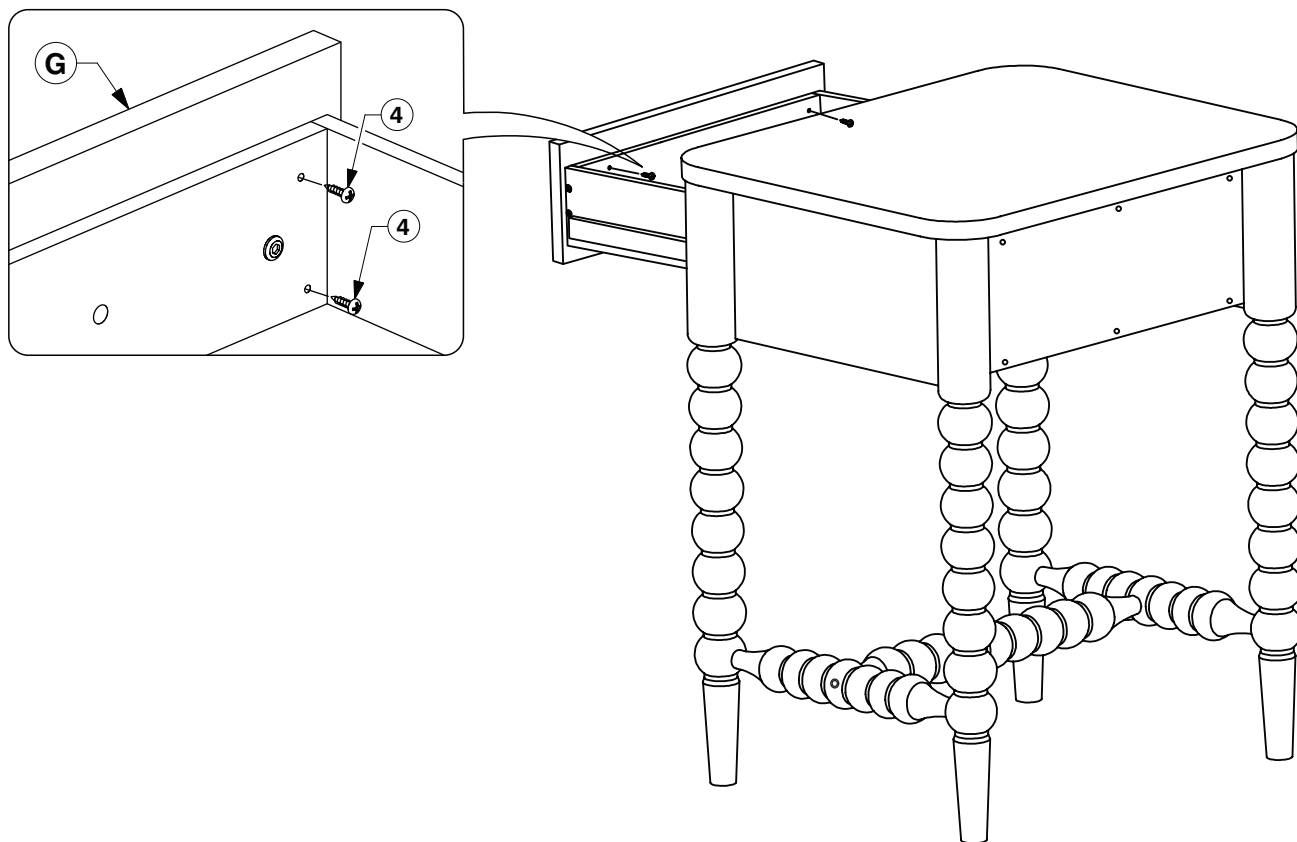

9025 6 Drawer Dresser


Assembly Instructions

WI-1024

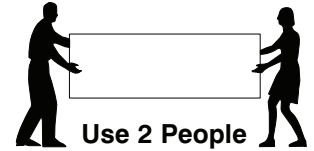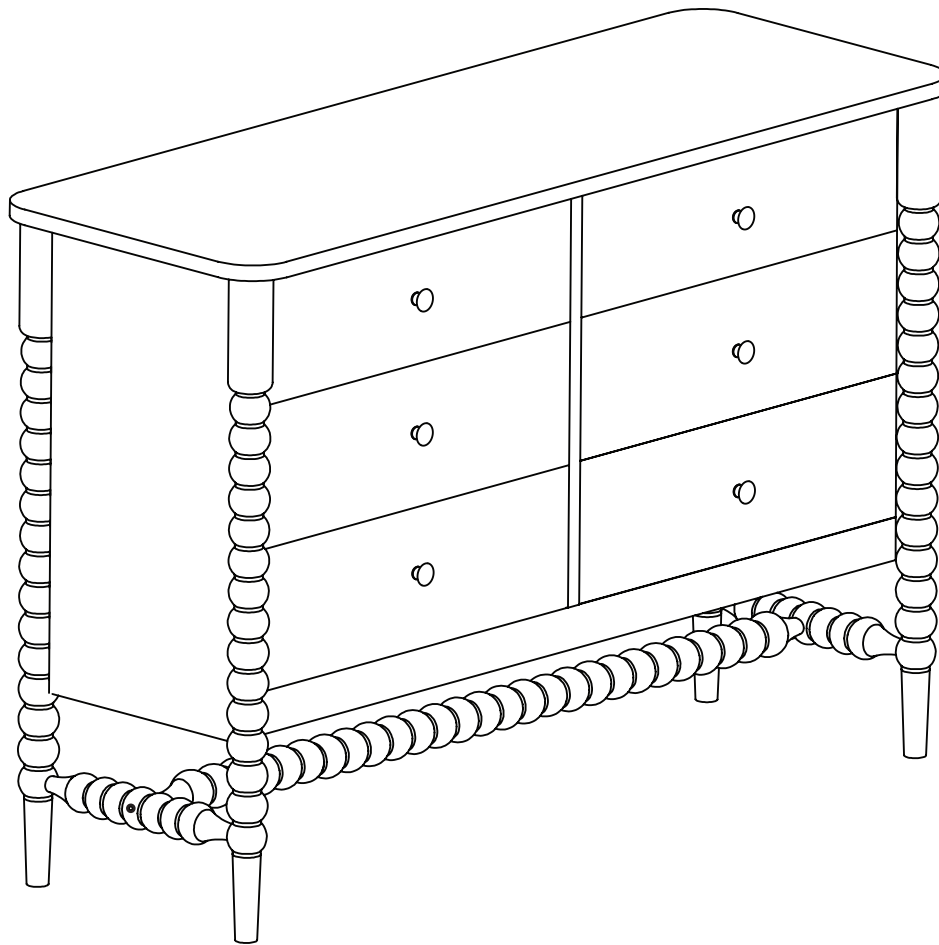

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

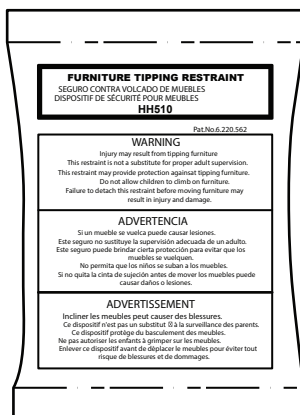

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9025 6 Drawer Dresser

Assembly Instructions


WI-1024

1 Parts List


Parts in Box A:

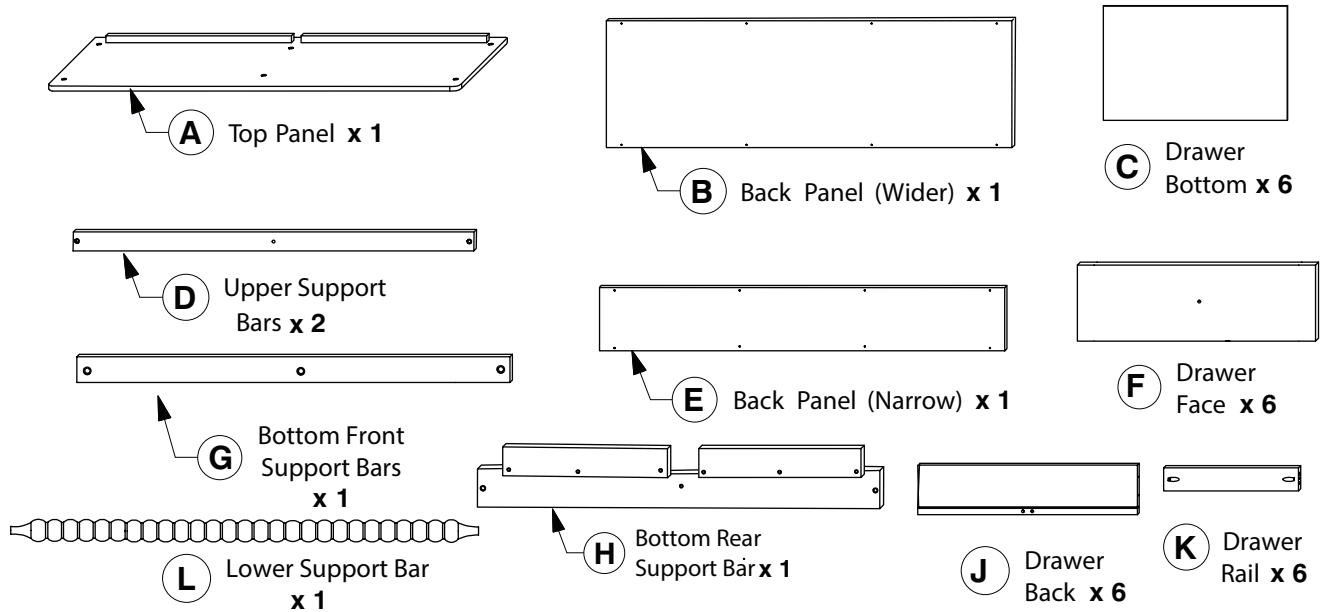


Parts in Box B:

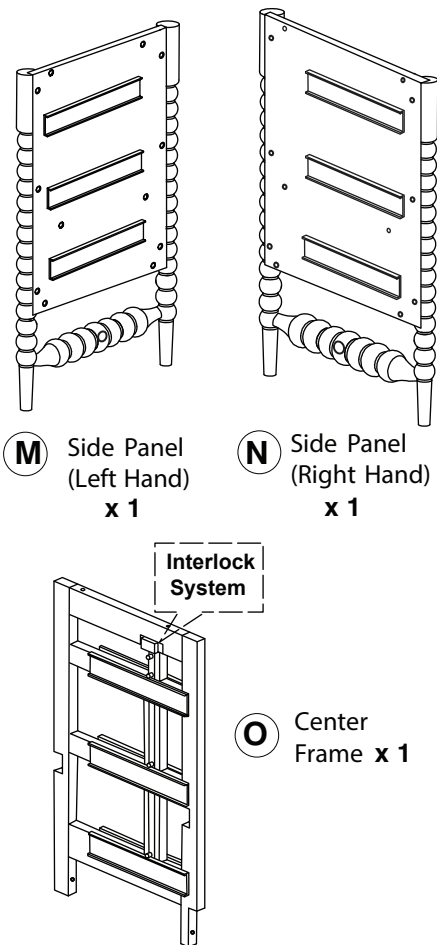

Parts for LEFT Side Drawer

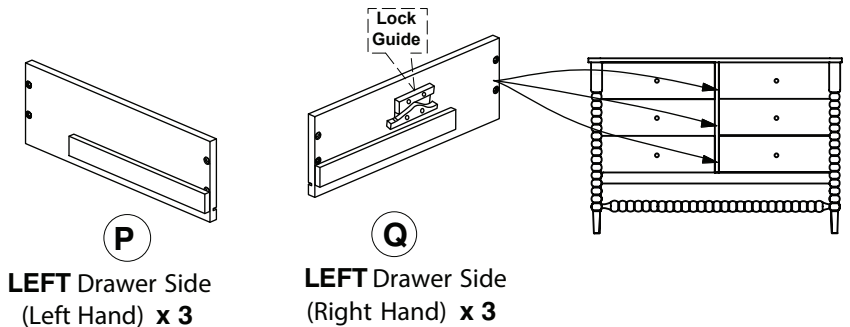

Parts for RIGHT Side Drawer

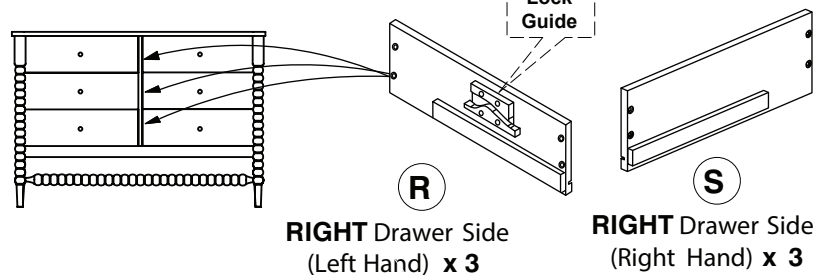


9025 6 Drawer Dresser

Assembly Instructions

WI-1024


2 Hardware List

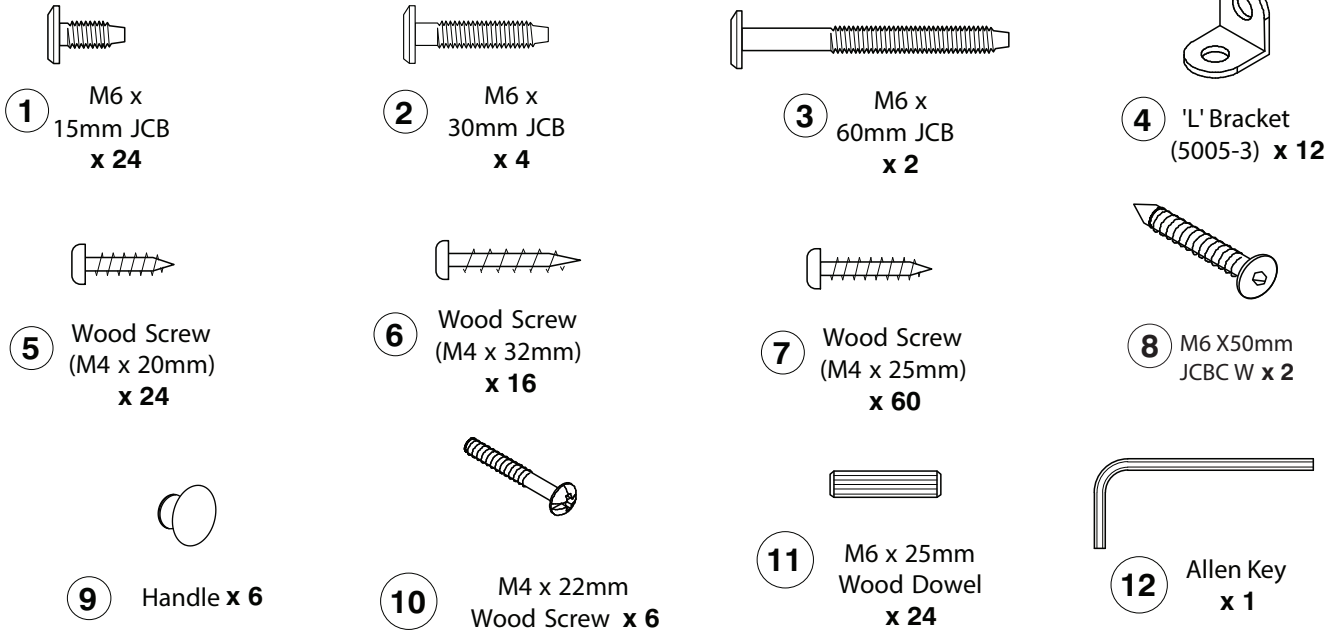


3 Assemble the Drawers.

STEP 3.1

LEFT

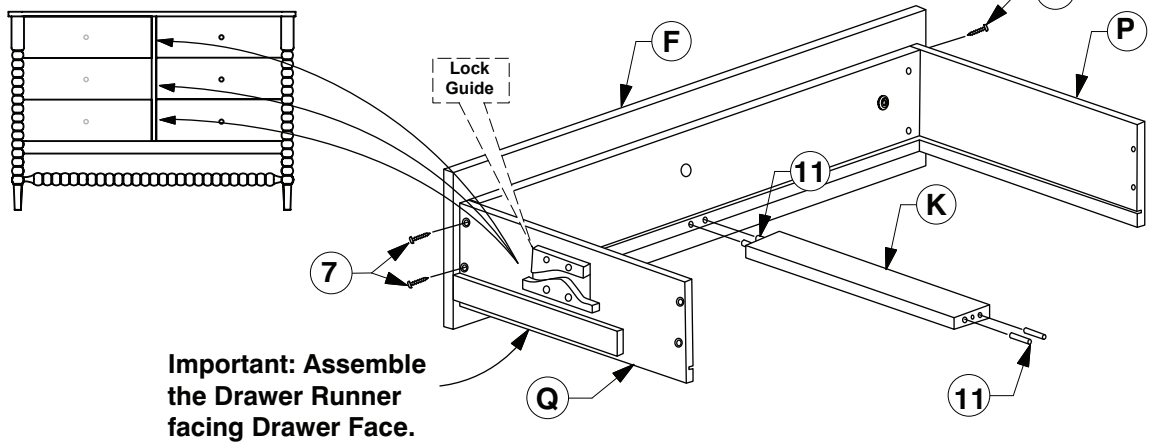

Important: Assemble the Drawer Runner facing Drawer Face .

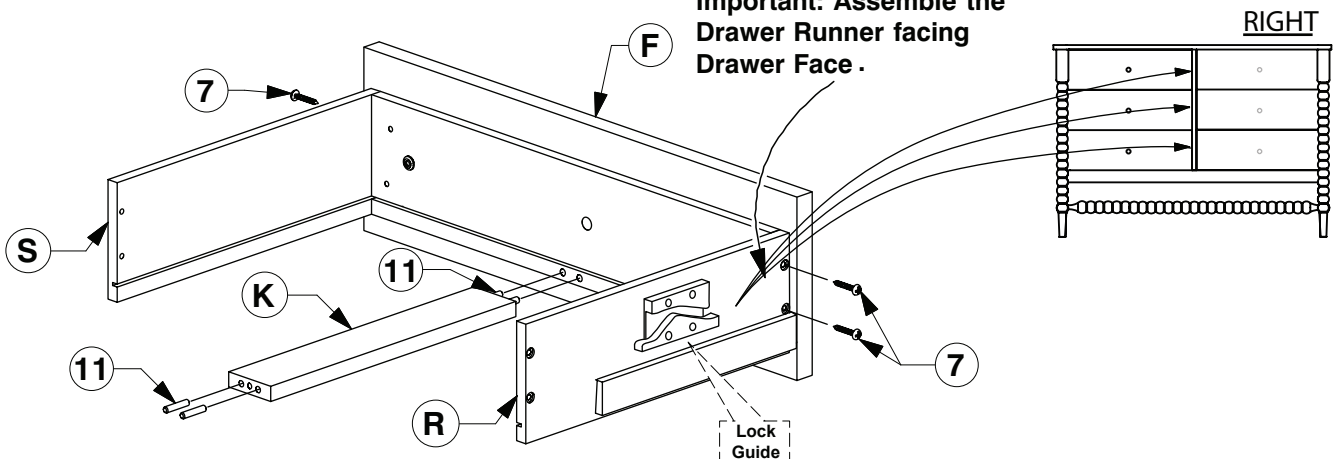

9025 6 Drawer Dresser

Assembly Instructions


WI-1024

3 Assemble the Drawers.

STEP 3.2


* 3 Assemble the left and right drawers as shown below

x6

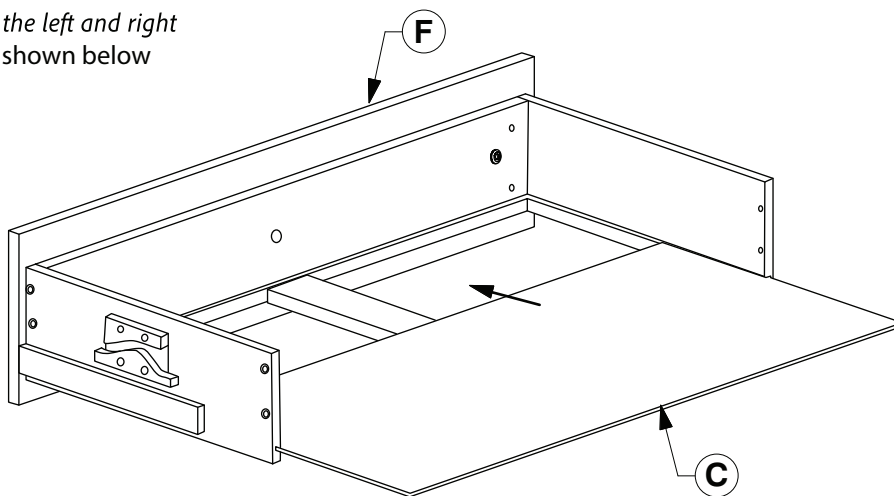


STEP 3.3

x6

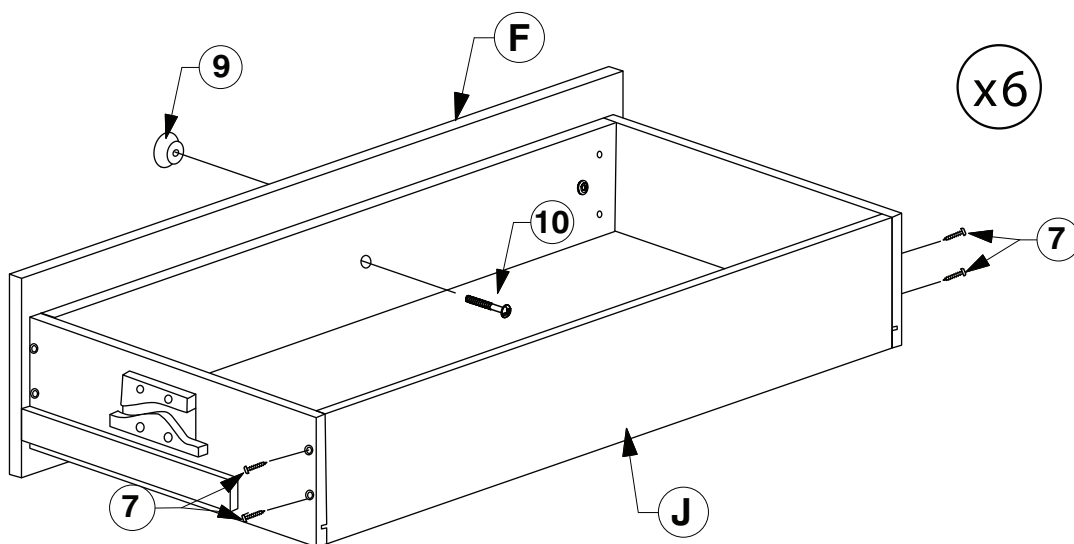

STEP 3.4

x6

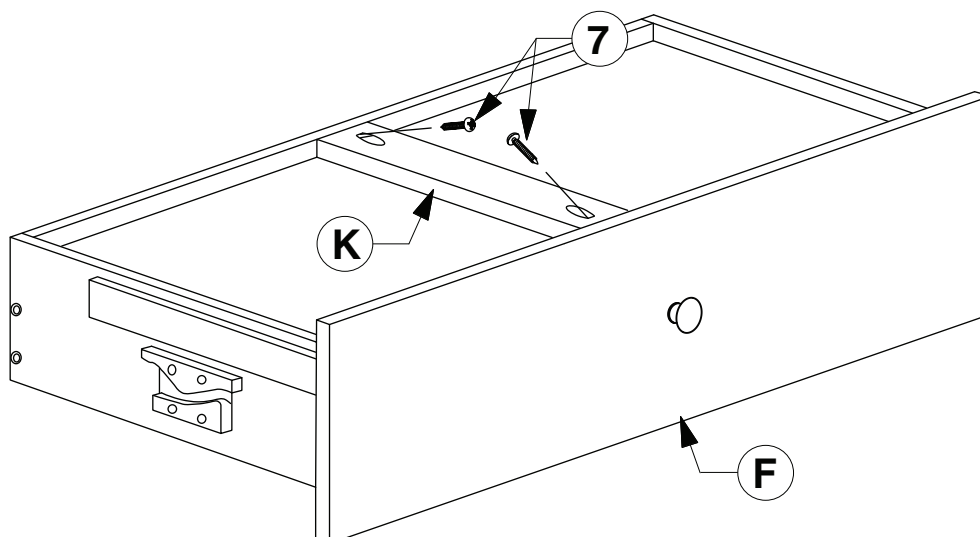


9025 6 Drawer Dresser


Assembly Instructions

WI-1024

4 Fit the 'L' Bracket to the Side Panel (M & N).

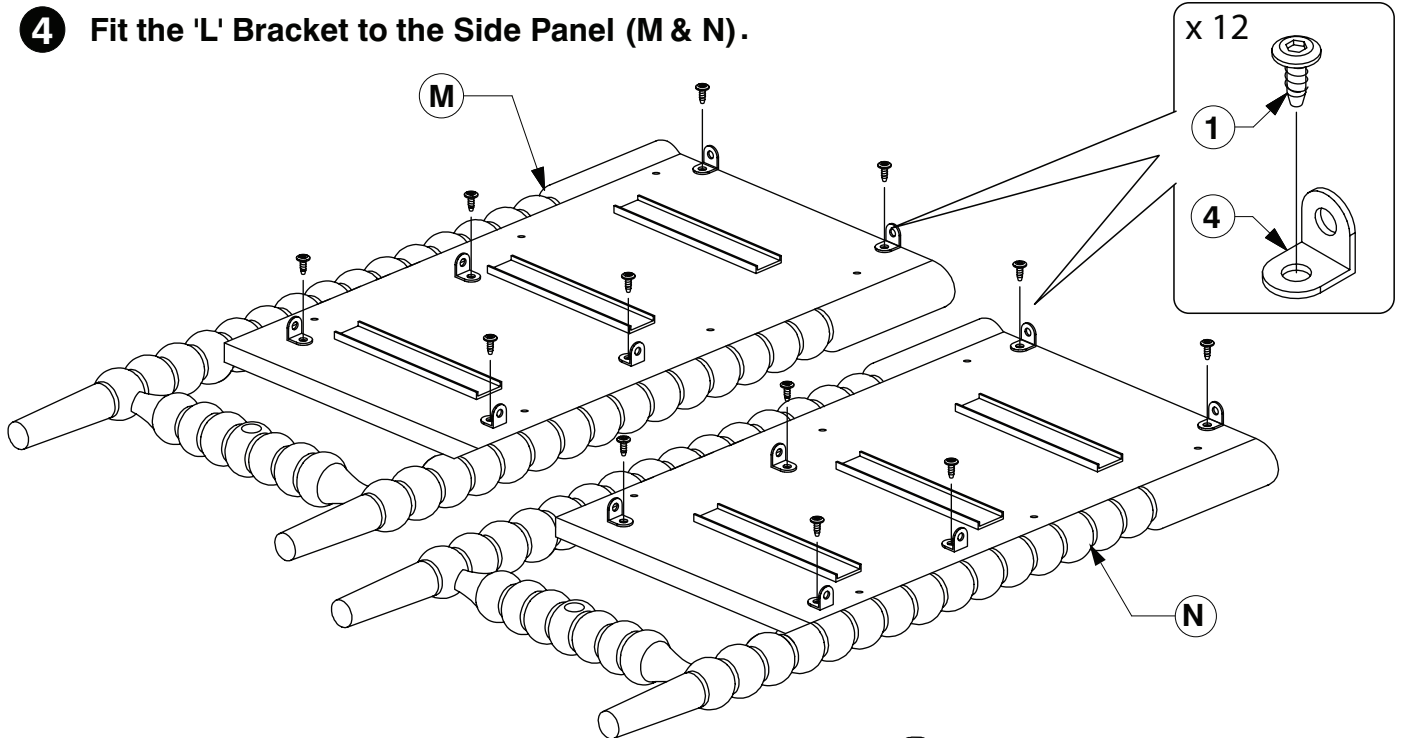

5 Fit the Side Panel- Right Hand (N) & Center Frame (O) to the Top Panel (A).

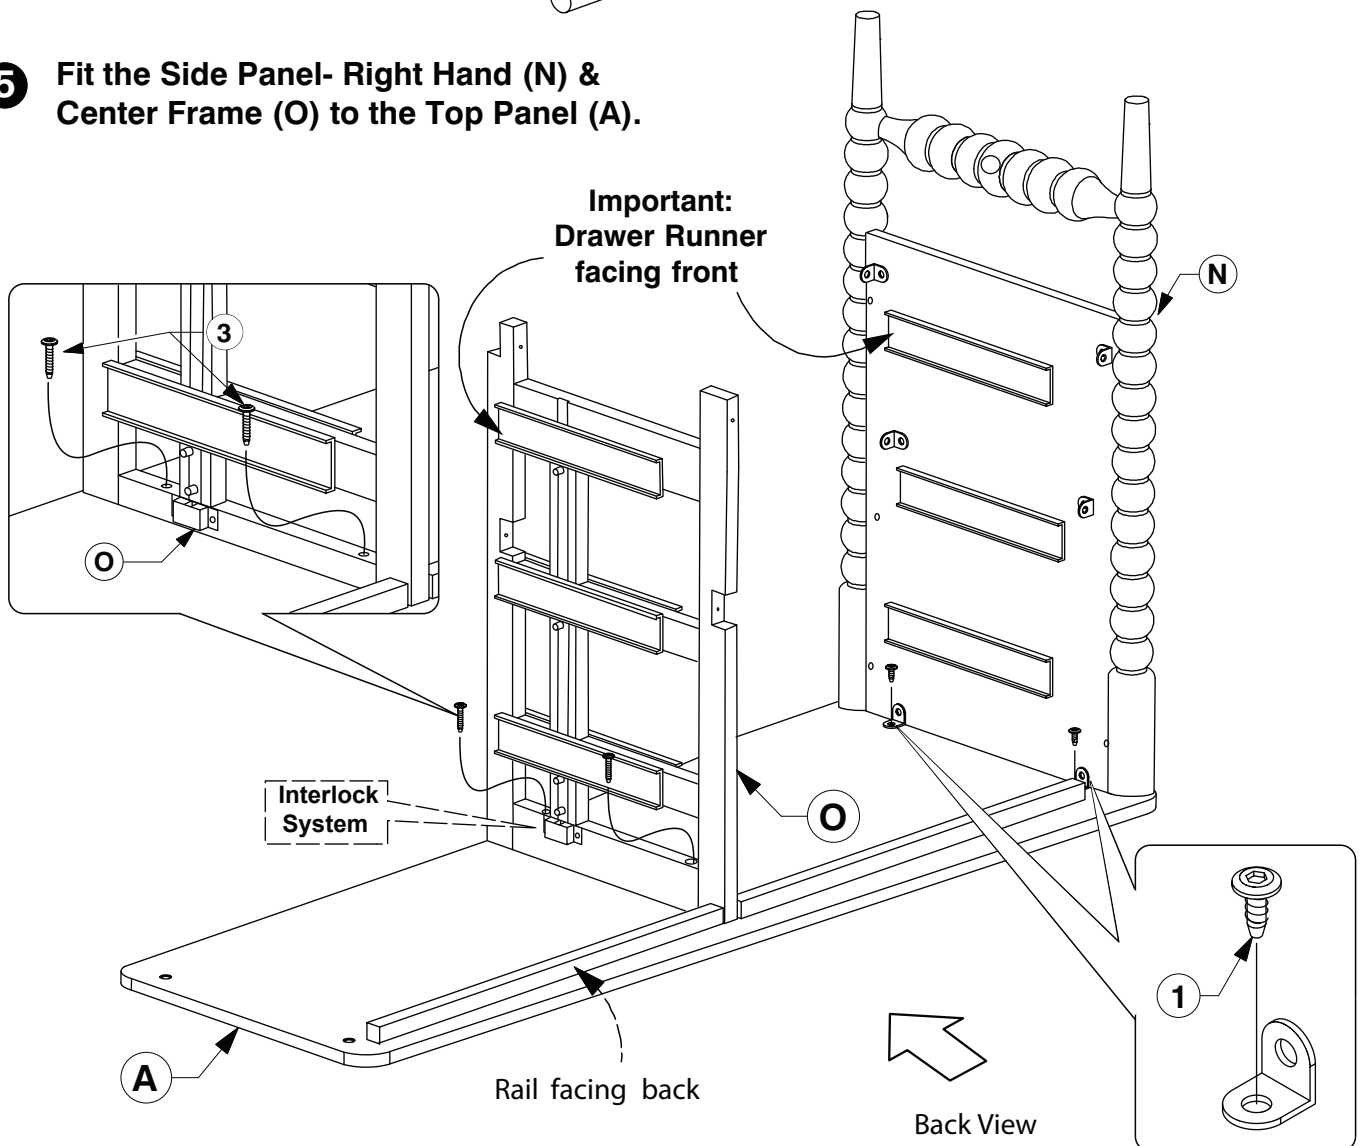


9025 6 Drawer Dresser


Assembly Instructions

WI-1024

- 6** Fit the Upper Support Bar (D) and Bottom Front & Rear Support Bars (G & H) to the Side Panel-Right Hand (N) & Center Frame (O) as shown. Use JCBCW (8) to fit the Lower Support Bar (L) to the Side Panel (N).

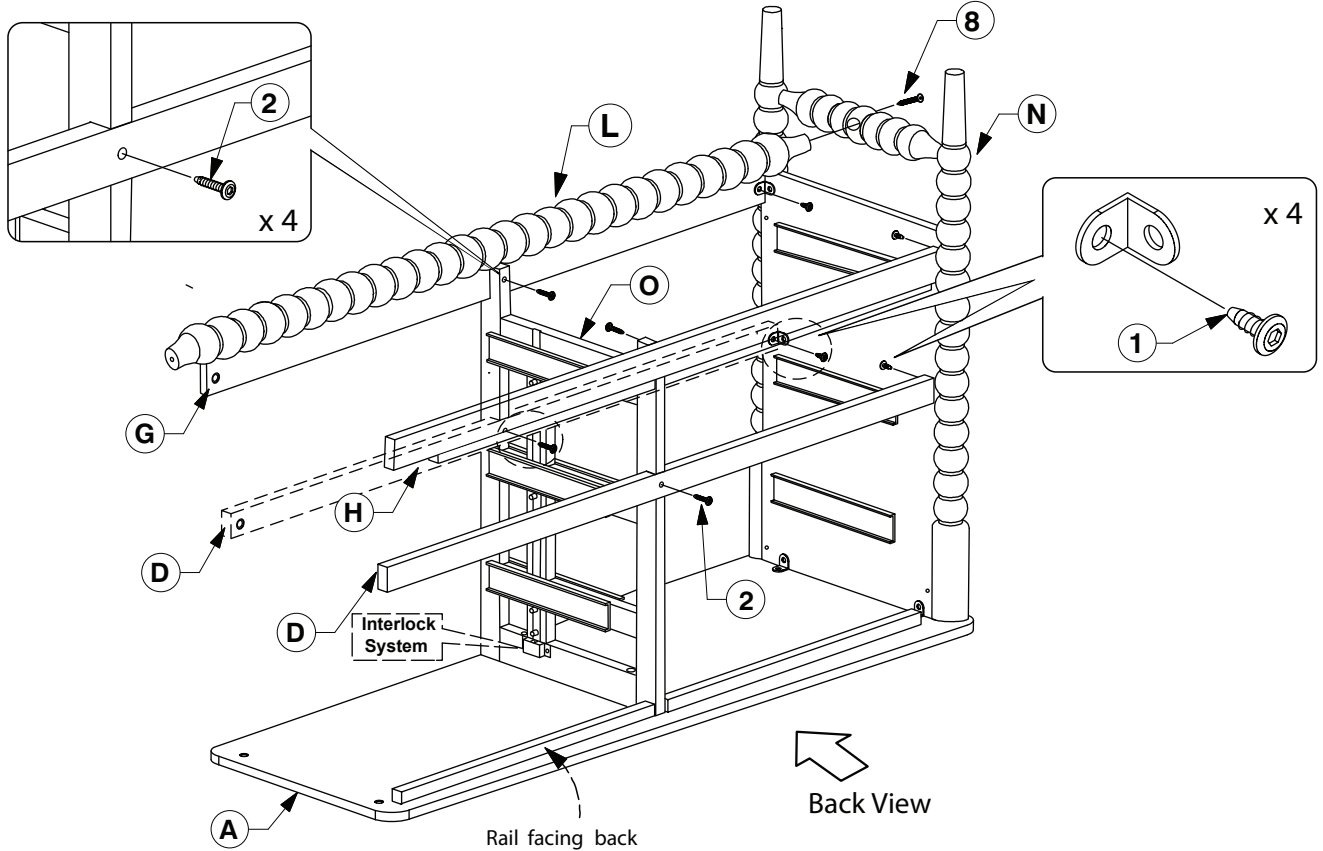

- 7** Fit the other side of Side Panel- Left Hand (M) to the Top Panel (A) & Support Bar Upper & Bottom (D & G & H) and Lower Support Bar (L).

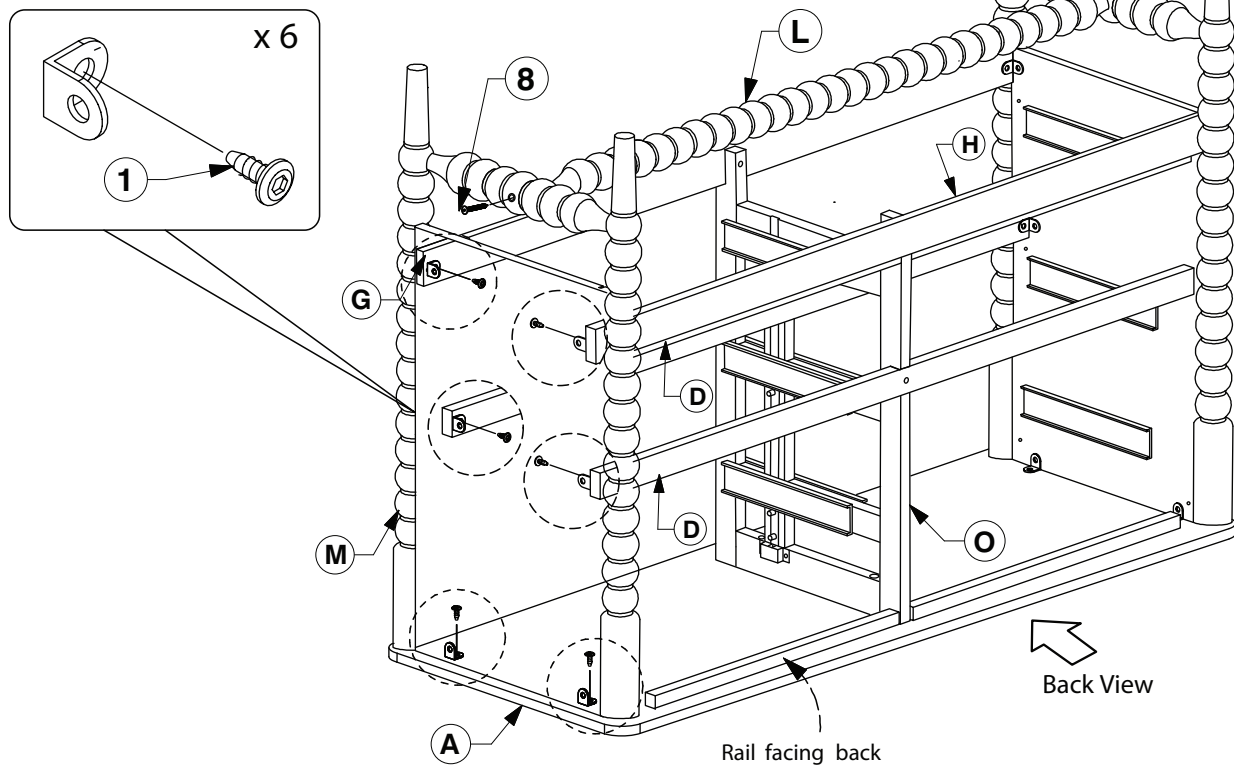


9025 6 Drawer Dresser


Assembly Instructions

WI-1024

- 8** Attached the Back Panel- wider (B) to the back of the Frame.

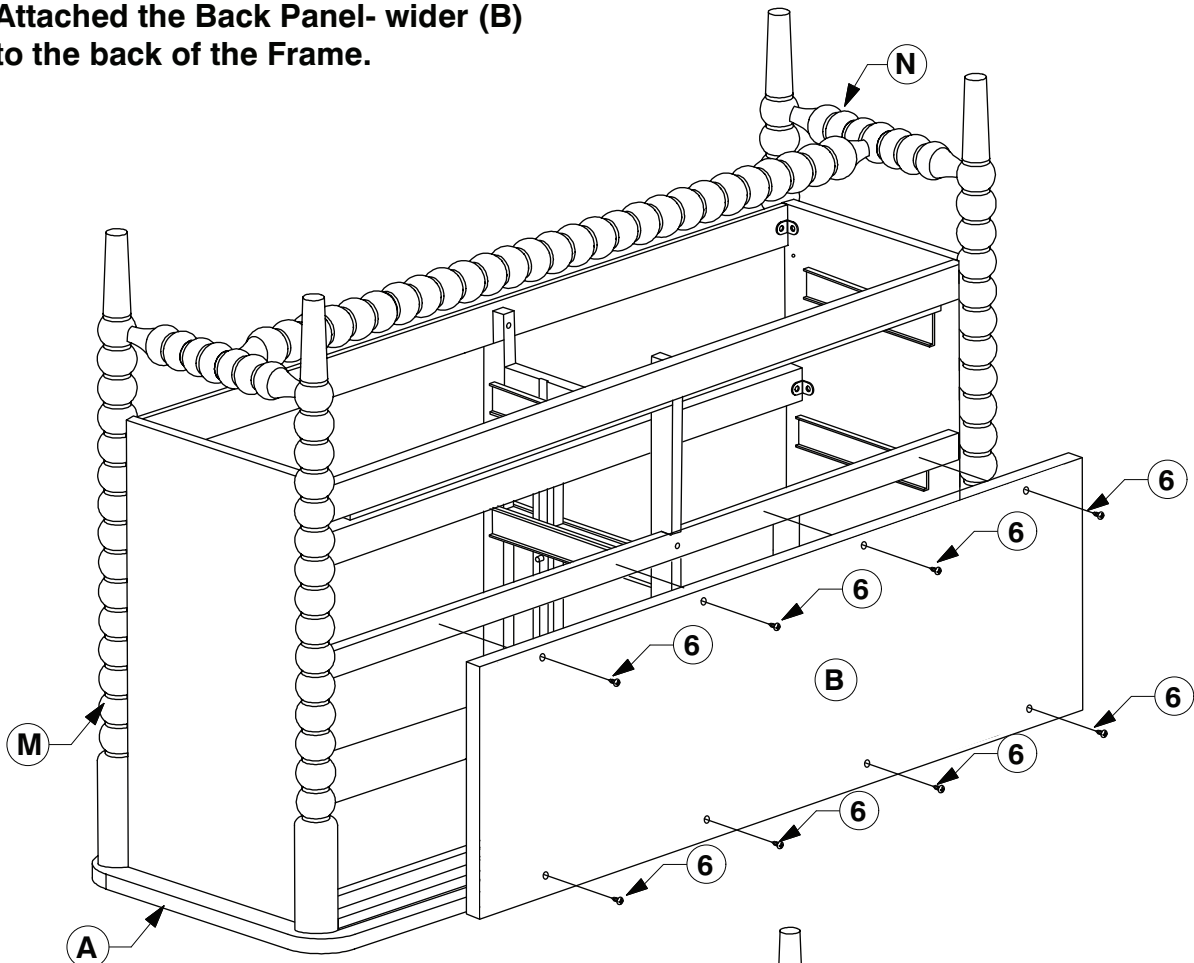

- 9** Attached the Back Panel- narrow (E) to the back of the Frame.

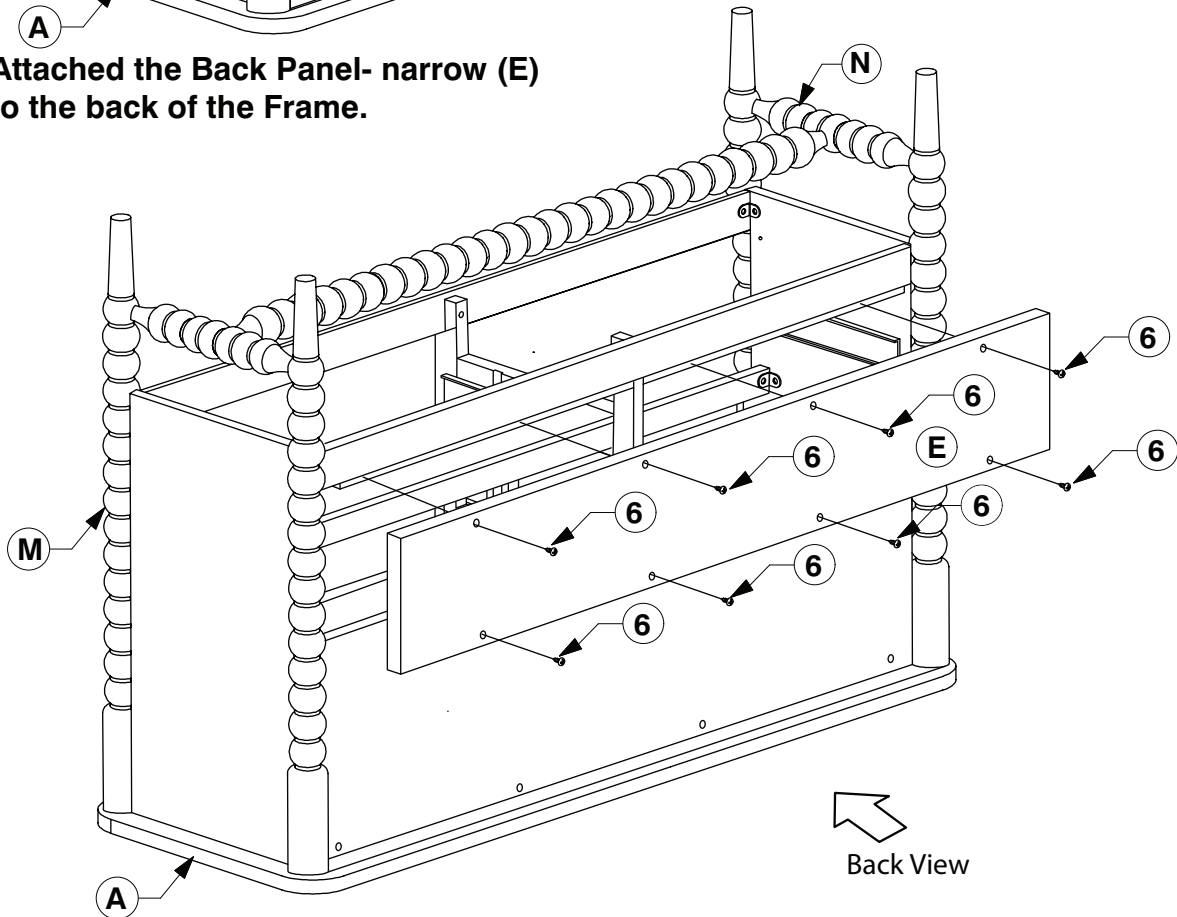

9025 6 Drawer Dresser



Assembly Instructions

WI-1024

10 Install the Drawers.



- Push the Interlock bar **upwards** before inserting the drawers.

LEFT

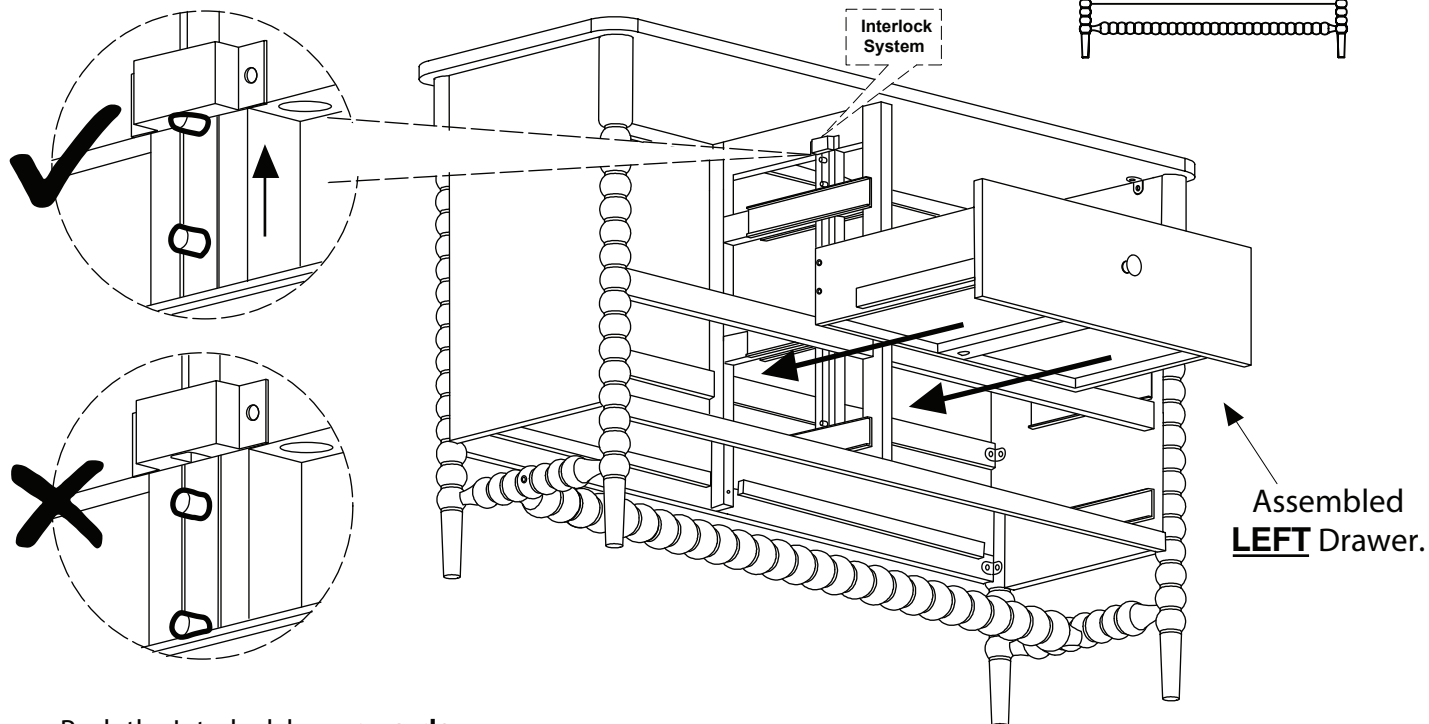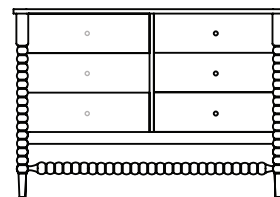

- Push the Interlock bar **upwards** before inserting the drawers.

RIGHT

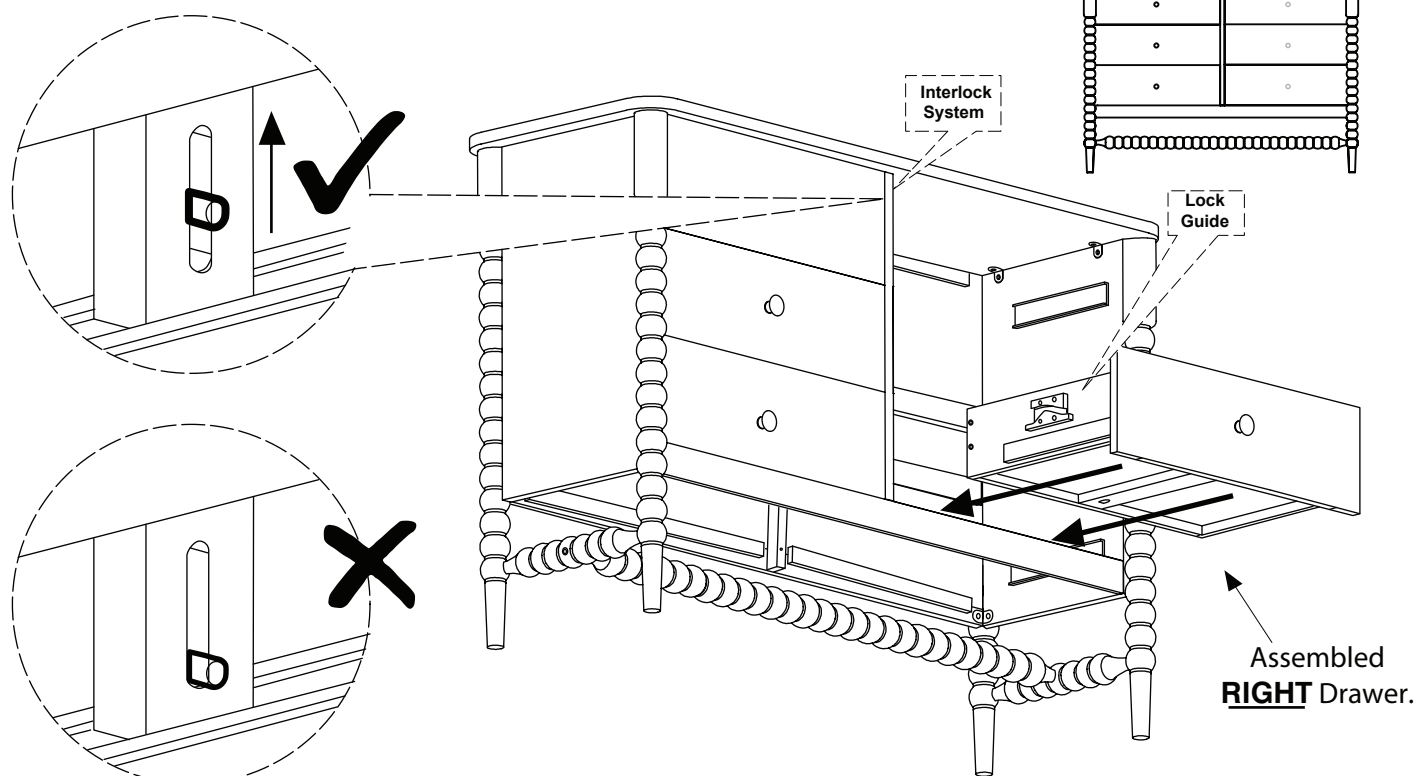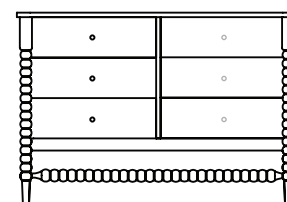


9025 6 Drawer Dresser

Assembly Instructions


WI-1024

11 Adjust the Drawer Face (F).


- * NOTE: Before fitting the Wood Screws .
Losen the JCBs on the Drawer Face if
the face needs alignment.

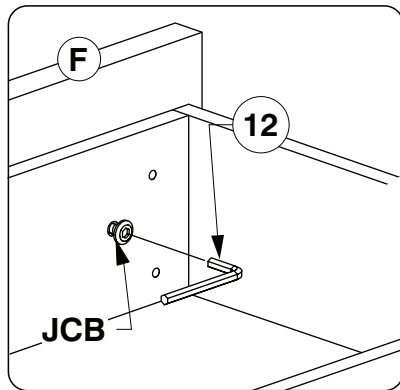

- * NOTE: Only one Drawer can be open
at a time.

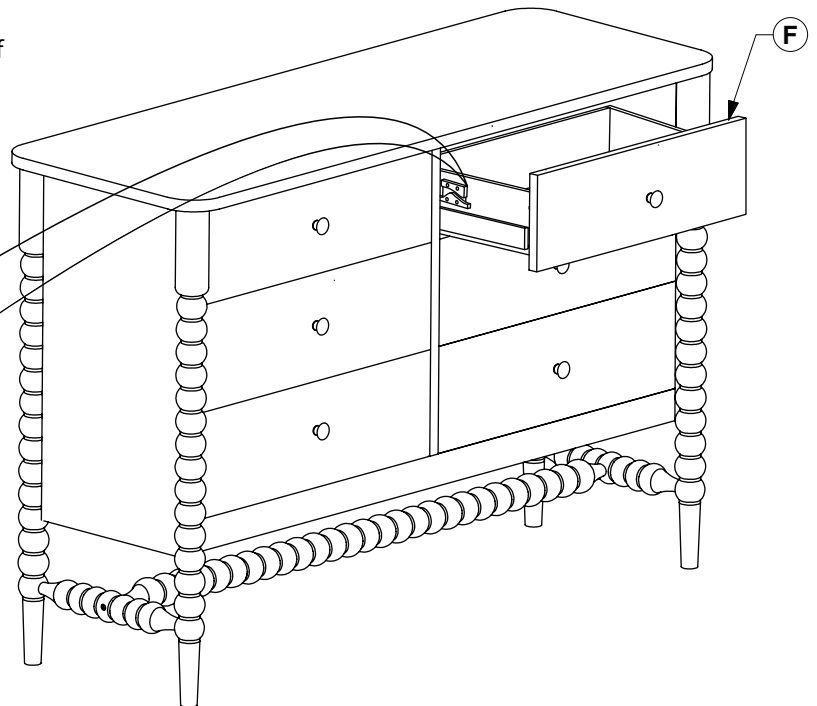

12 After the Drawer Faces (F) are aligned, secure with wood screws.

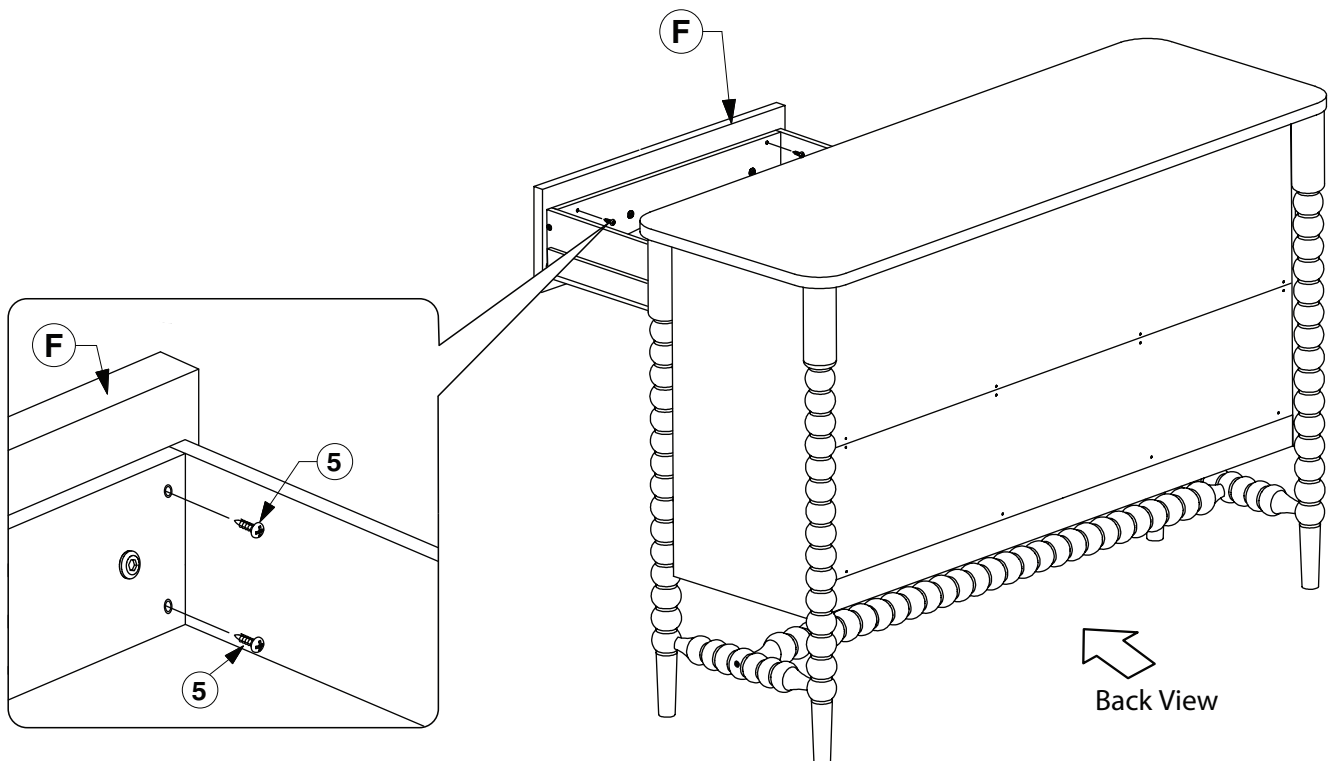

- * NOTE: Only one Drawer can be open
at a time.




9025 6 Drawer Dresser

Assembly Instructions


WI-1024

13 Remove the Drawers.

- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

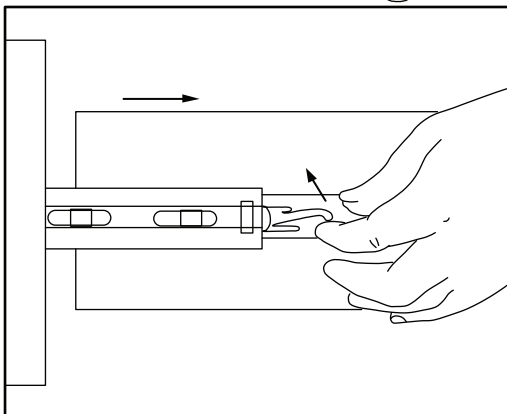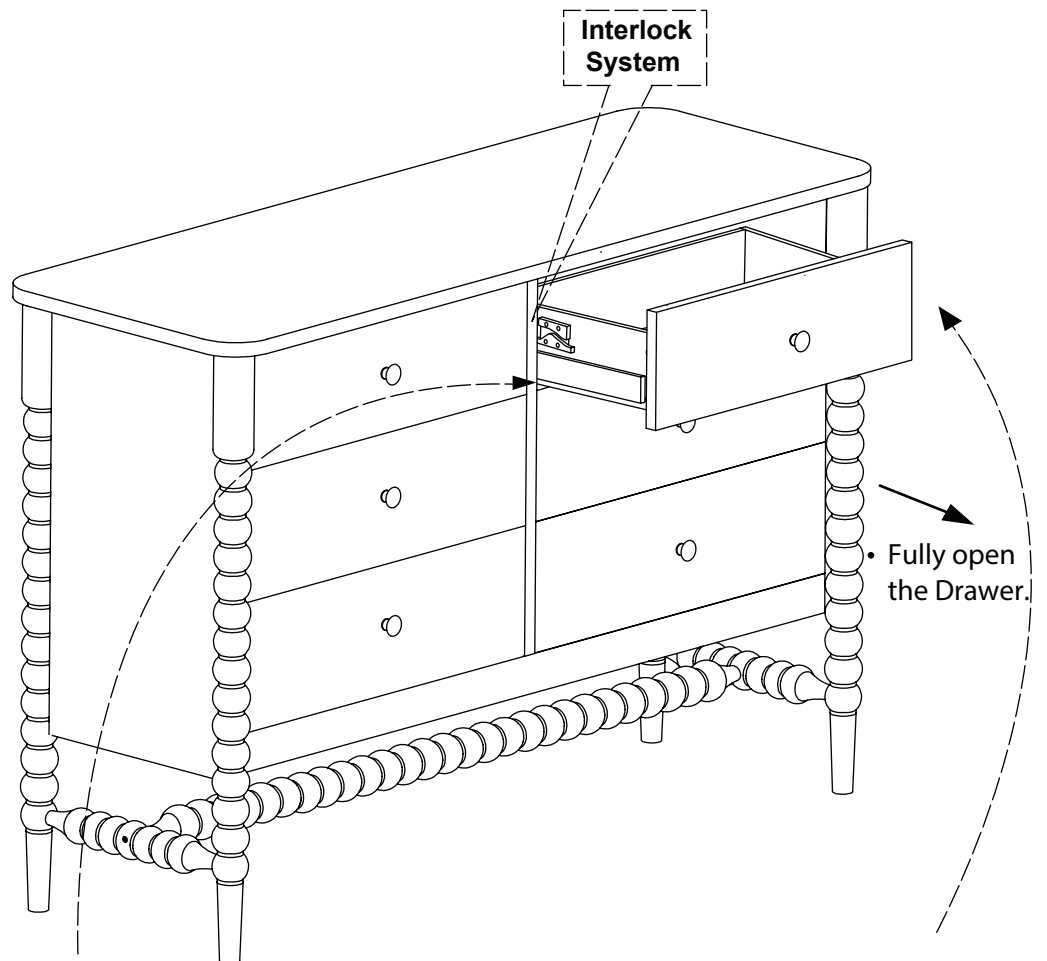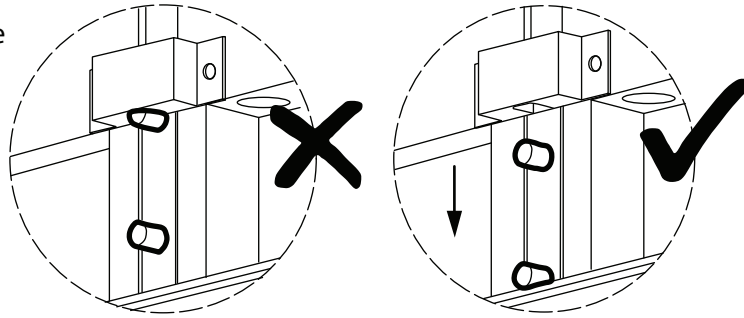

- Lift the **LEFT** side clip up.

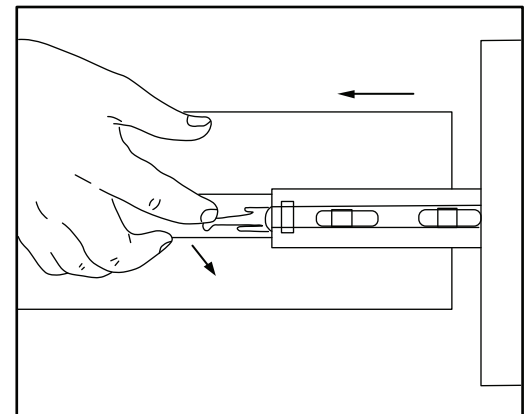

- Push the **RIGHT** side clip down.