


0110-8 Full Bed

Assembly Instructions







WI-1225

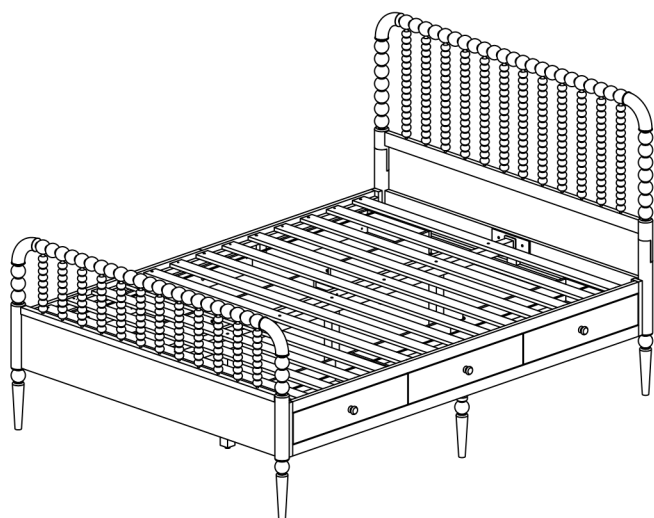









Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

Parts in Box A:

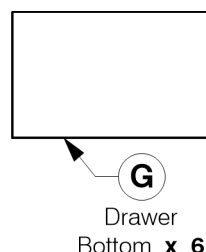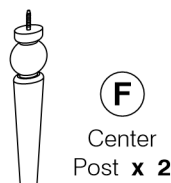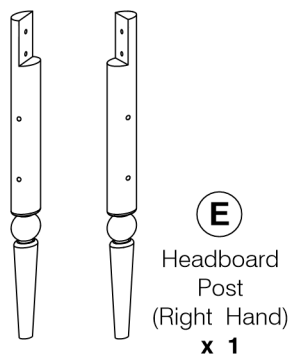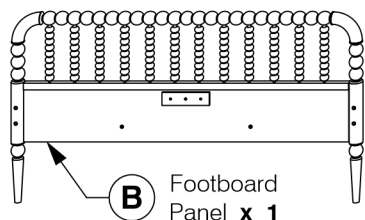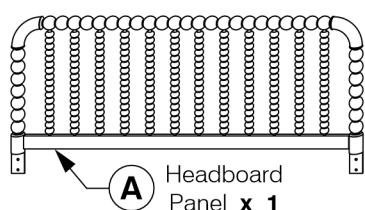

Parts in Box B:

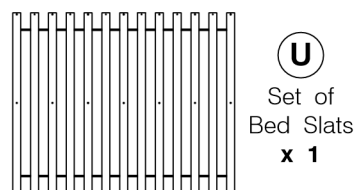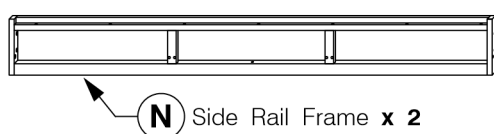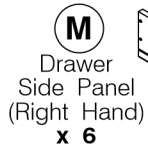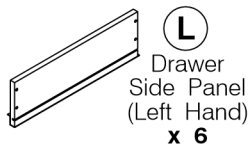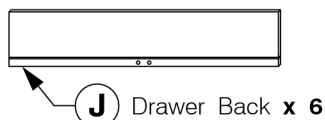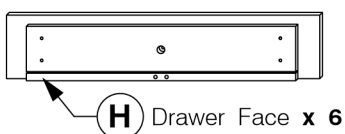

0110-8 Full Bed


Assembly Instructions

WI-1225


2 Hardware List



1 M6 x 100mm JCB
x 3




2 M6 x 40mm JCB
x 34




3 M6 x 30mm JCB
x 12



4 M6 x 15mm JCB
x 12



5 Adjustable
Foot x 3

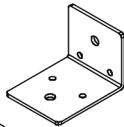

6 Center Rail
Bracket x 2



7 Wood Dowel
(8 x 30mm) x 8



8 Wood Dowel
(6 x 25mm) x 24



9 Barrel
Nut x 3



10 Wood Screw
(M4 x 32mm) x 16



11 Wood Screw
(M4 x 25mm) x 60




12 'L' Bracket
(5005-3) x 4



13 Spring
Washer x 4



14 Flat
Washer
x 4



15 M4 x 25mm
Bolt x 6




16 Wood Knobs
(9901) x 6



17 Long Allen
Key x 1

3 Assemble the Drawer Sides (L & M) & Drawer Rail (K) to the Drawer Face (H).

x6

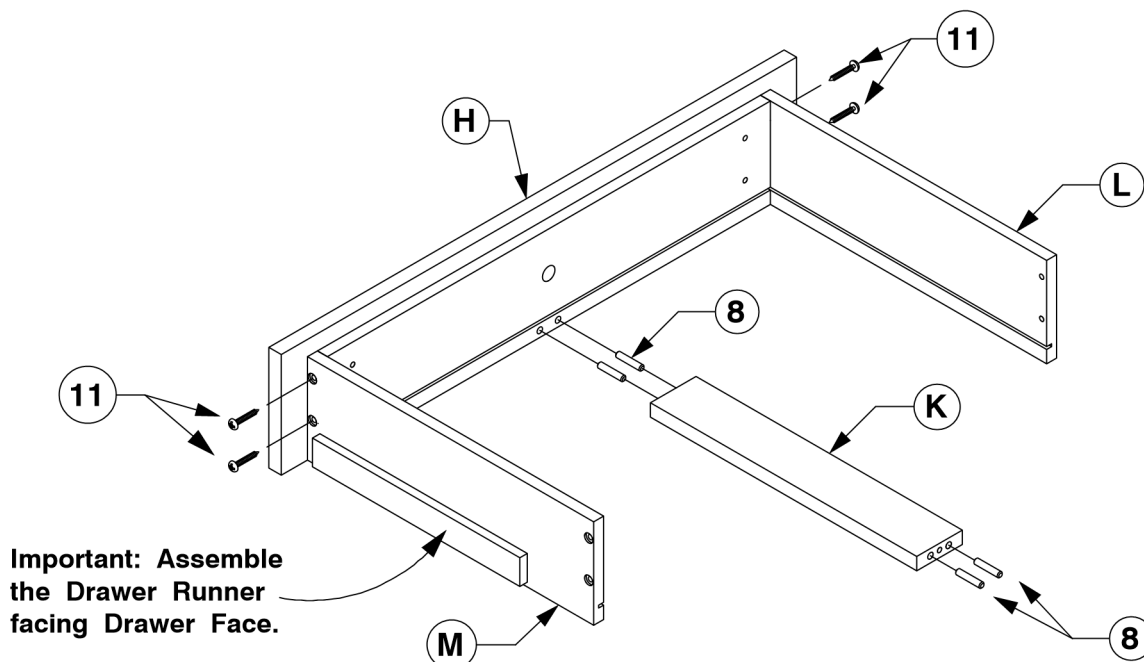


0110-8 Full Bed

Assembly Instructions


WI-1225

- 4** Slide the Drawer Bottom (G) into the groove on the Drawer Sides (L & M).

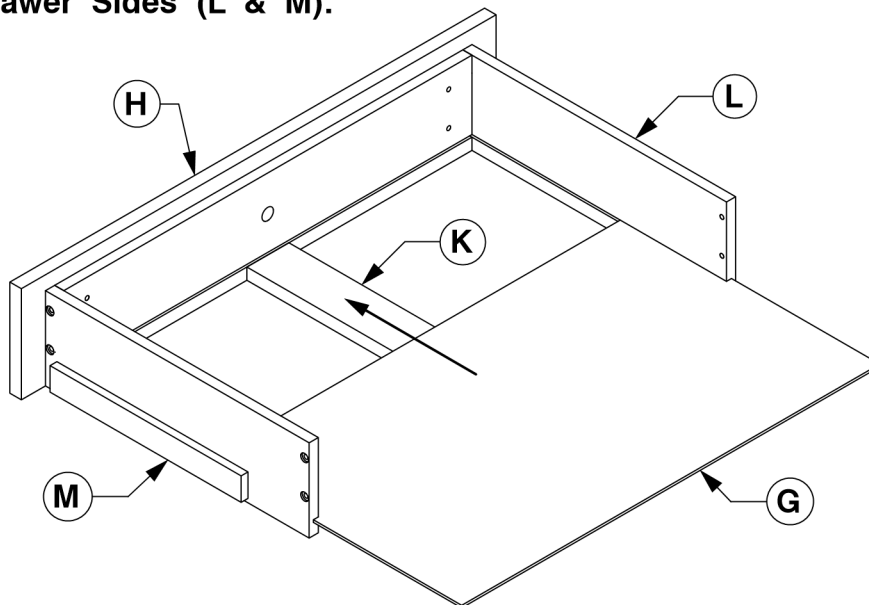


x6

- 5** Assemble the Drawer Back (J) to the Drawer Sides (L & M). Fit the Handles to the Drawer Face (H).

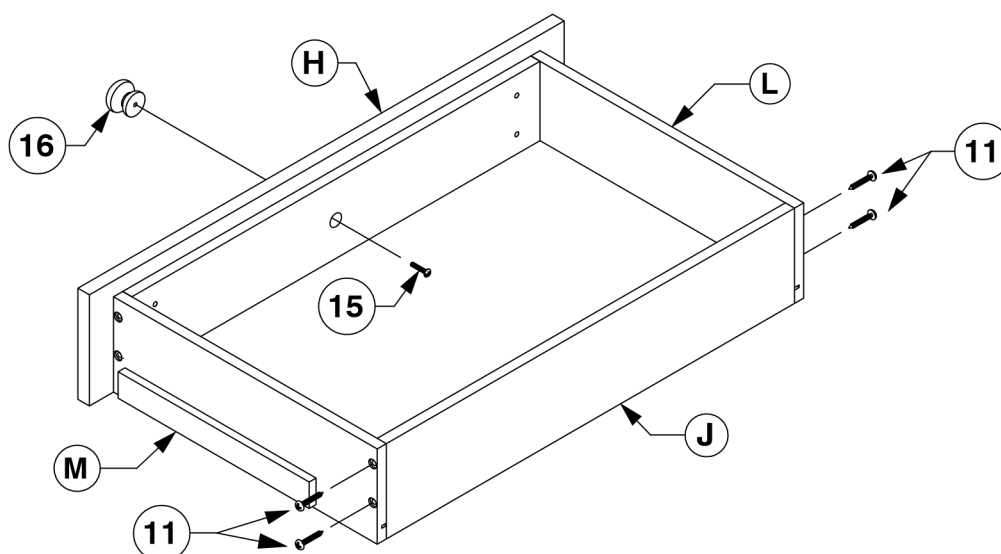

x6

- 6** Turn the Drawer over to fit angled 25mm Wood screws (11) to the Drawer Rail (K).

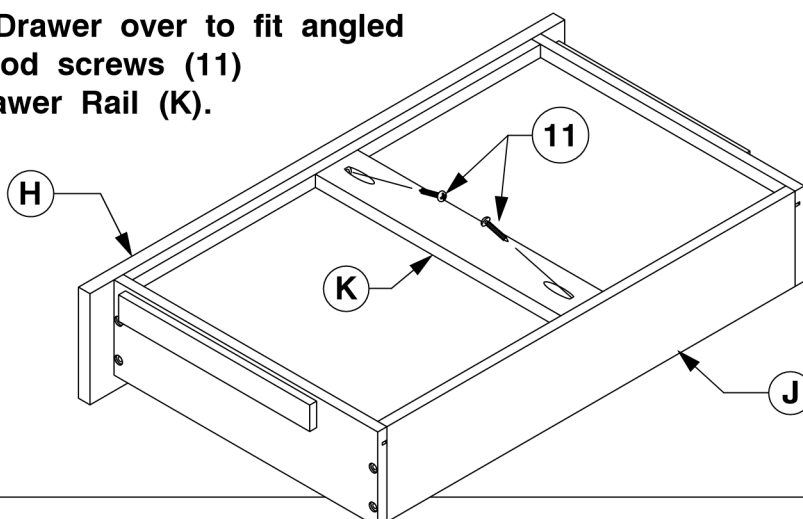


x6

0110-8 Full Bed

Assembly Instructions


WI-1225

- 7** Fix the Adjustable foot to the bottom of the Support Leg (Q).

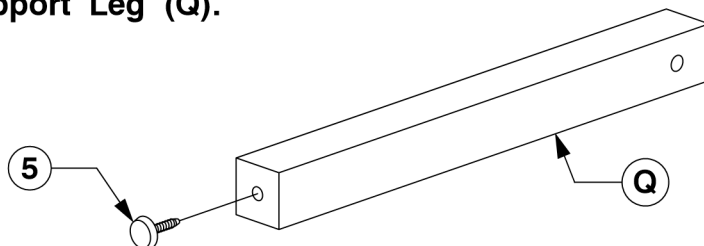


x3

- 8** Fit the Center Rail Bracket to the Footboard Panel (B).

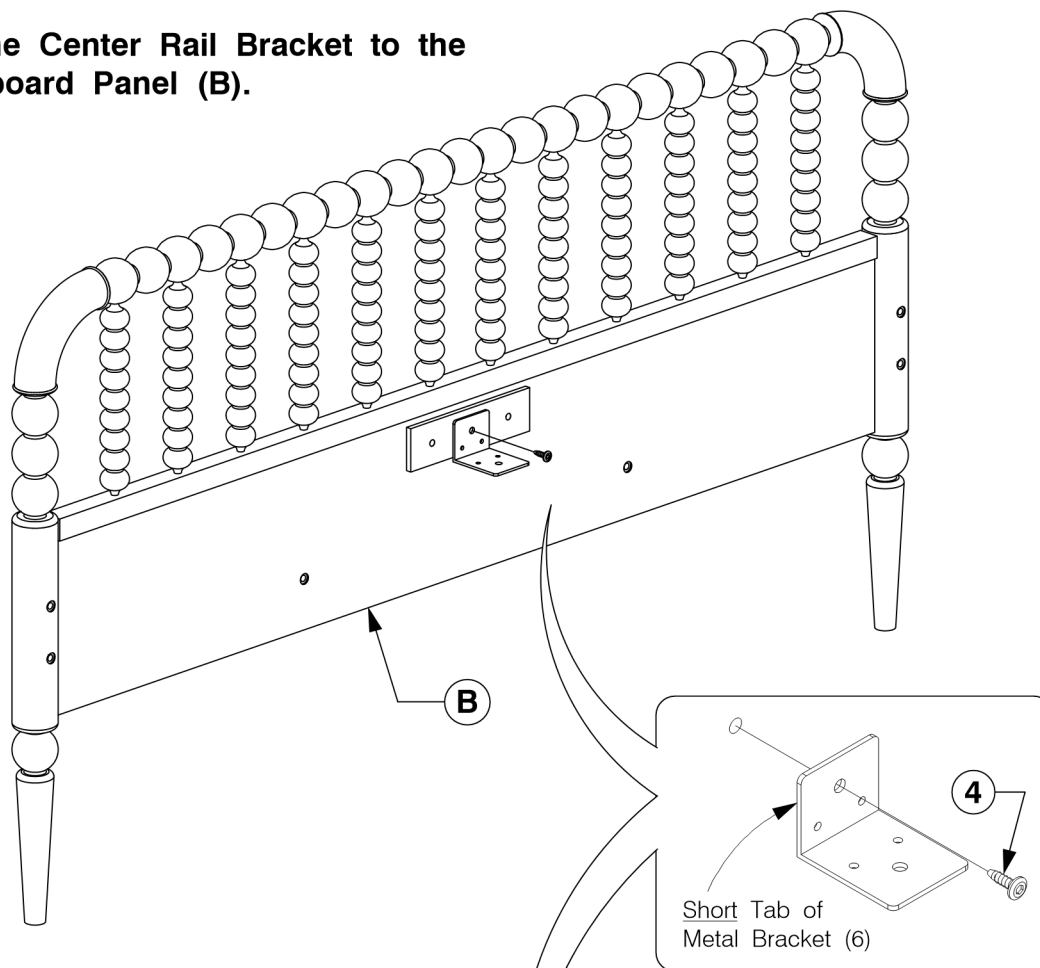

- 9** Fit the Center Rail Bracket to the Headboard Lower Panel (C).

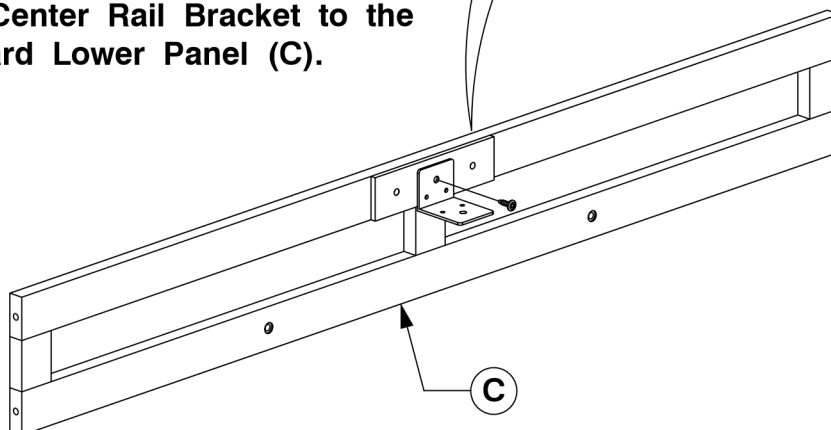


0110-8 Full Bed

Assembly Instructions


WI-1225

- 10** Assemble the Headboard Lower Panel (C) to the Headboard Post (D & E).

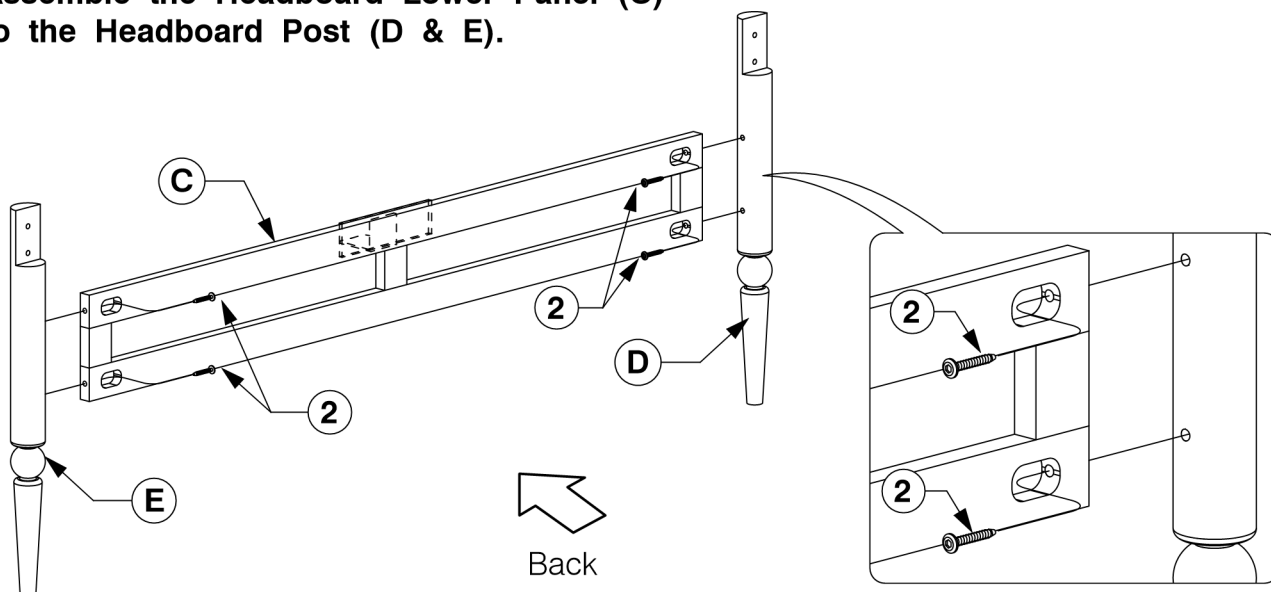


Step 1

Use the ball end of Allen key to start the bolt.

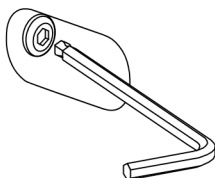


Step 2

Tighten fully with the straight end.

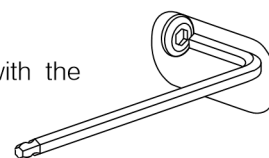

- 11** Assemble the Headboard Panel (A) to the Headboard Post (D & E).

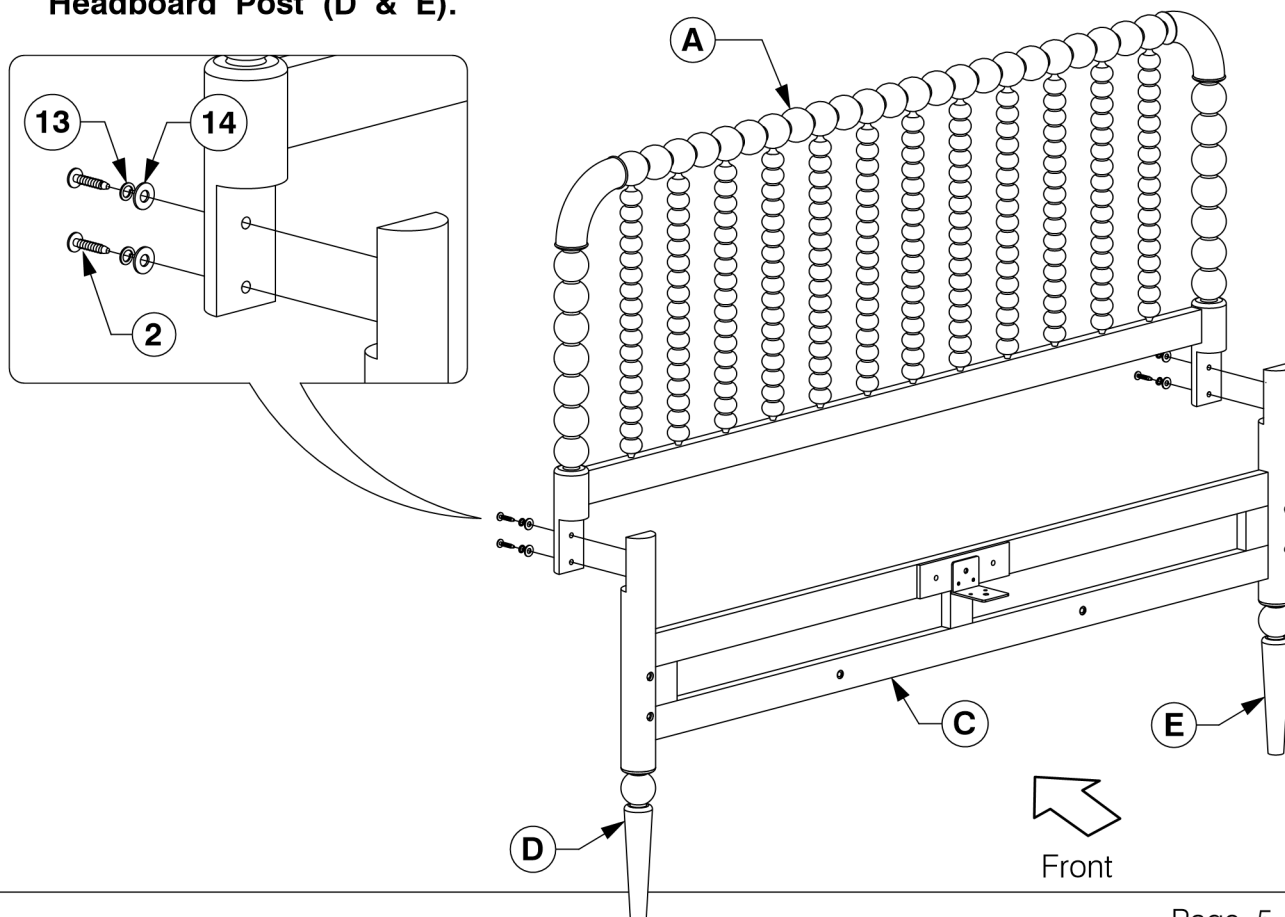


0110-8 Full Bed

Assembly Instructions

WI-1225


12 Fit the 'L' Bracket (12) to the Support Rail (P).

Assembly required $\times 2$ (Left & Right).

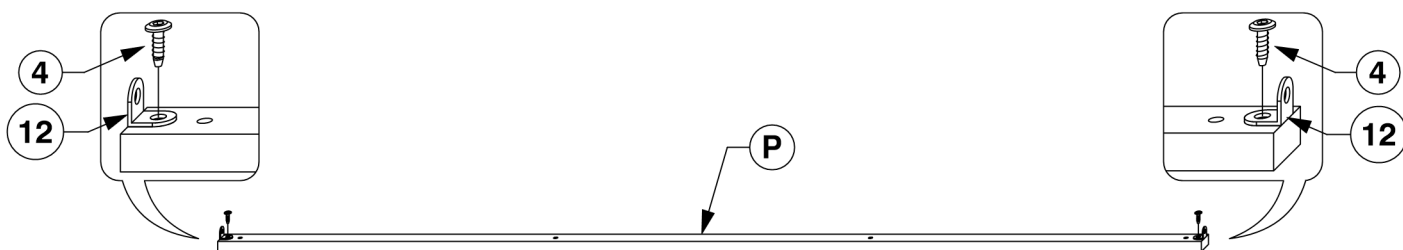


13 Fit the Side Rail Frame (N) & Support Rail (P) to the Support Bar (R, S, & T).

Assembly required $\times 2$ (Left & Right).

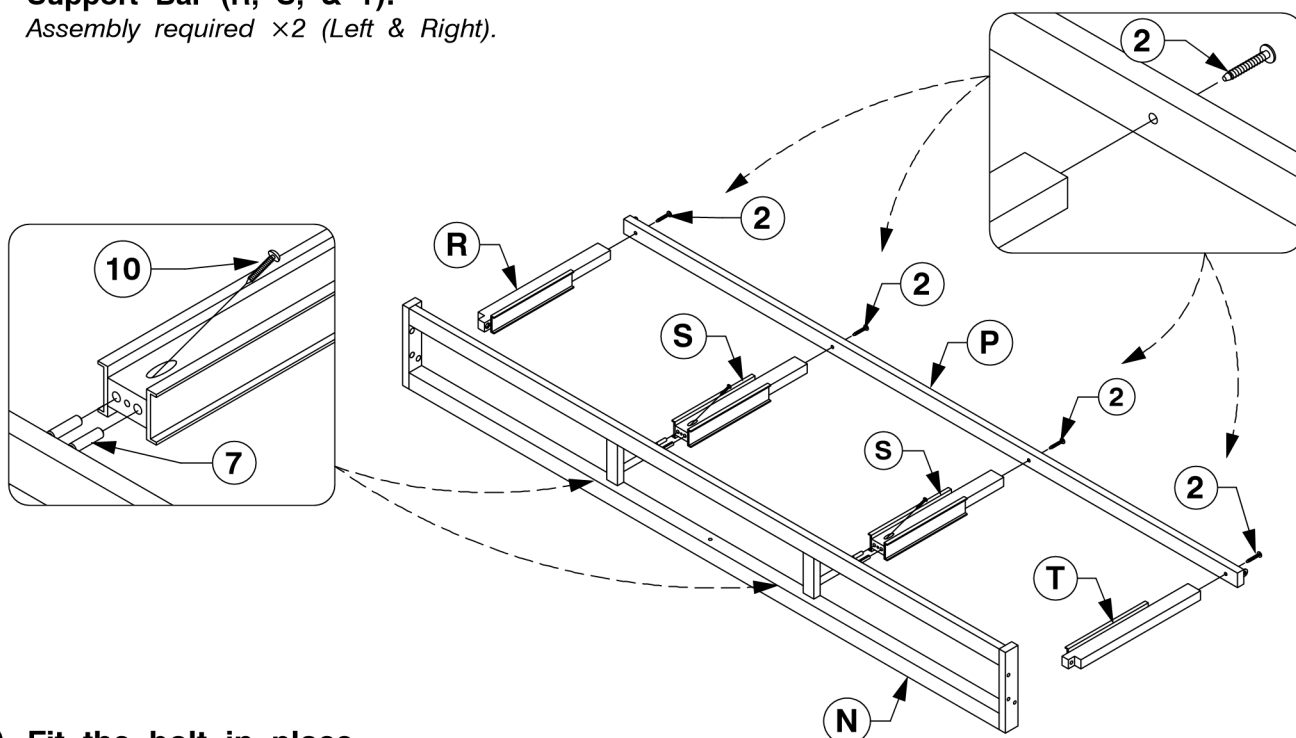

14 Fit the bolt in place.

Assembly required $\times 2$ (Left & Right).

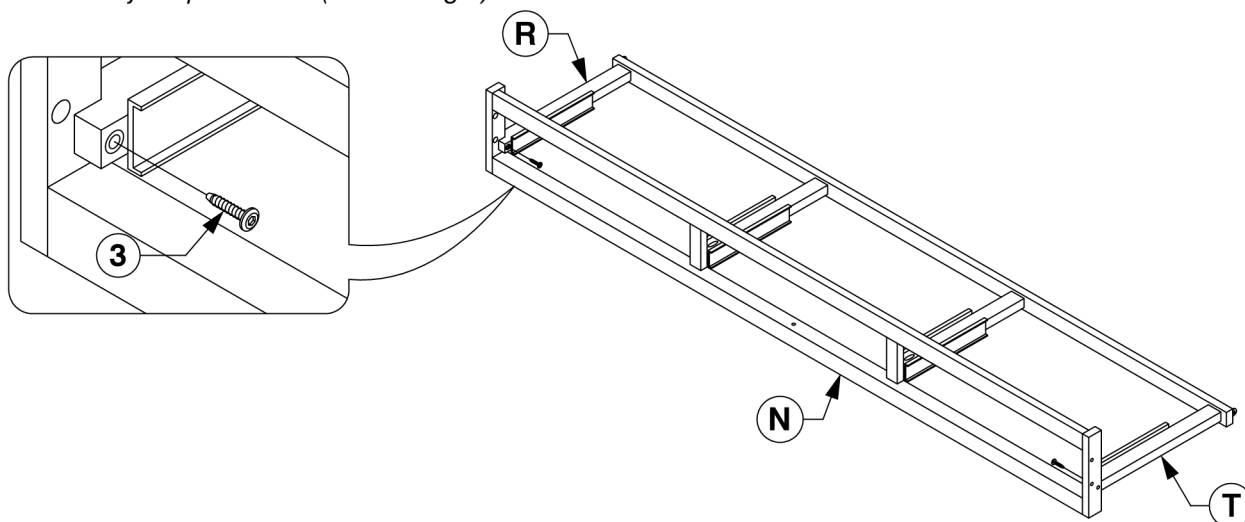


0110-8 Full Bed


Assembly Instructions

WI-1225

- 15** Assemble the Side Rail Frame (N) & Support Rail (P) to the Headboard Post (D & E), Headboard Lower Panel (C) & Footboard Panel (B).

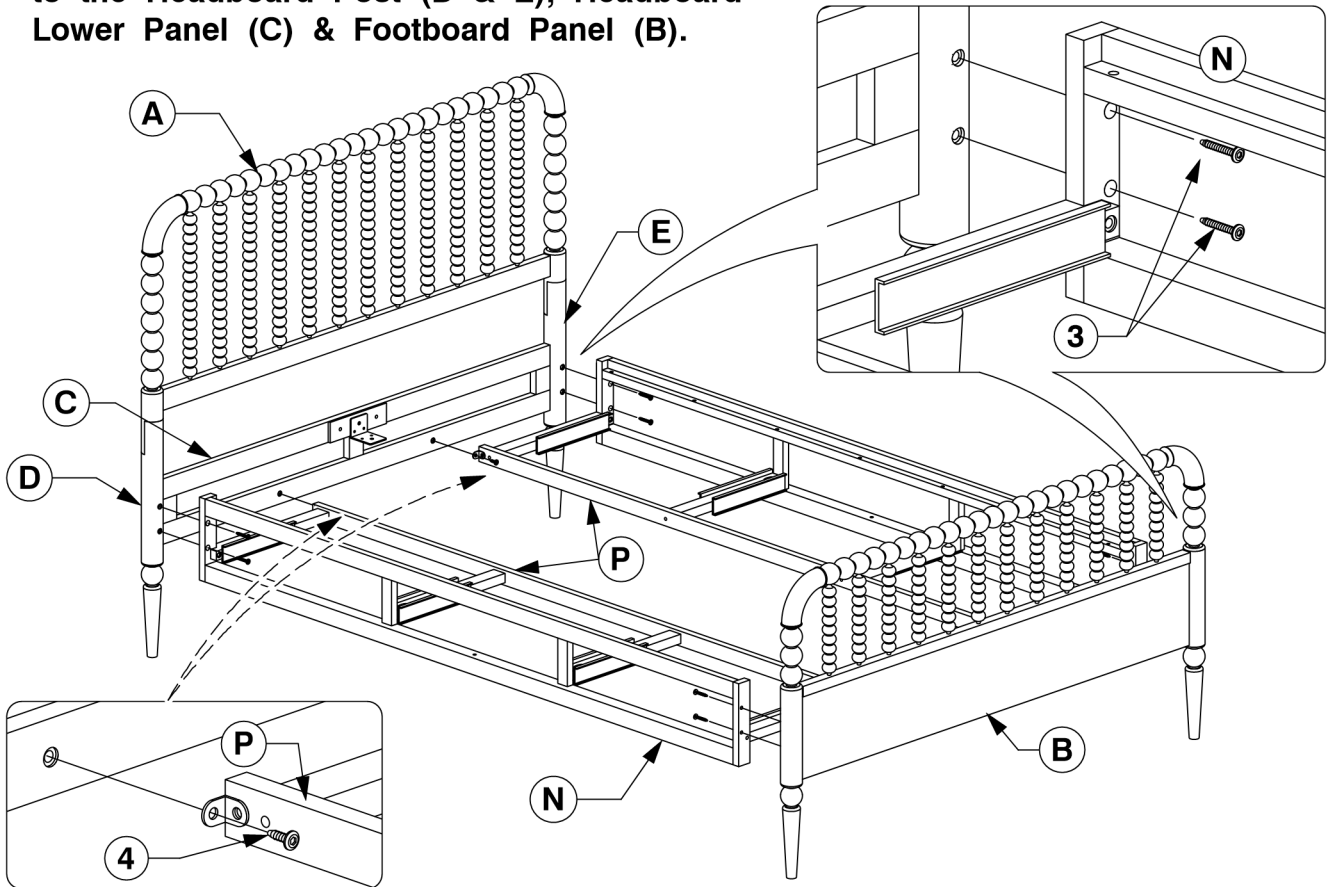

- 16** Lift the Side Rail Frame (N) on one side and fit the Post (F) under it. Repeat the same step on the other side.

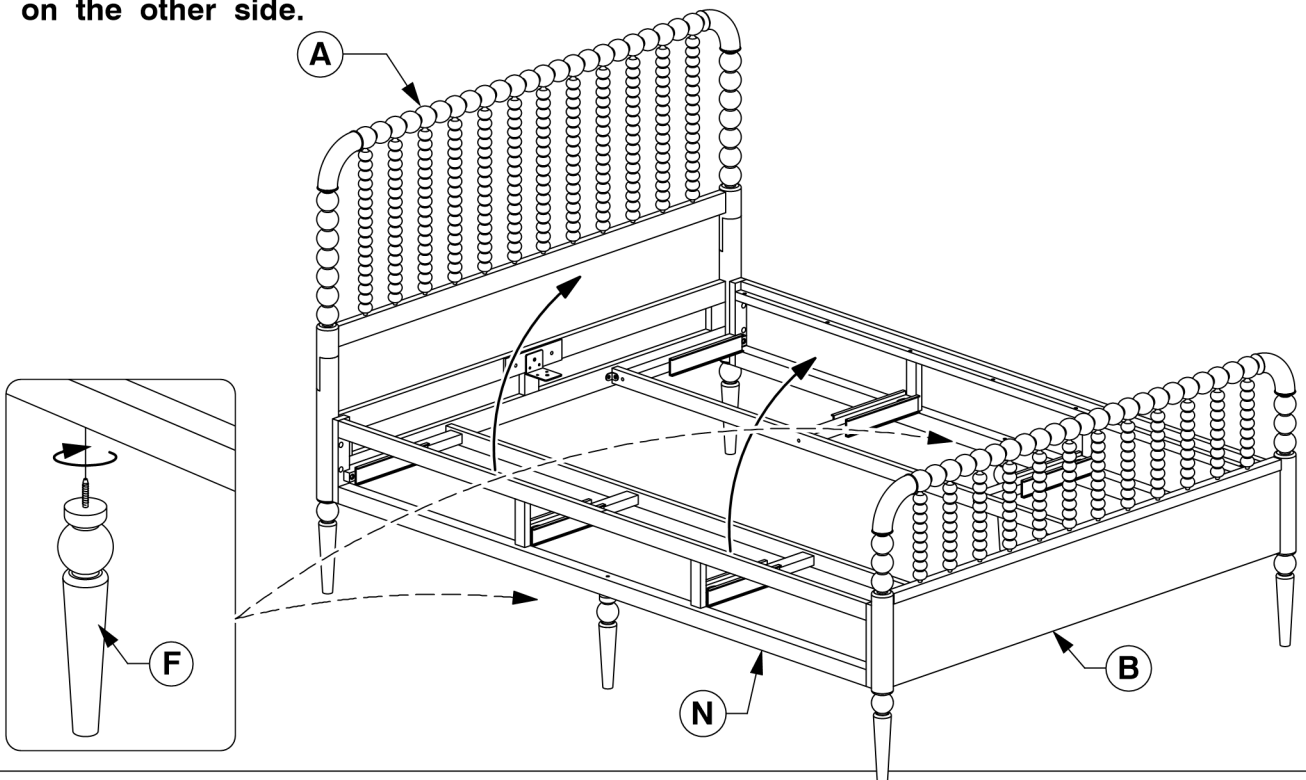


0110-8 Full Bed


Assembly Instructions

WI-1225

- 17** Fit the Long Support (O) to the Headboard Lower Panel (C) & Footboard Panel (B).

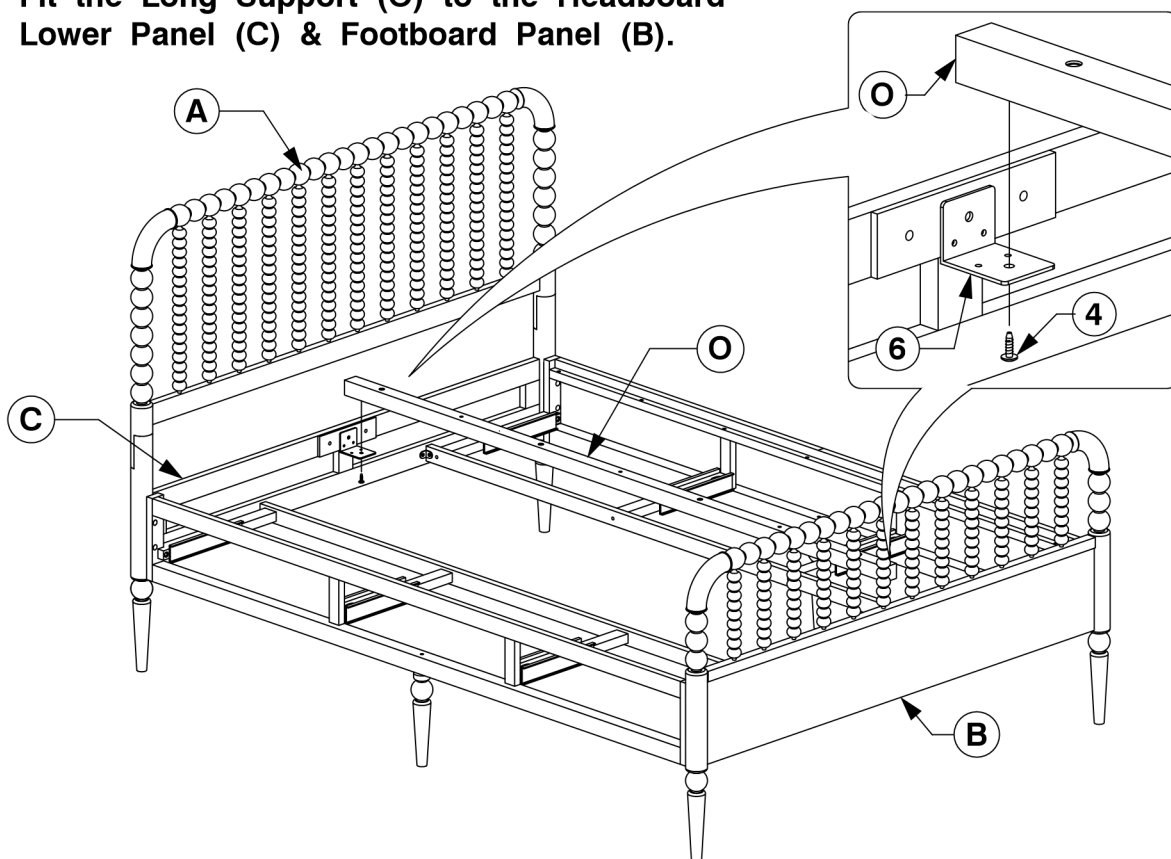

- 18** Fit the first 3 Slats and assemble the Support Leg (Q) to the Bed Slat (U). Bolt & screw the Bed Slats (U) to the Side Rail Frame (N) & Long Support (O).


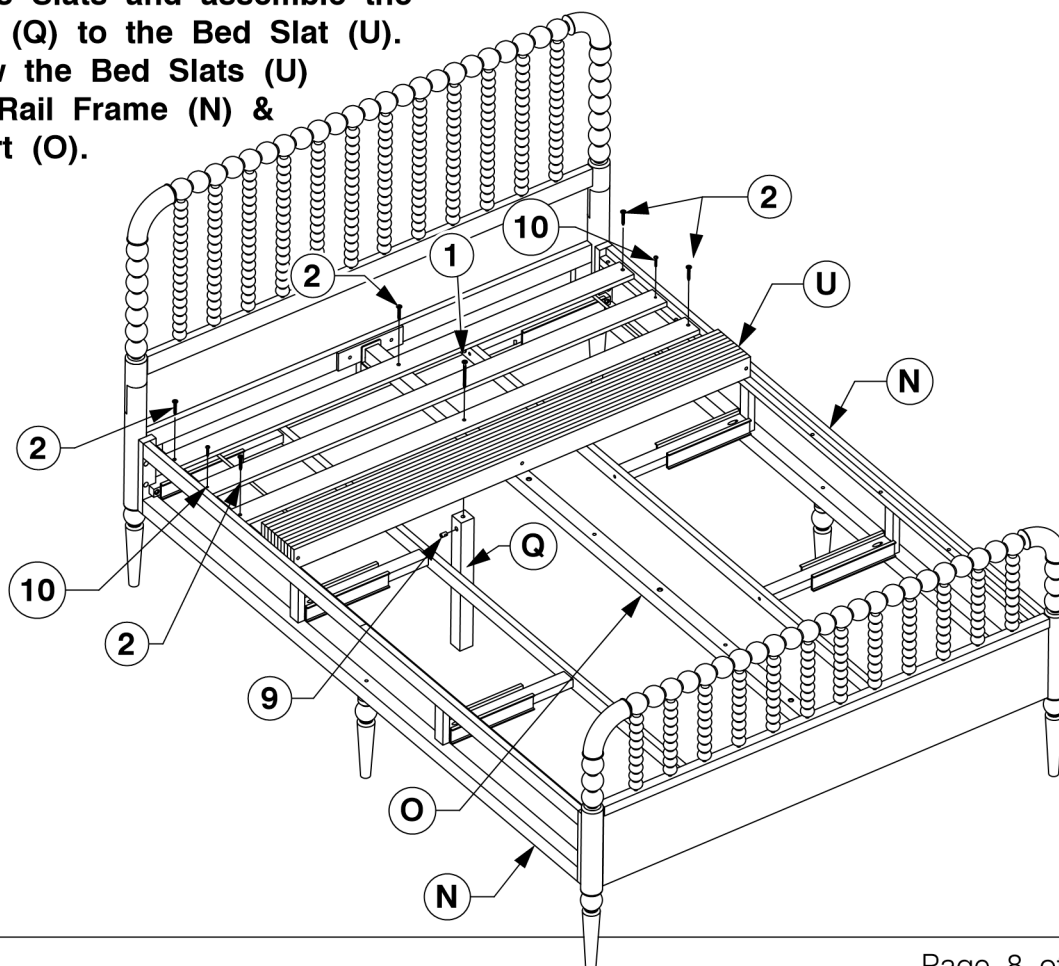


0110-8 Full Bed


Assembly Instructions

WI-1225

- 19** Fit the other Slats out and assemble the Support Leg (Q) to the Bed Slat (U). Bolt & screw the Bed Slats (U) to the Side Rail Frame (N) & Long Support (O).

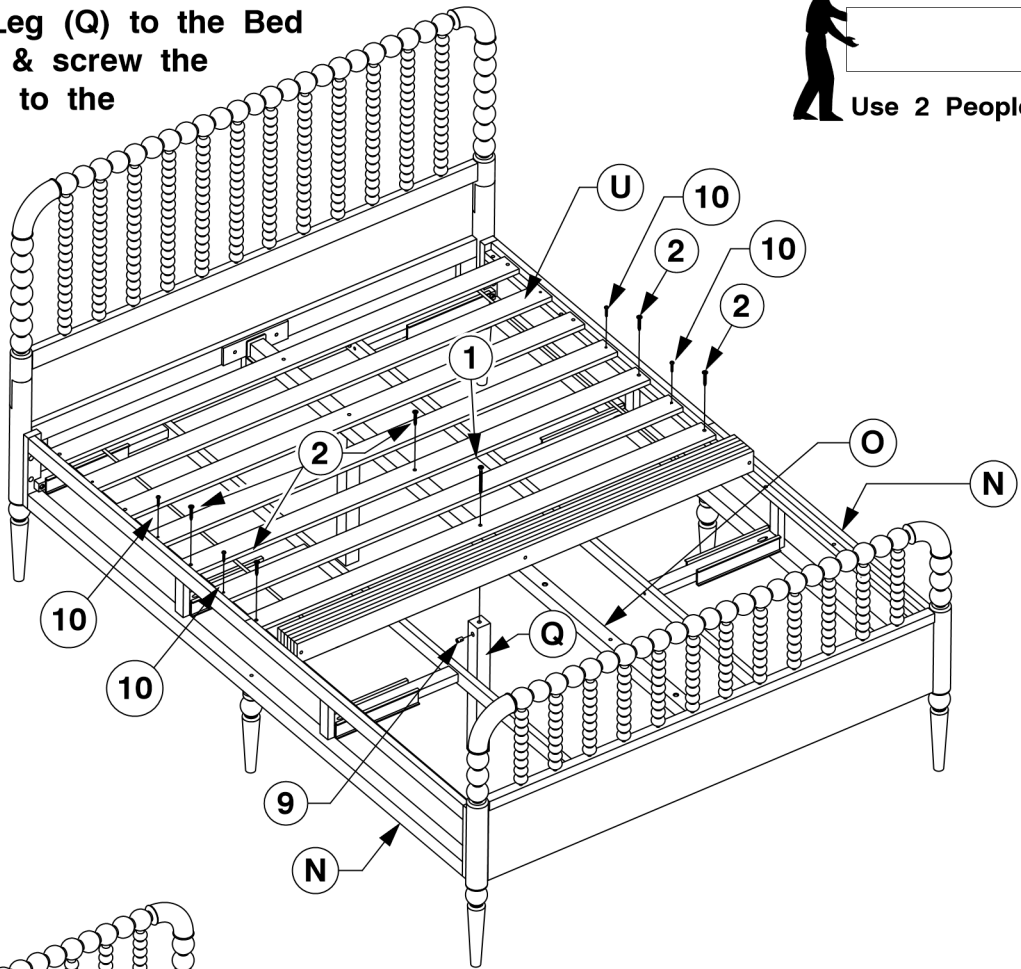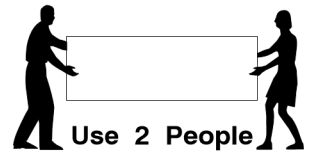

- 20** Fit the other Slats out and assemble the Support Leg (Q) to the Bed Slat (U). Bolt & screw the Bed Slats (U) to the Side Rail Frame (N) & Long Support (O).

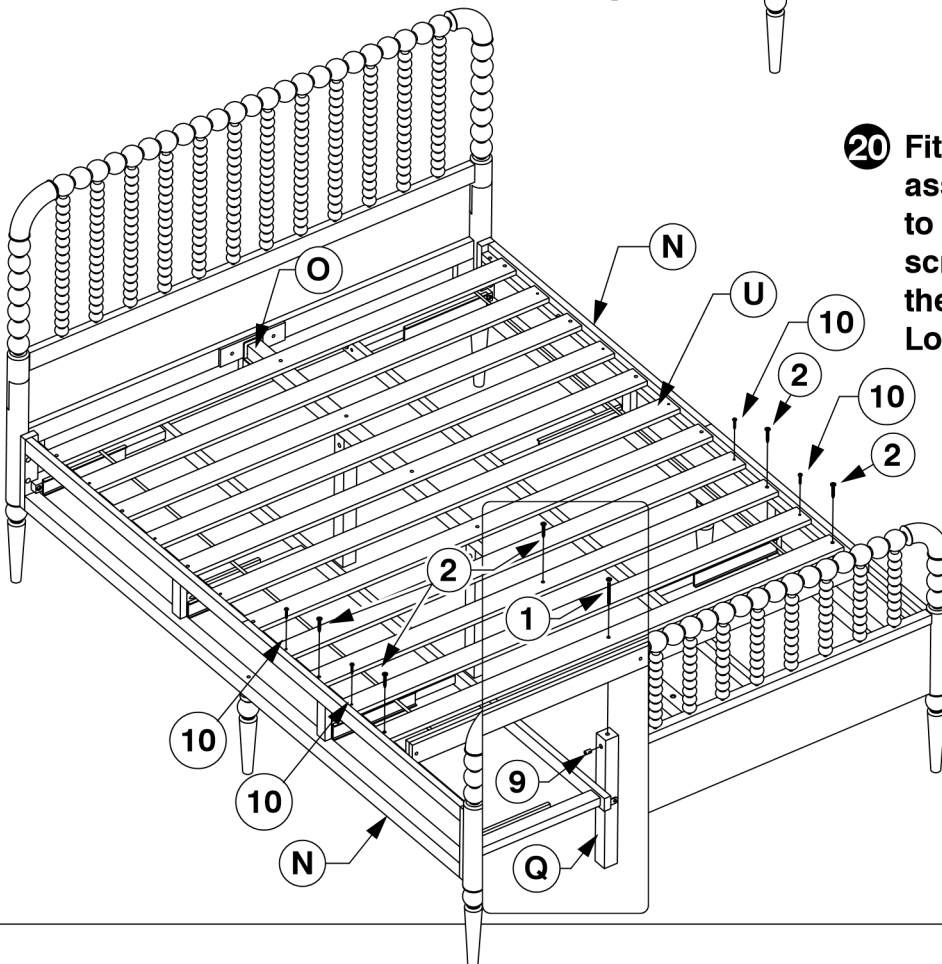


0110-8 Full Bed

Assembly Instructions

WI-1225

- 21** Bolt & screw the remaining Bed Slats (U) to the Side Rail Frame (N).

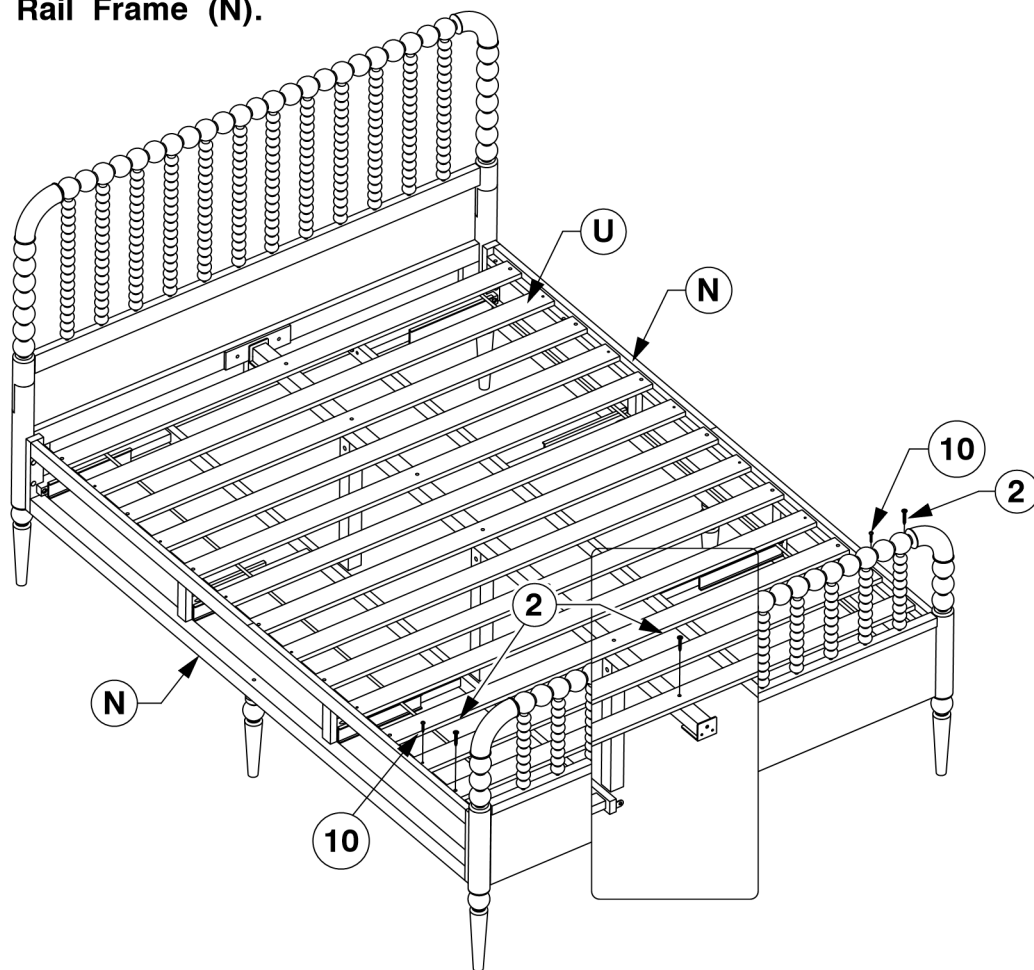

- 22** Fit all assembled drawers on both sides.

