


0110-8 Queen Bed

Assembly Instructions


WI-1225

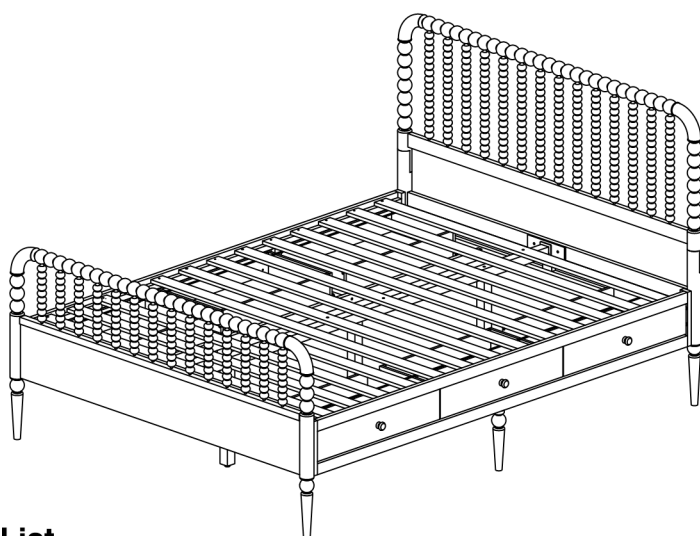


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List


Parts in Box A:

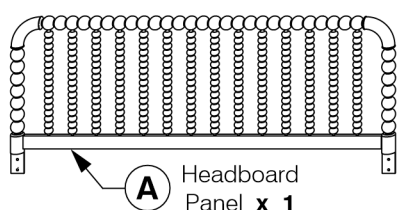


A Headboard Panel x 1

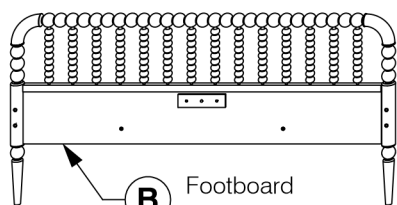


B Footboard Panel x 1



C Headboard Lower Panel x 1

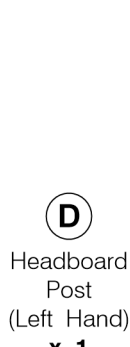

D Headboard Post (Left Hand) x 1

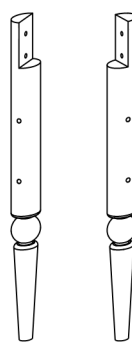

E Headboard Post (Right Hand) x 1




F Center Post x 2



G Drawer Bottom x 6

Parts in Box B:




H Drawer Face x 6



J Drawer Back x 6




K Drawer Rail x 6

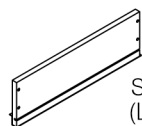

L Drawer Side Panel (Left Hand) x 6



M Drawer Side Panel (Right Hand) x 6



N Side Rail Frame x 2



O Long Support x 1




P Support Rail x 2



Q Support Leg x 3




R Support Bar (Left Hand) x 2



S Support Bar (Center) x 4



T Support Bar (Right Hand) x 2

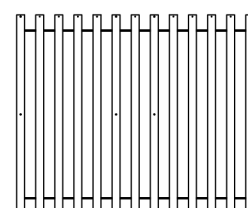

U Set of Bed Slats x 1

0110-8 Queen Bed

Assembly Instructions

WI-1225


2 Hardware List



1 M6 x 90mm JCB
x 3




2 M6 x 40mm JCB
x 28




3 M6 x 30mm JCB
x 12




4 M6 x 15mm JCB
x 12



5 Adjustable
Foot x 3

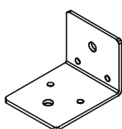

6 Center Rail
Bracket x 2




7 Wood Dowel
(8 x 30mm) x 8




8 Wood Dowel
(6 x 25mm) x 24



9 Barrel
Nut x 3



10 Wood Screw
(M4 x 32mm) x 22



11 Wood Screw
(M4 x 25mm) x 60




12 'L' Bracket
(5005-3) x 4



13 Spring
Washer x 4



14 Flat
Washer
x 4



15 M4 x 25mm
Bolt x 6




16 Wood Knobs
(9901) x 6



17 Long Allen
Key x 1

3 Assemble the Drawer Sides (L & M) & Drawer Rail (K) to the Drawer Face (H).

x6

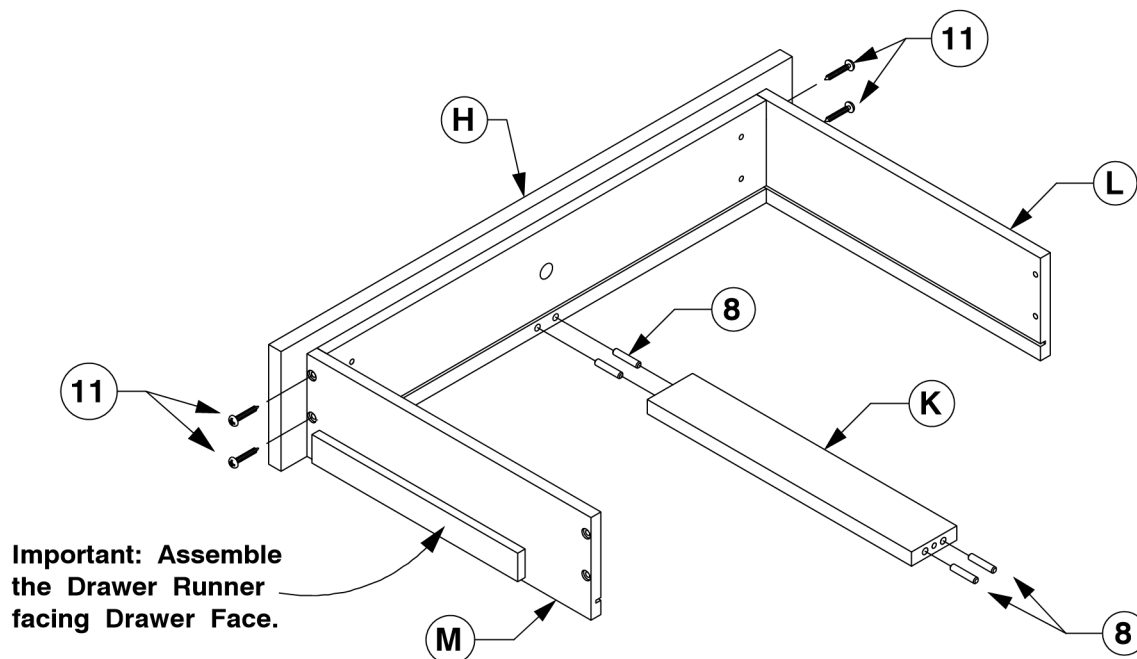


0110-8 Queen Bed


Assembly Instructions

WI-1225


- 4** Slide the Drawer Bottom (G) into the groove on the Drawer Sides (L & M).

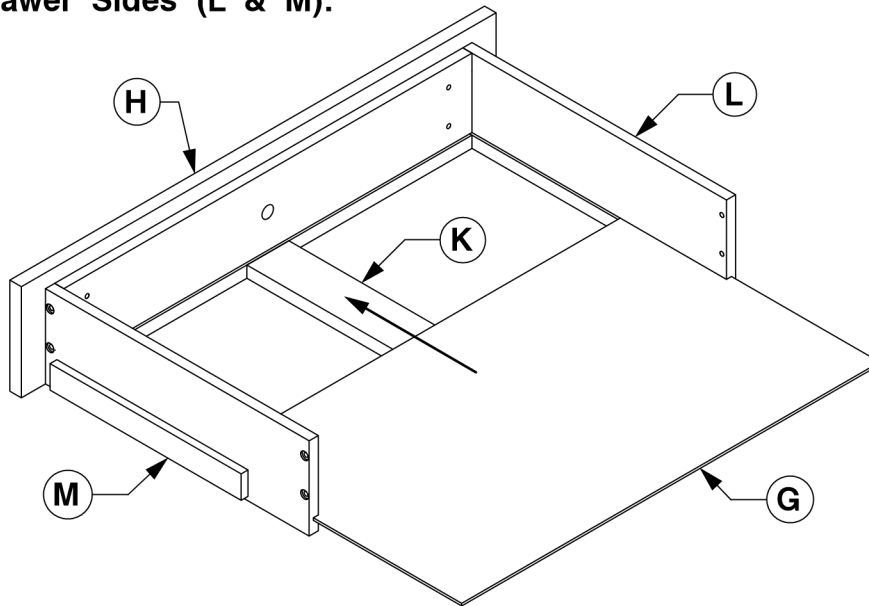

- 5** Assemble the Drawer Back (J) to the Drawer Sides (L & M). Fit the Handles to the Drawer Face (H).

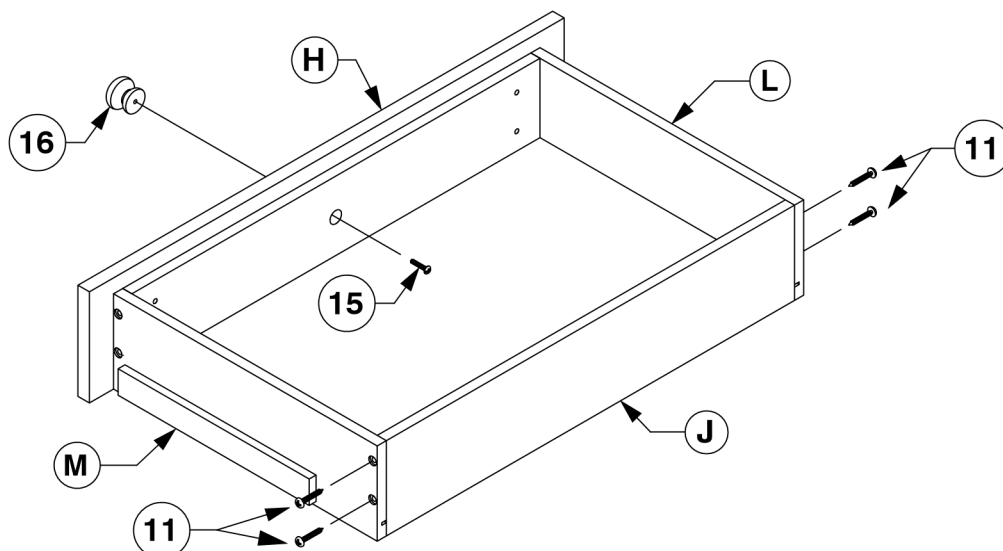

- 6** Turn the Drawer over to fit angled 25mm Wood screws (11) to the Drawer Rail (K).

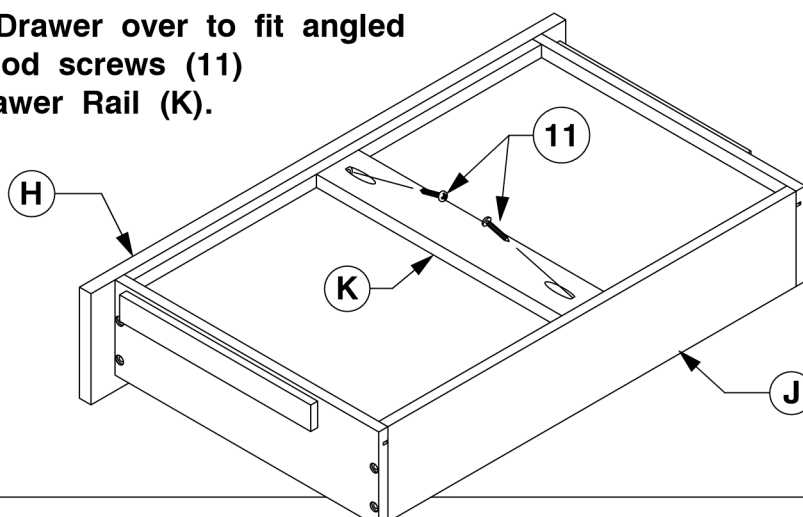


0110-8 Queen Bed


Assembly Instructions

WI-1225


- 7** Assembled the Support Leg (Q) to the Long Support (O).

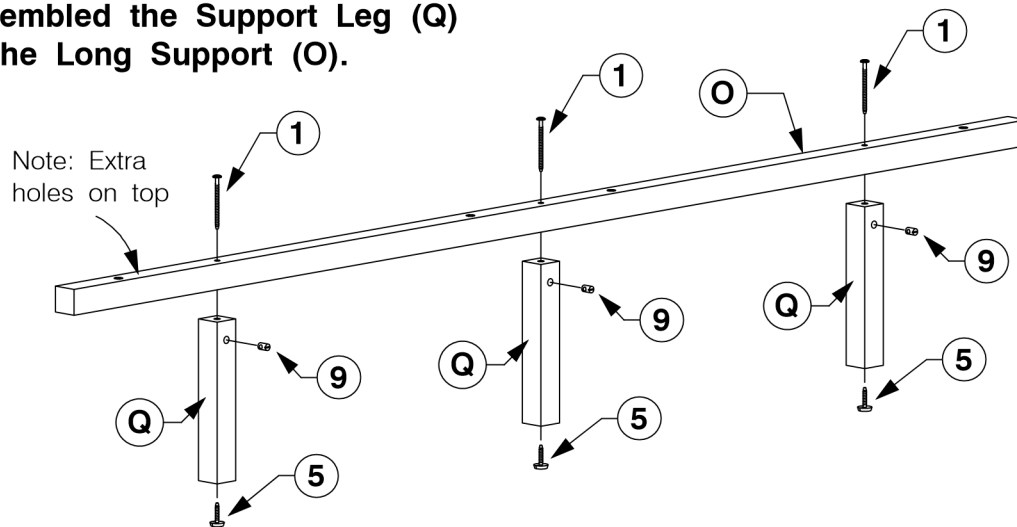

- 8** Fit the Center Rail Bracket to the Footboard Panel (B).

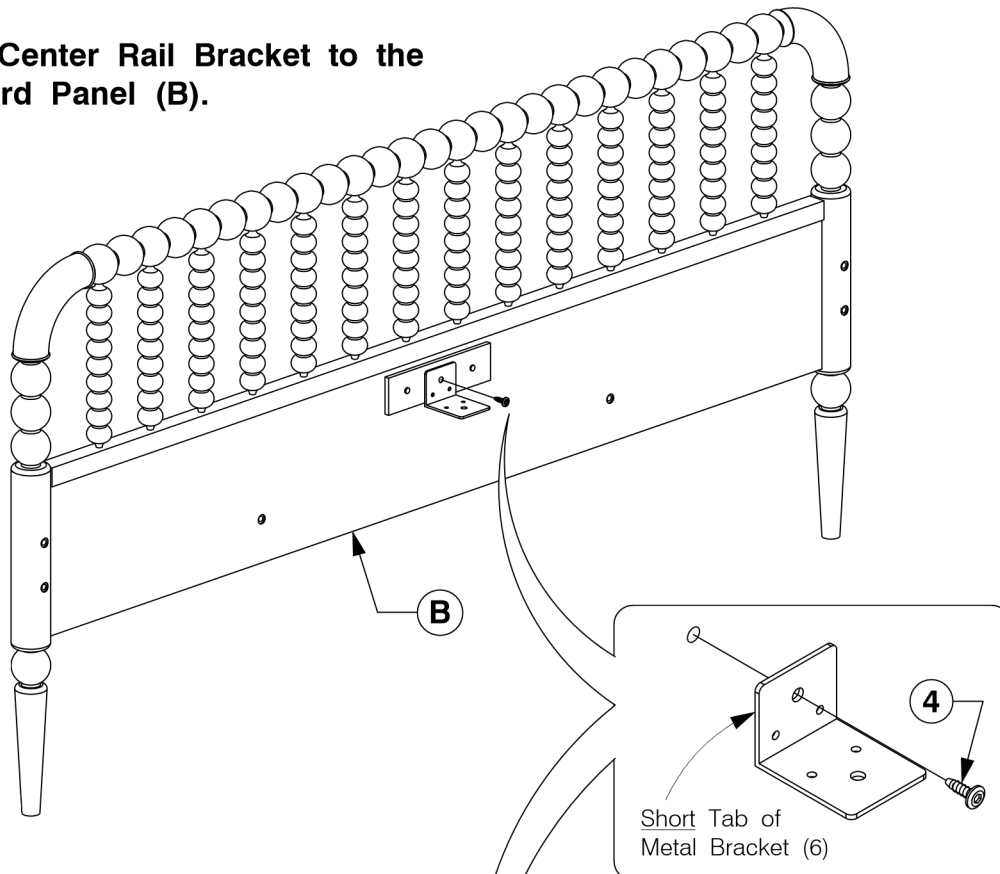

- 9** Fit the Center Rail Bracket to the Headboard Lower Panel (C).

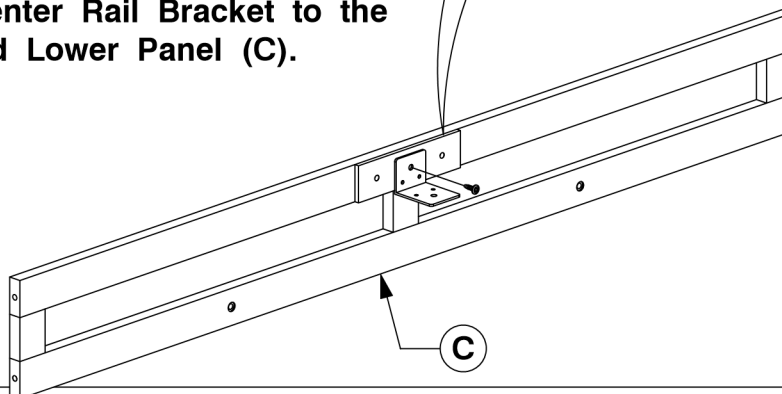


0110-8 Queen Bed

Assembly Instructions


WI-1225

- 10** Assemble the Headboard Lower Panel (C) to the Headboard Post (D & E).

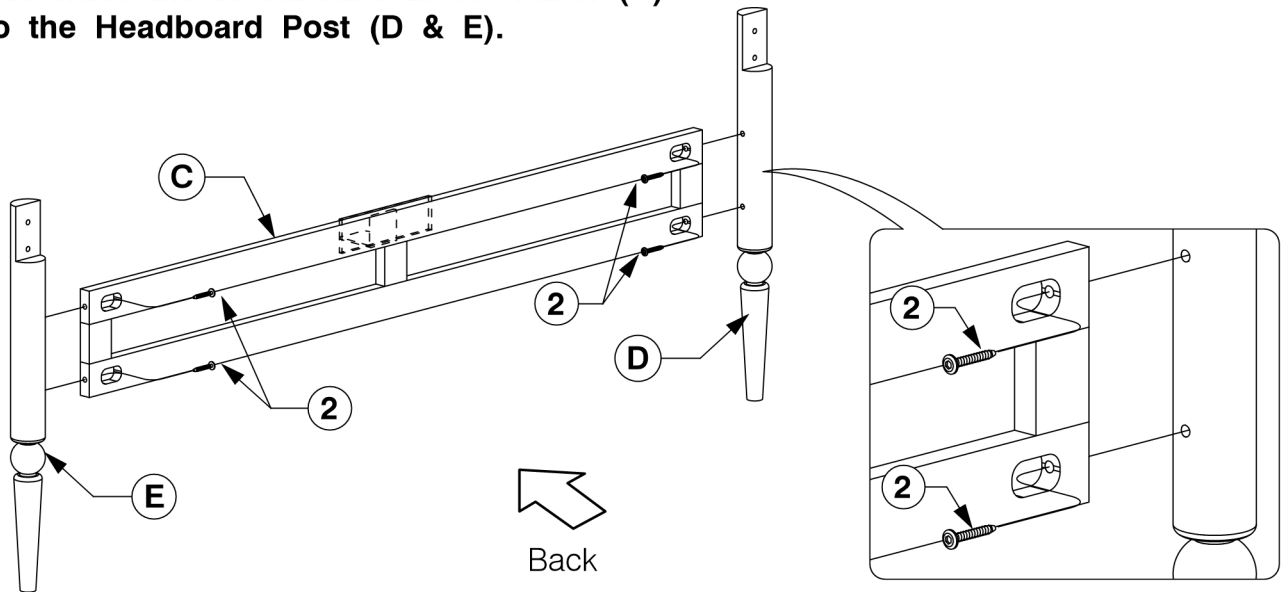


Step 1

Use the ball end of Allen key to start the bolt.

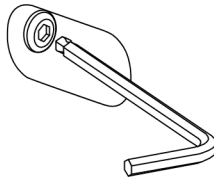


Step 2

Tighten fully with the straight end.

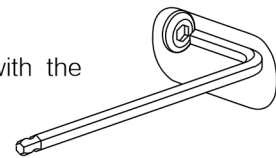

- 11** Assemble the Headboard Panel (A) to the Headboard Post (D & E).

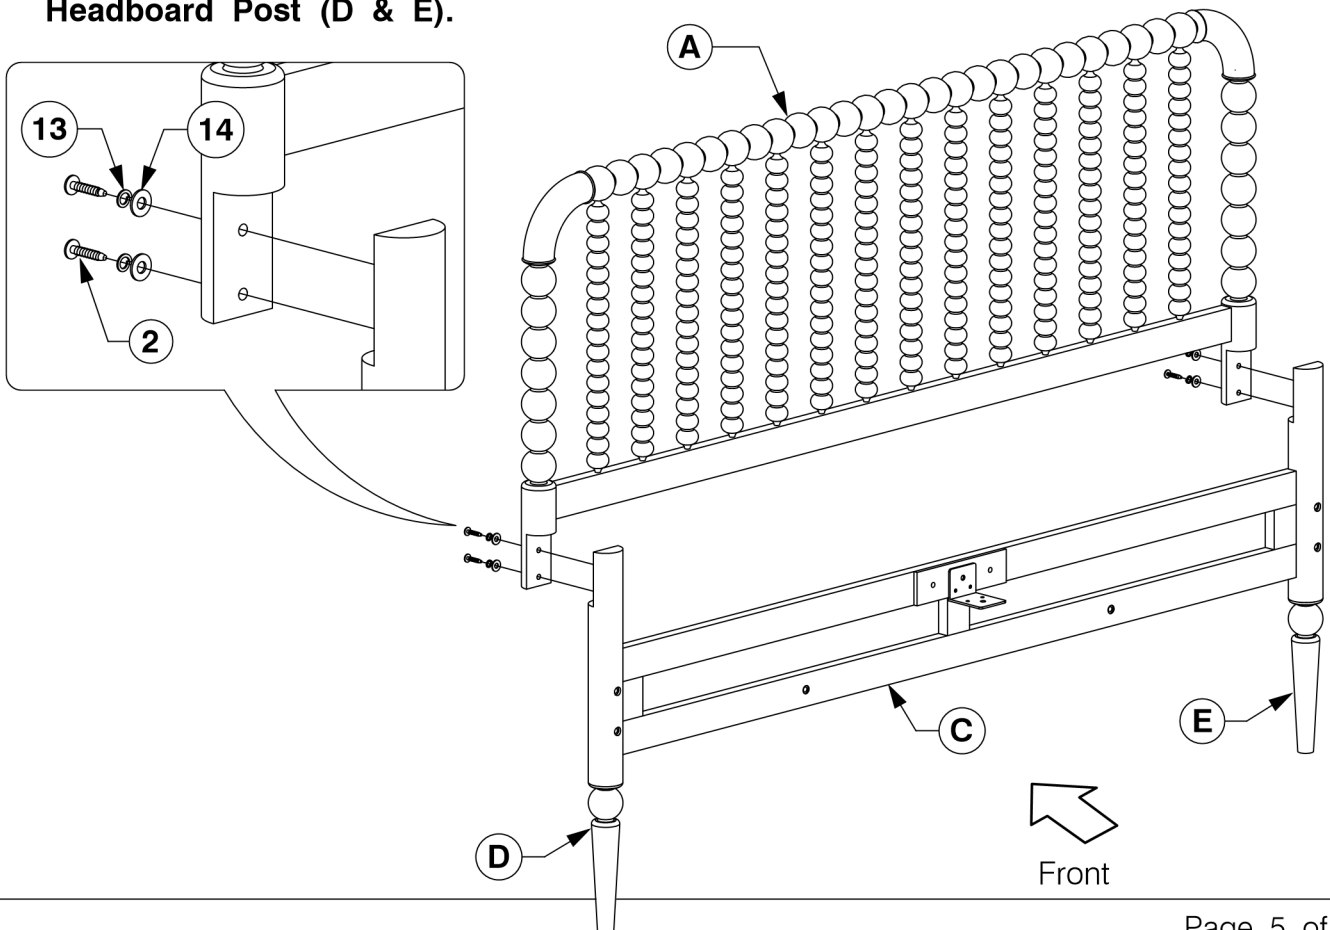


0110-8 Queen Bed


Assembly Instructions

WI-1225


- 12** Fit the 'L' Bracket (12) to the Support Rail (P).
Assembly required ×2 (Left & Right).

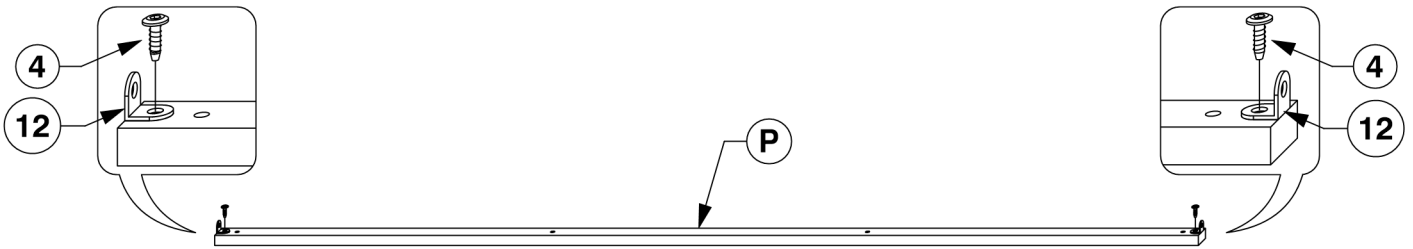

- 13** Fit the Side Rail Frame (N) & Support Rail (P) to the Support Bar (R, S, & T).
Assembly required ×2 (Left & Right).

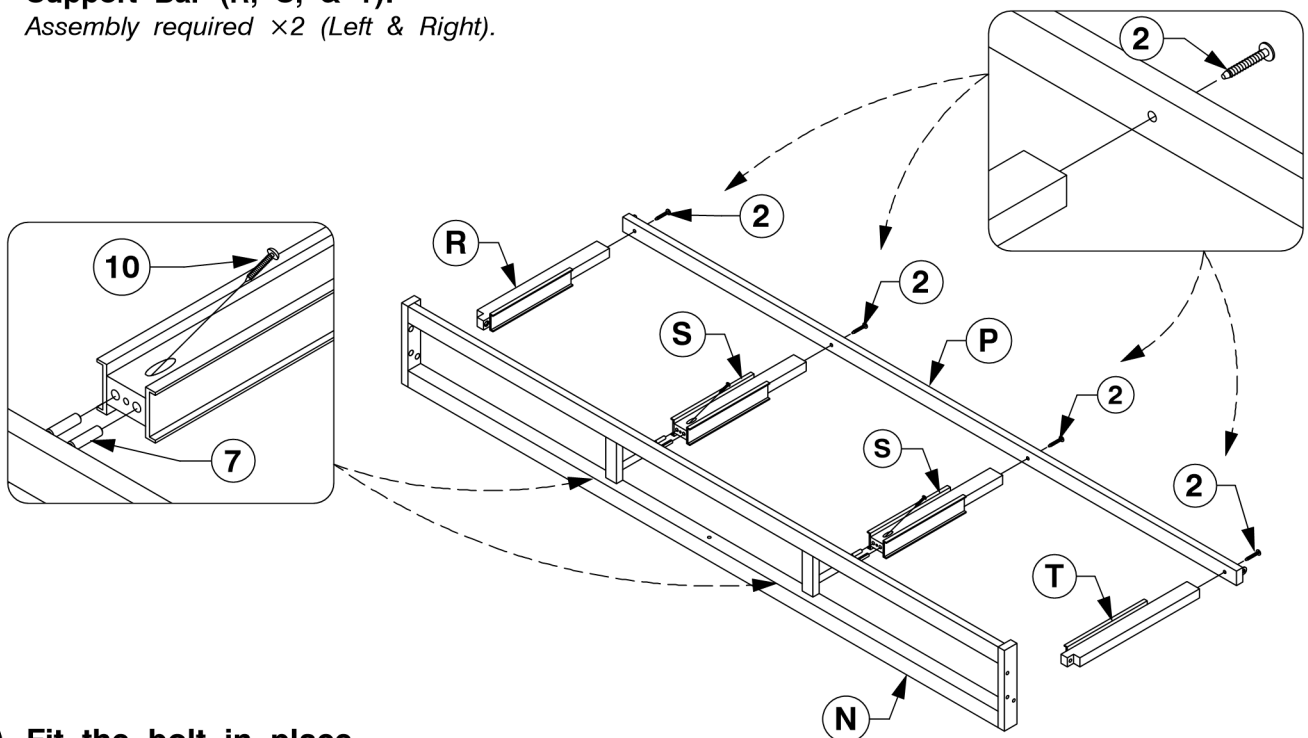

- 14** Fit the bolt in place.
Assembly required ×2 (Left & Right).

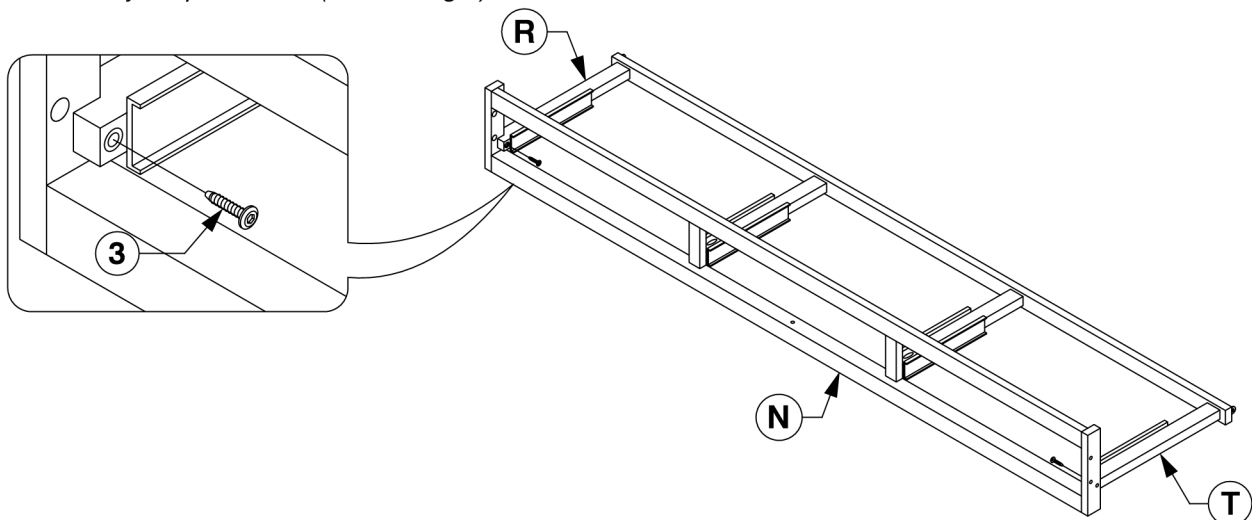


0110-8 Queen Bed


Assembly Instructions

WI-1225

- 15** Assemble the Side Rail Frame (N) & Support Rail (P) to the Headboard Post (D & E), Headboard Lower Panel (C) & Footboard Panel (B).

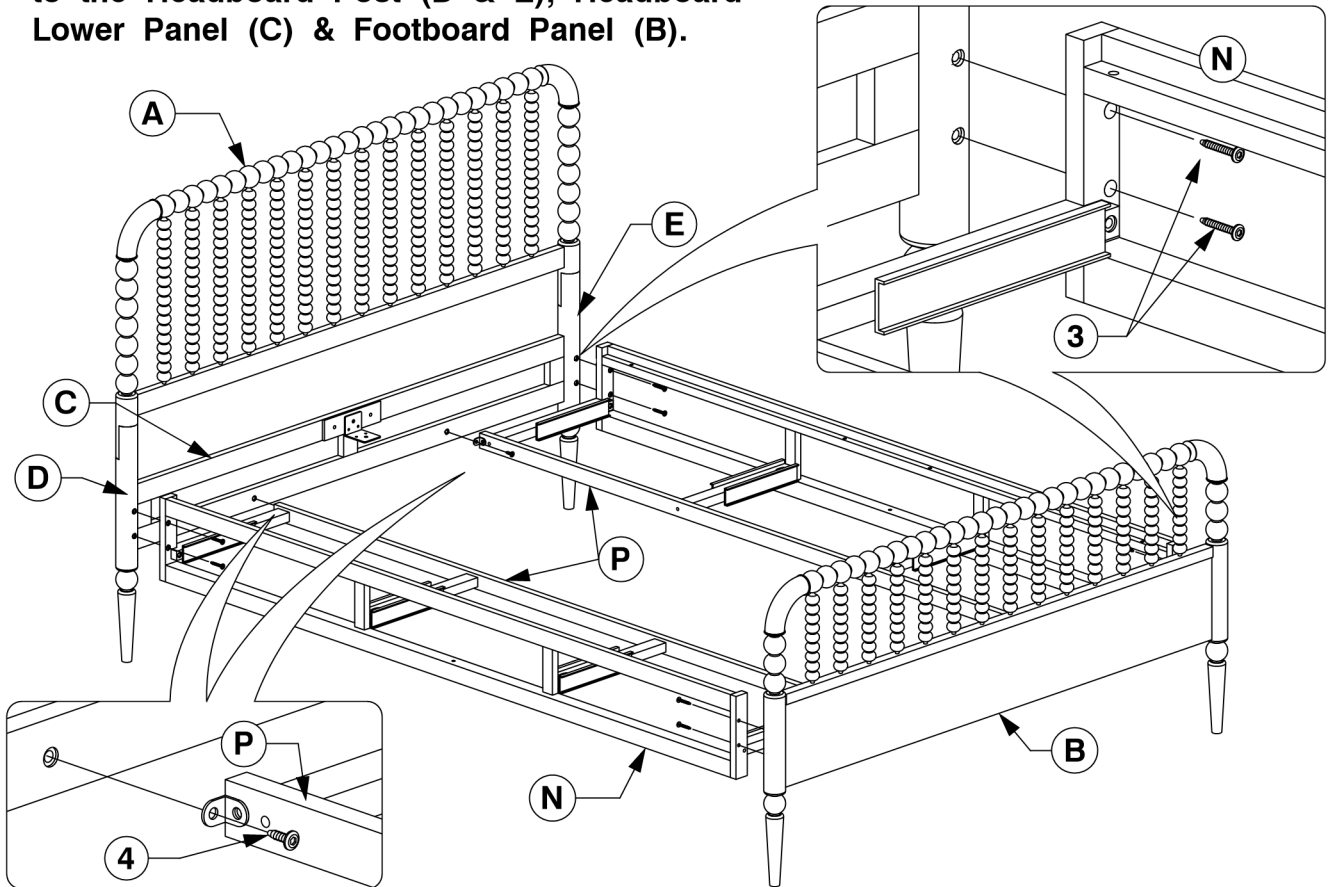

- 16** Lift the Side Rail Frame (N) on one side and fit the Post (F) under it. Repeat the same step on the other side.

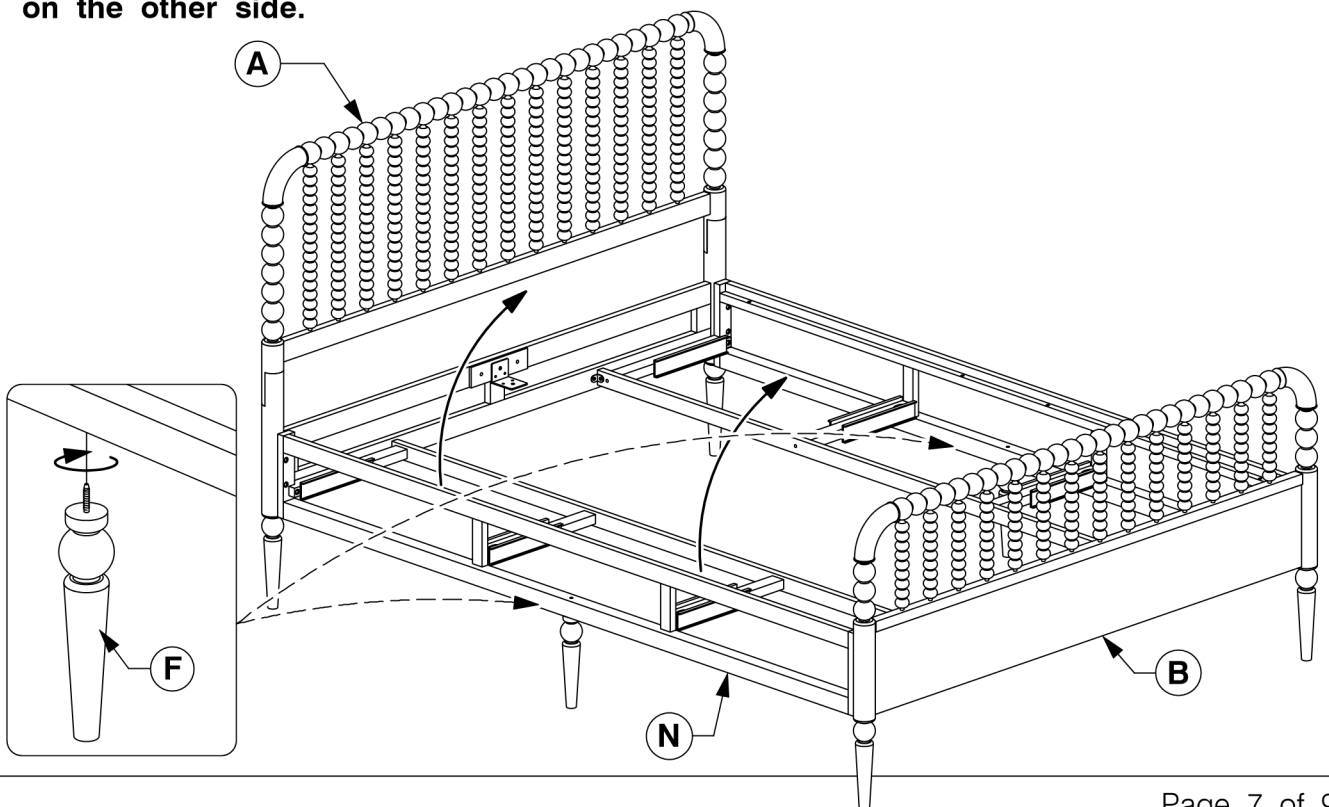


0110-8 Queen Bed


Assembly Instructions

WI-1225

- 17** Fit the Long Support (O) to the Headboard Lower Panel (C) & Footboard Panel (B).

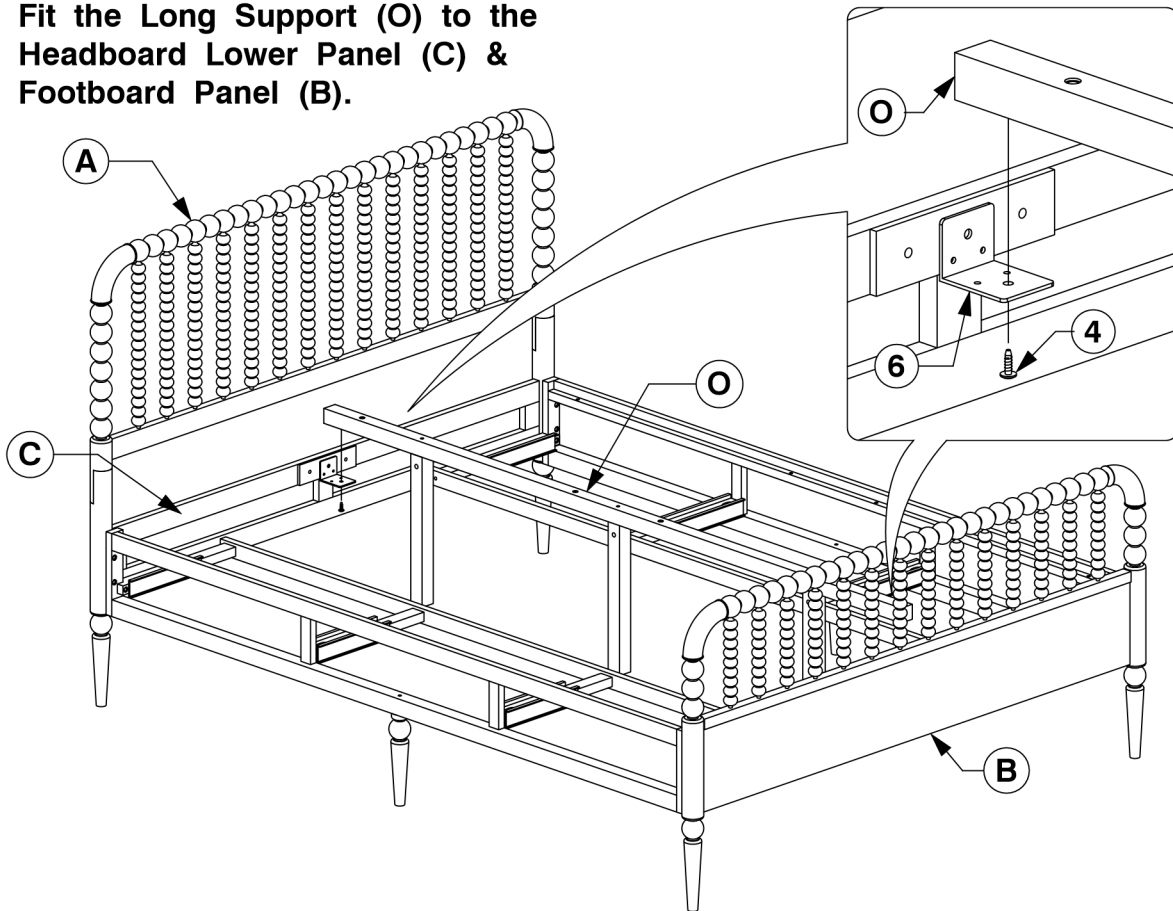

- 18** Bolt & Screw the Slats (U) to the Side Rail Frame (N).

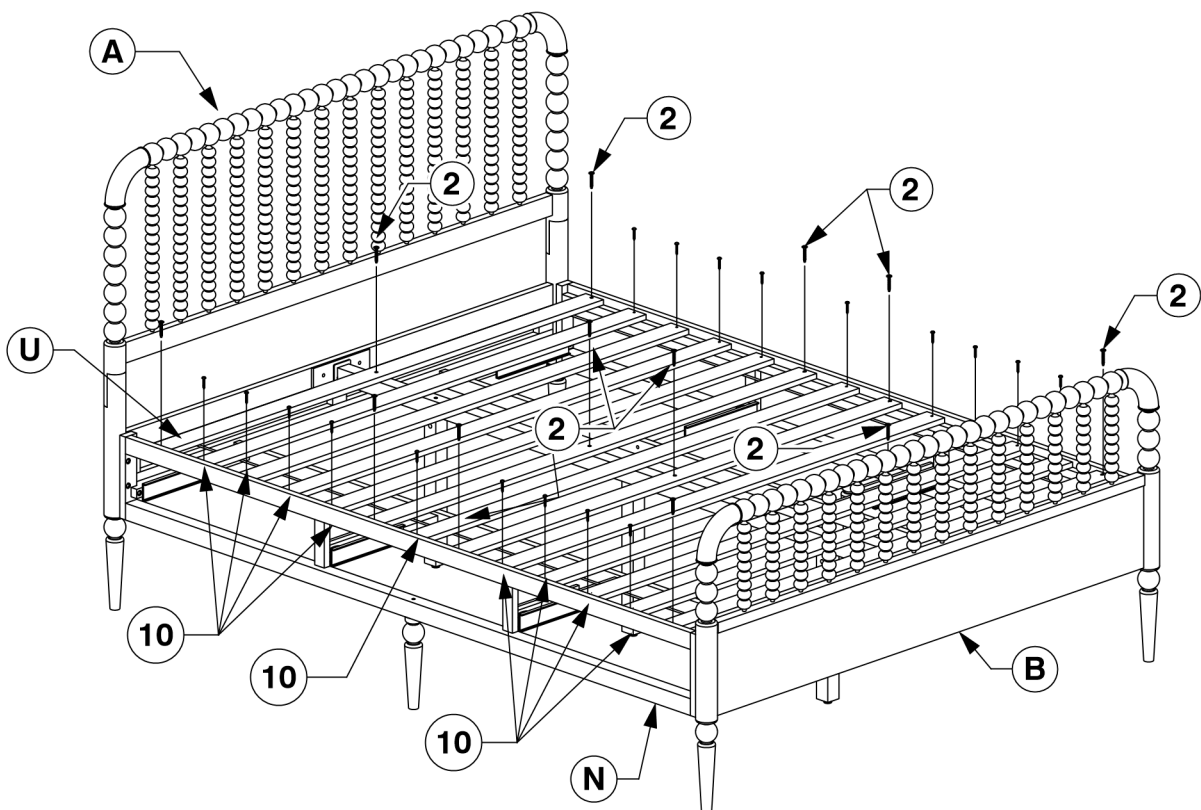


0110-8 Queen Bed

Assembly Instructions

WI-1225



- 19** Fit all assembled drawers on both sides.

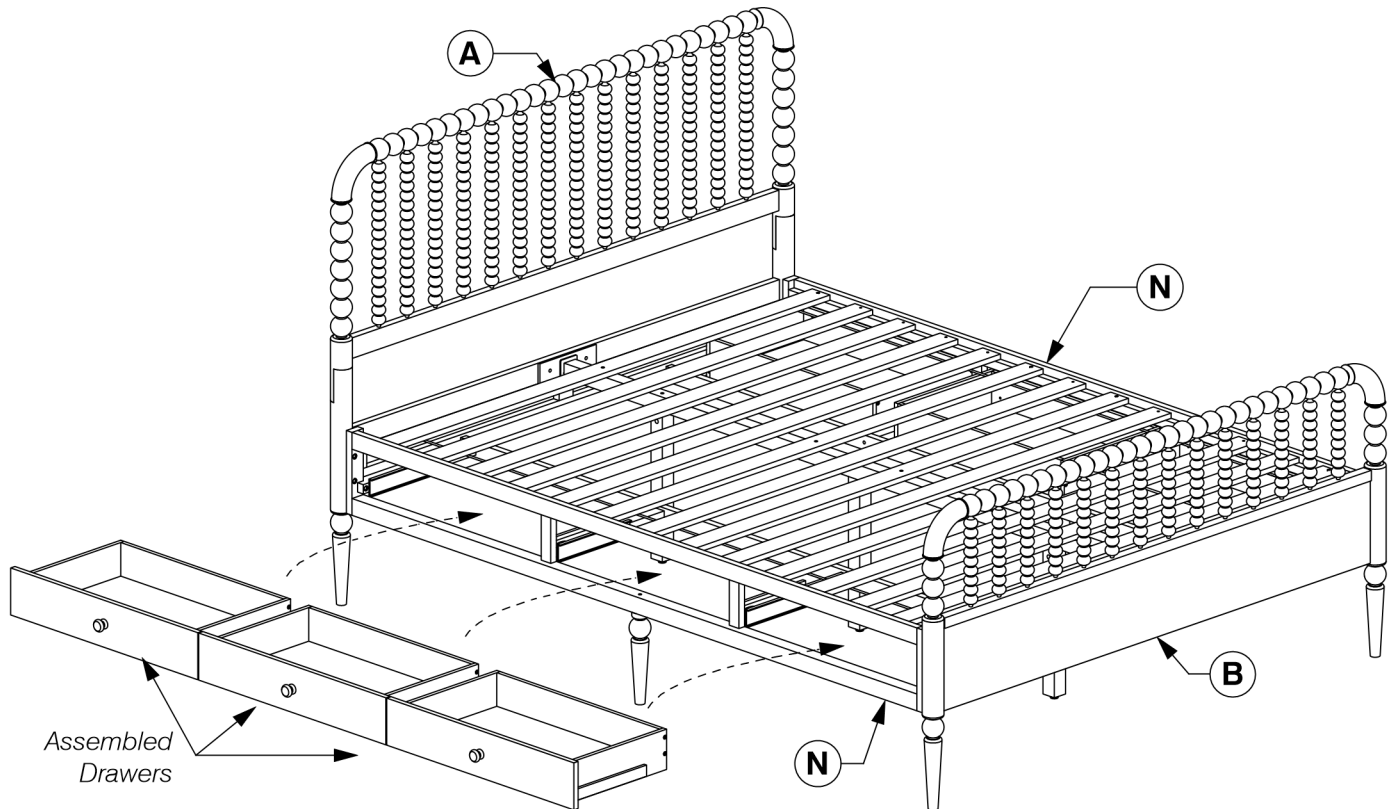

9025 1 Drawer Night Stand











Assembly Instructions

WI-1025

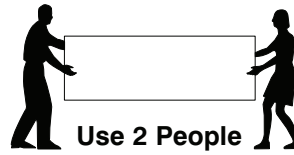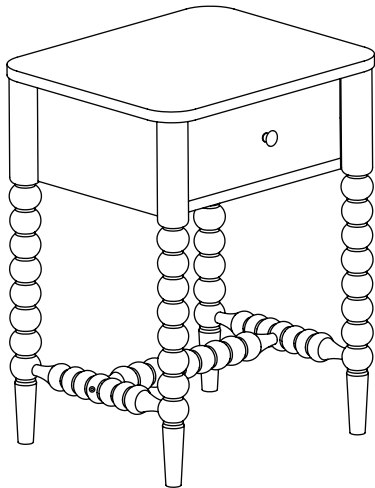

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

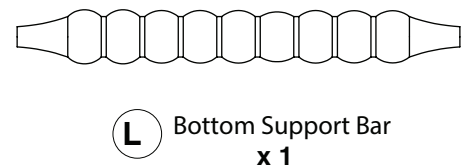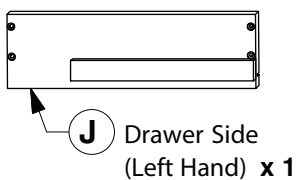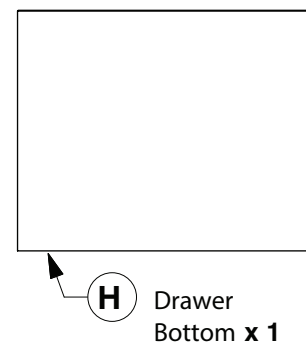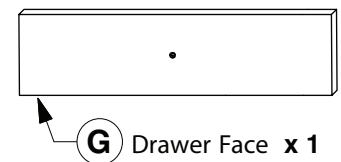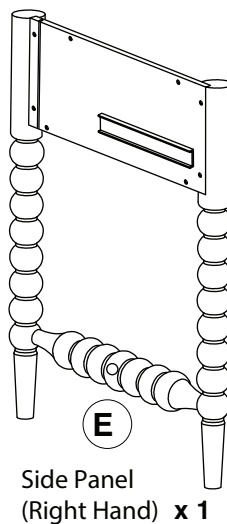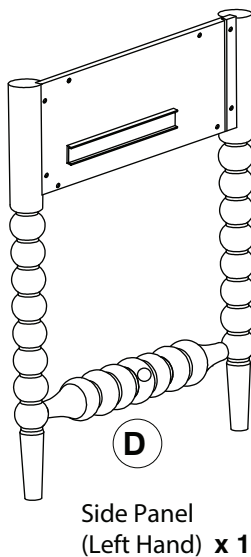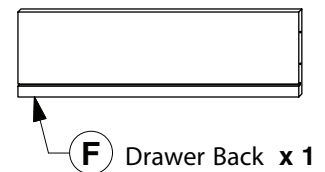
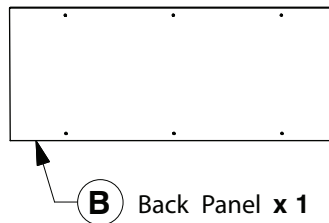
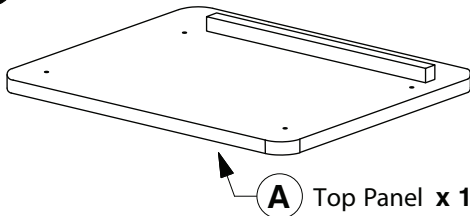


9025 1 Drawer Night Stand


Assembly Instructions

WI-1025


2 Hardware List

- | | | | | |
|---|---|---|---|---|
| 
1 M6 x 15mm
JCB x 8 | 
2 M6 x
30mm JCB
x 4 | 
3 'L' Bracket
(5005-3) x 4 | 
4 M4 x 20mm
Wood Screw x 4 | 
5 M4 x 16mm
Wood Screw x 6 |
| 
6 M4 x 25mm
Wood Screw x 8 | 
7 M6 X50mm
JCBC W x 2 | 
8 Handle x 1 | 
9 M4 x 22mm
Wood Screw x 1 | 
10 Allen Key
x 1 |


3 Assemble the Drawer Sides (J & K) to the Drawer Face (G).

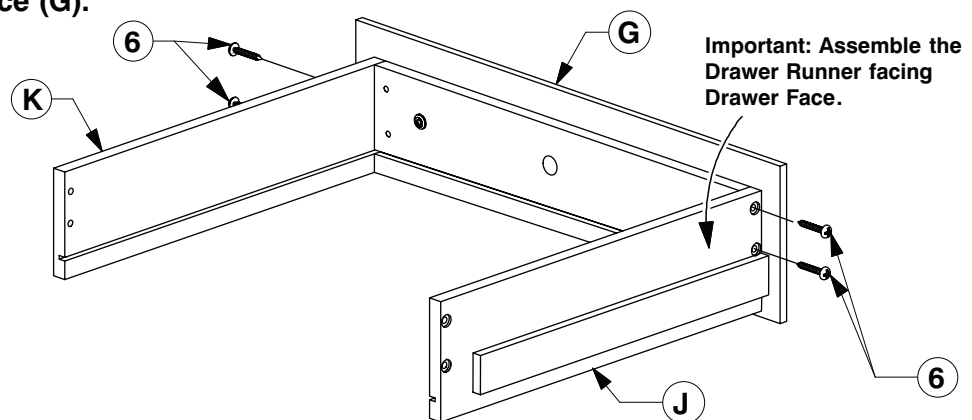

4 Slide the Drawer Bottom (H) into the groove on the Drawer Sides (J & K).

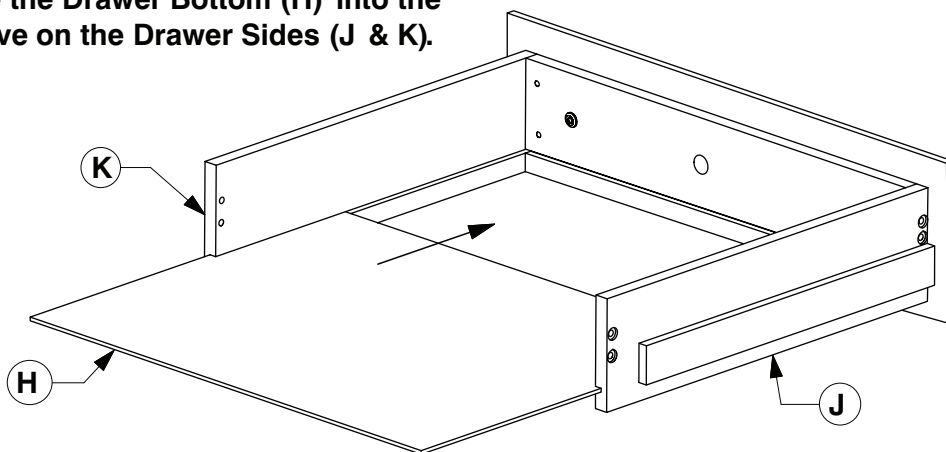

5 Assemble the Drawer Back (F) to the Drawer Sides (J & K). Fit the Handle to the Drawer Face (G).

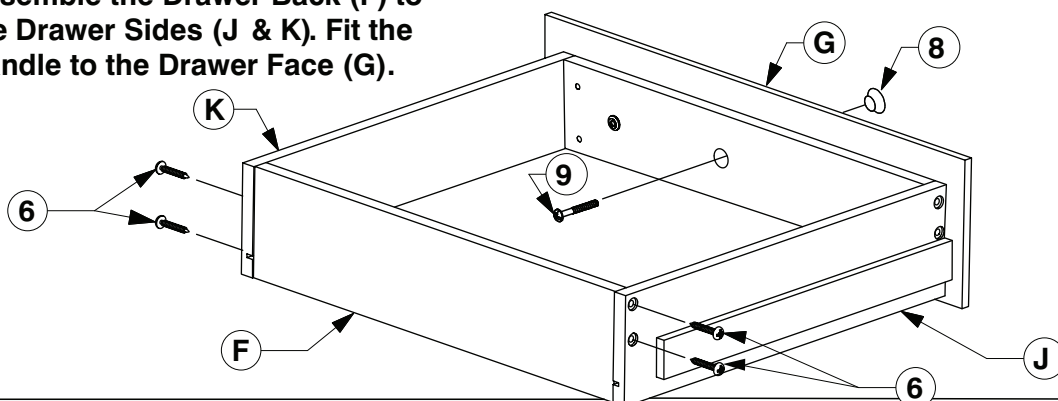


9025 1 Drawer Night Stand


Assembly Instructions

WI-1025

- 6** Fit the 'L' Bracket (3) to the Side Panel (D & E).

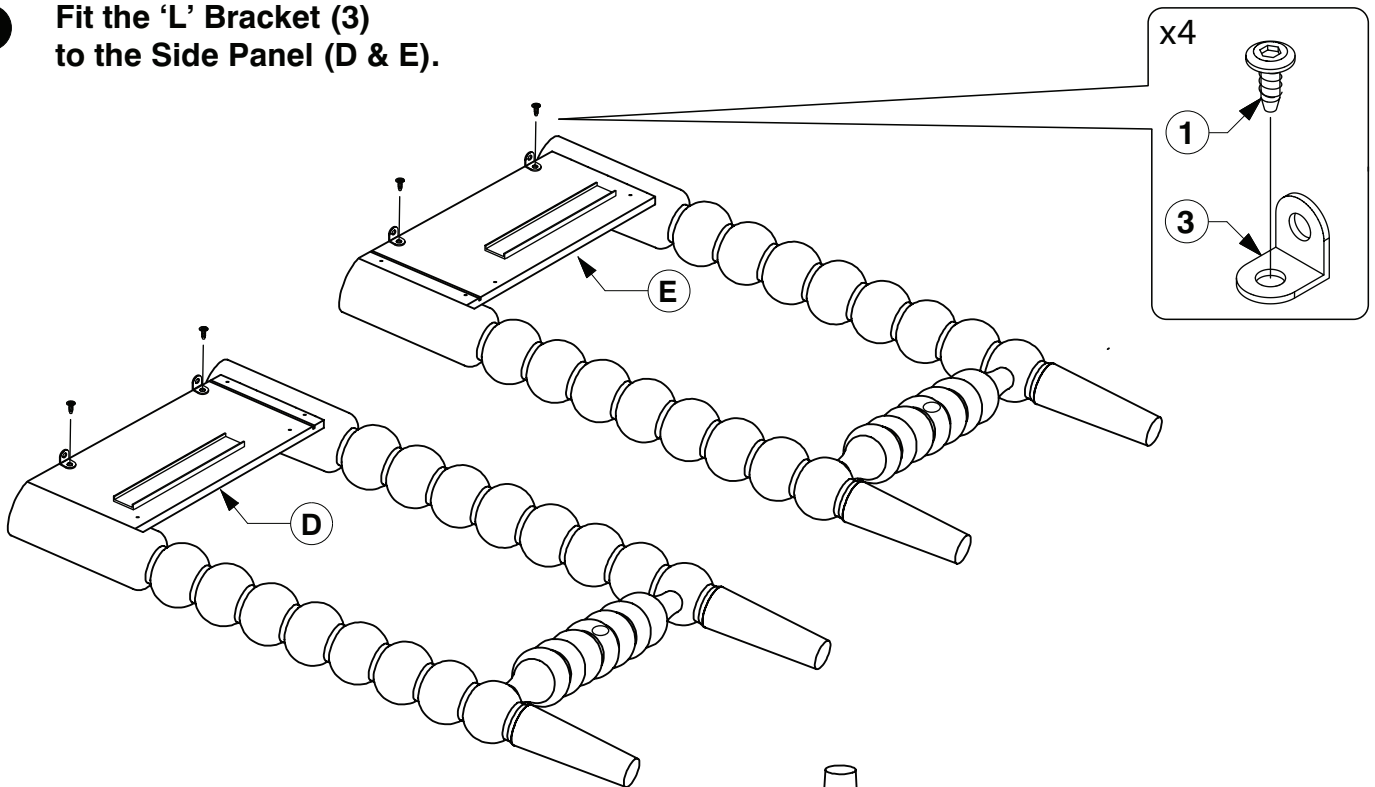

- 7** Assemble the Side Panel (D) to the Top Panel (A).

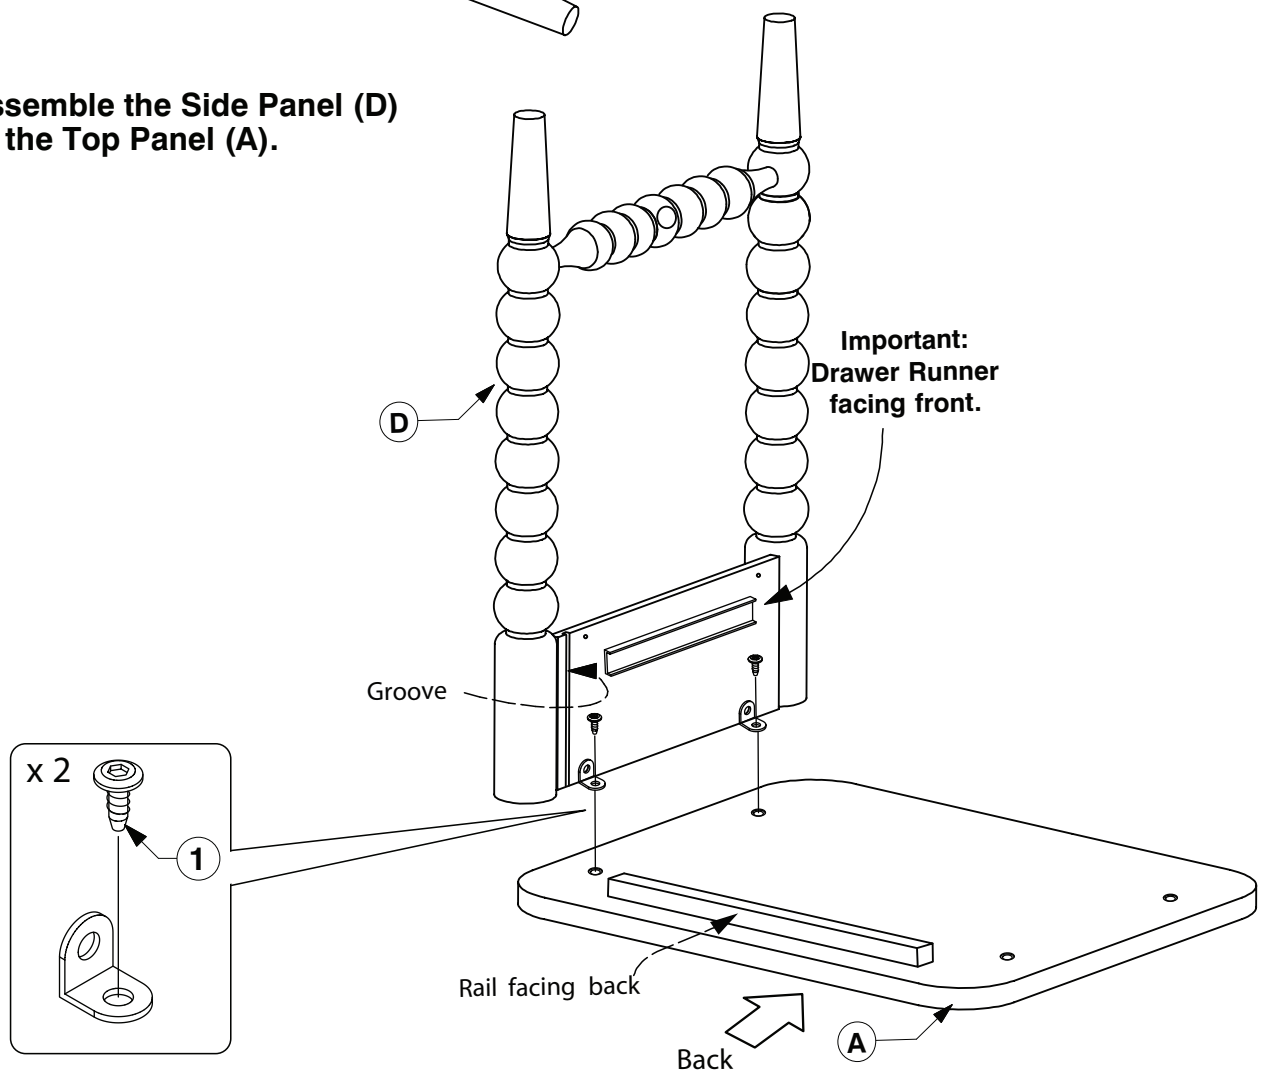


9025 1 Drawer Night Stand

Assembly Instructions

WI-1025

8 Fit the Bottom Support Bar (L) & Support Bar (C) to the Side Panel (D).

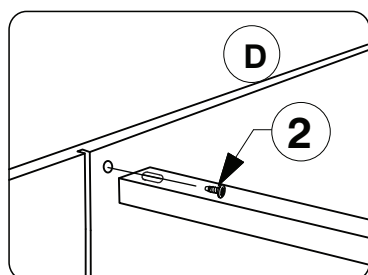


Step 1

Use the **ball end** of Allen key to start the bolt.

Step 2

Tighten fully with the **straight end**.

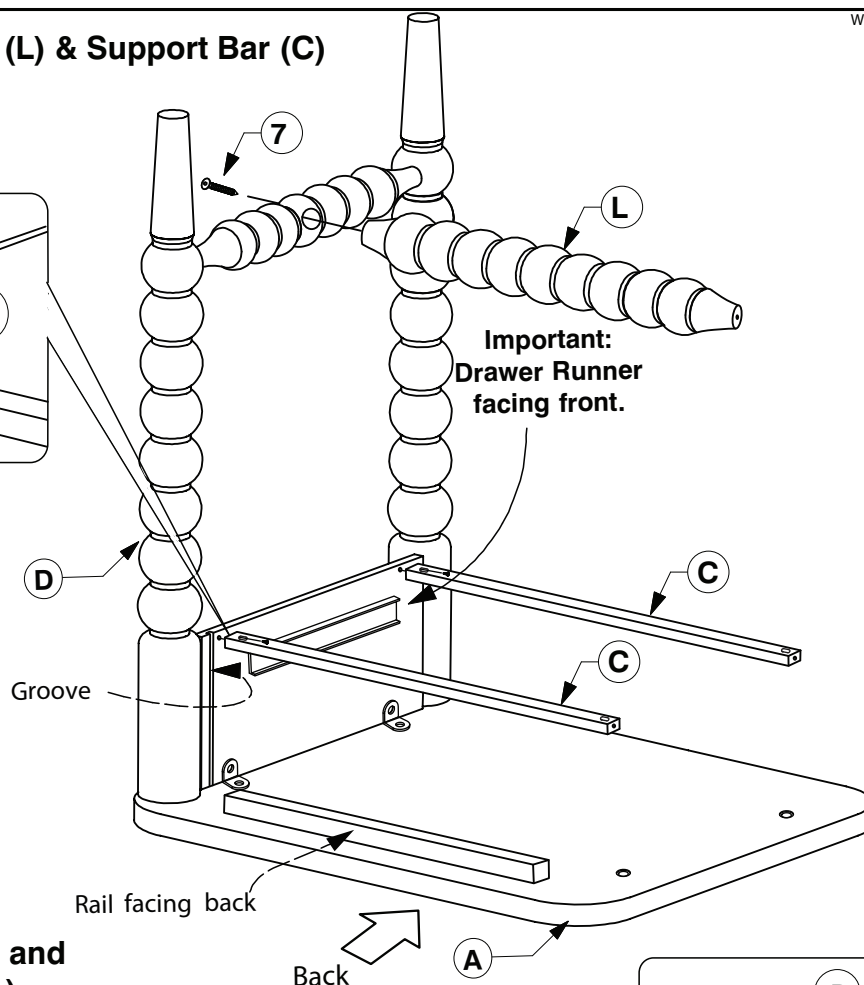



9 Assemble the Side Panel (E) and to the Bottom Support Bar (L) and Support Bar (C) Top Panel (A).

Step 1


Use the **ball end** of Allen key to start the bolt.

Step 2

Tighten fully with the **straight end**.

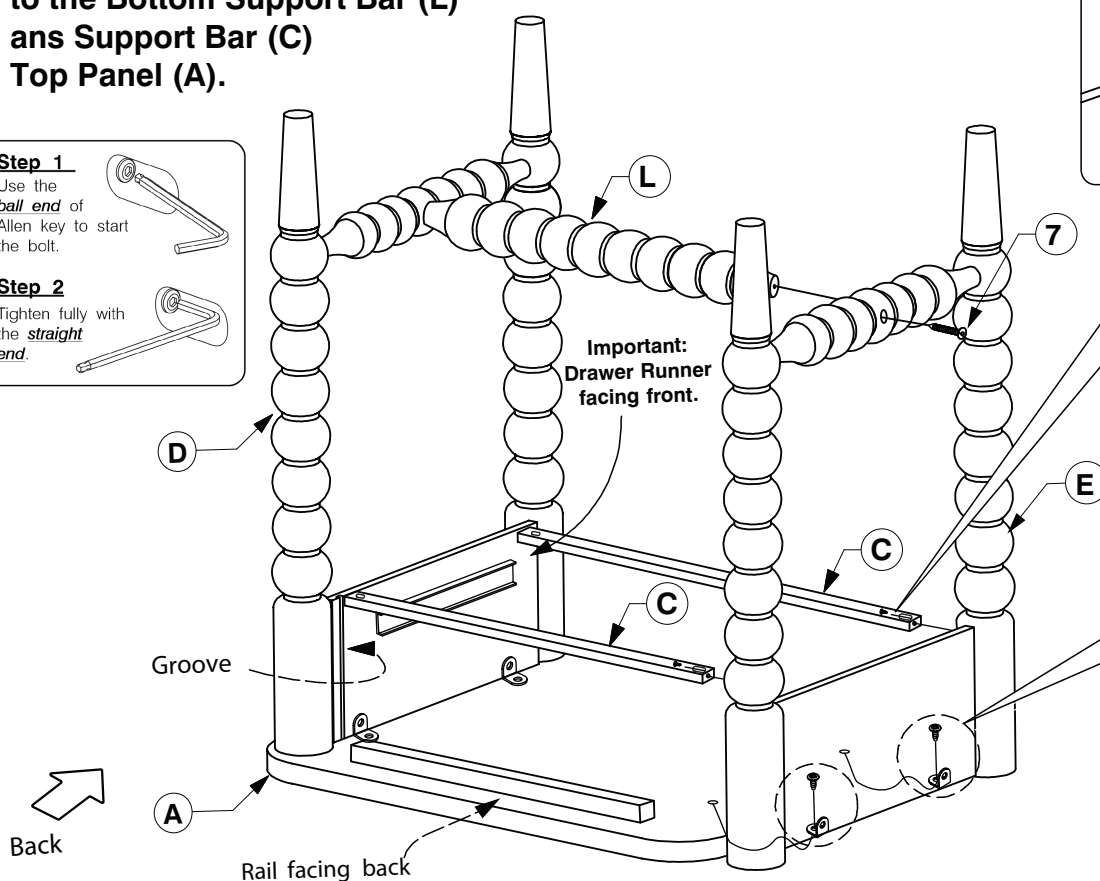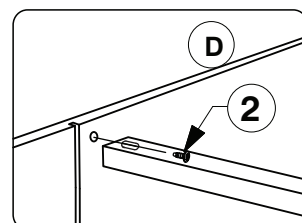

x 2

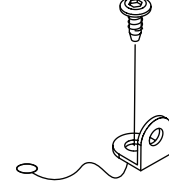


9025 1 Drawer Night Stand


Assembly Instructions

WI-1025

- 10** Slide the Back Panel (B) into the groove on the back of the Side Panel (D & E)

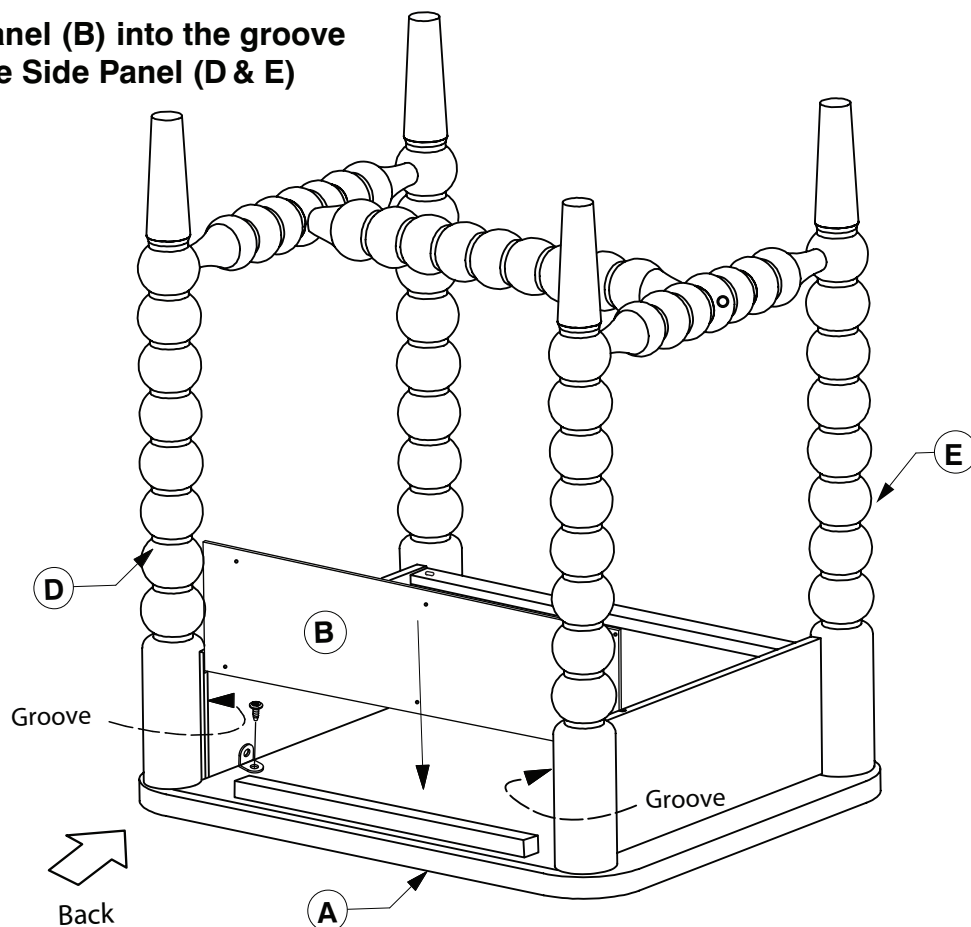

- 11** Screw the Back Panel (B) to the Side Panel (D & E).

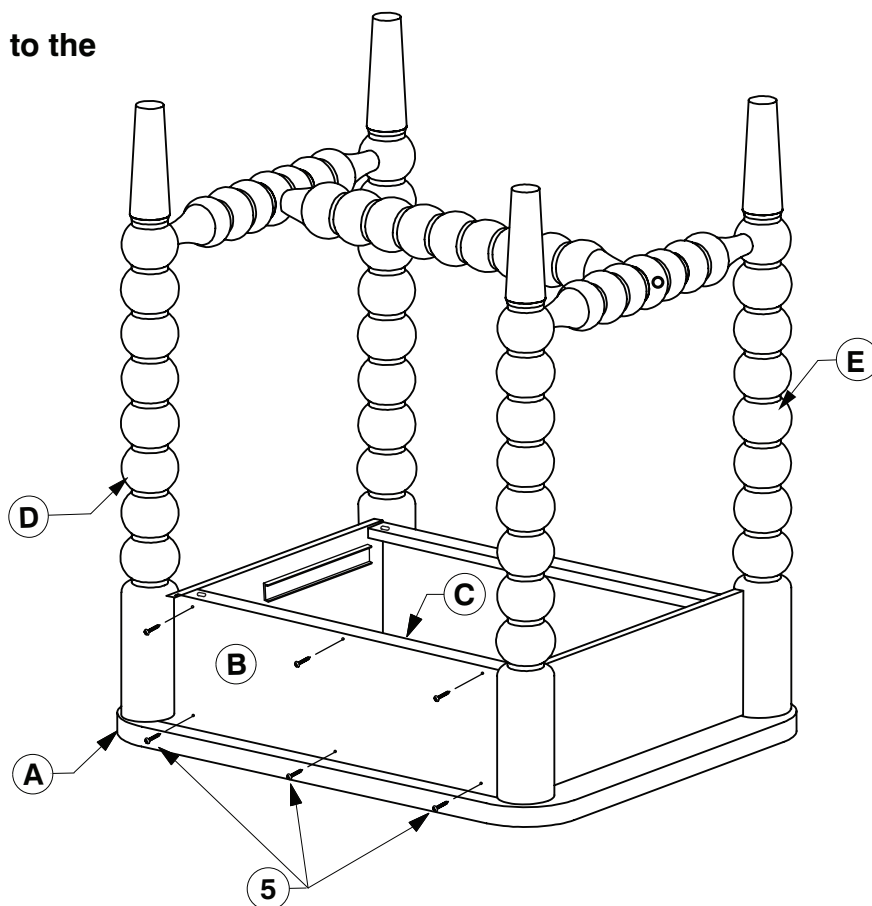


9025 1 Drawer Night Stand

Assembly Instructions


WI-1025

12 Fit the Drawer Box to the Casegood Body.

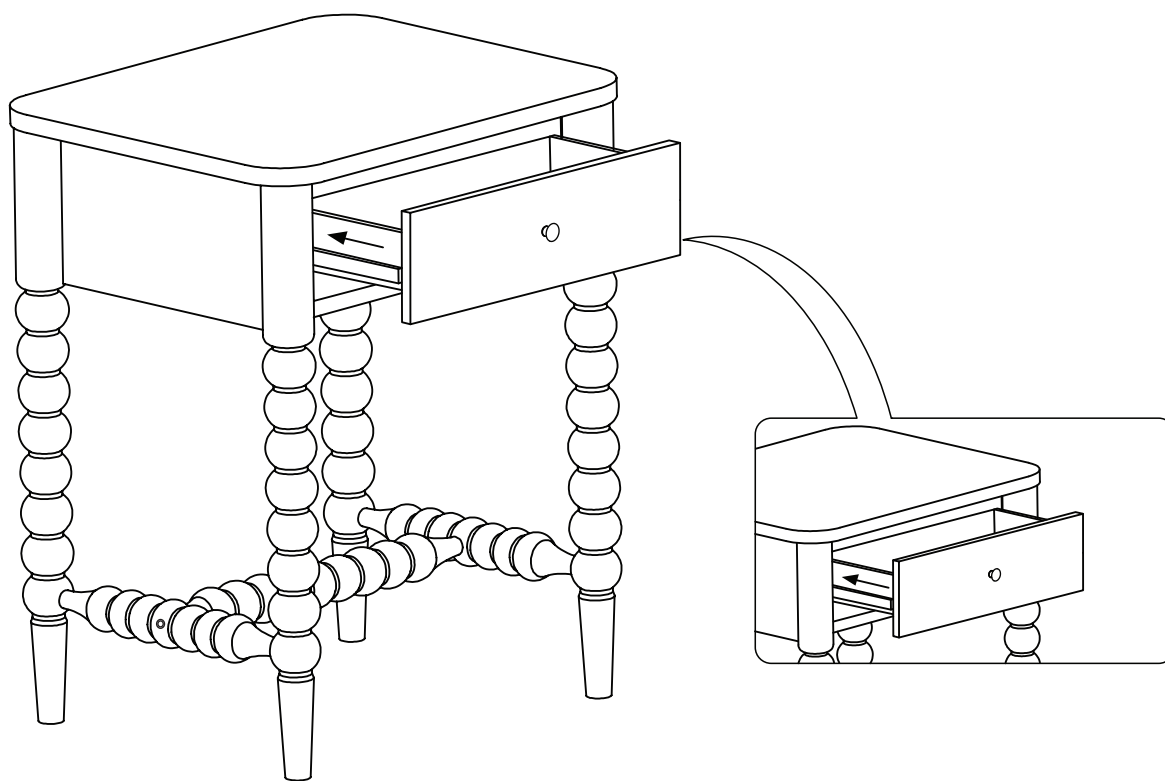

13 Adjust the Drawer Face (G).

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

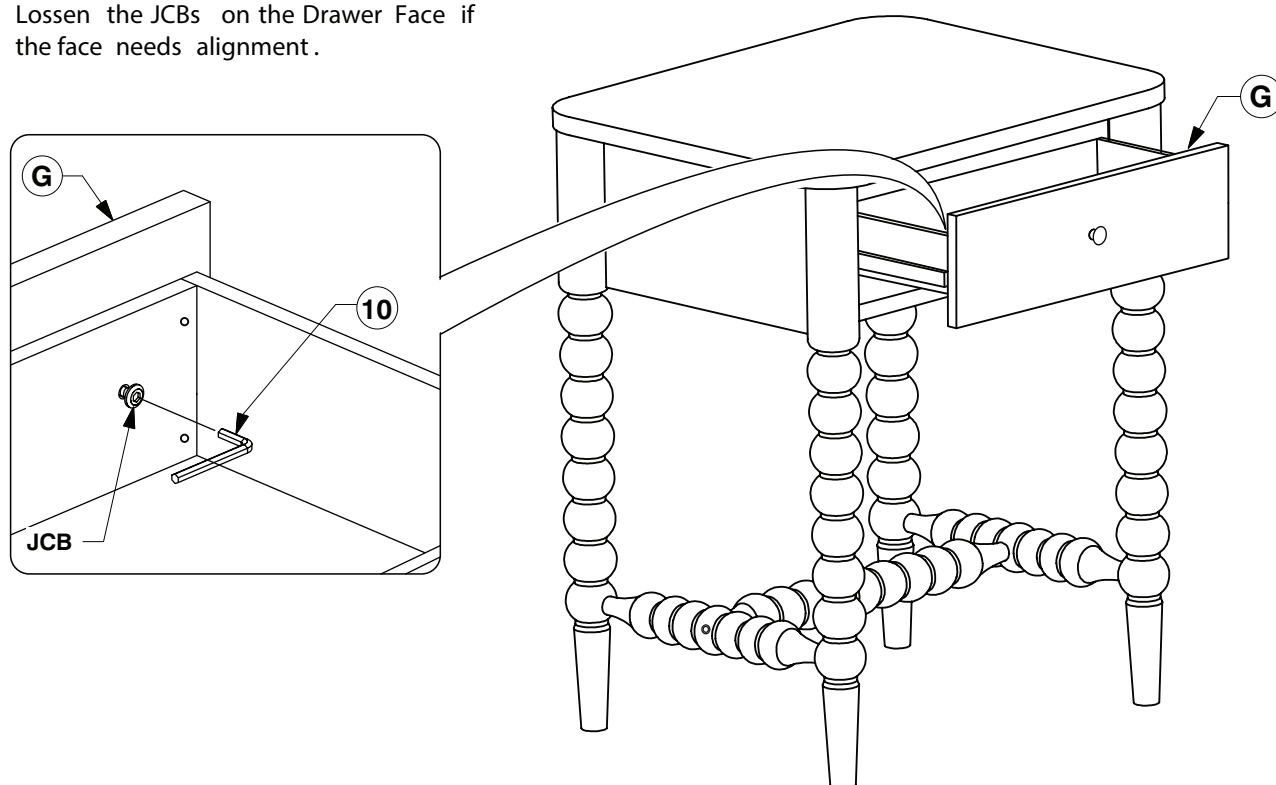


9025 1 Drawer Night Stand

Assembly Instructions

WI-1025



- 14** After the Drawer Faces (G) are aligned, secure with wood screws.

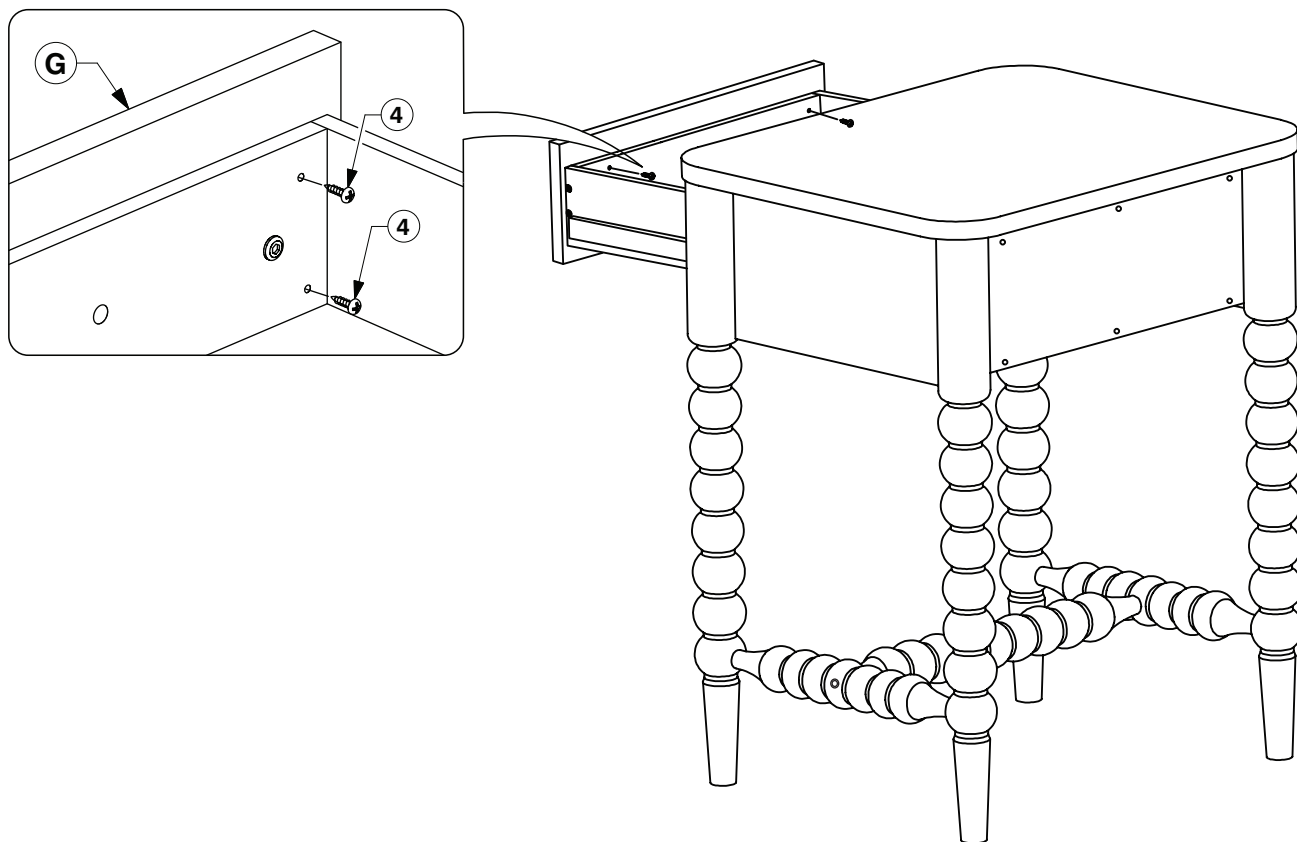

9025 6 Drawer Dresser


Assembly Instructions

WI-1024

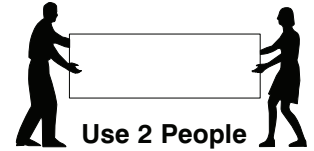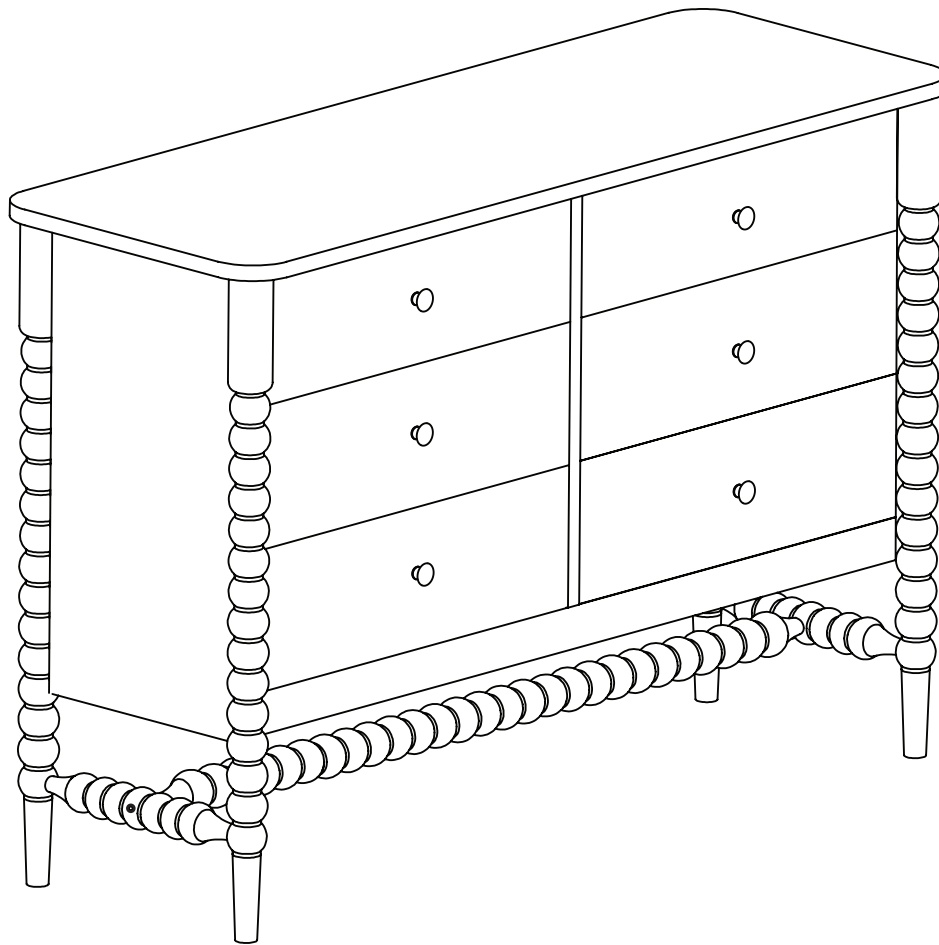

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

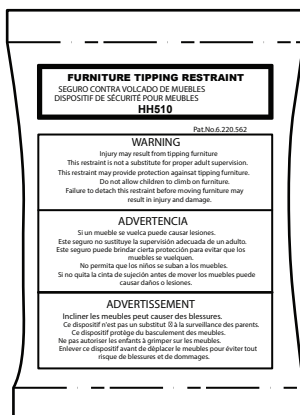

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9025 6 Drawer Dresser

Assembly Instructions


WI-1024

1 Parts List


Parts in Box A:

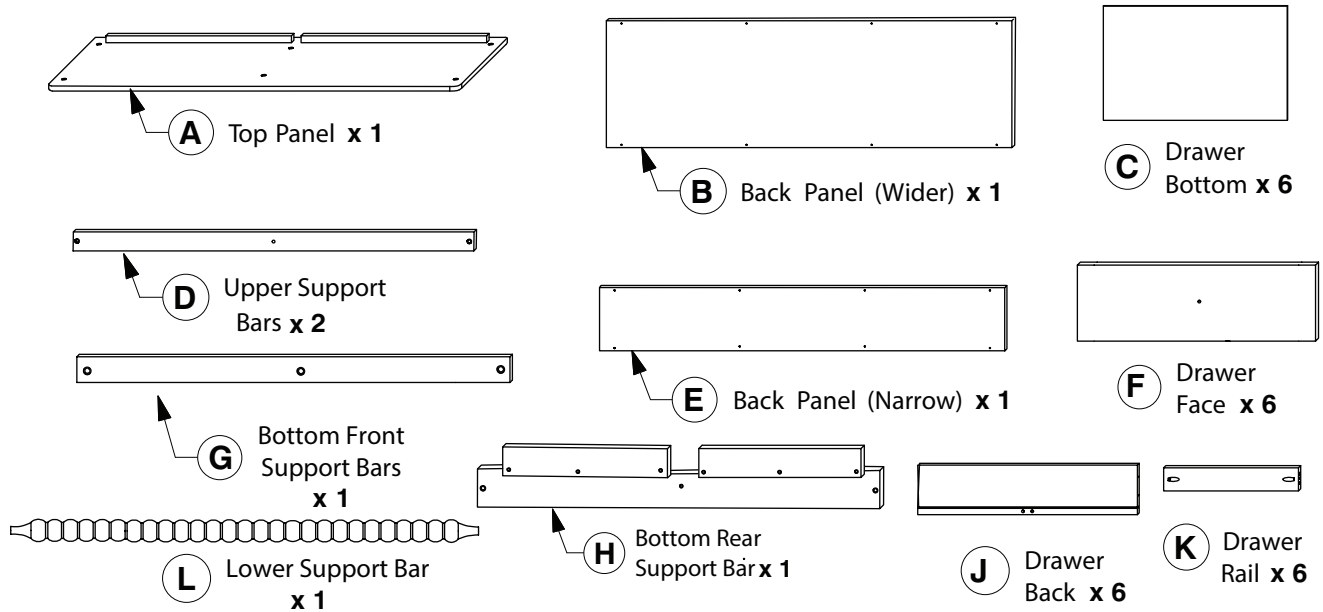


Parts in Box B:

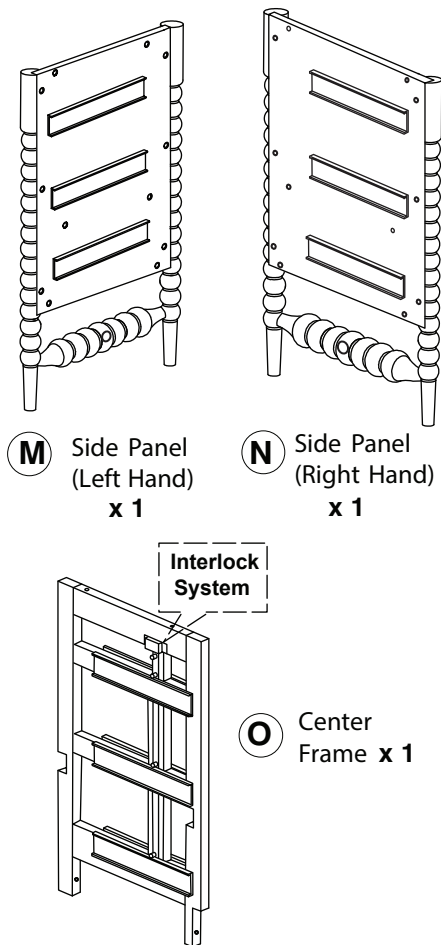

Parts for LEFT Side Drawer

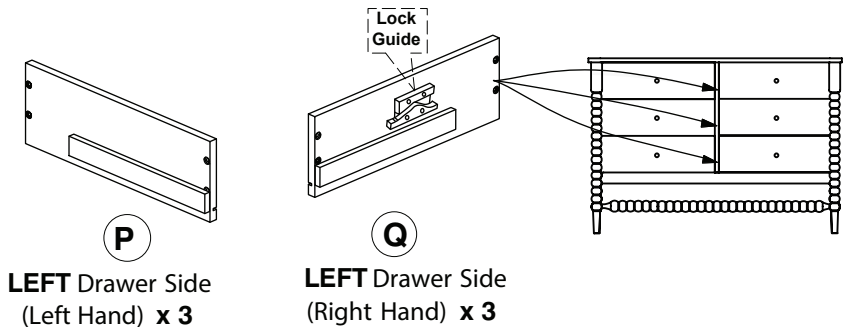

Parts for RIGHT Side Drawer





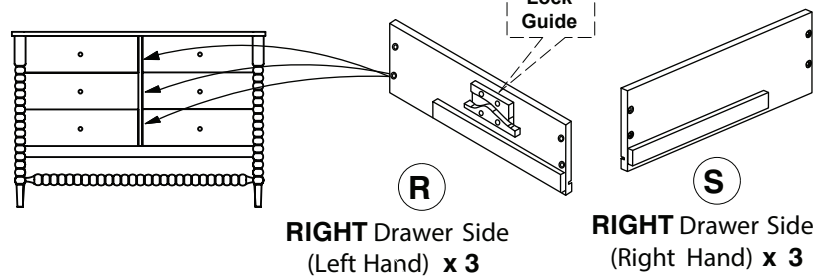


9025 6 Drawer Dresser

Assembly Instructions

WI-1024


2 Hardware List

- | | | | |
|---|---|--|---|
|  |  |  |  |
| 1 M6 x 15mm JCB x 24 | 2 M6 x 30mm JCB x 4 | 3 M6 x 60mm JCB x 2 | 4 'L' Bracket (5005-3) x 12 |
|  |  |  |  |
| 5 Wood Screw (M4 x 20mm) x 24 | 6 Wood Screw (M4 x 32mm) x 16 | 7 Wood Screw (M4 x 25mm) x 60 | 8 M6 X50mm JCBC W x 2 |
|  |  |  |  |
| 9 Handle x 6 | 10 M4 x 22mm Wood Screw x 6 | 11 M6 x 25mm Wood Dowel x 24 | 12 Allen Key x 1 |


3 Assemble the Drawers.

STEP 3.1

LEFT

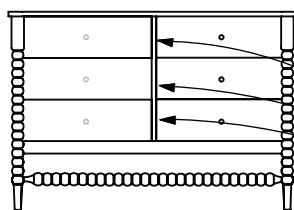


Important: Assemble the Drawer Runner facing Drawer Face.

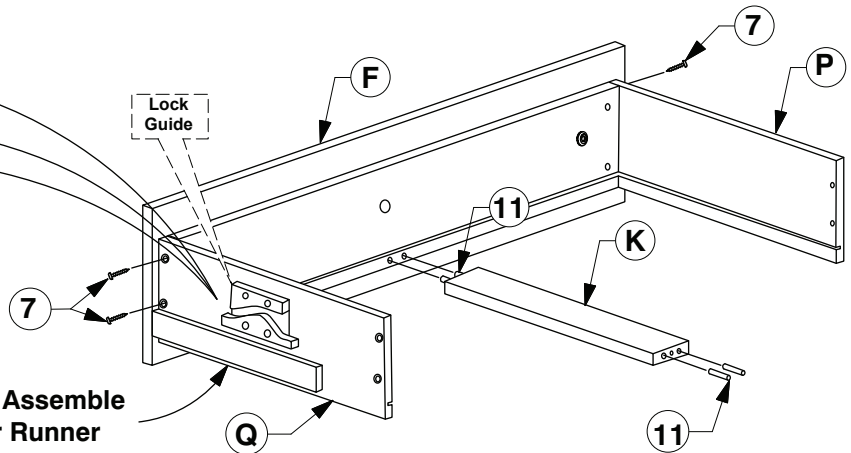

Important: Assemble the Drawer Runner facing Drawer Face .

RIGHT

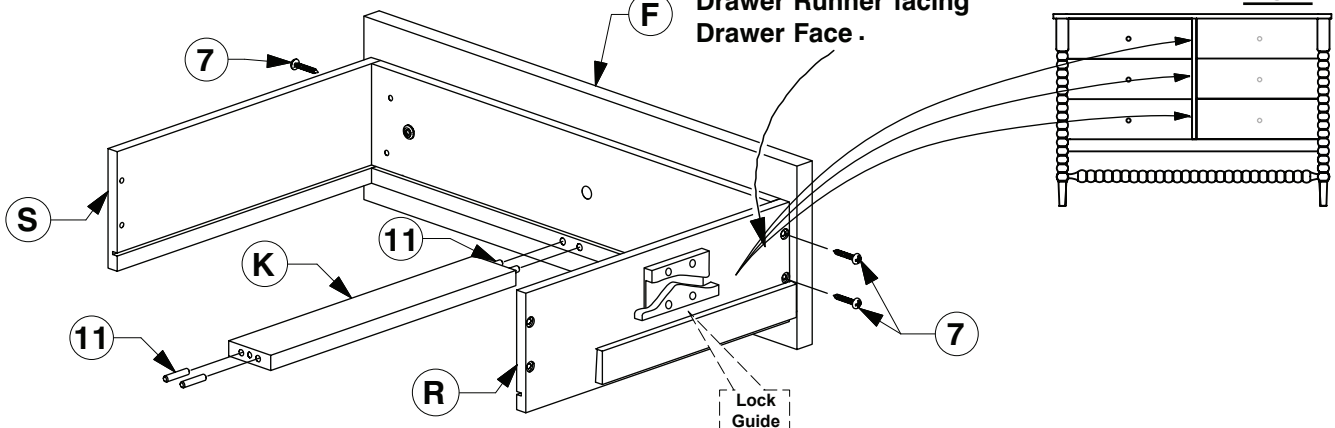

9025 6 Drawer Dresser

Assembly Instructions


WI-1024

3 Assemble the Drawers.

STEP 3.2


* 3 Assemble the left and right drawers as shown below

x6

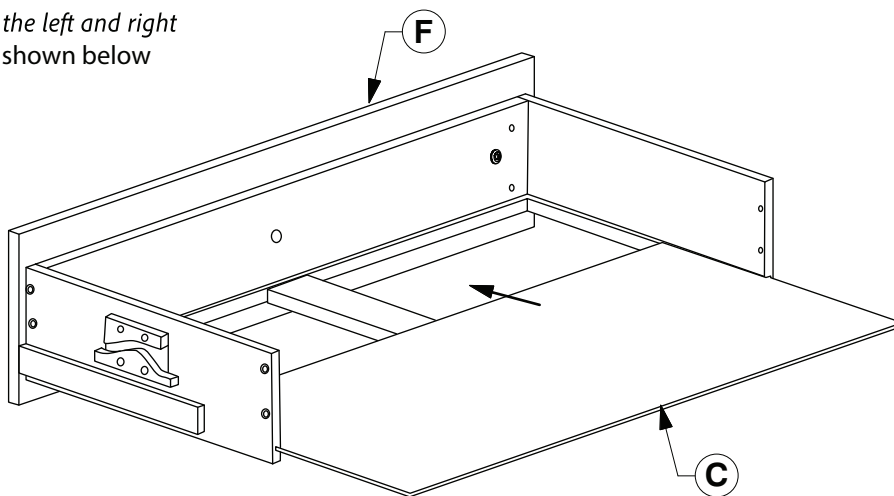


STEP 3.3

x6

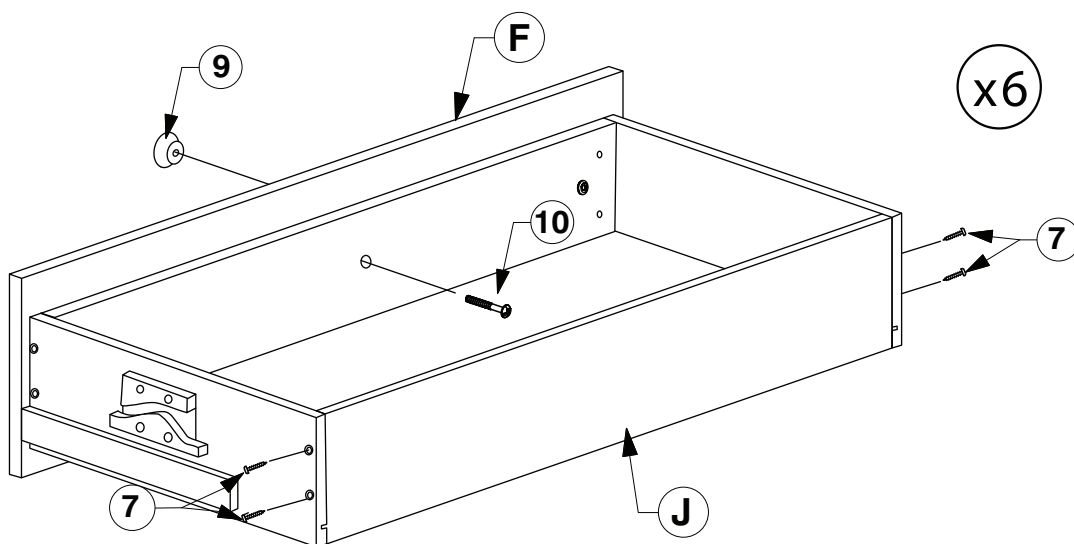

STEP 3.4

x6

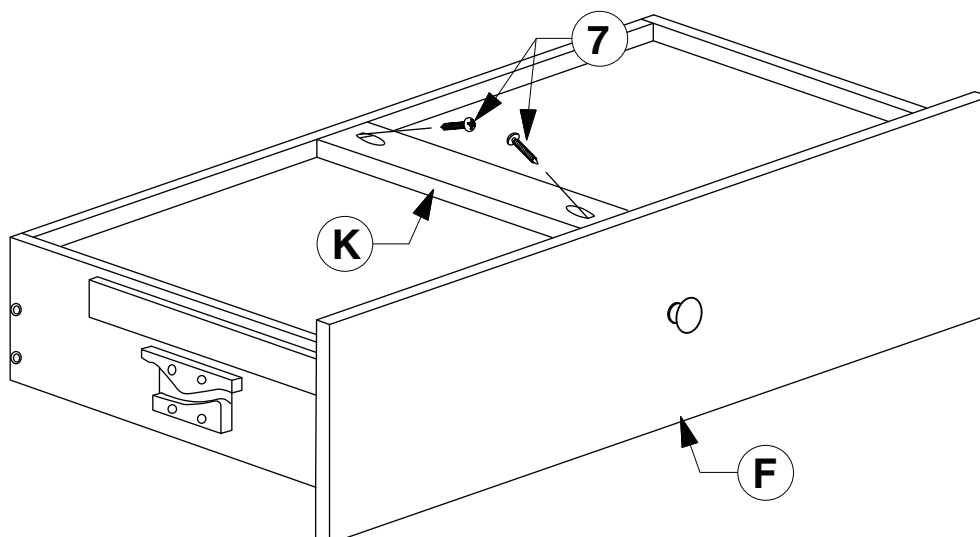


9025 6 Drawer Dresser


Assembly Instructions

WI-1024

4 Fit the 'L' Bracket to the Side Panel (M & N).

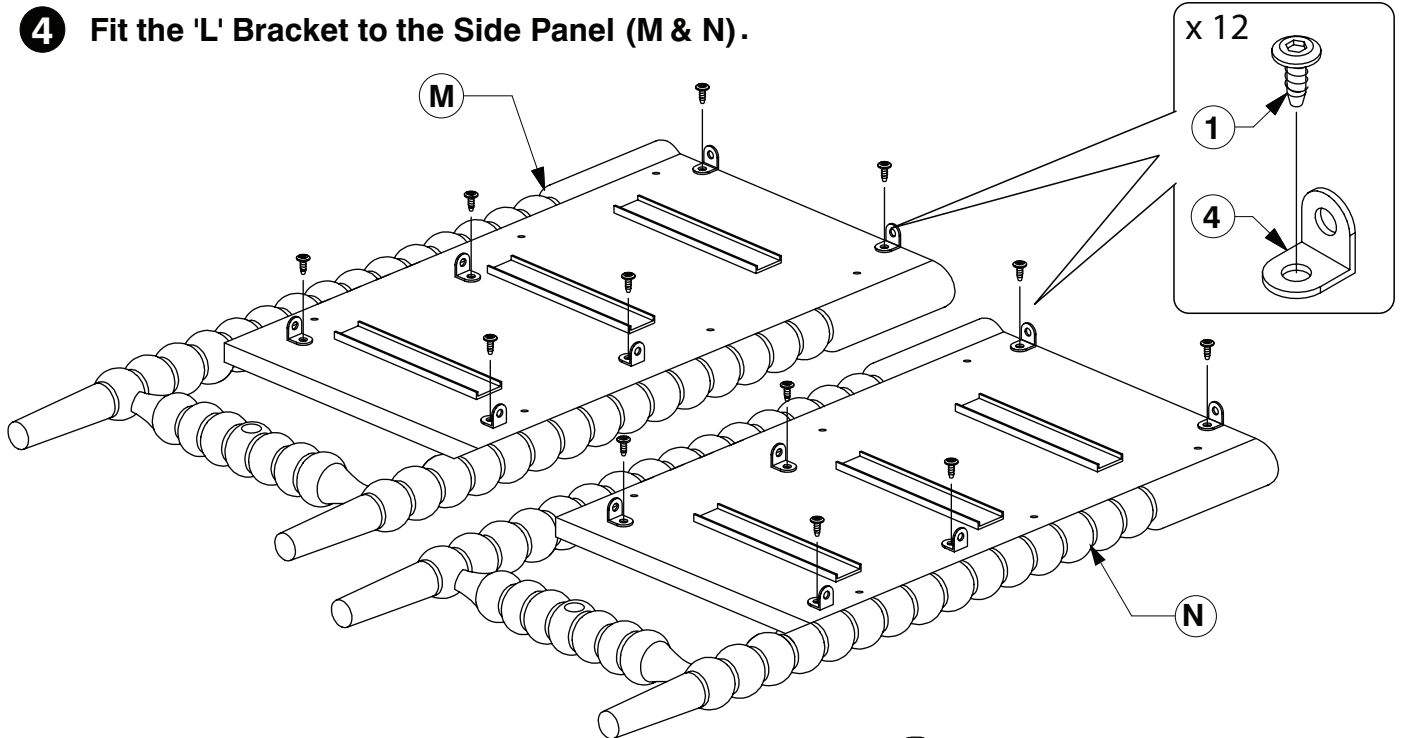

5 Fit the Side Panel- Right Hand (N) & Center Frame (O) to the Top Panel (A).

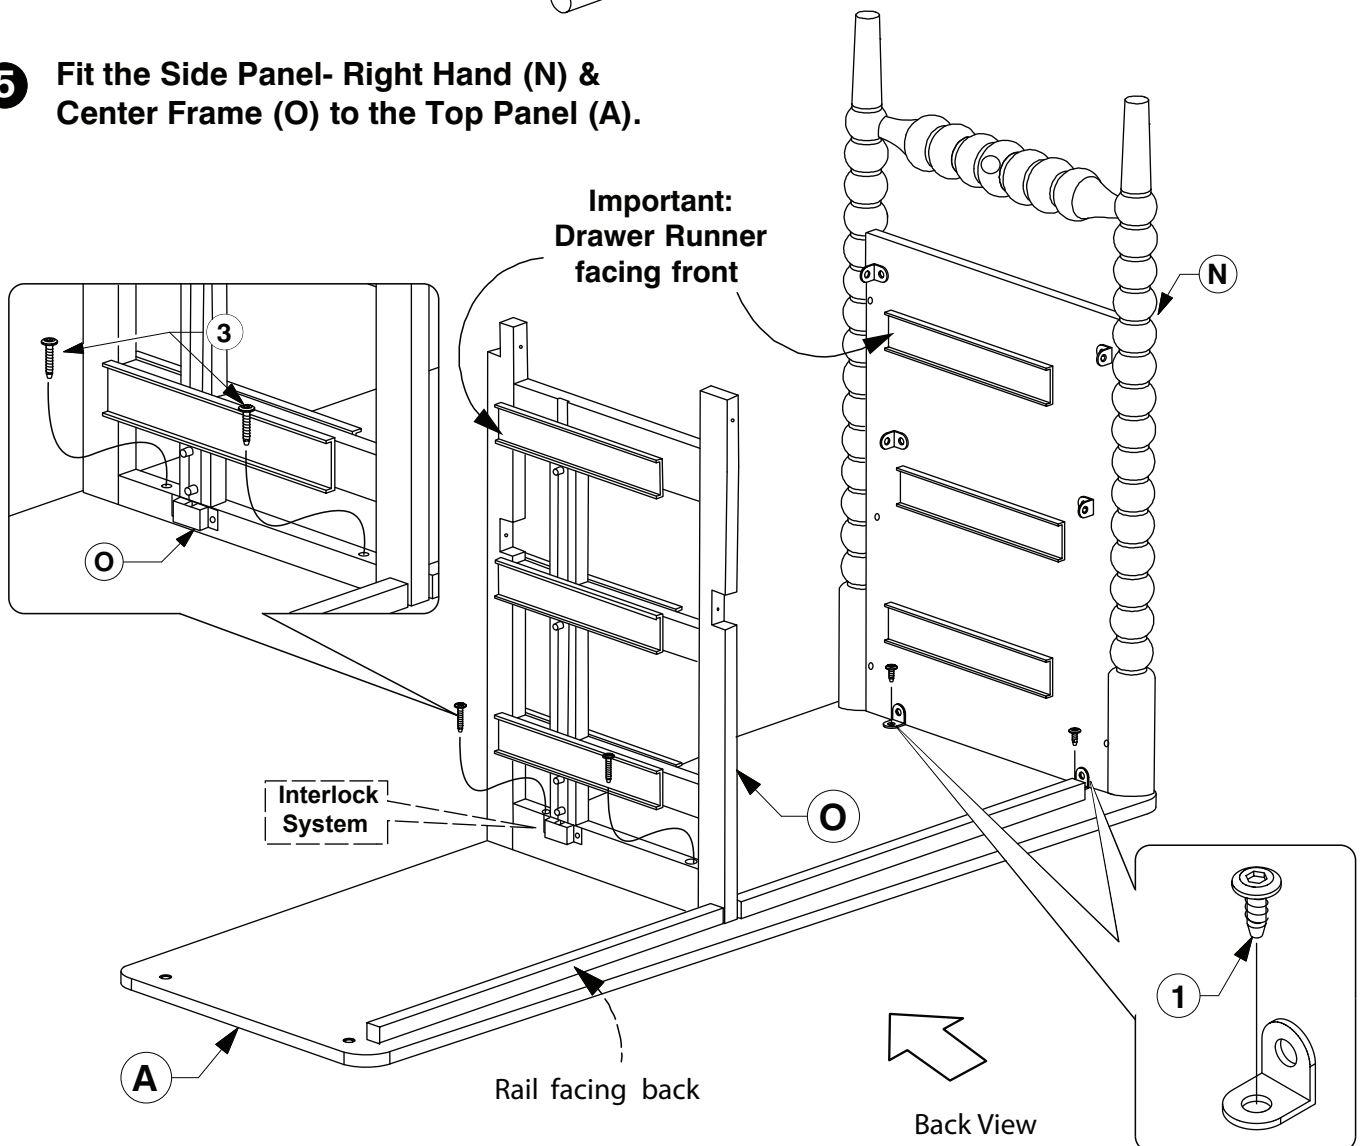


9025 6 Drawer Dresser


Assembly Instructions

WI-1024

- 6** Fit the Upper Support Bar (D) and Bottom Front & Rear Support Bars (G & H) to the Side Panel-Right Hand (N) & Center Frame (O) as shown. Use JCBCW (8) to fit the Lower Support Bar (L) to the Side Panel (N).

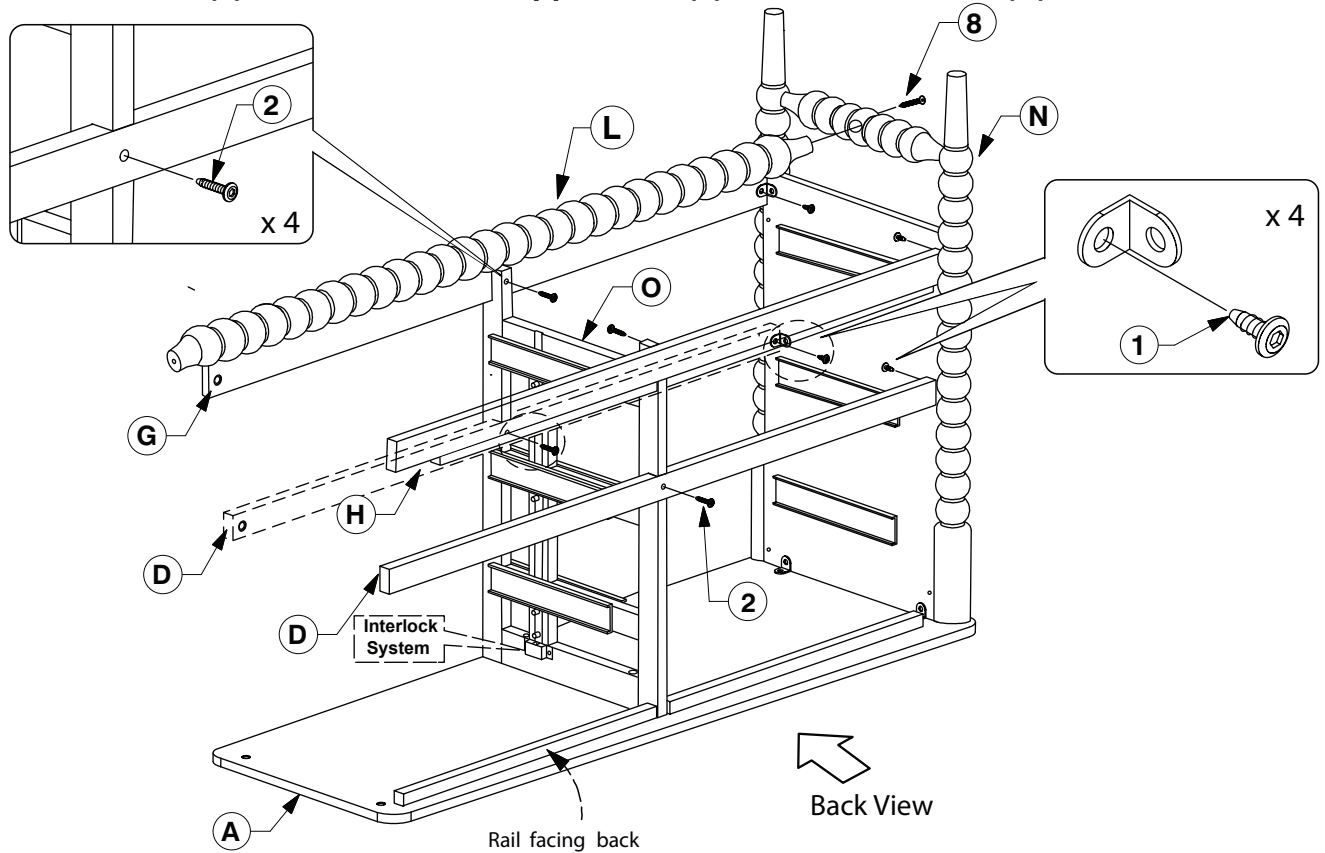

- 7** Fit the other side of Side Panel- Left Hand (M) to the Top Panel (A) & Support Bar Upper & Bottom (D & G & H) and Lower Support Bar (L).

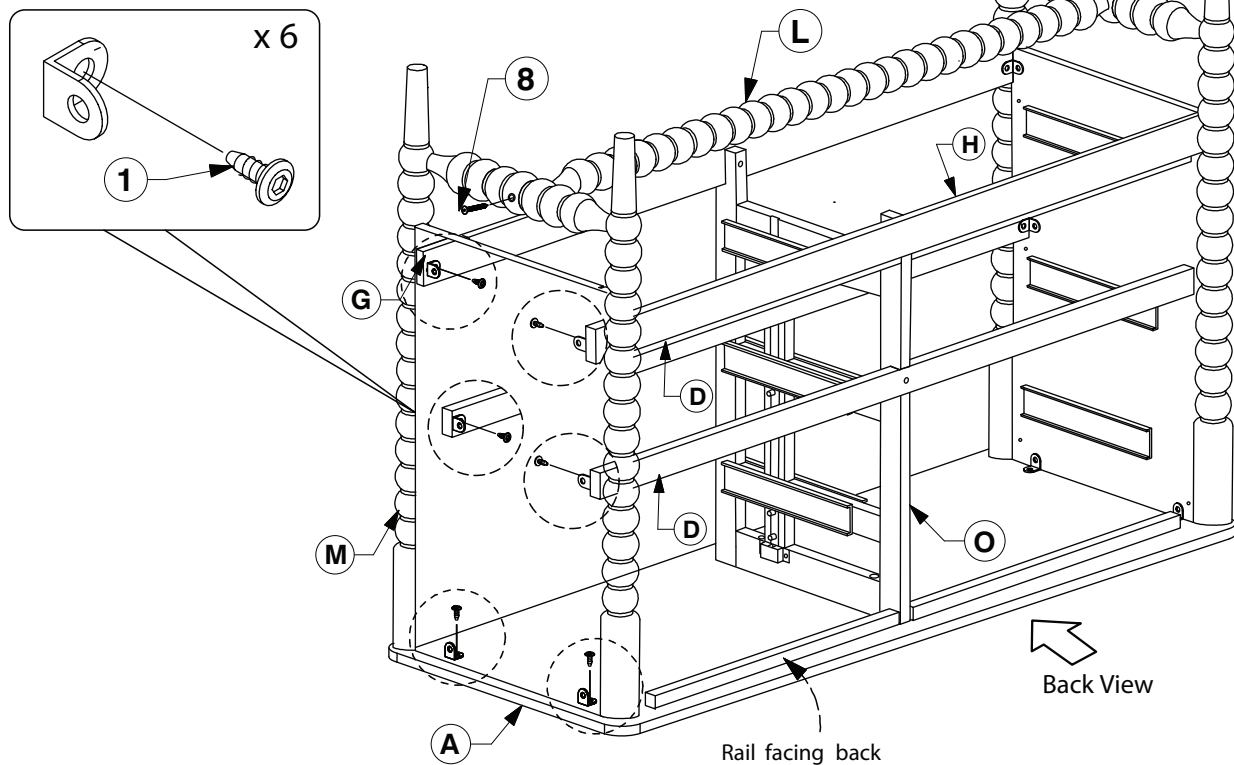


9025 6 Drawer Dresser


Assembly Instructions

WI-1024

- 8** Attached the Back Panel- wider (B) to the back of the Frame.

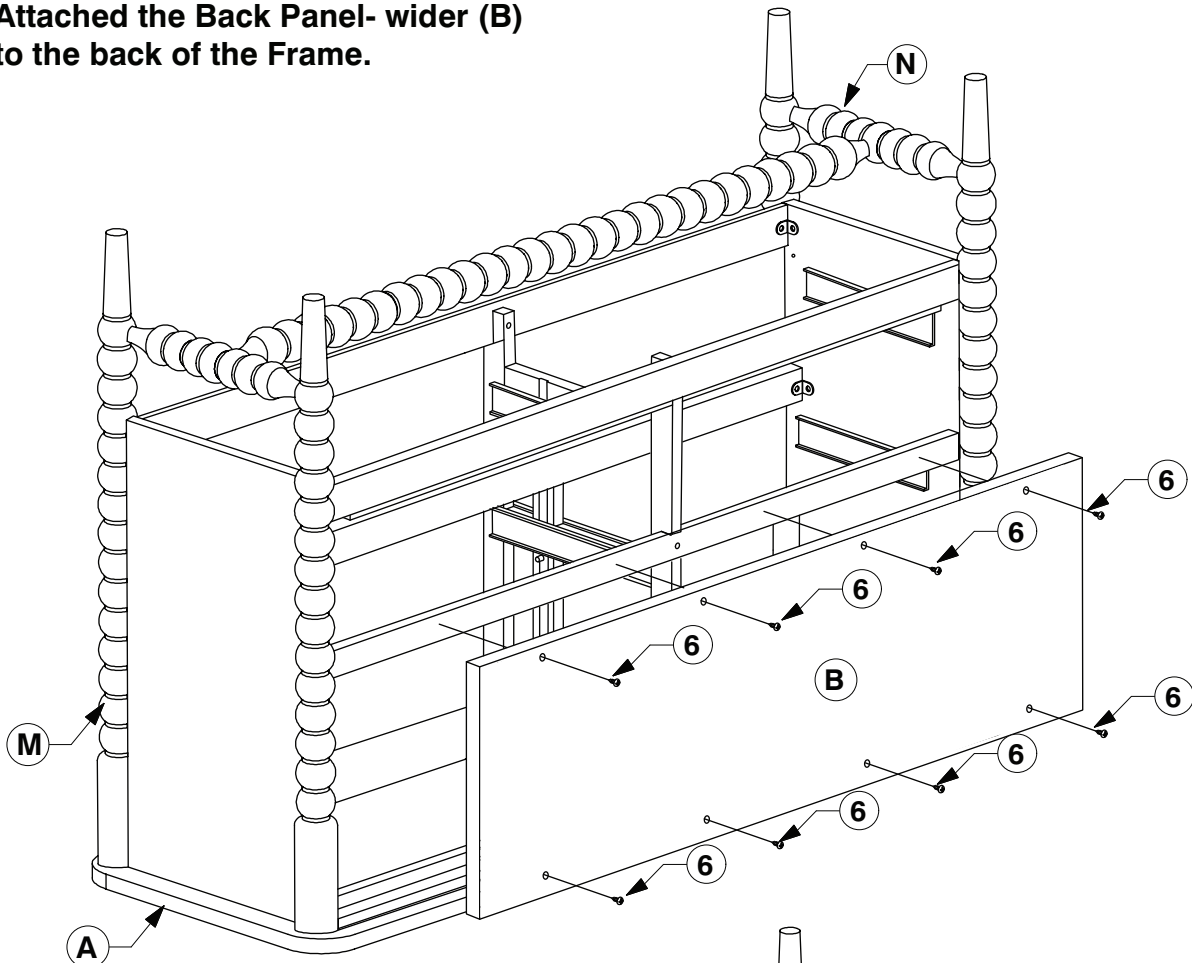

- 9** Attached the Back Panel- narrow (E) to the back of the Frame.

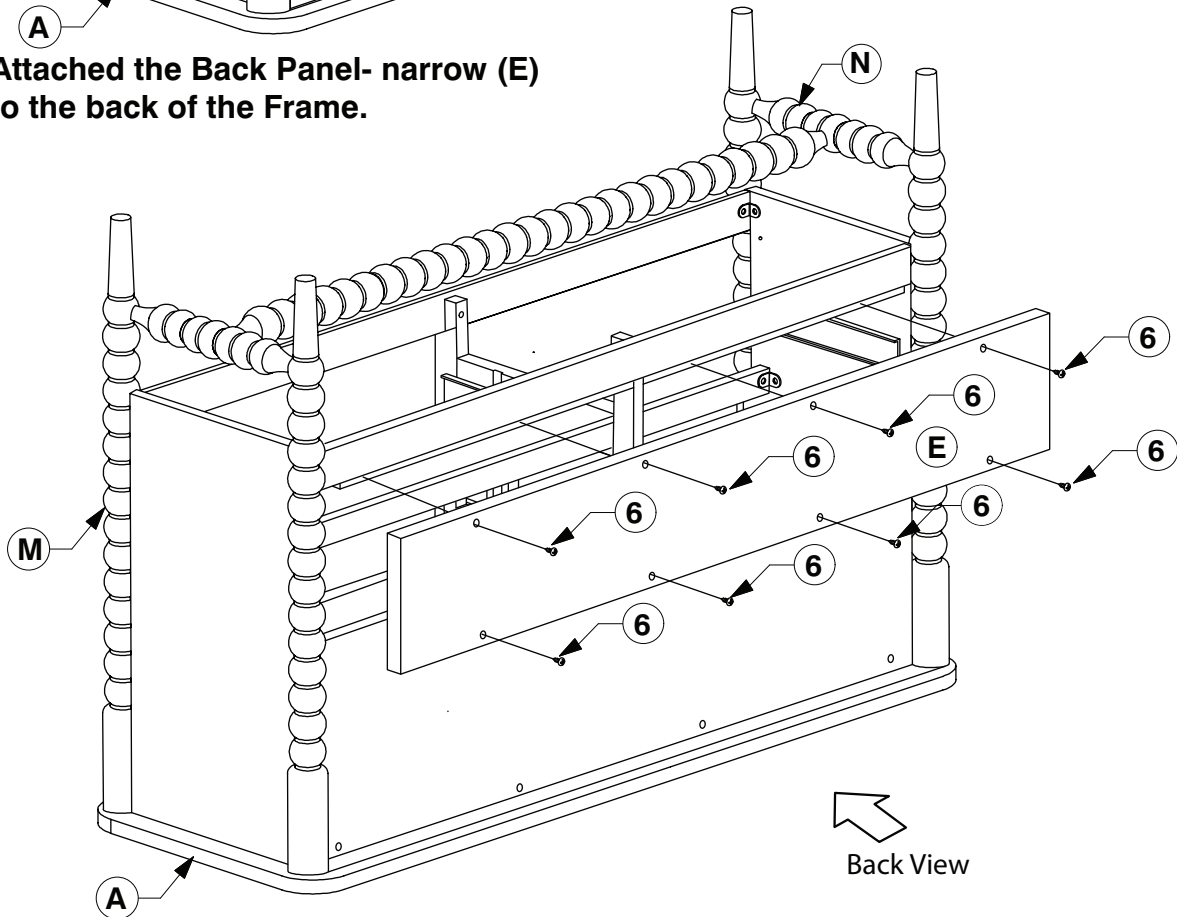

9025 6 Drawer Dresser



Assembly Instructions

WI-1024

10 Install the Drawers.



- Push the Interlock bar **upwards** before inserting the drawers.

LEFT

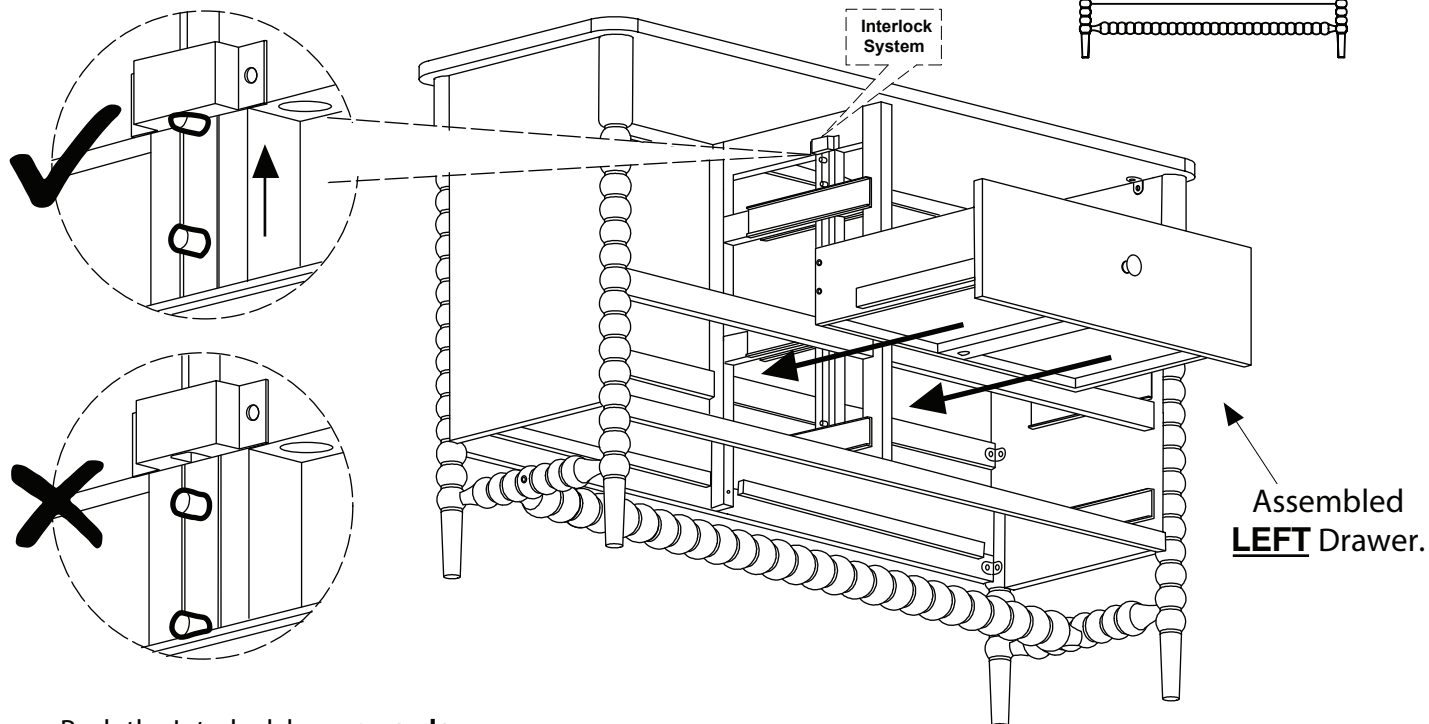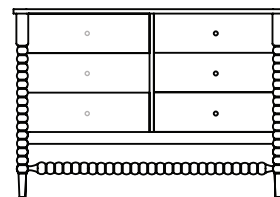

- Push the Interlock bar **upwards** before inserting the drawers.

RIGHT

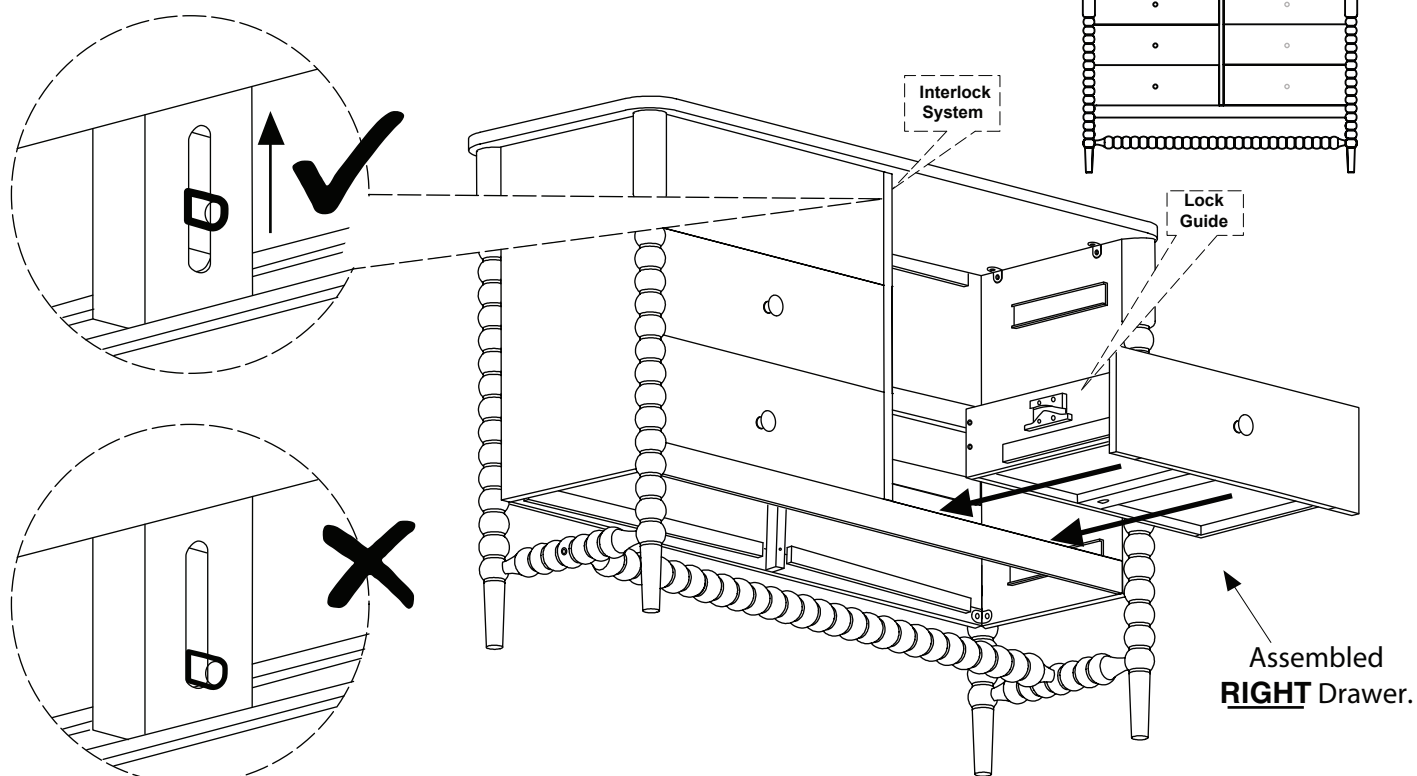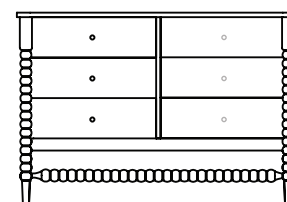


9025 6 Drawer Dresser

Assembly Instructions

WI-1024


11 Adjust the Drawer Face (F).

- * NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment.

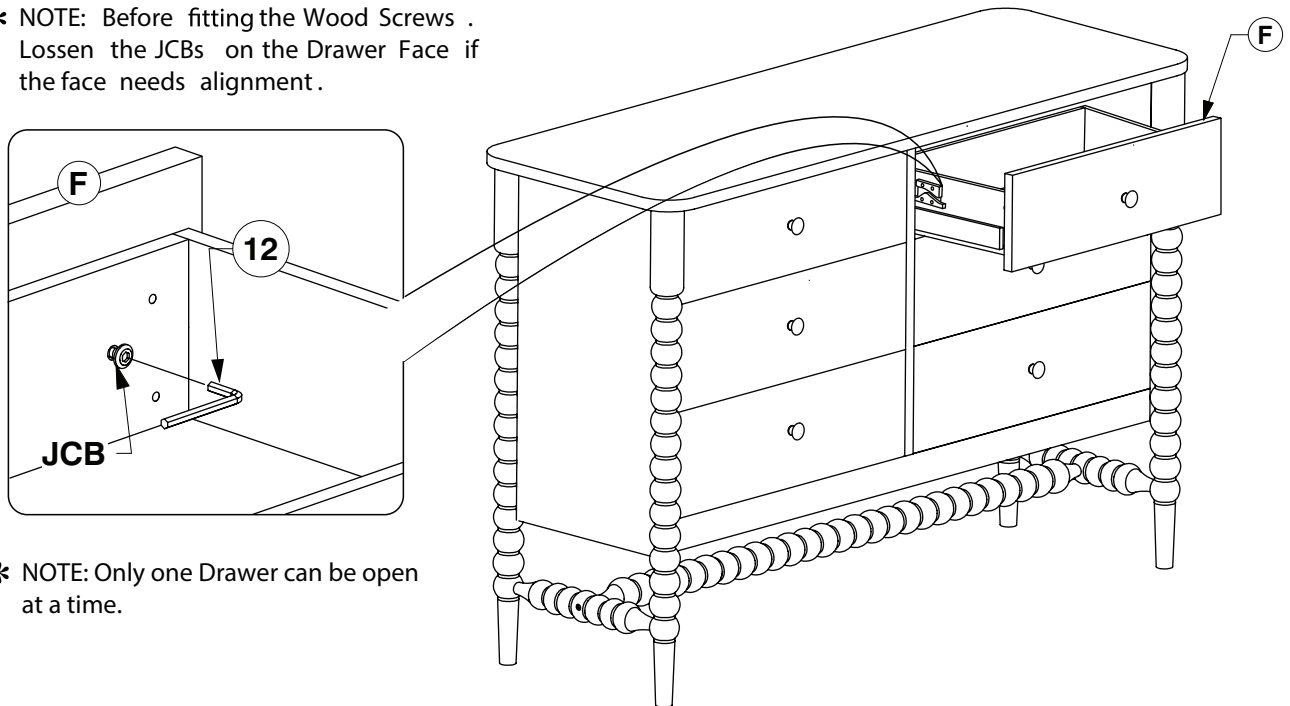

- * NOTE: Only one Drawer can be open
at a time.

12 After the Drawer Faces (F) are aligned, secure with wood screws.

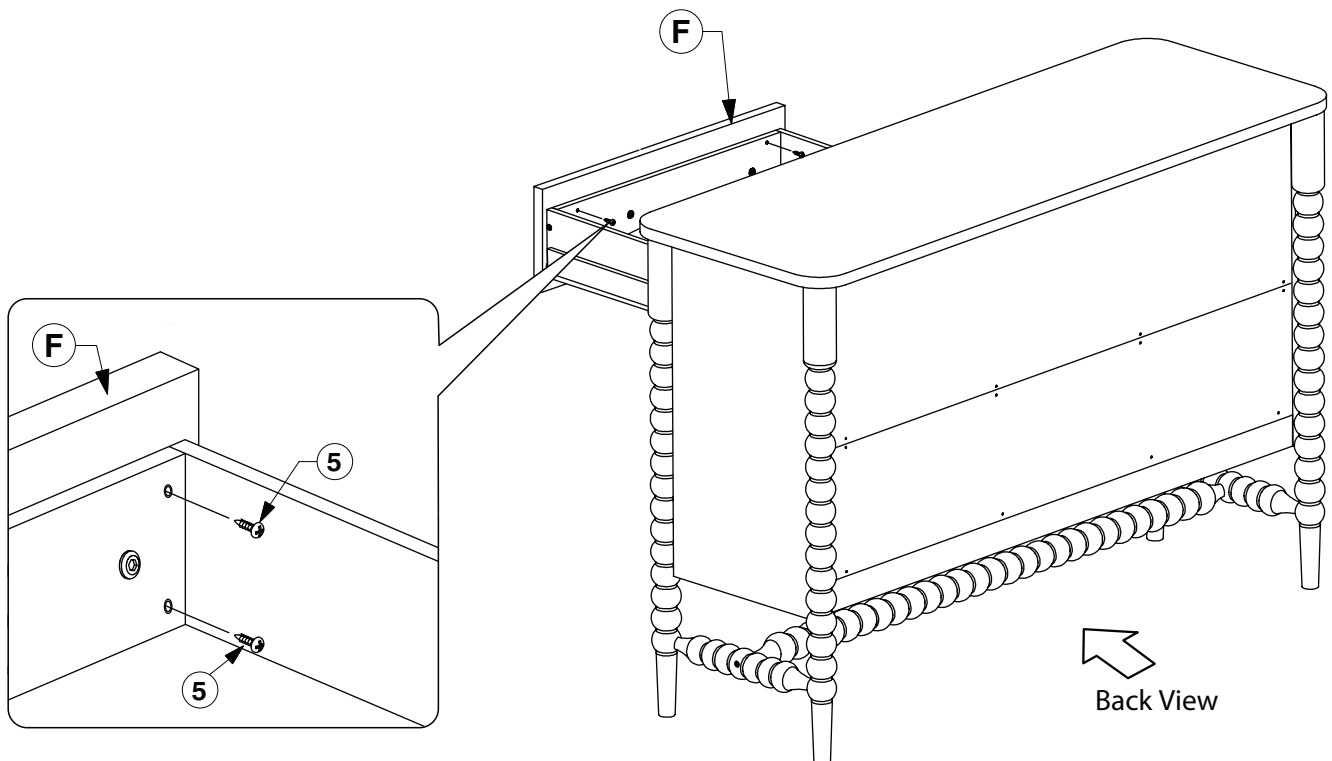

- * NOTE: Only one Drawer can be open
at a time.




9025 6 Drawer Dresser

Assembly Instructions


WI-1024

13 Remove the Drawers.

- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

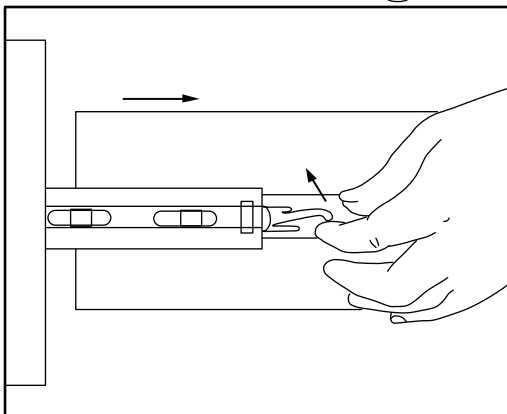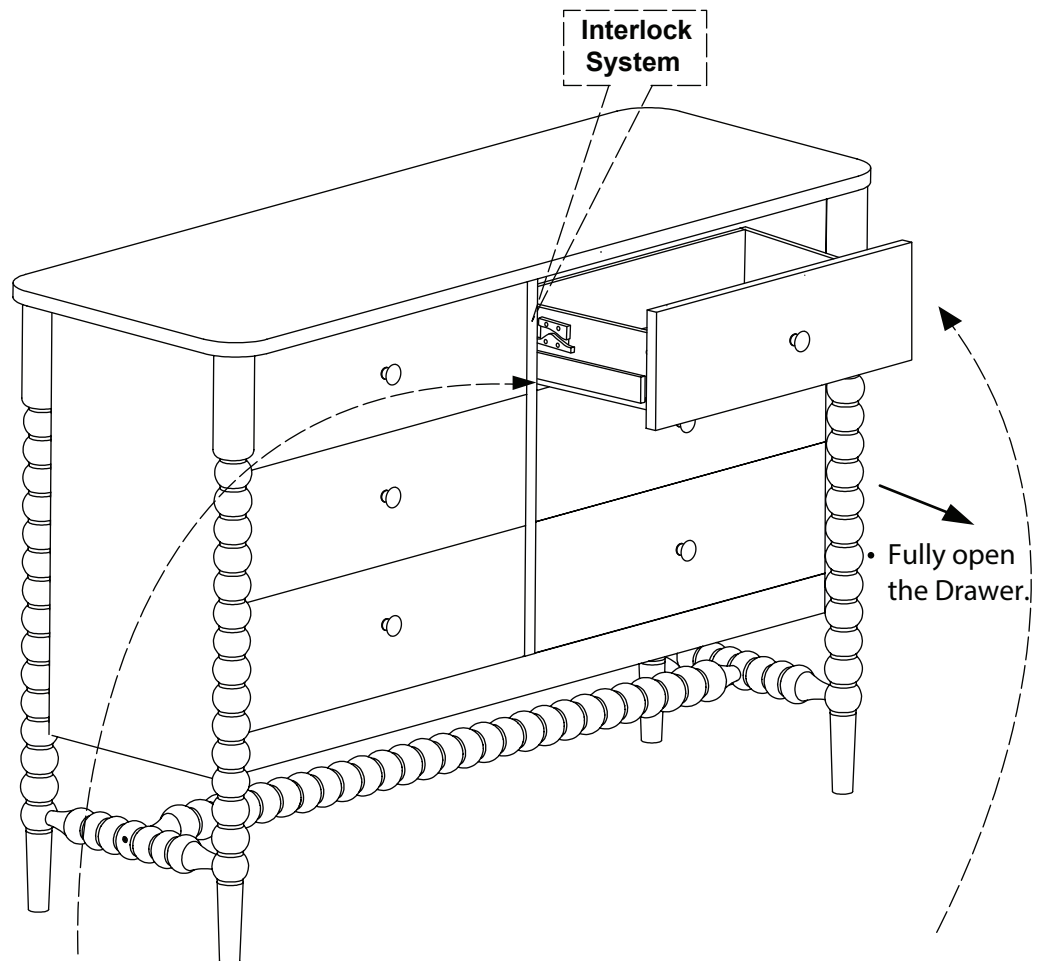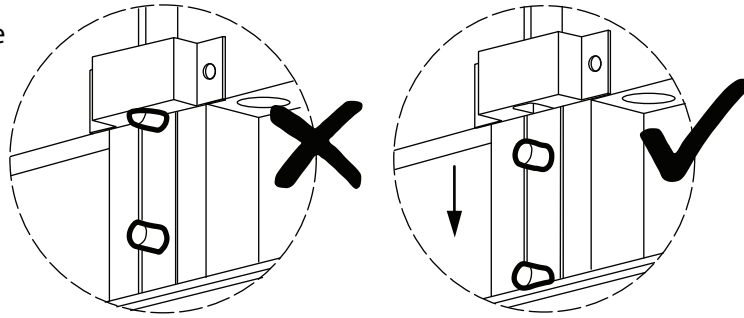

- Lift the **LEFT** side clip up.


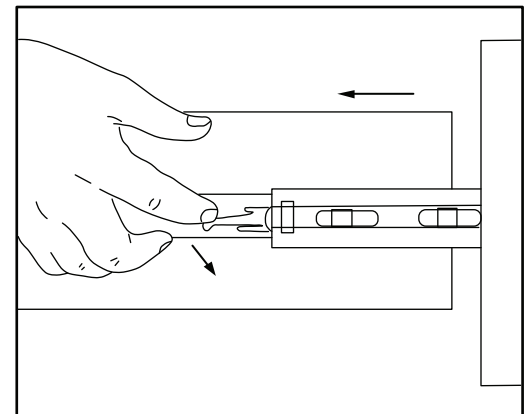


- Push the **RIGHT** side clip down.

9025 4 Drawer Chest


Assembly Instructions

WI-1025

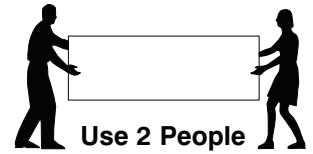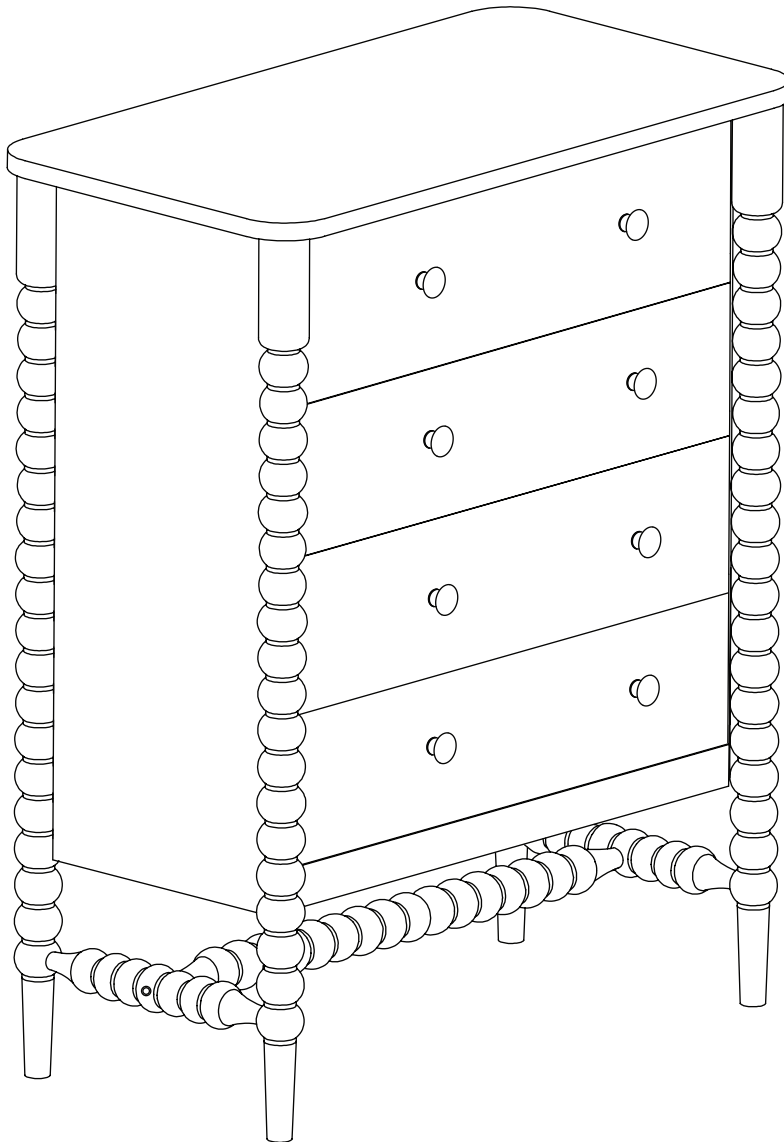

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

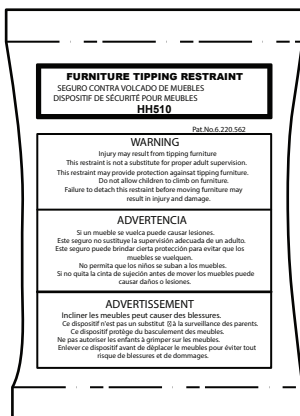

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.










9025 4 Drawer Chest

Assembly Instructions






WI-1025

1 Parts List

Parts in Box A:

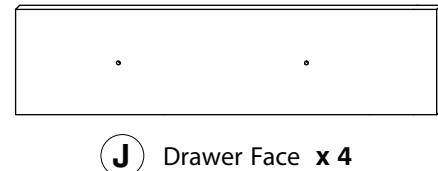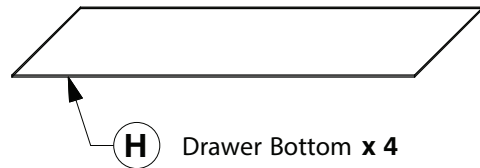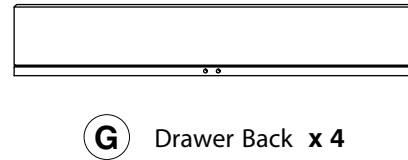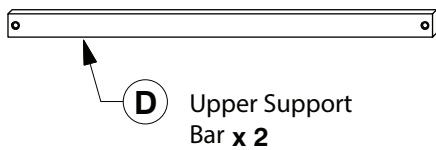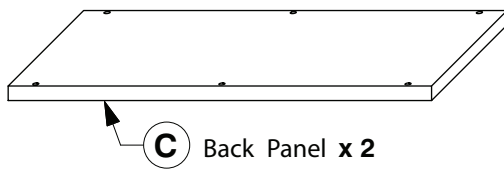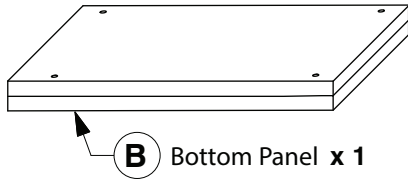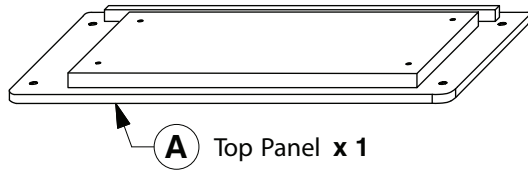

Parts in Box B:







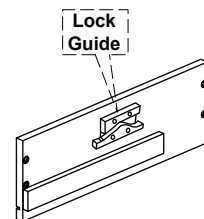

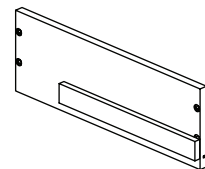

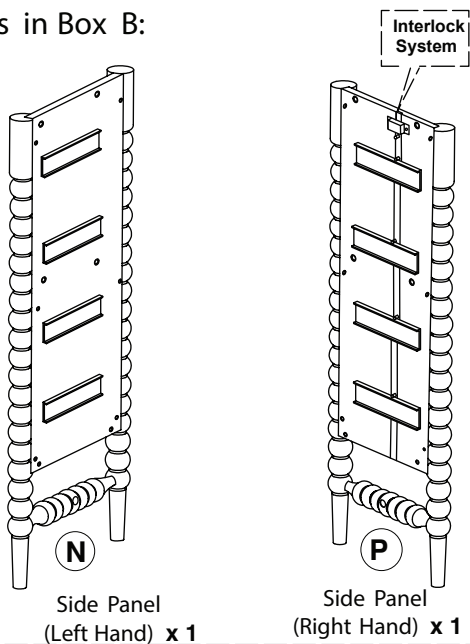


9025 4 Drawer Chest


Assembly Instructions

WI-1025

2 Hardware List

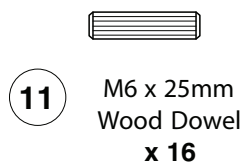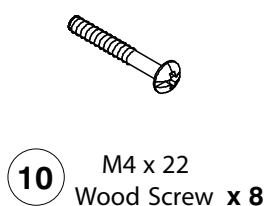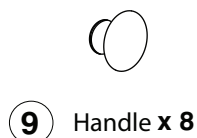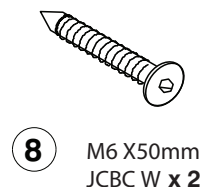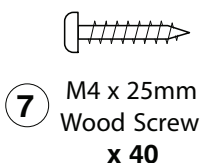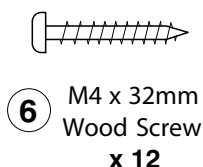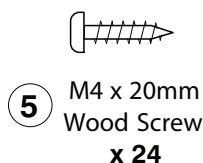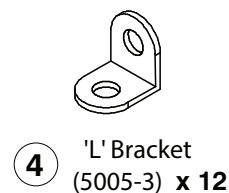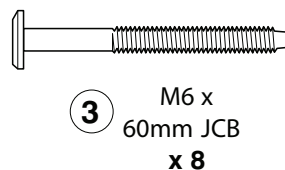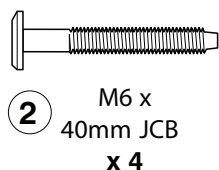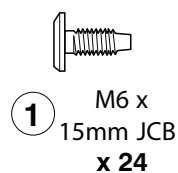

3 Assemble the Drawer Sides (Q & R) & Drawer Rail (K) to the Drawer Face (J).

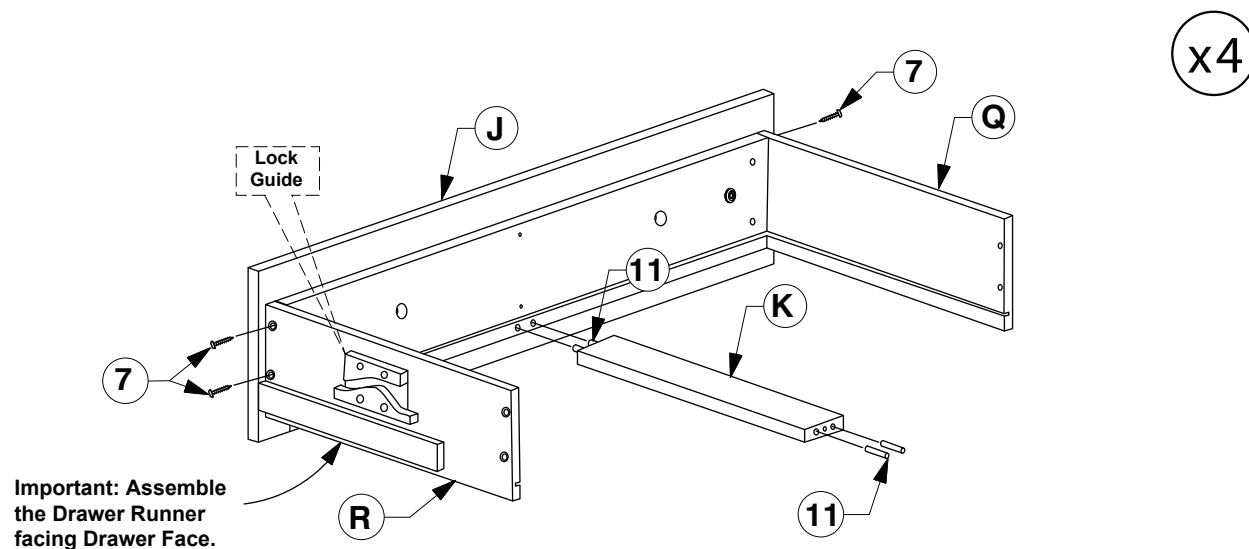


9025 4 Drawer Chest

Assembly Instructions

WI-1025


- 4** Slide the Drawer Bottom (H) into the groove on the Drawer Sides (Q & R).

x4

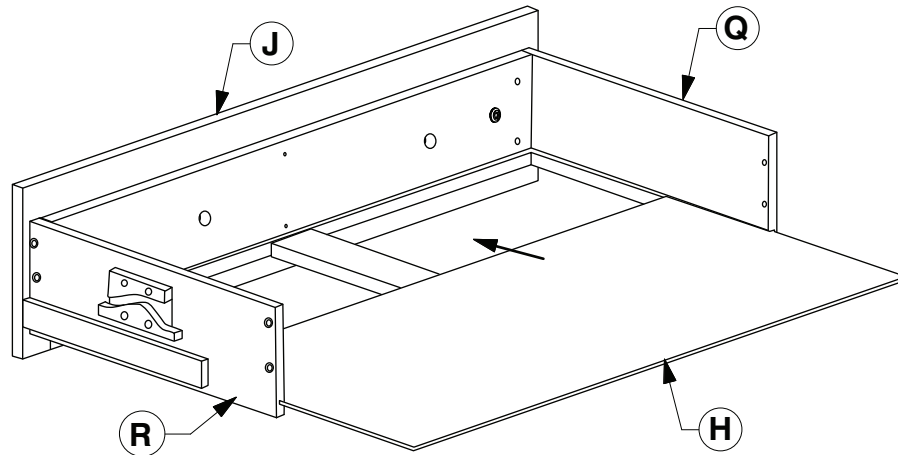


- 5** Assemble the Drawer Back (G) to the Drawer Sides (Q & R). Fit the Handle to the Drawer Face (J).

x4

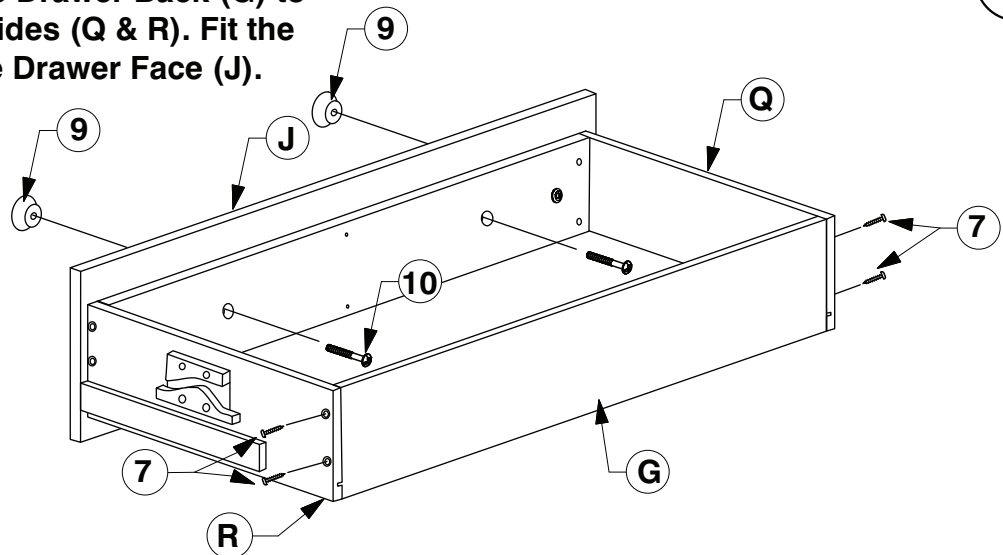

- 6** Turn the Drawer over to fit angled 25mm Wood screws (7) to the Drawer Rail (K).

x4

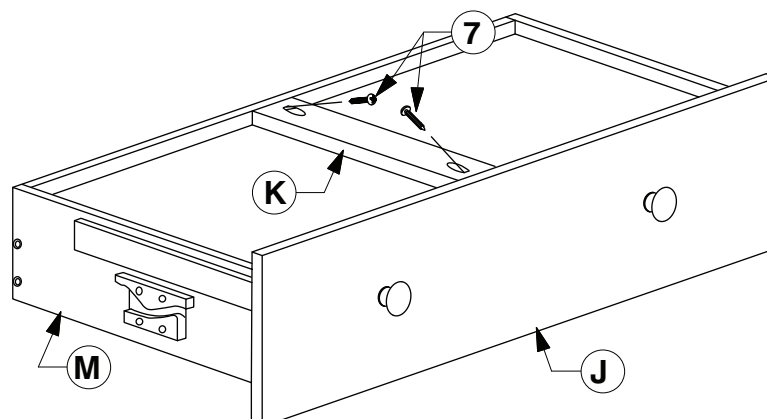


9025 4 Drawer Chest


Assembly Instructions

WI-1025

- 7** Fit the 'L' Bracket (4) to the Side Panel (N & P).

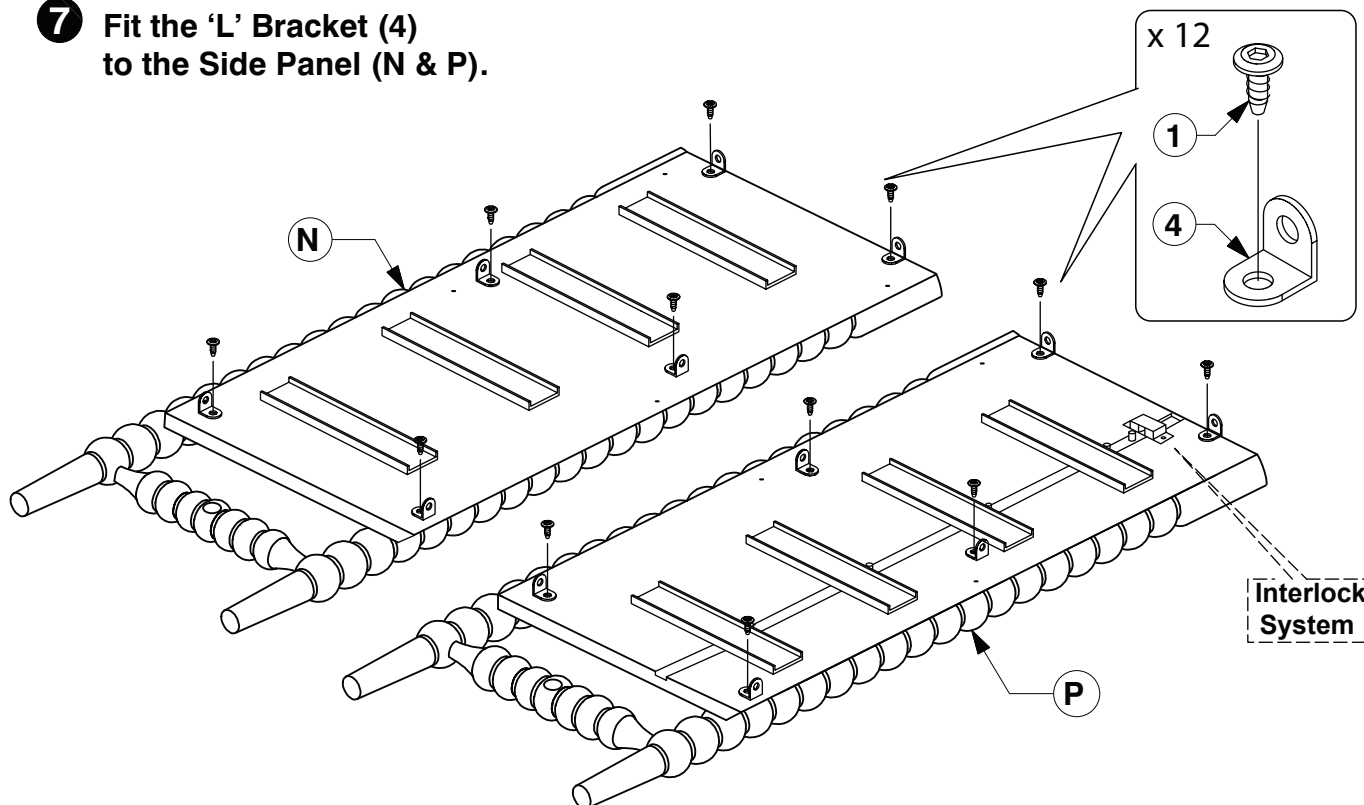

- 8** Assembled the Top Panel (A) and Bottom Support Bar (M) to the Side Panel (P)

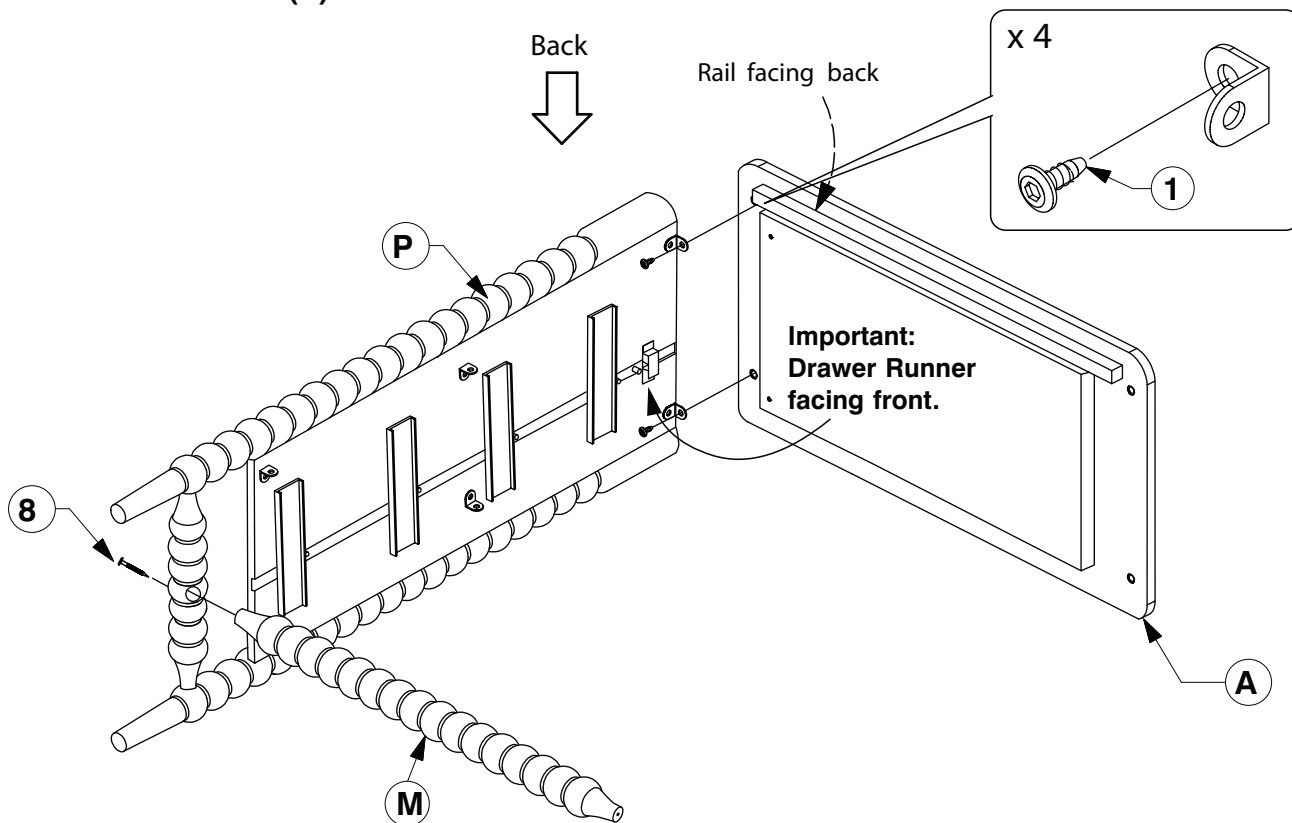

WI-1025

-




9025 4 Drawer Chest


Assembly Instructions

WI-1025

- 11** Assembled the Bottom Support (L) to the Bottom Front & Rear Support Bar (E & F) as shown.

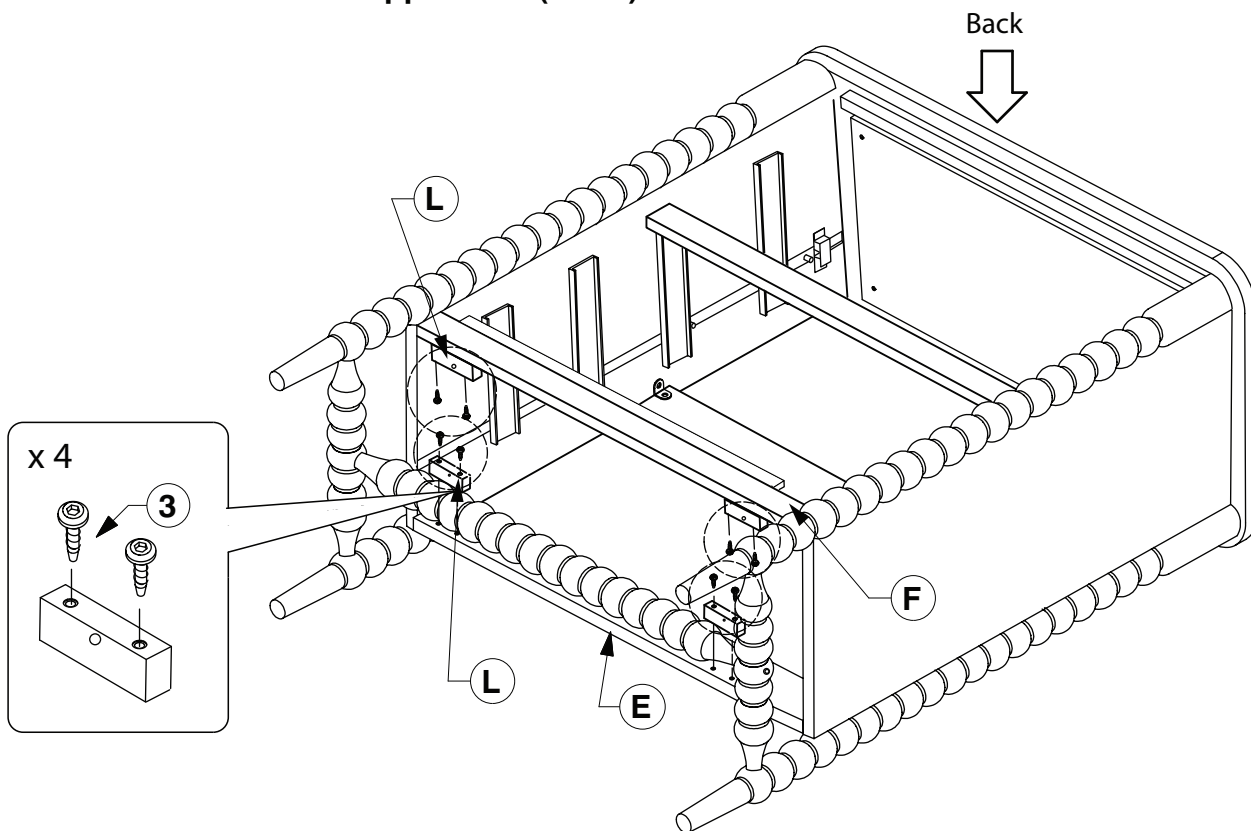

- 12** Bolt the Bottom Support (L) to the Bottom Panel (B) as shown.

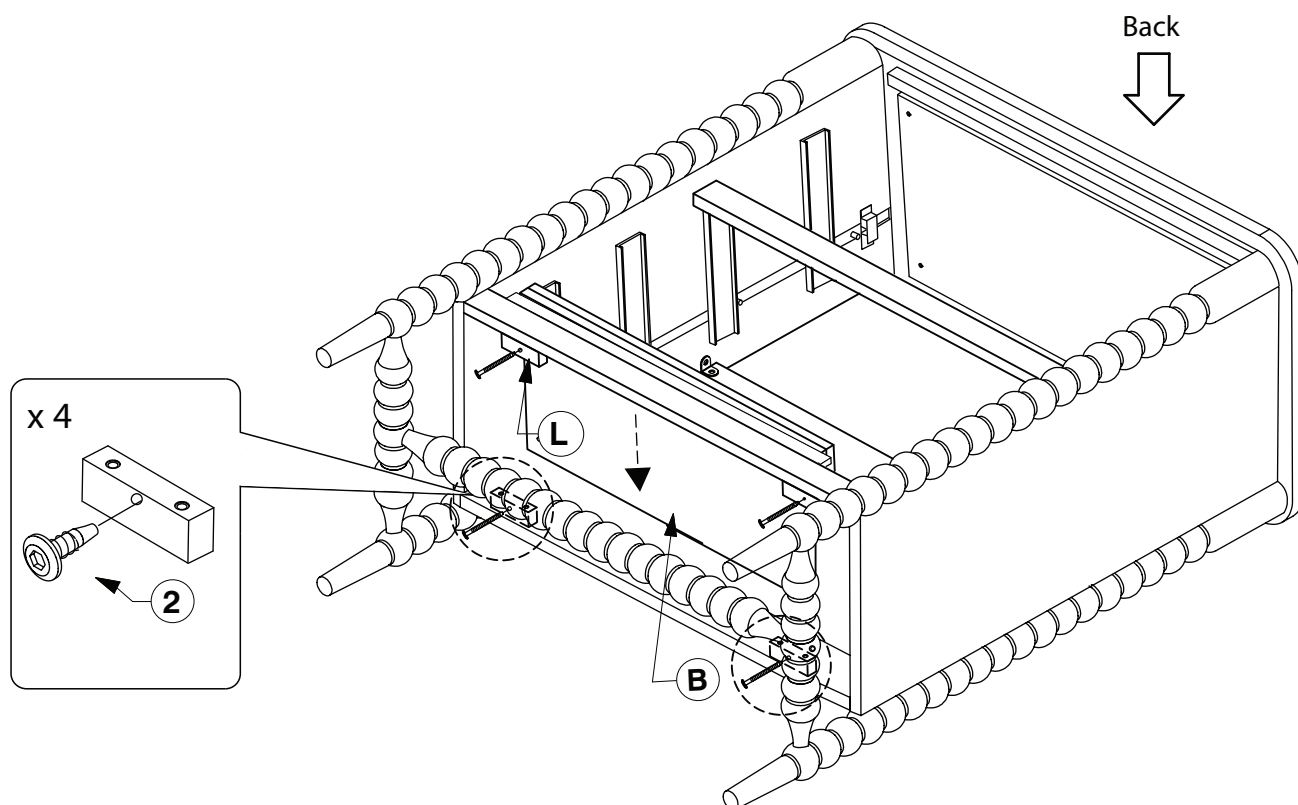


9025 4 Drawer Chest

Assembly Instructions


WI-1025

13 Attached the Back Panel (C) to the back of the frame.

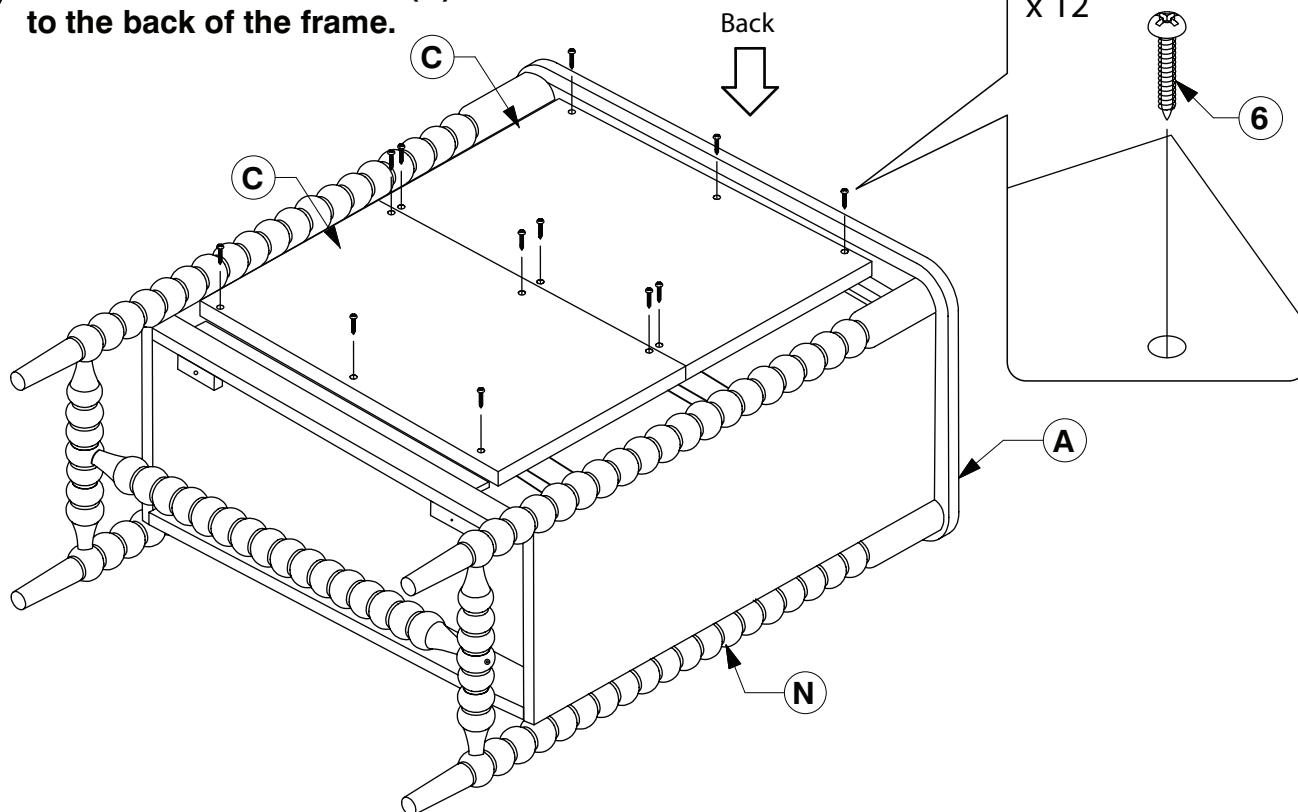

14 Install the Drawer.

- Push the Interlock bar upwards before inserting the drawers.

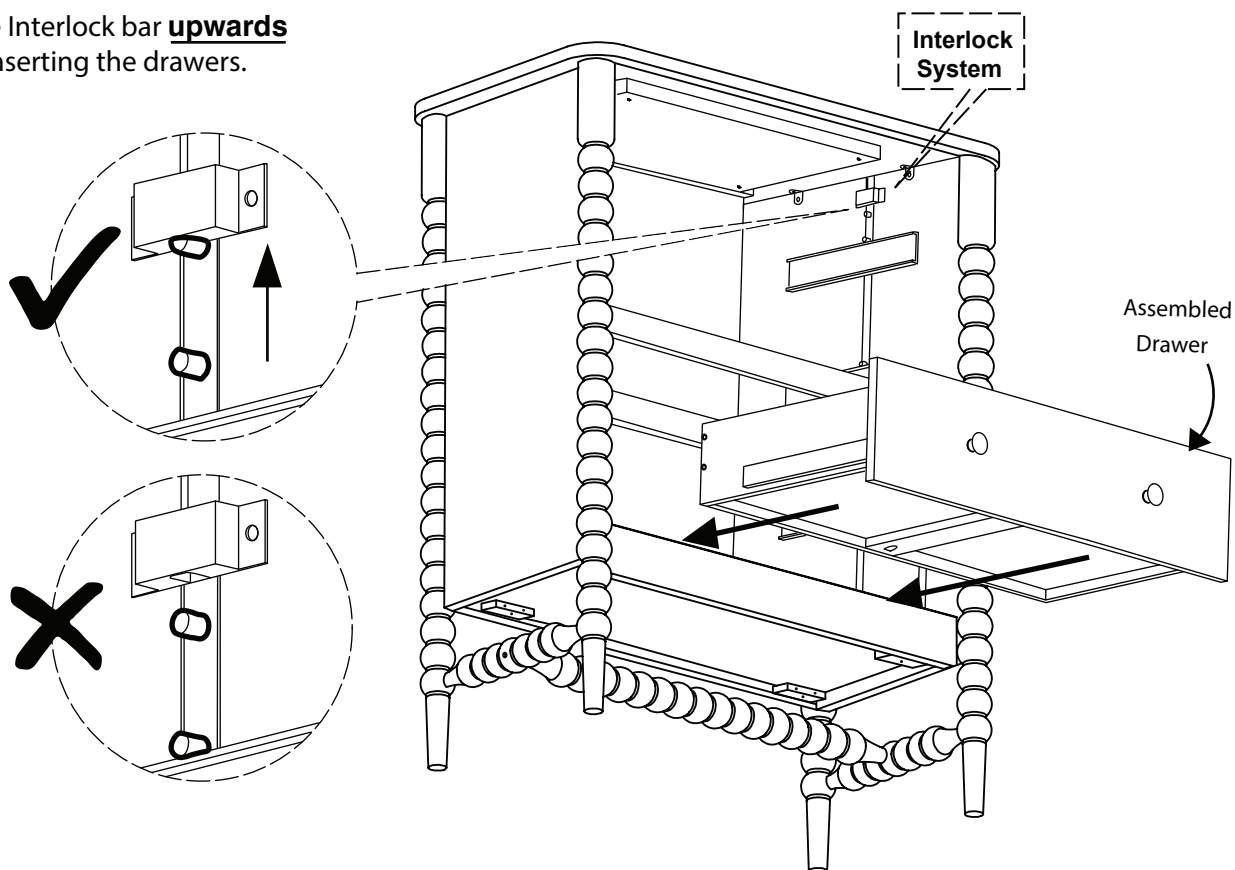


9025 4 Drawer Chest

Assembly Instructions


WI-1025

15 Fit and adjust the Drawer Face (J).


* NOTE: Before fitting the Wood Screws .
Losen the JCBs on the Drawer Face if
the face needs alignment.

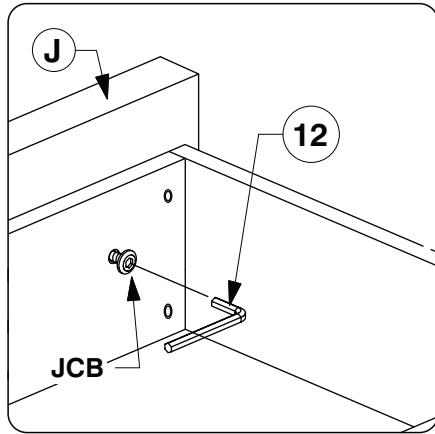


* NOTE: Only one Drawer can be open
at a time.

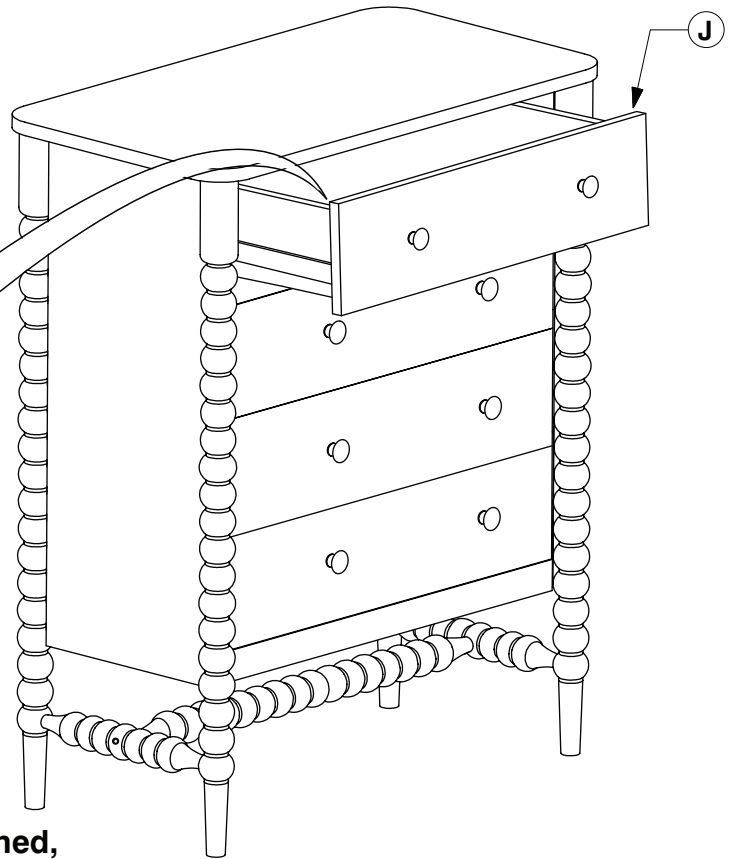

16 After the Drawer Faces (J) are aligned, secure with wood screws.

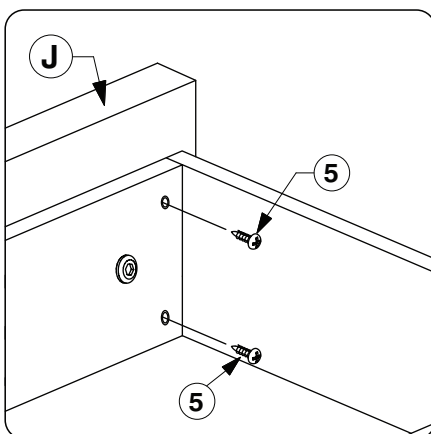

* NOTE: Only one Drawer can be open
at a time.

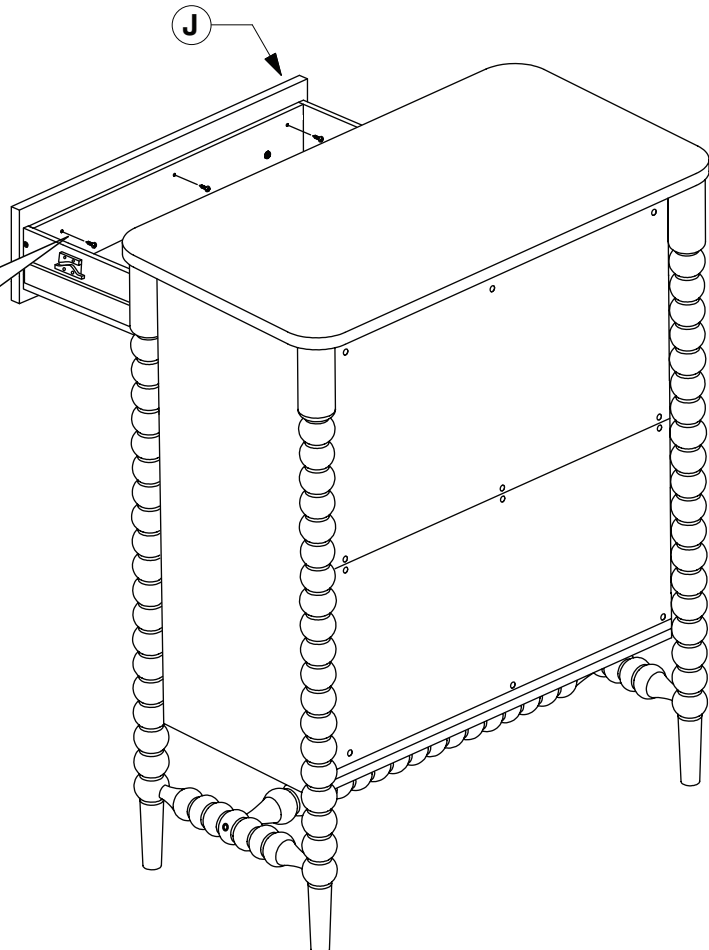




9025 4 Drawer Chest

Assembly Instructions


WI-1025

17 Remove the Drawers.

- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

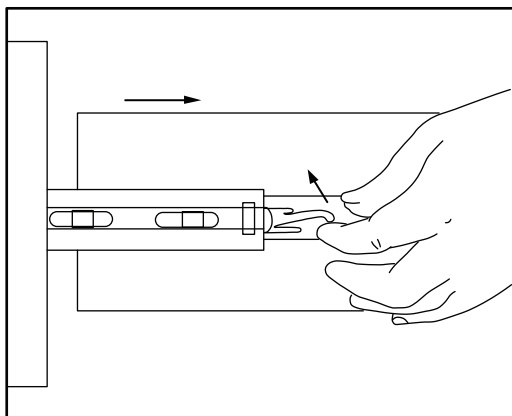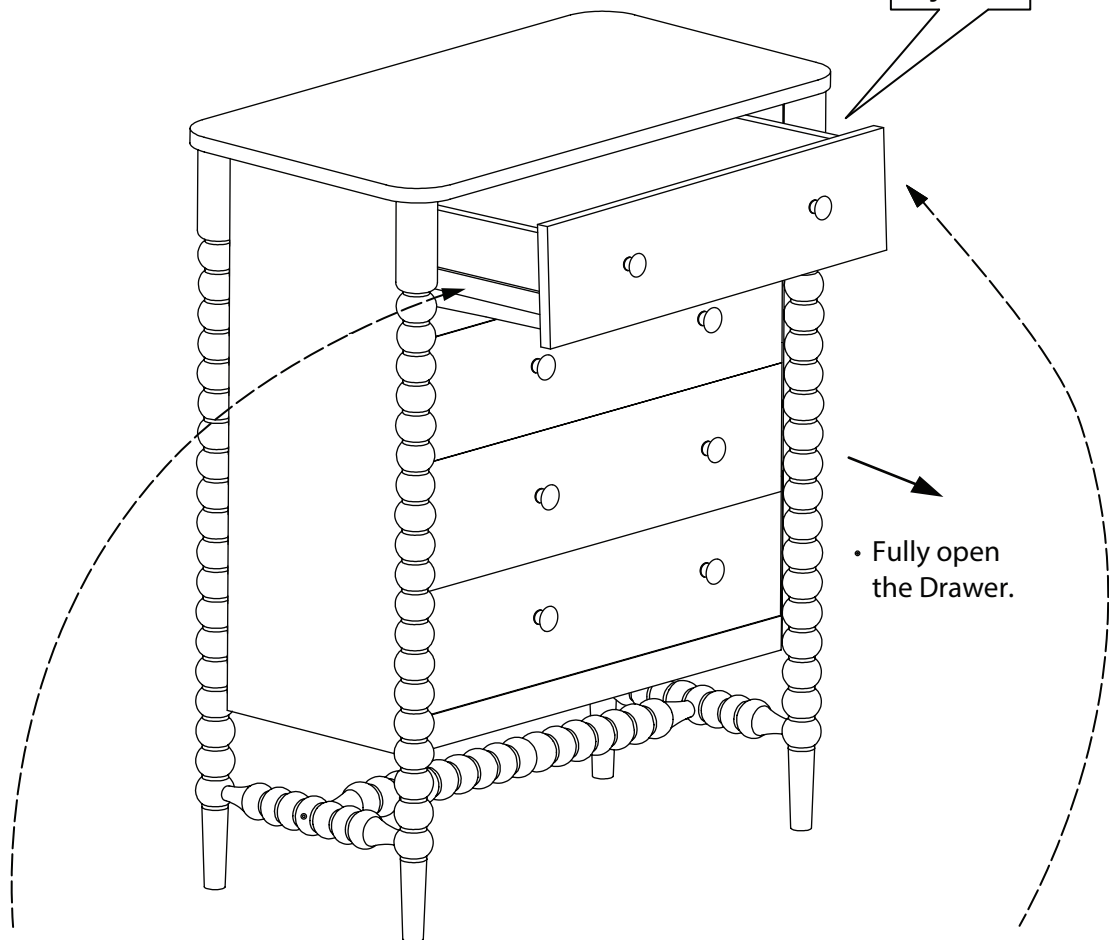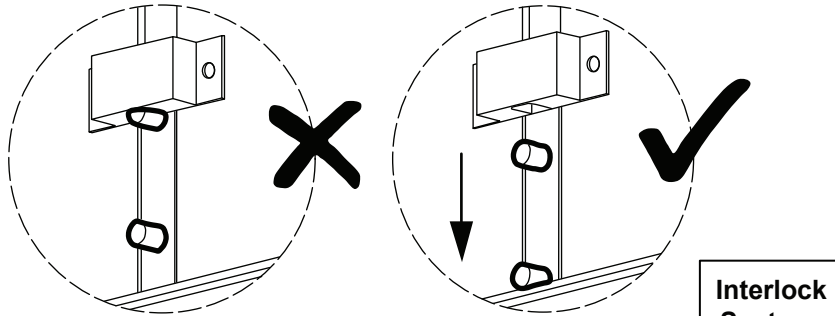

- Lift the **LEFT** side clip up.

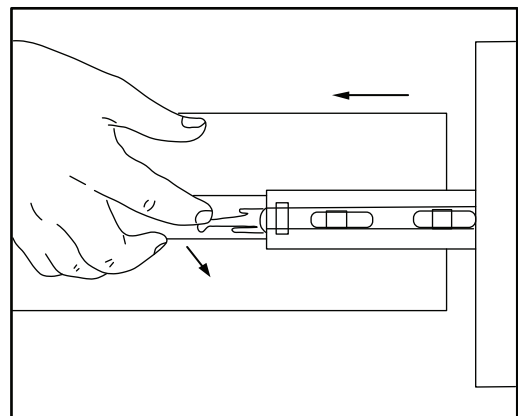

- Push the **RIGHT** side clip down.