


0110-8 Twin Bed

Assembly Instructions




WI-1225

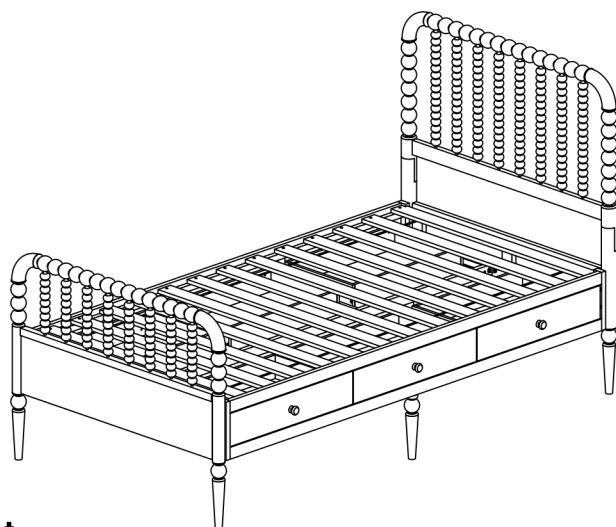



Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

Parts in Box A:

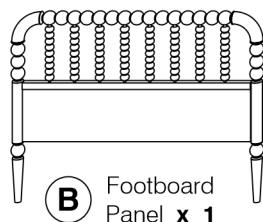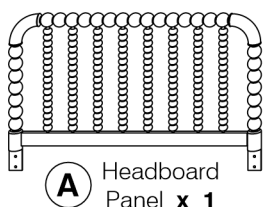

C Headboard Lower Panel x 1

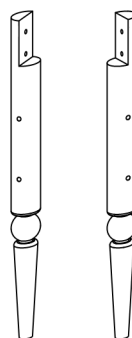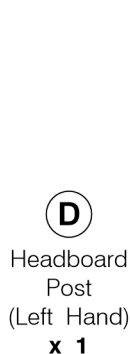


F Center Post x 2




G Drawer Bottom x 6

Parts in Box B:




H Drawer Face x 6



J Drawer Back x 6



K Drawer Rail x 6

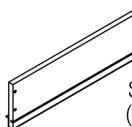

L Drawer Side Panel (Left Hand) x 6



M Drawer Side Panel (Right Hand) x 6




R Support Bar (Right Hand) x 2




N Side Rail Frame x 2




O Support Rail x 2



P Support Bar (Left Hand) x 2



Q Support Bar (Center) x 4

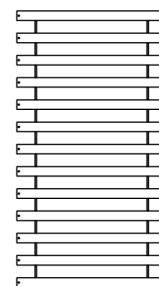













S Set of Bed Slats x 1

0110-8 Twin Bed

Assembly Instructions


WI-1225

2 Hardware List

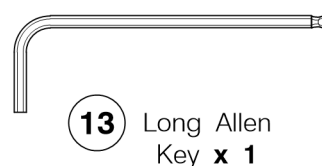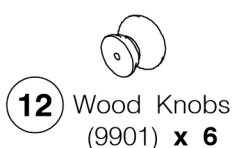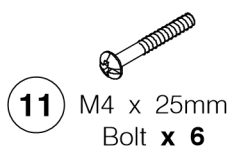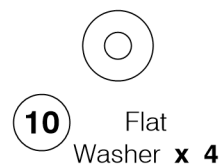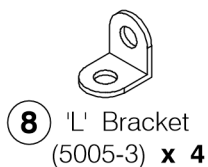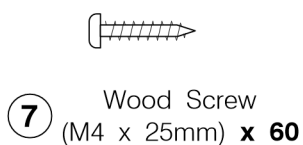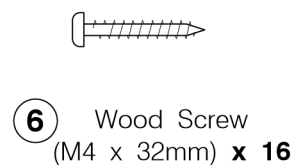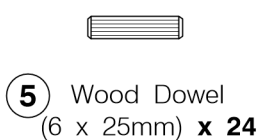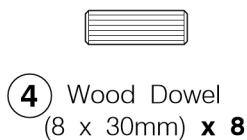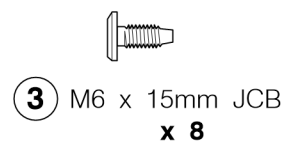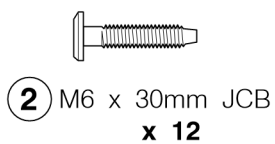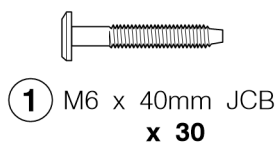

3 Assemble the Drawer Sides (L & M) & Drawer Rail (K) to the Drawer Face (H).

x6

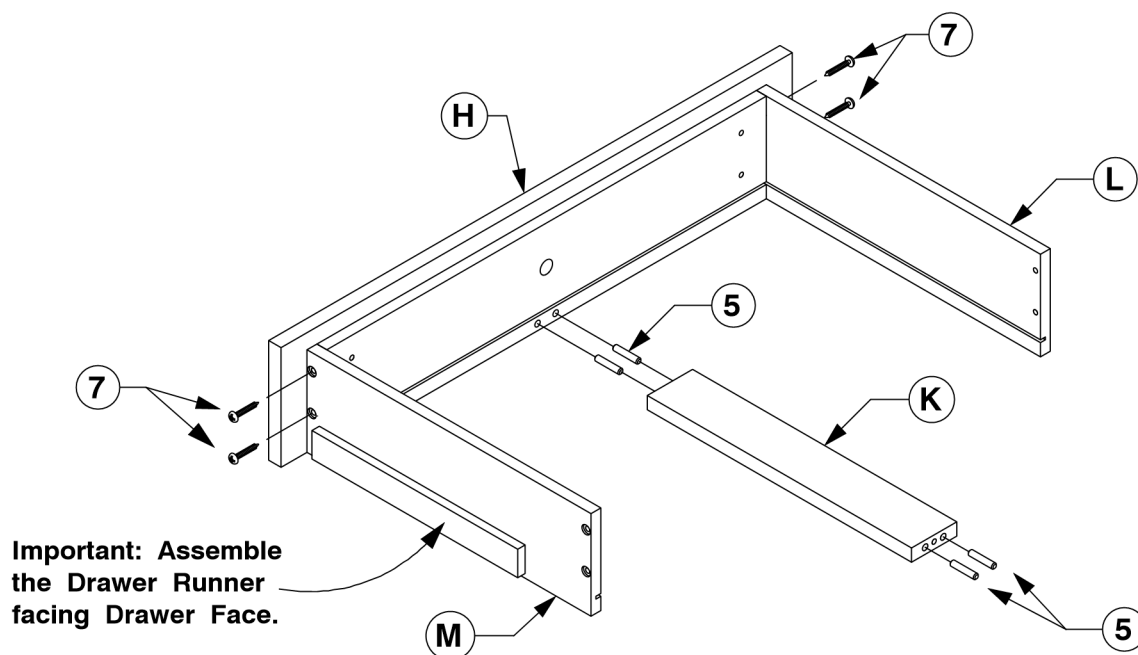


0110-8 Twin Bed

Assembly Instructions


WI-1225

- 4** Slide the Drawer Bottom (G) into the groove on the Drawer Sides (L & M).

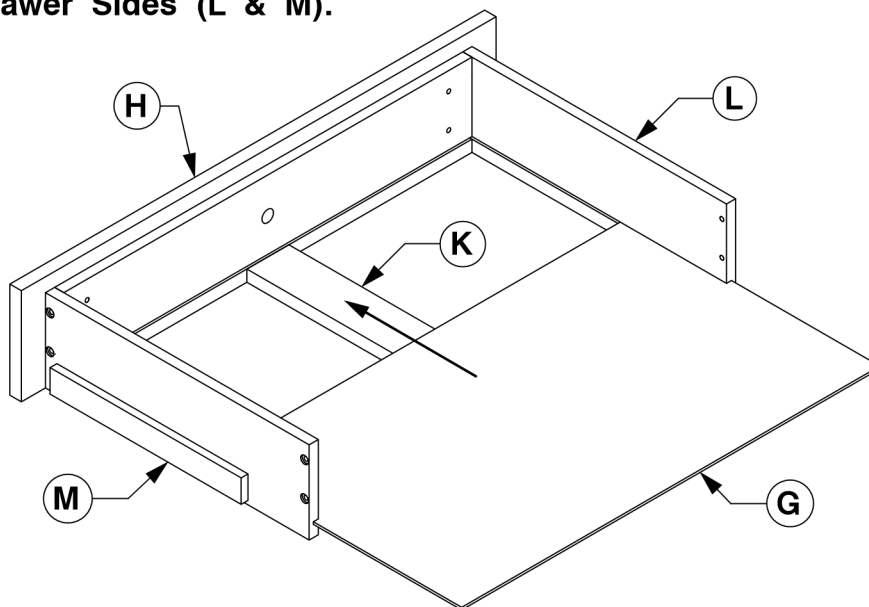


x6

- 5** Assemble the Drawer Back (J) to the Drawer Sides (L & M). Fit the Handles to the Drawer Face (H).

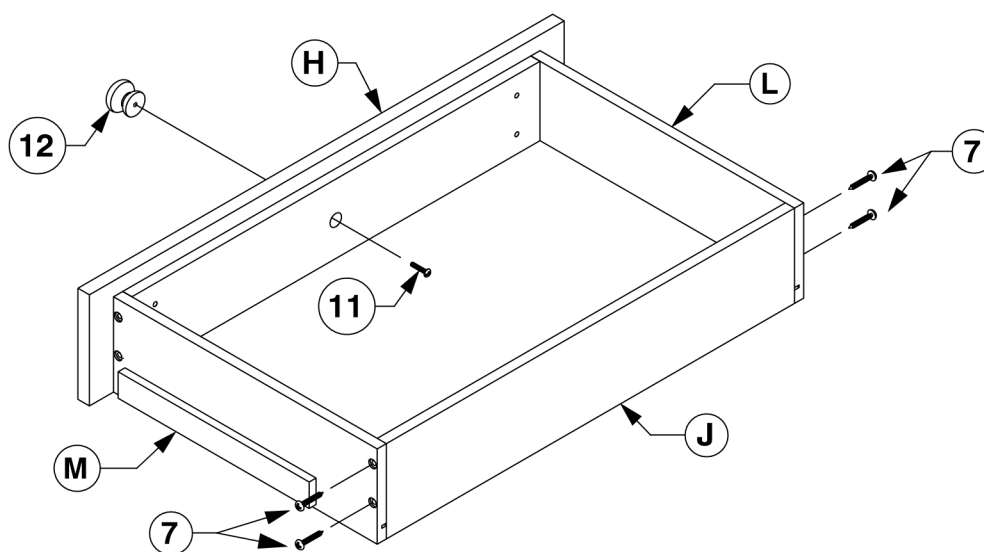

x6

- 6** Turn the Drawer over to fit angled 25mm Wood screws (7) to the Drawer Rail (K).

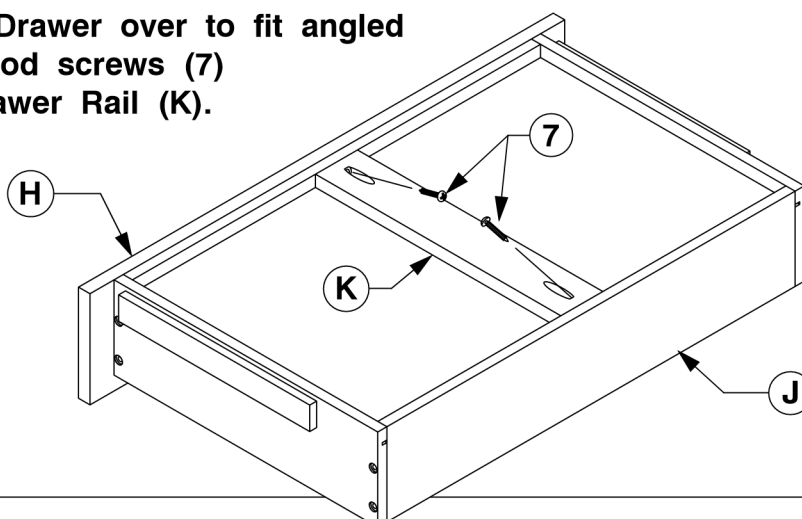


x6

0110-8 Twin Bed

Assembly Instructions


WI-1225

- 7** Assemble the Headboard Lower Panel (C) to the Headboard Post (D & E).

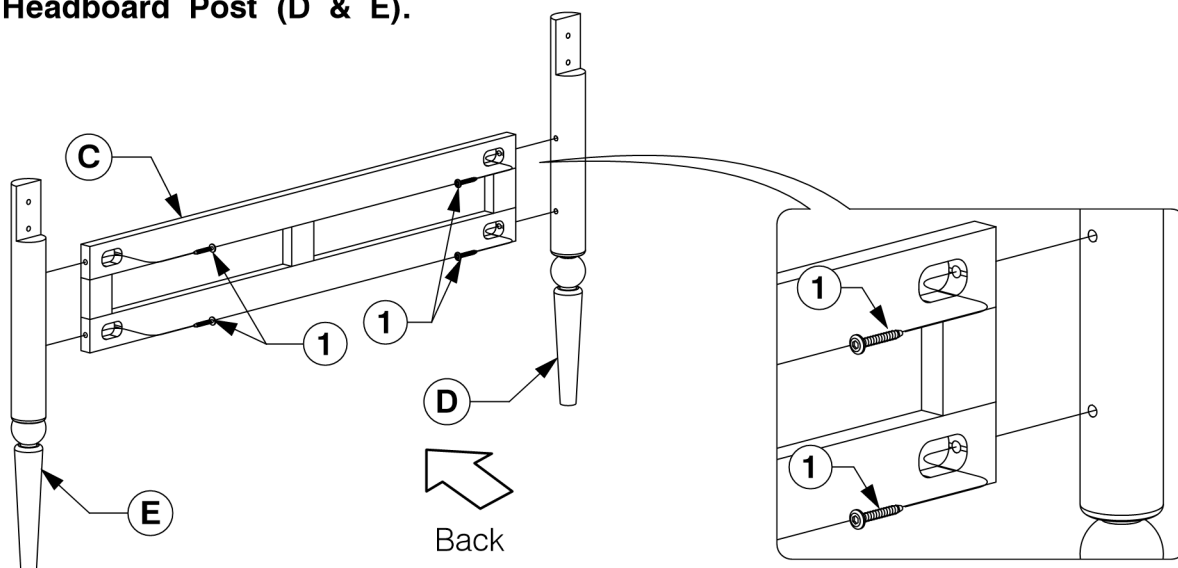


Step 1

Use the ball end of Allen key to start the bolt.

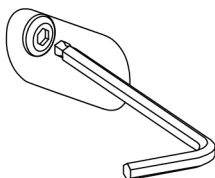


Step 2

Tighten fully with the straight end.

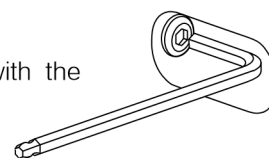

- 8** Assemble the Headboard Panel (A) to the Headboard Post (D & E).

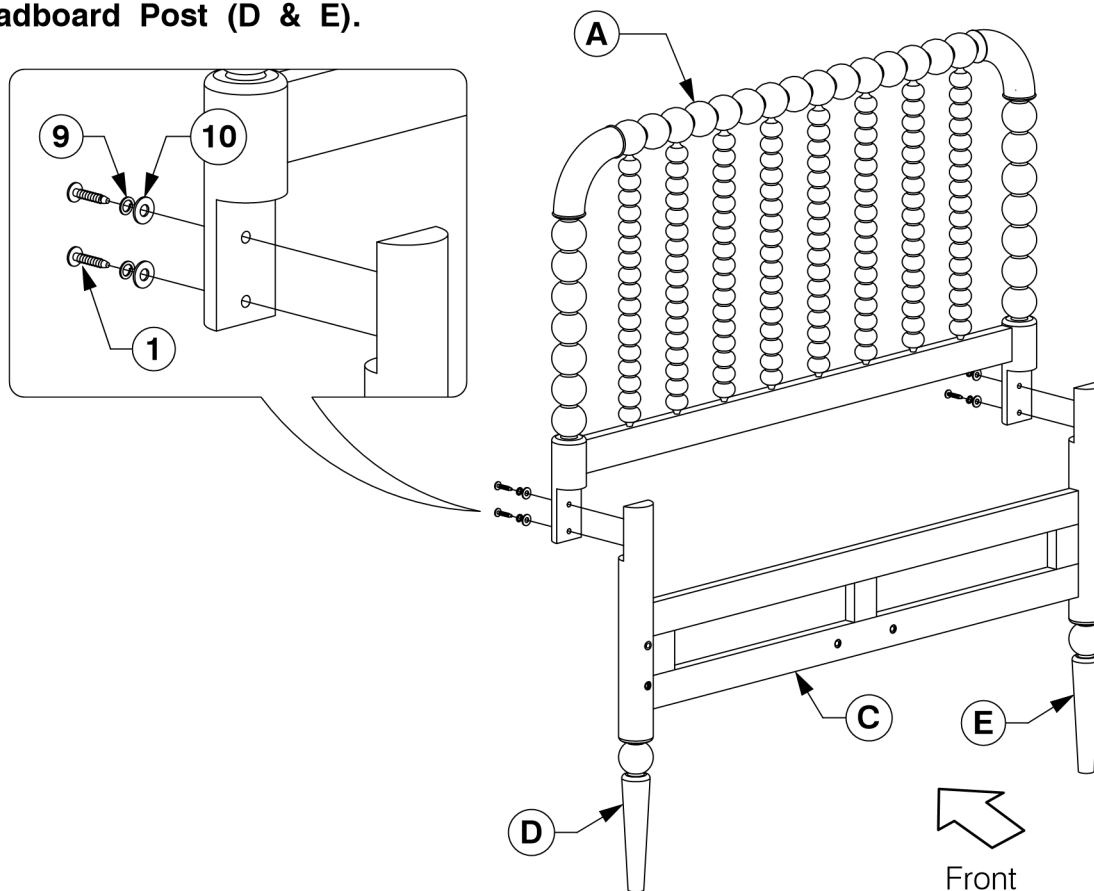


0110-8 Twin Bed

Assembly Instructions

WI-1225


9 Fit the 'L' Bracket (8) to the Support Rail (O).

Assembly required $\times 2$ (Left & Right).

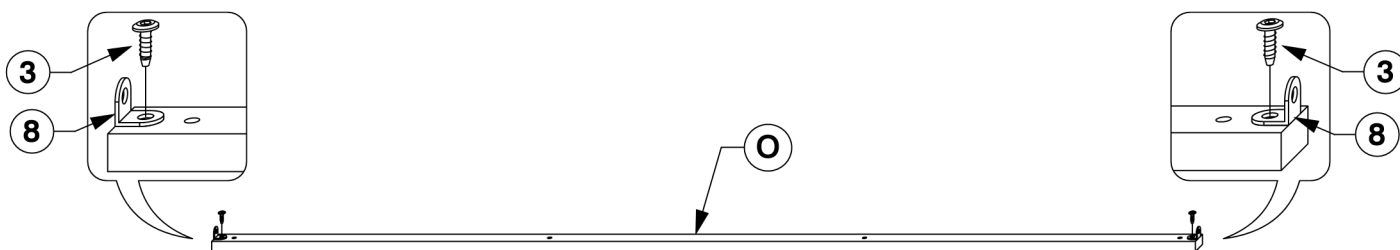


10 Fit the Side Rail Frame (N) & Support Rail (O) to the Support Bar (P, Q, & R).

Assembly required $\times 2$ (Left & Right).

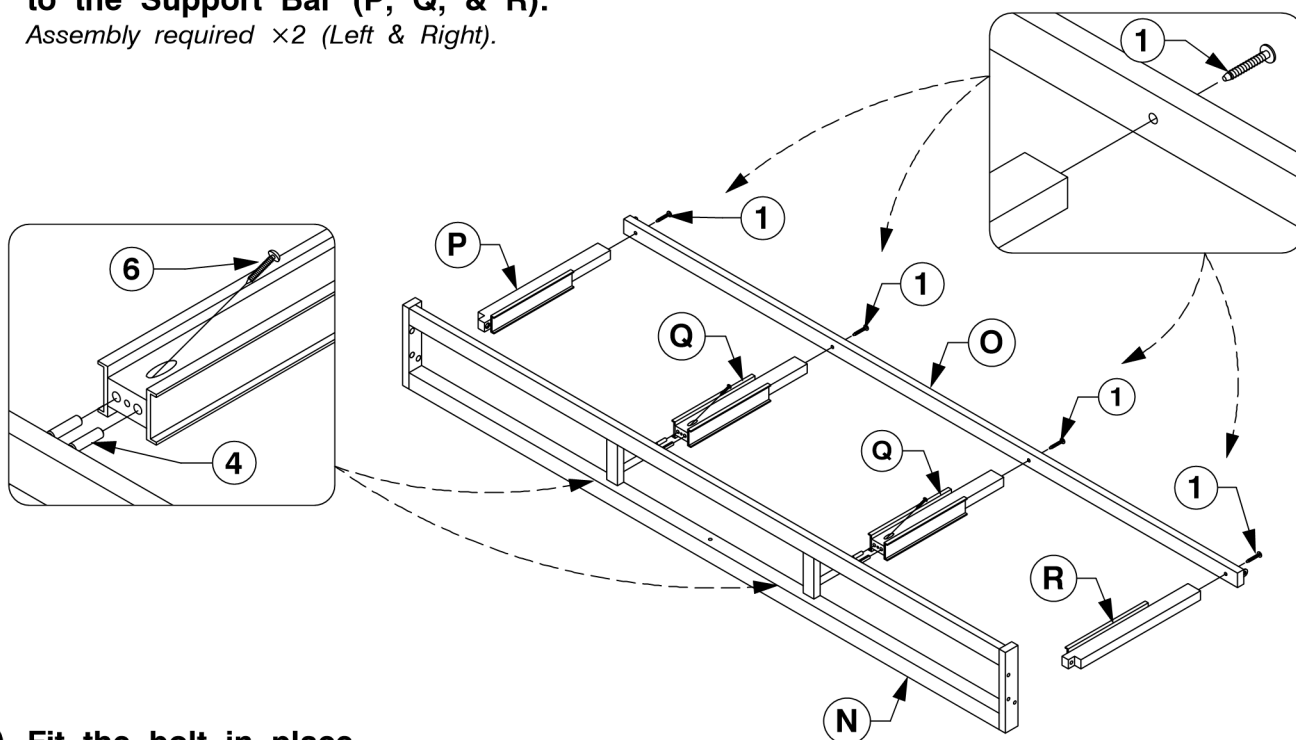

11 Fit the bolt in place.

Assembly required $\times 2$ (Left & Right).

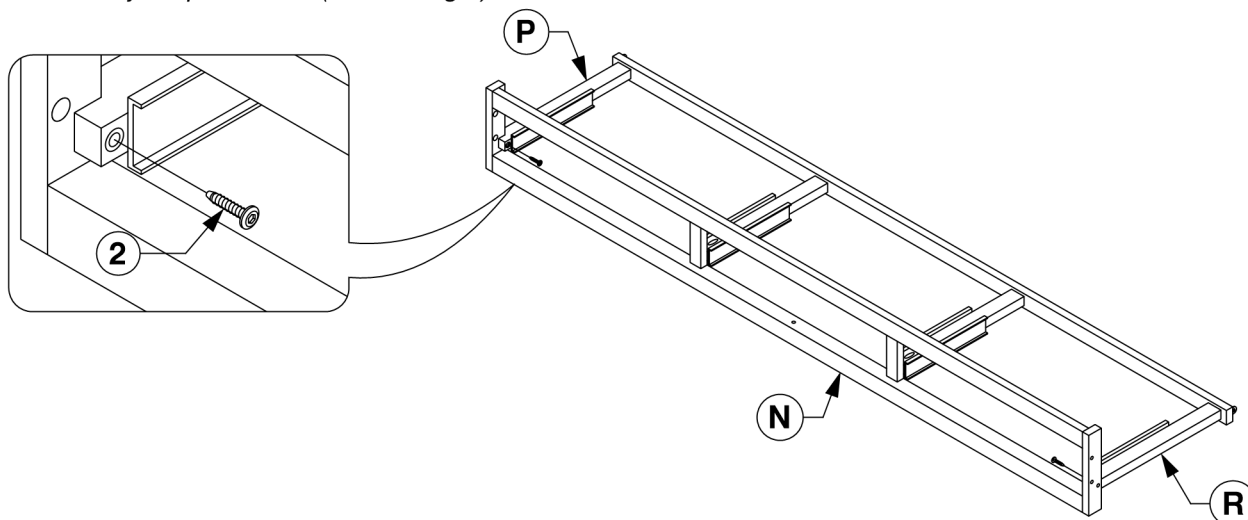


0110-8 Twin Bed


Assembly Instructions

WI-1225

- 12** Assemble the Side Rail Frame (N) & Support Rail (O) to the Headboard Post (D & E), Headboard Lower Panel (C) & Footboard Panel (B).

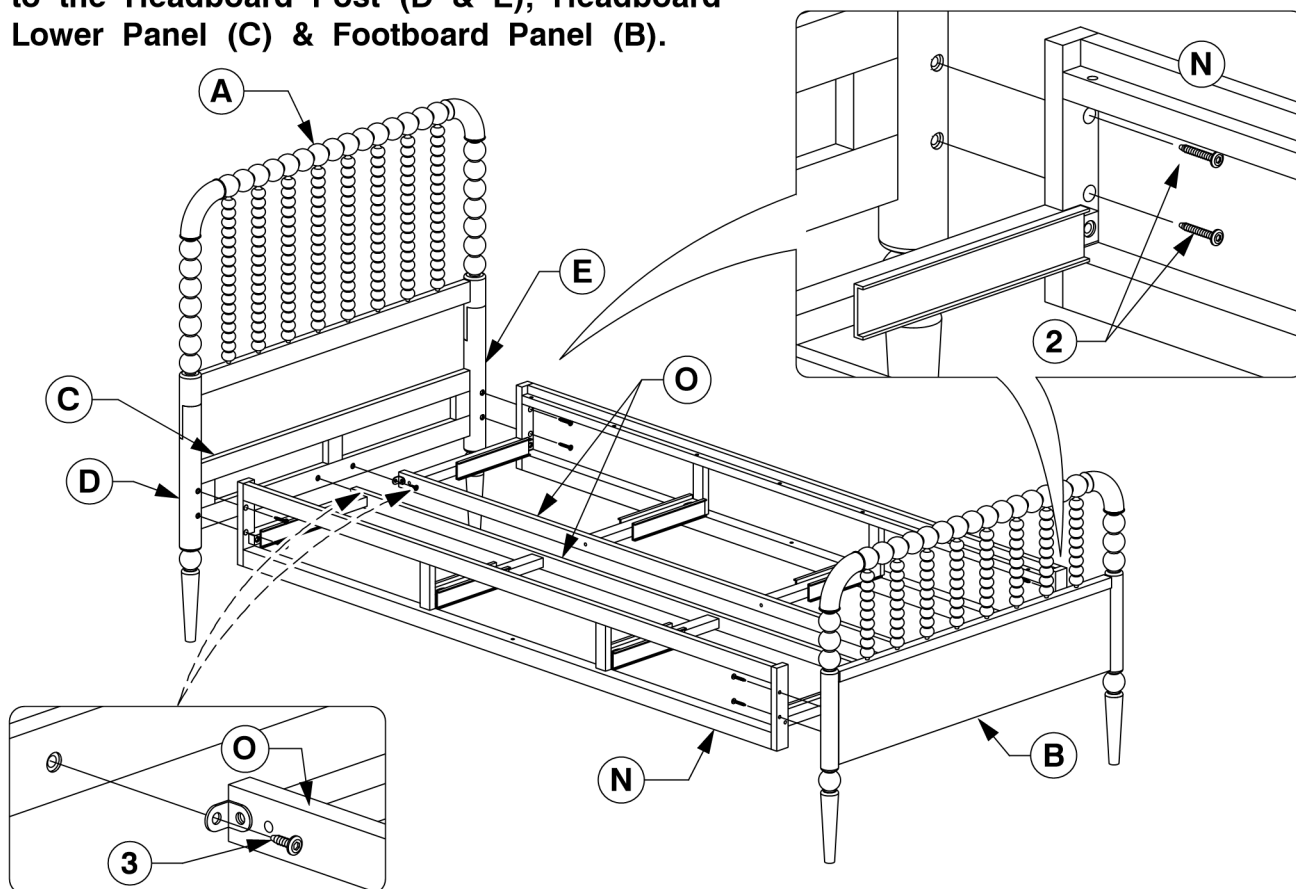

- 13** Lift the Side Rail Frame (N) on one side and fit the Post (F) under it. Repeat the same step on the other side.

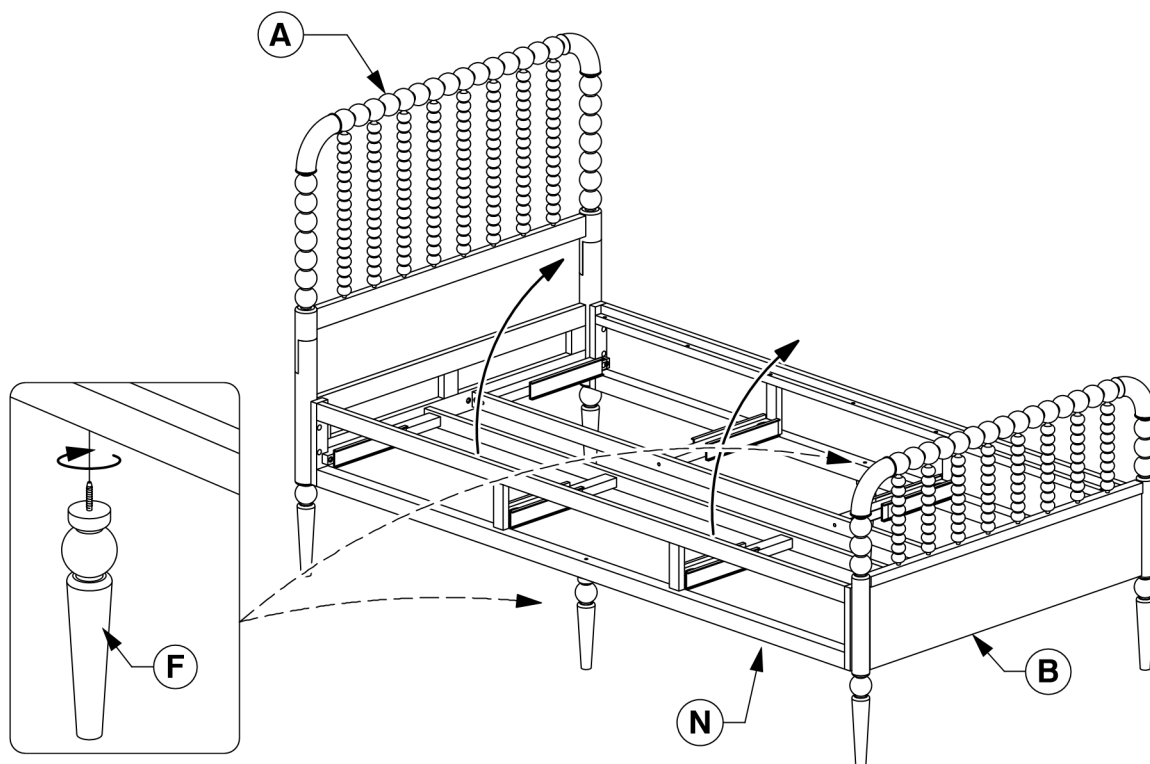


0110-8 Twin Bed

Assembly Instructions

WI-1225

- 14 Bolt & Screw the Slats (S) to the Side Rail Frame (N).**

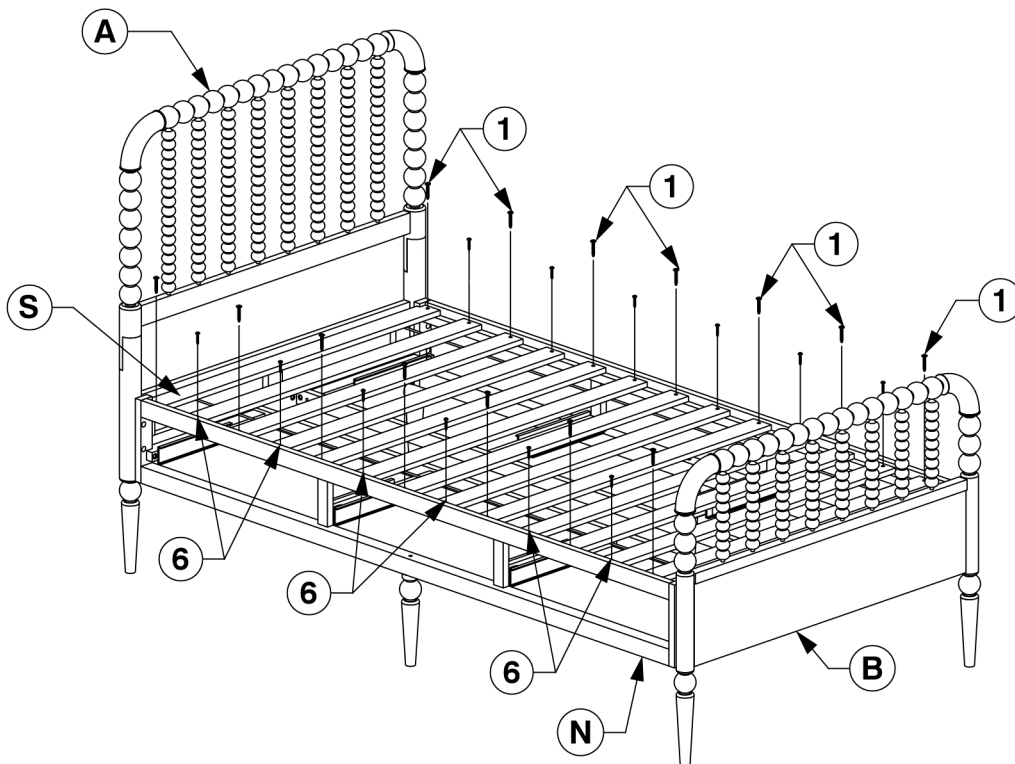

- 15 Fit all assembled drawers on both sides.**

