


0260-1 Daybed

Assembly Instructions

WI-0126

1 Assembled View

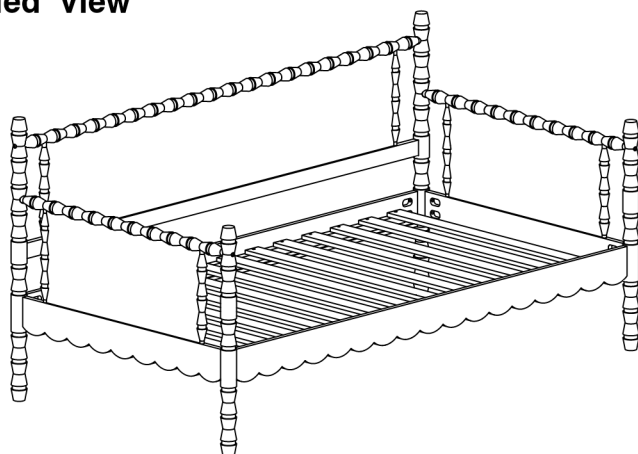


Use 2 People




Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts in this Box

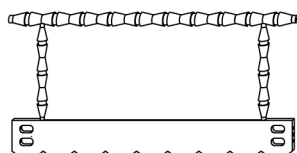


A
Side Panel x 2

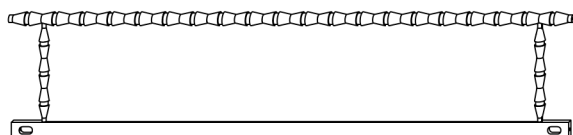

B
Back Panel x 1




C
Front Side Rail x 1




D
Rear Side Rail x 1

Slats are packed in separately in Box B

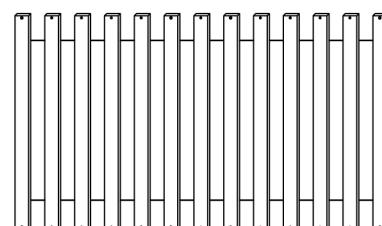


J Set of Slats x 1

3 Hardware in this Box



1 M6 x 40mm JCB
x 32




2 Wood Screw
(M4 x 32mm)
x 18



3 Wood Dowel
(10 x 40mm) x 8



4 Allen Key (Long)
x 1

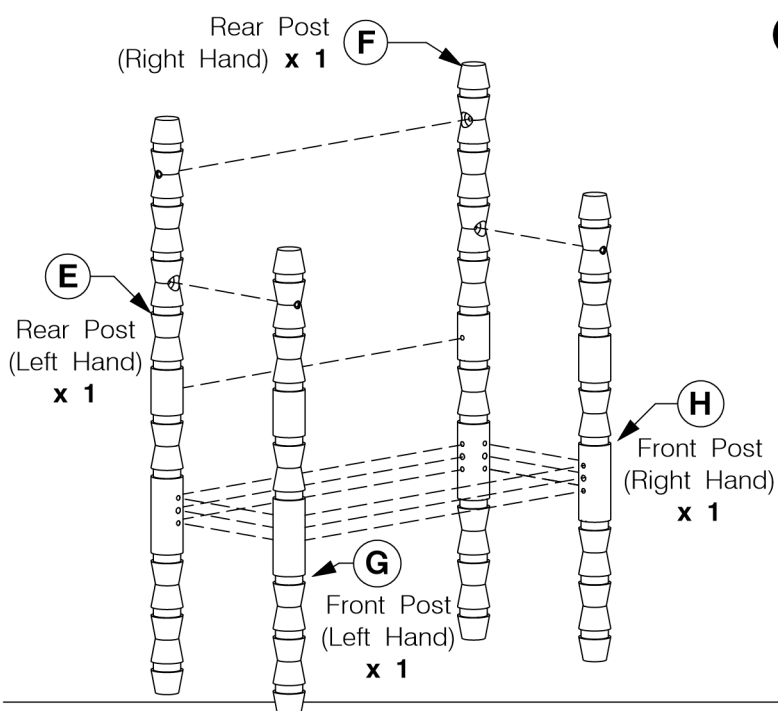


0260-1 Daybed

Assembly Instructions


WI-0126

4 Assemble the Post (E & G) to the Side Panel (A).

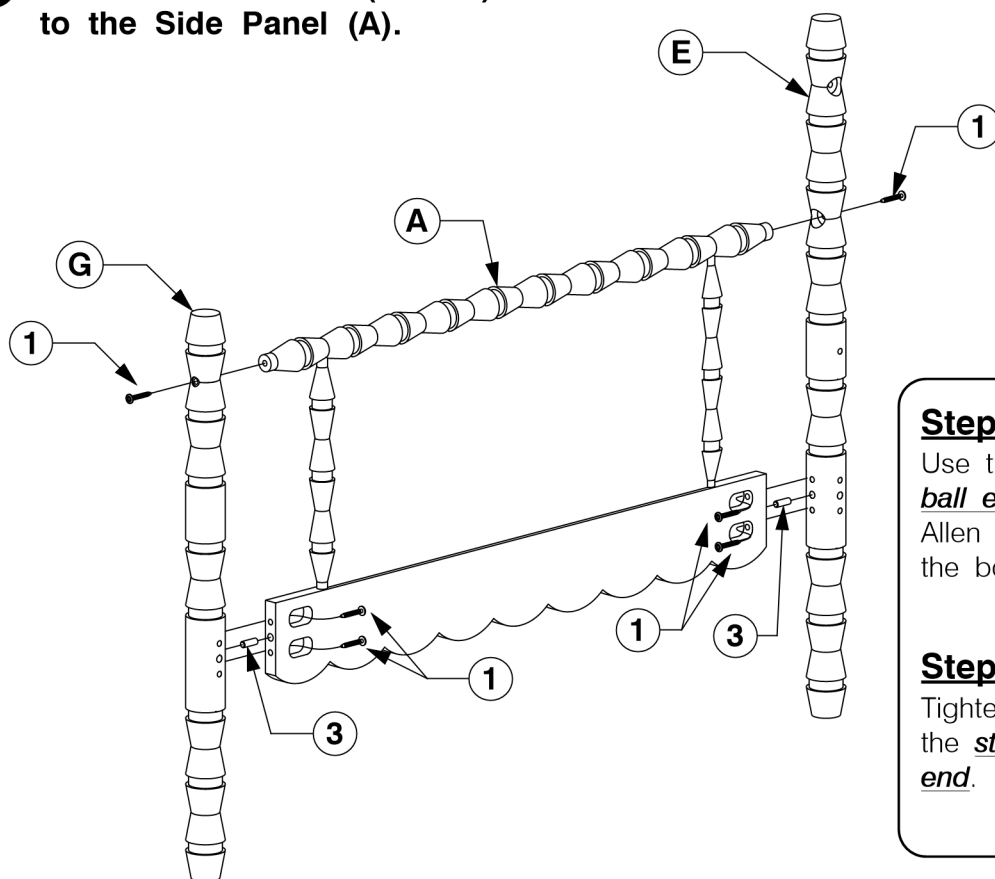


Step 1

Use the **ball end** of Allen key to start the bolt.

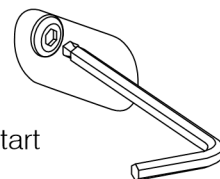


Step 2

Tighten fully with the **straight end**.

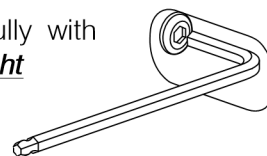


5 Assemble the Post (F & H) to the Side Panel (A).

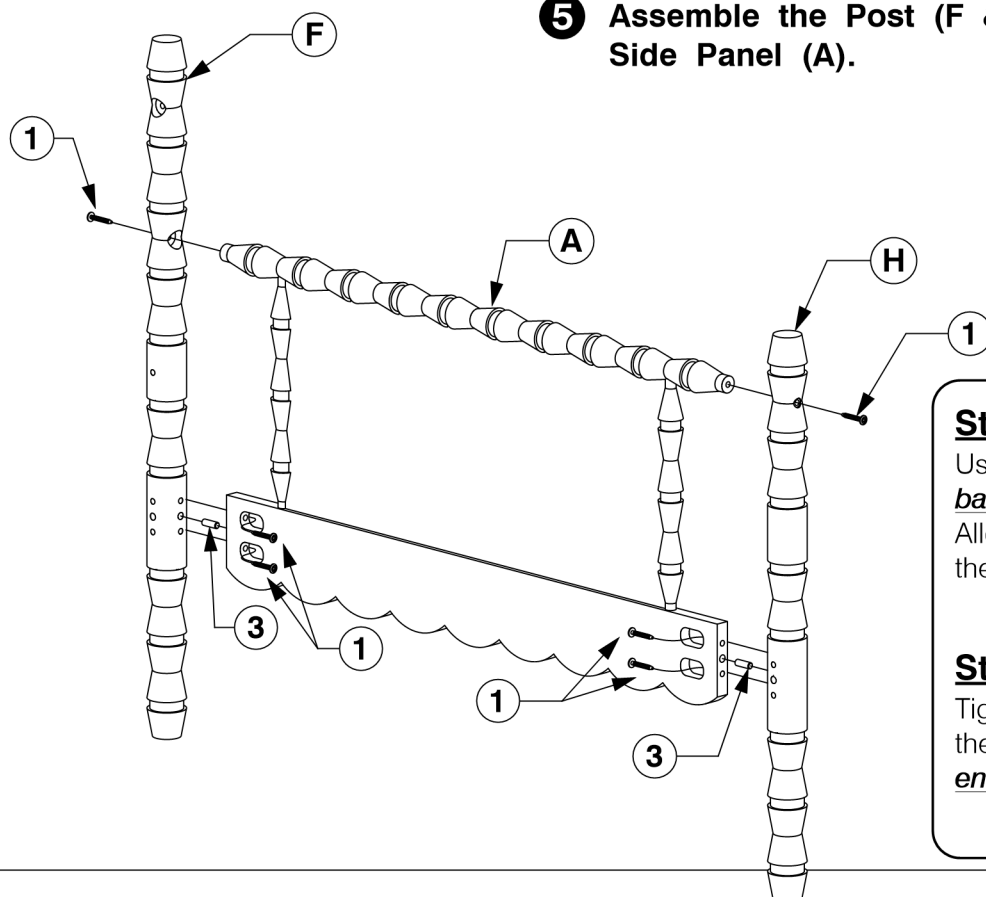


Step 1

Use the **ball end** of Allen key to start the bolt.

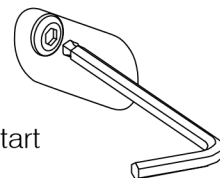

Step 2

Tighten fully with the **straight end**.


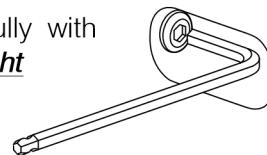


0260-1 Daybed

Assembly Instructions


WI-0126

- 6 Assemble the Rear Post (E & F) to the Back Panel (B) & Rear Side Rail (D).**

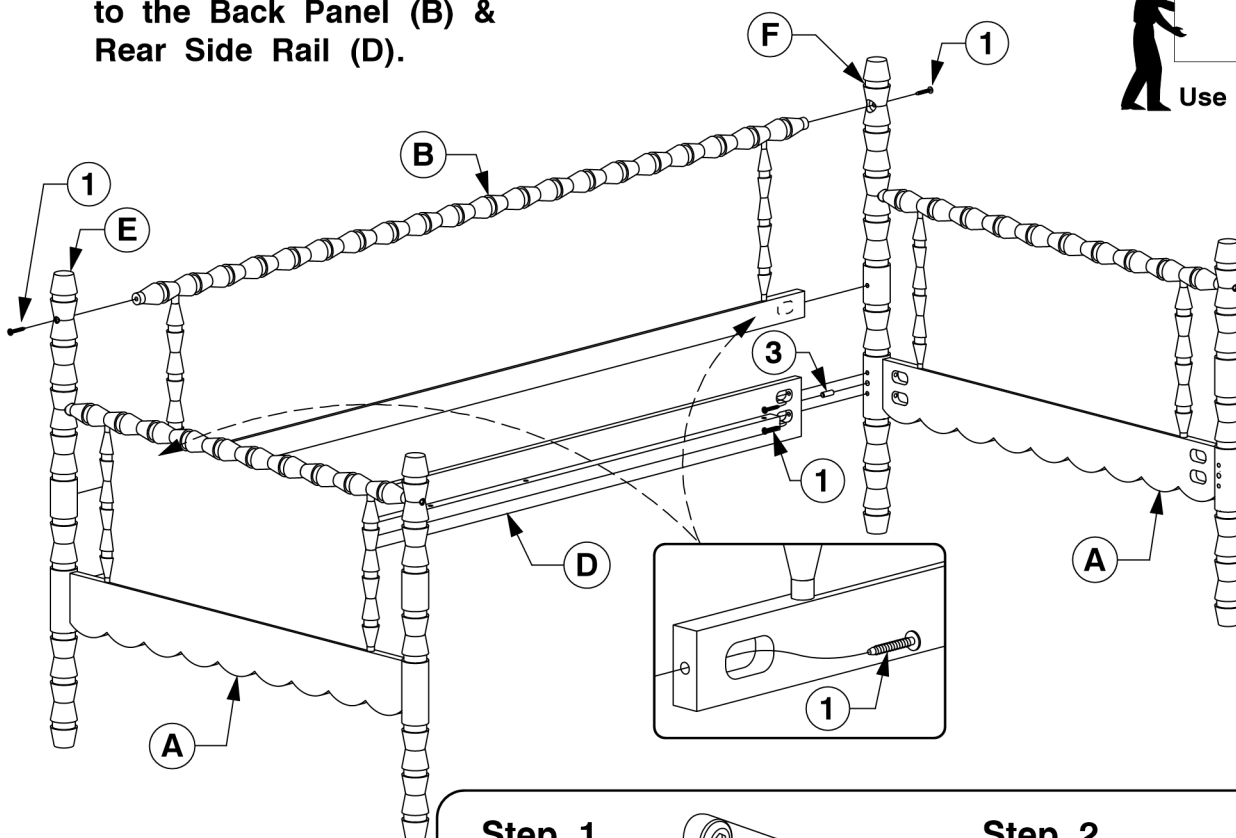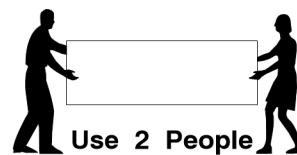


Step 1

Use the **ball end** of Allen key to start the bolt.

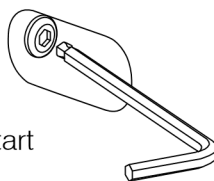


Step 2

Tighten fully with the **straight end**.

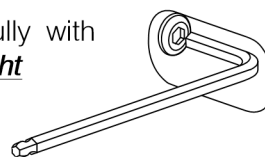

- 7 Assemble the Front Side Rail (C) to the Front Post (G & H).**

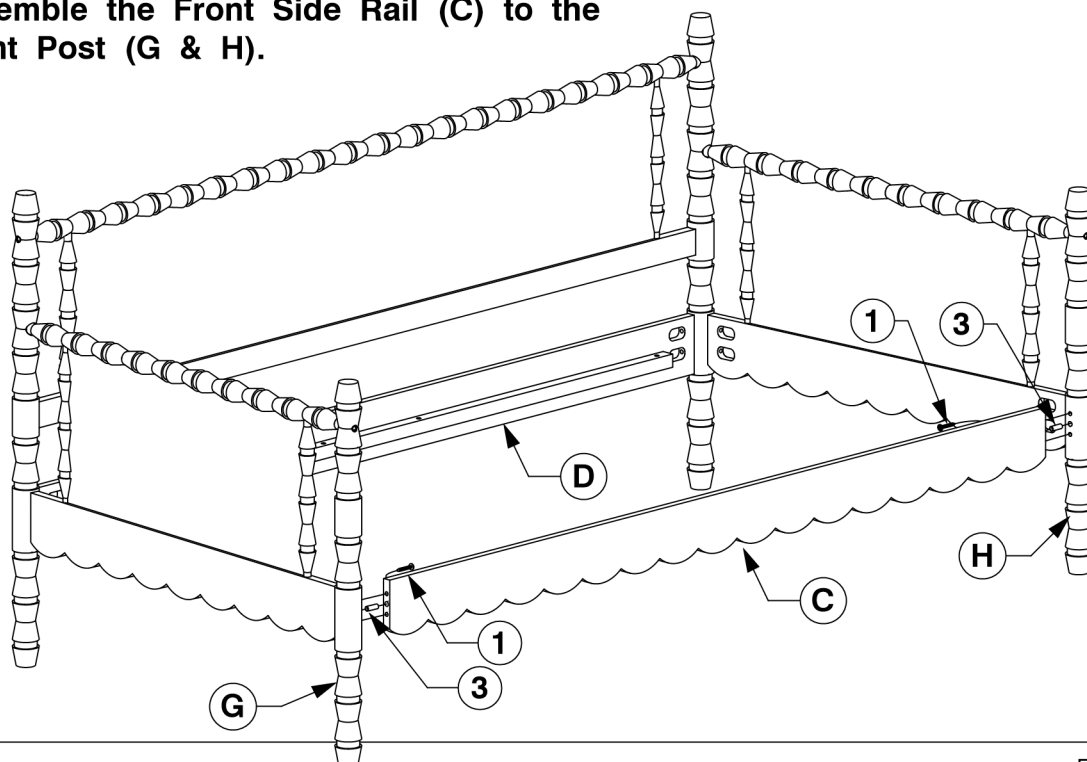


0260-1 Daybed

Assembly Instructions

WI-0126

- 8 Bolt the Set of Slats (J) between the Side Rail (C & D).**

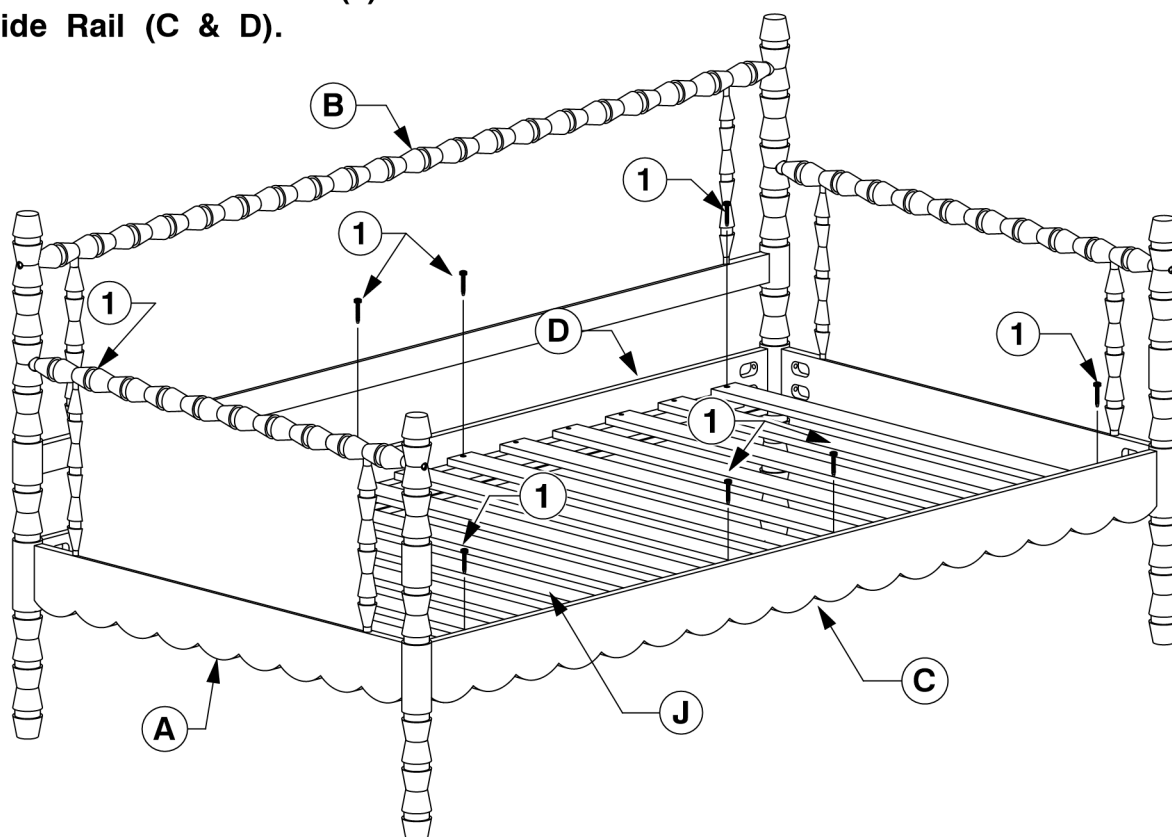

- 9 Screw the Set of Slats (J) between the Side Rail (C & D).**

