
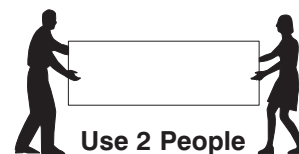


0260-2 Canopy Queen Bed


Assembly Instructions

WI-0226

1 Assembled View

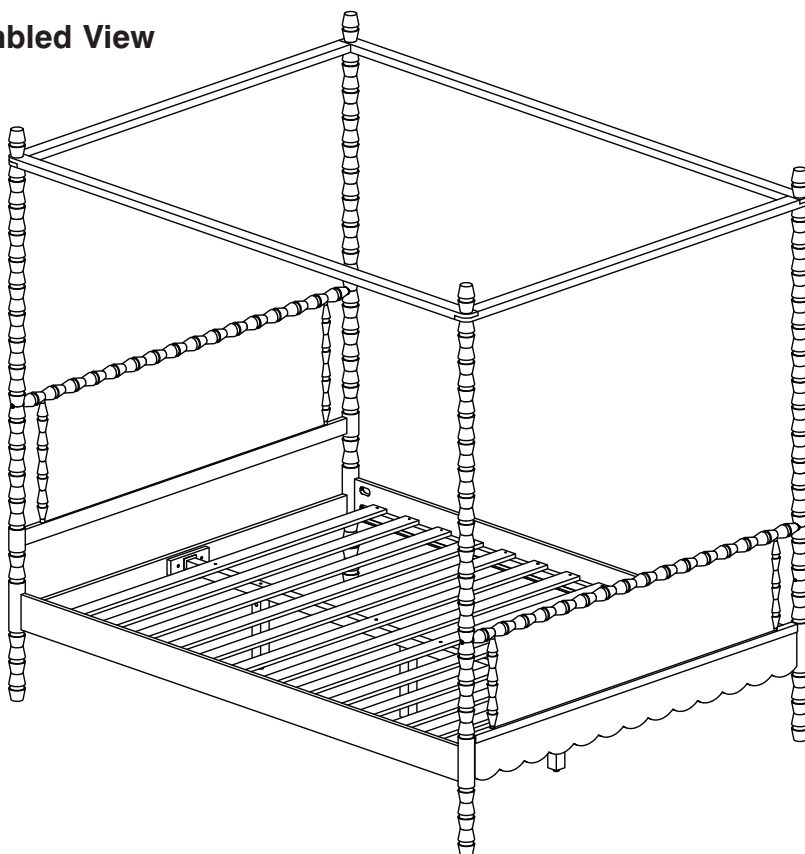


Use 2 People

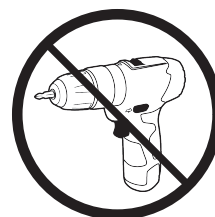


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

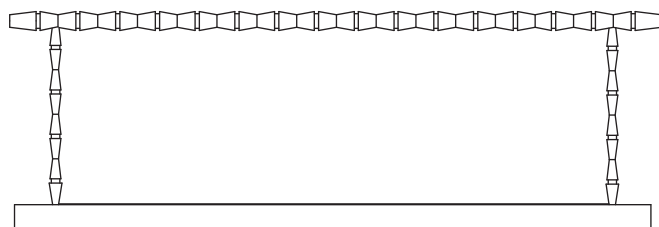

A Headboard Panel x 1

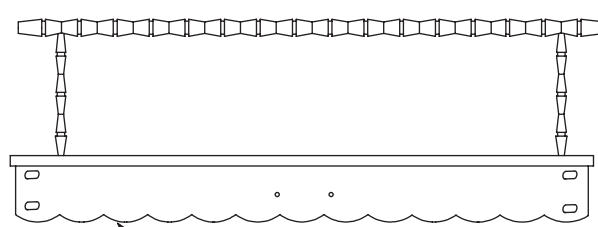

B Footboard Panel x 1



C Headboard Support x 1


0260-2 Canopy Queen Bed

Assembly Instructions

WI-0226

3 Parts List

Parts in Box B:

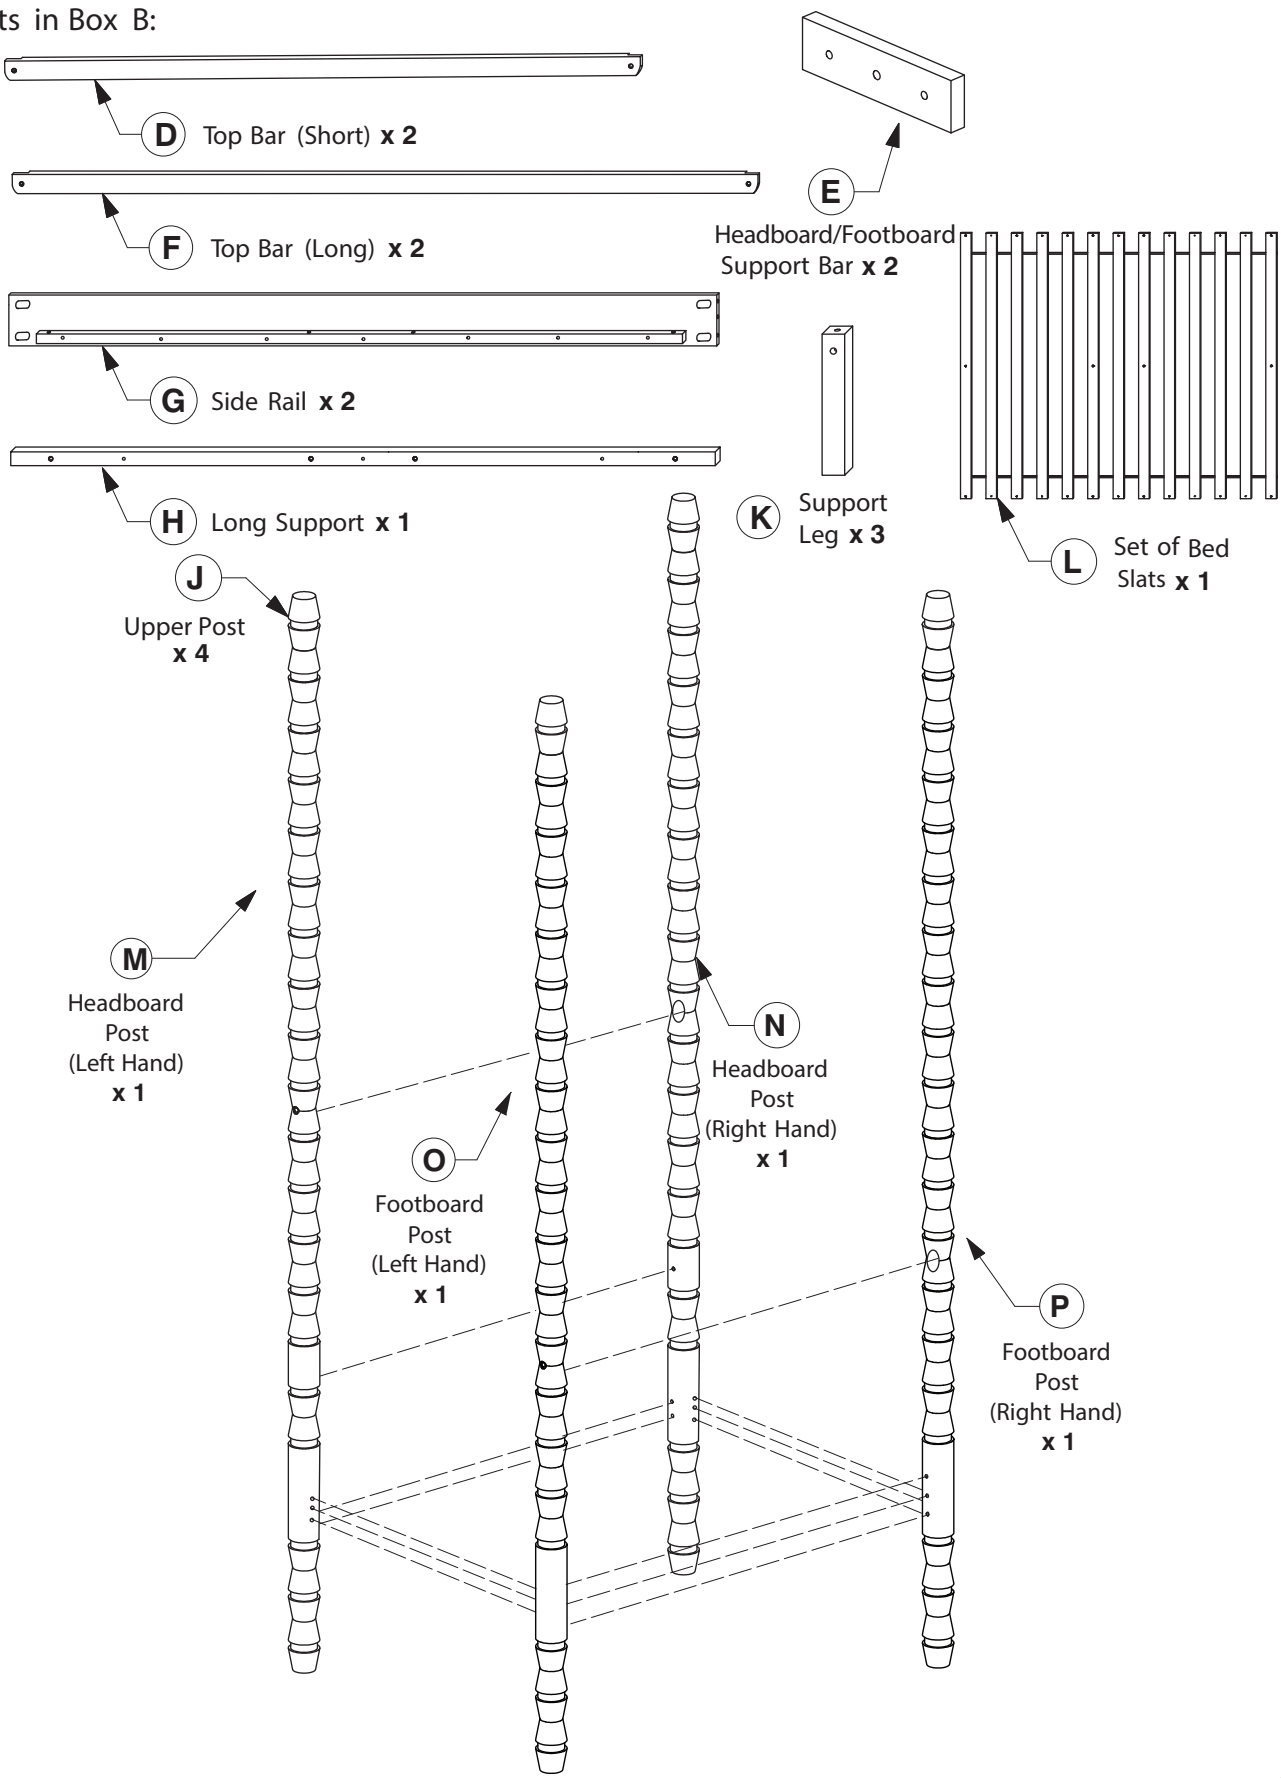


0260-2 Canopy Queen Bed


Assembly Instructions

WI-0226

4 Hardware List

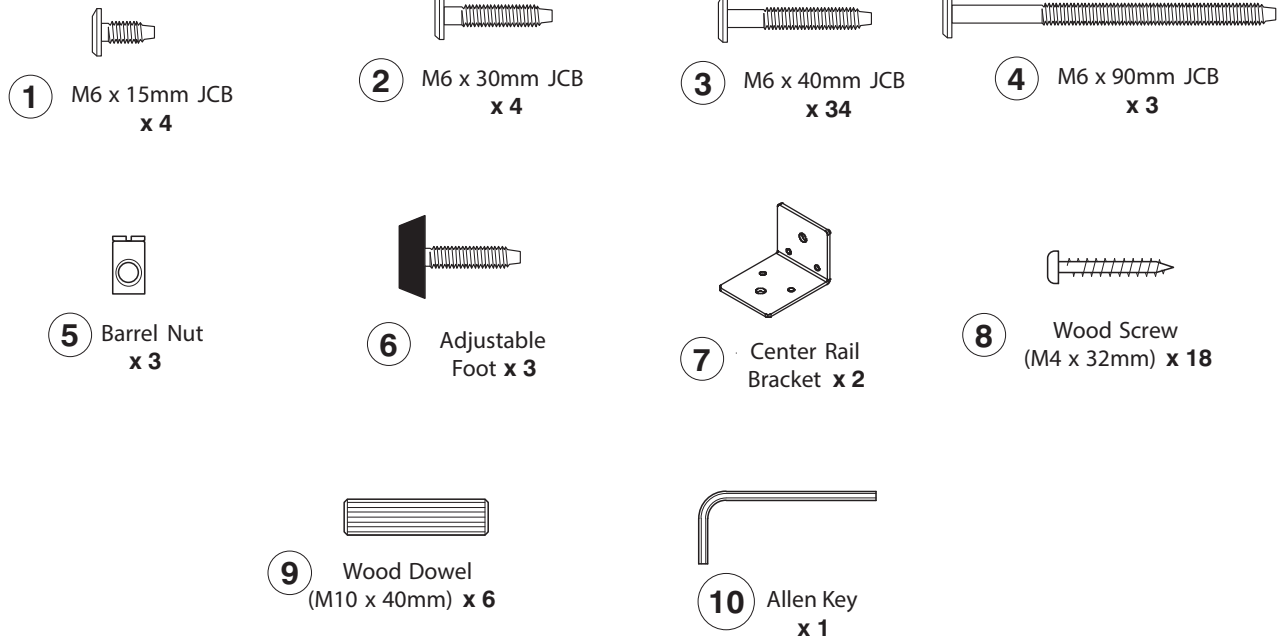

5 Assemble the Support Leg (K) to the Long Support (H).


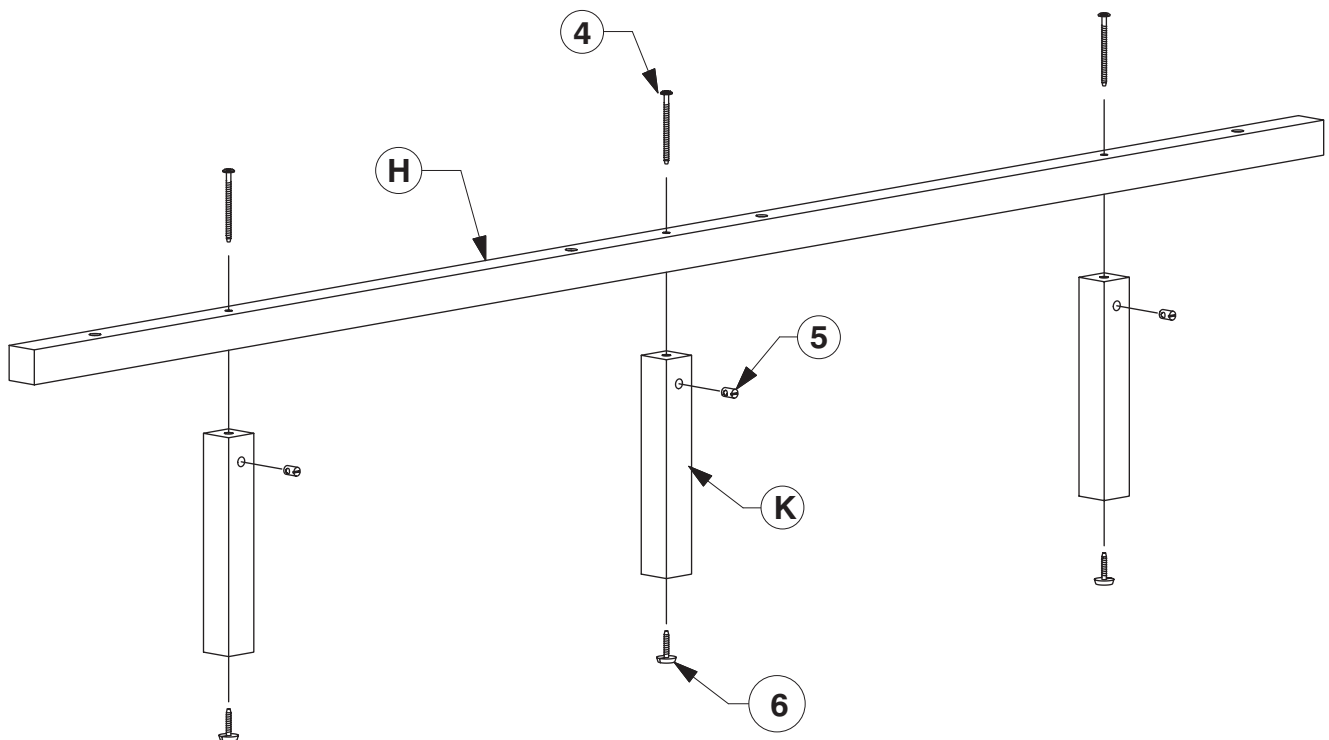


0260-2 Canopy Queen Bed

Assembly Instructions

WI-0226


- 6** Attach the Headboard Post (M & N) to the Headboard Panel (A) and Headboard Support (C).

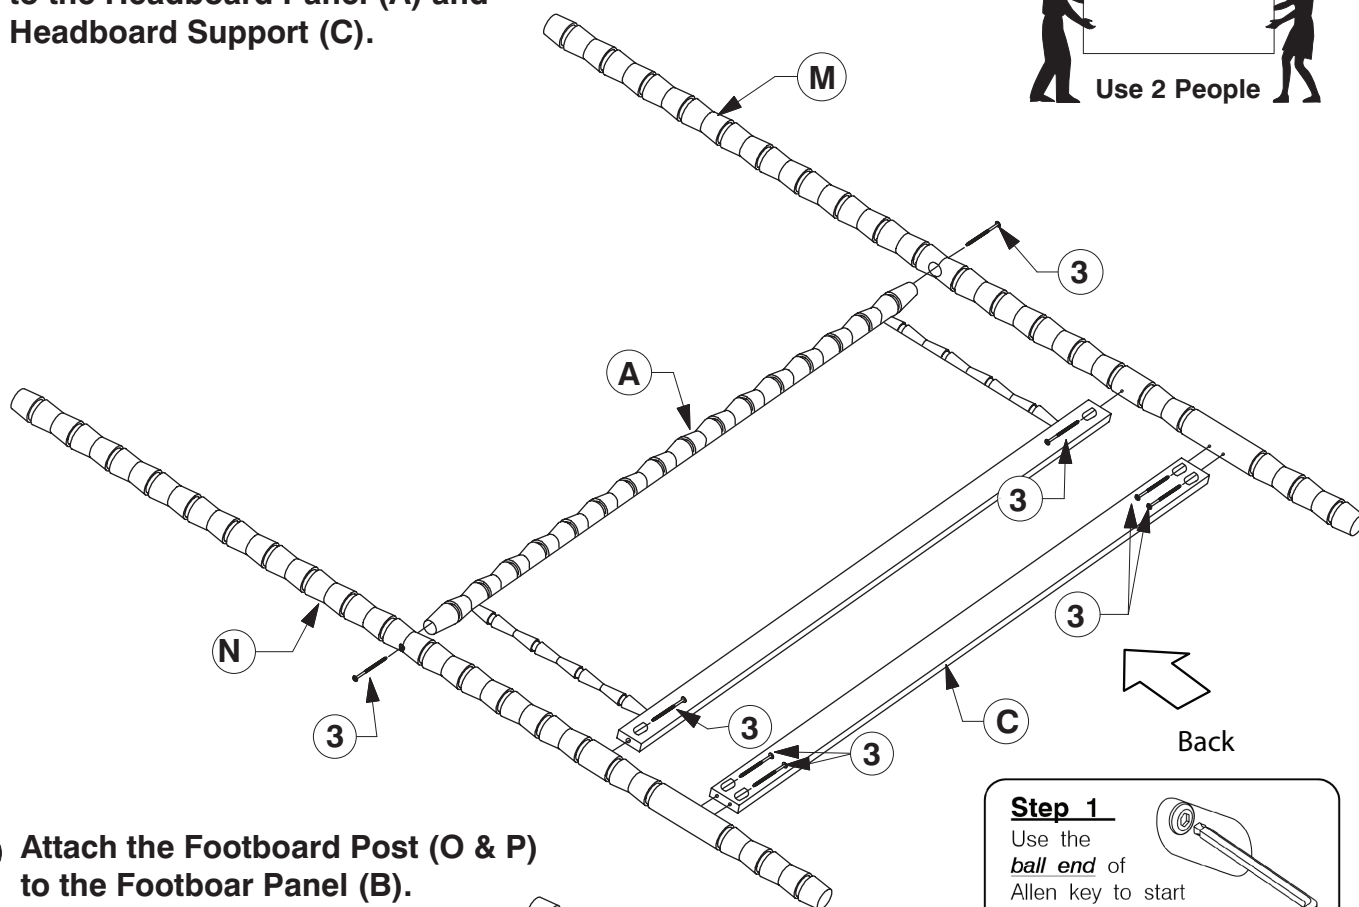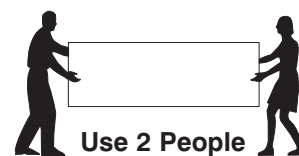

- 7** Attach the Footboard Post (O & P) to the Footboard Panel (B).



Step 1

Use the **ball end** of Allen key to start the bolt.

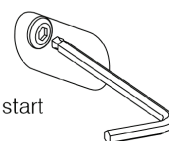

Step 2

Tighten fully with the **straight end**.

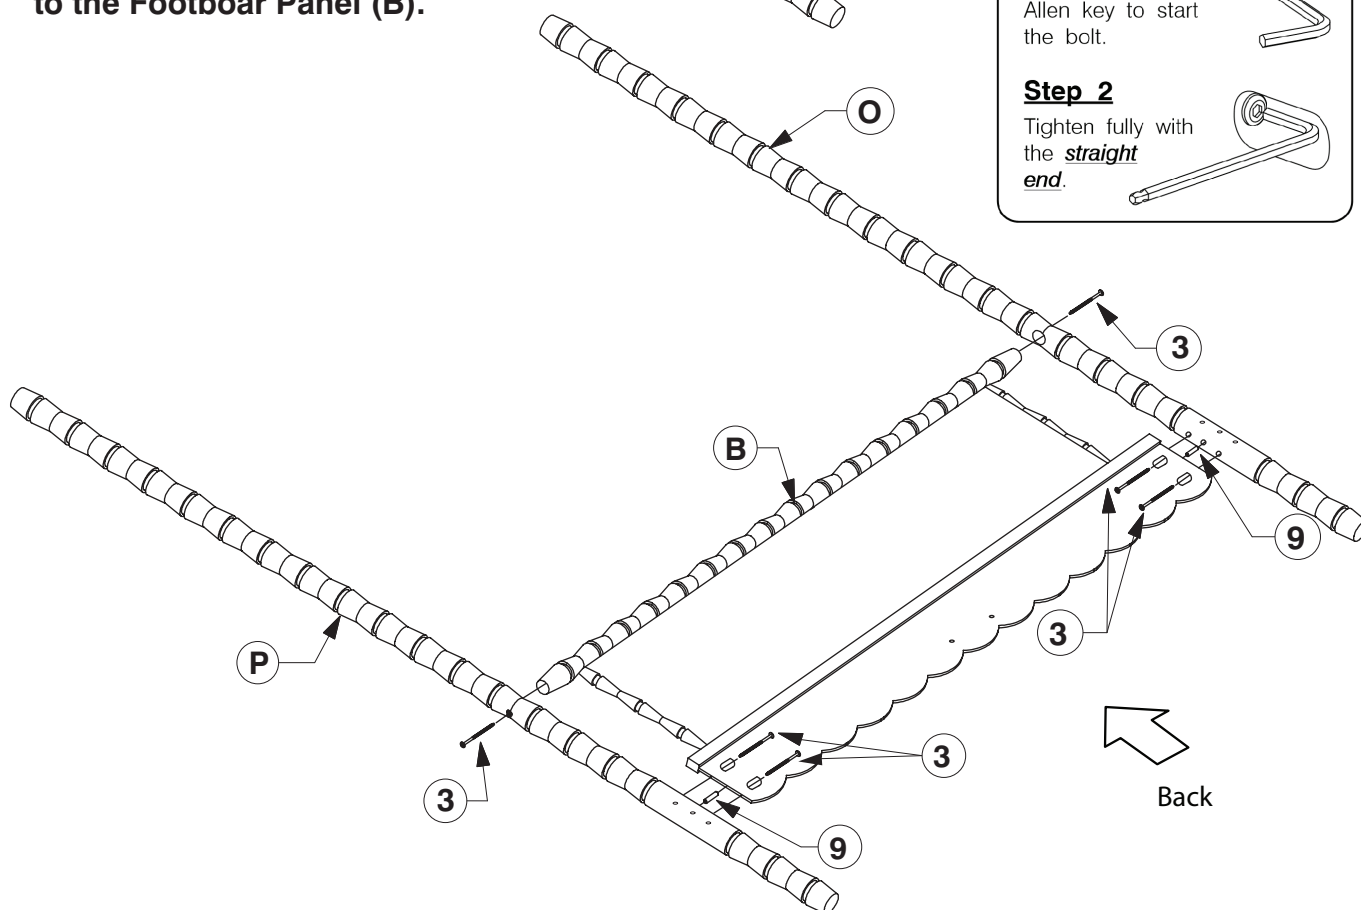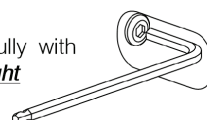


0260-2 Canopy Queen Bed



Assembly Instructions

WI-0226

- 8** Fit the Headboard/Foodboard Support Bar (E) to the HB Support (C). Fit the Center Rail Bracket (7) to the Headboard/Footboard Support Bar (E).

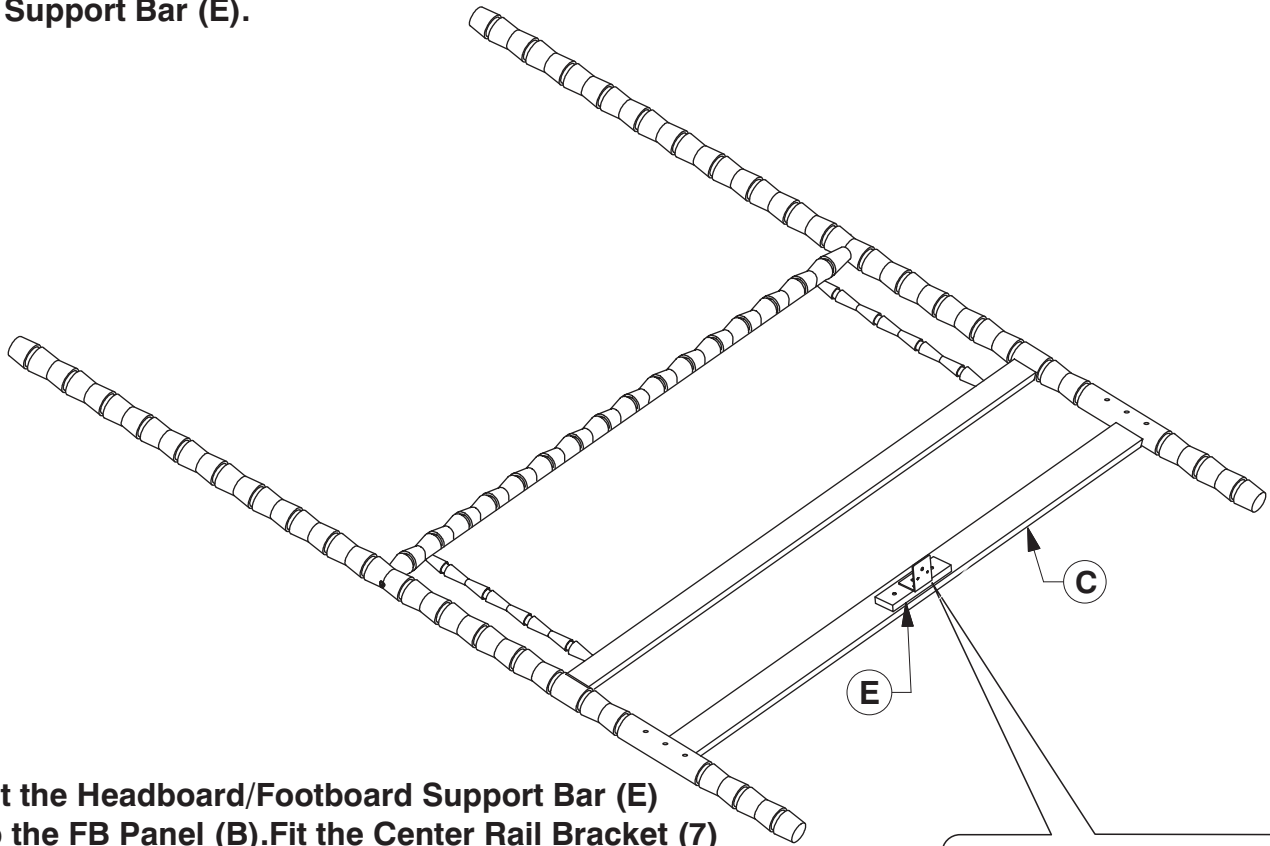

- 9** Fit the Headboard/Footboard Support Bar (E) to the FB Panel (B). Fit the Center Rail Bracket (7) to the Headboard/Footboard Support Bar (E).

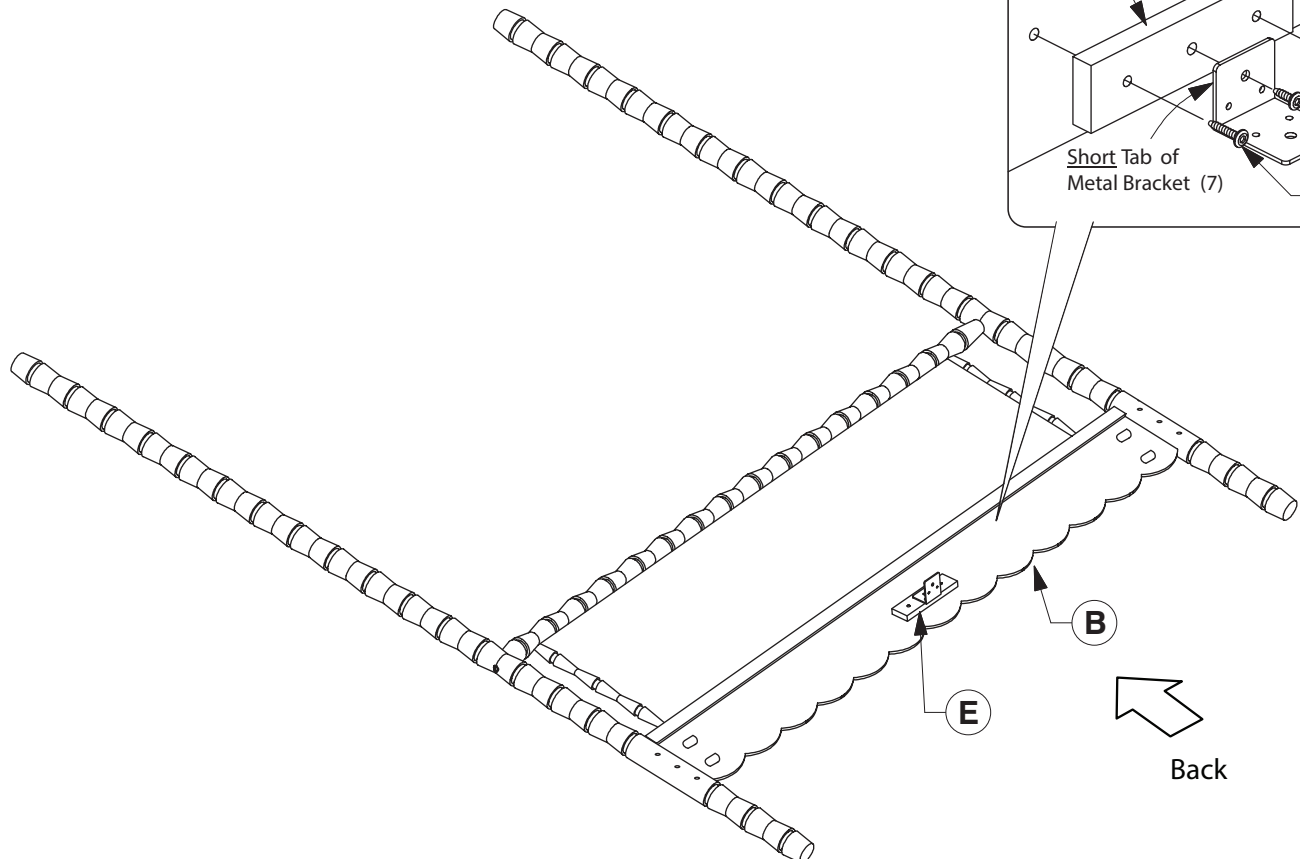
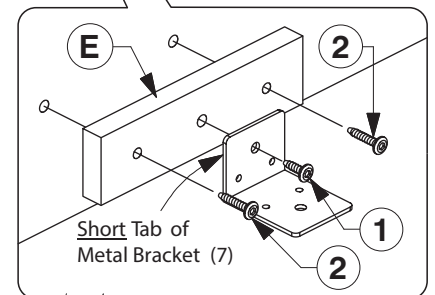


0260-2 Canopy Queen Bed


Assembly Instructions

WI-0226


- 10** Assemble the Side Rail (G) to the Head / Footboard.

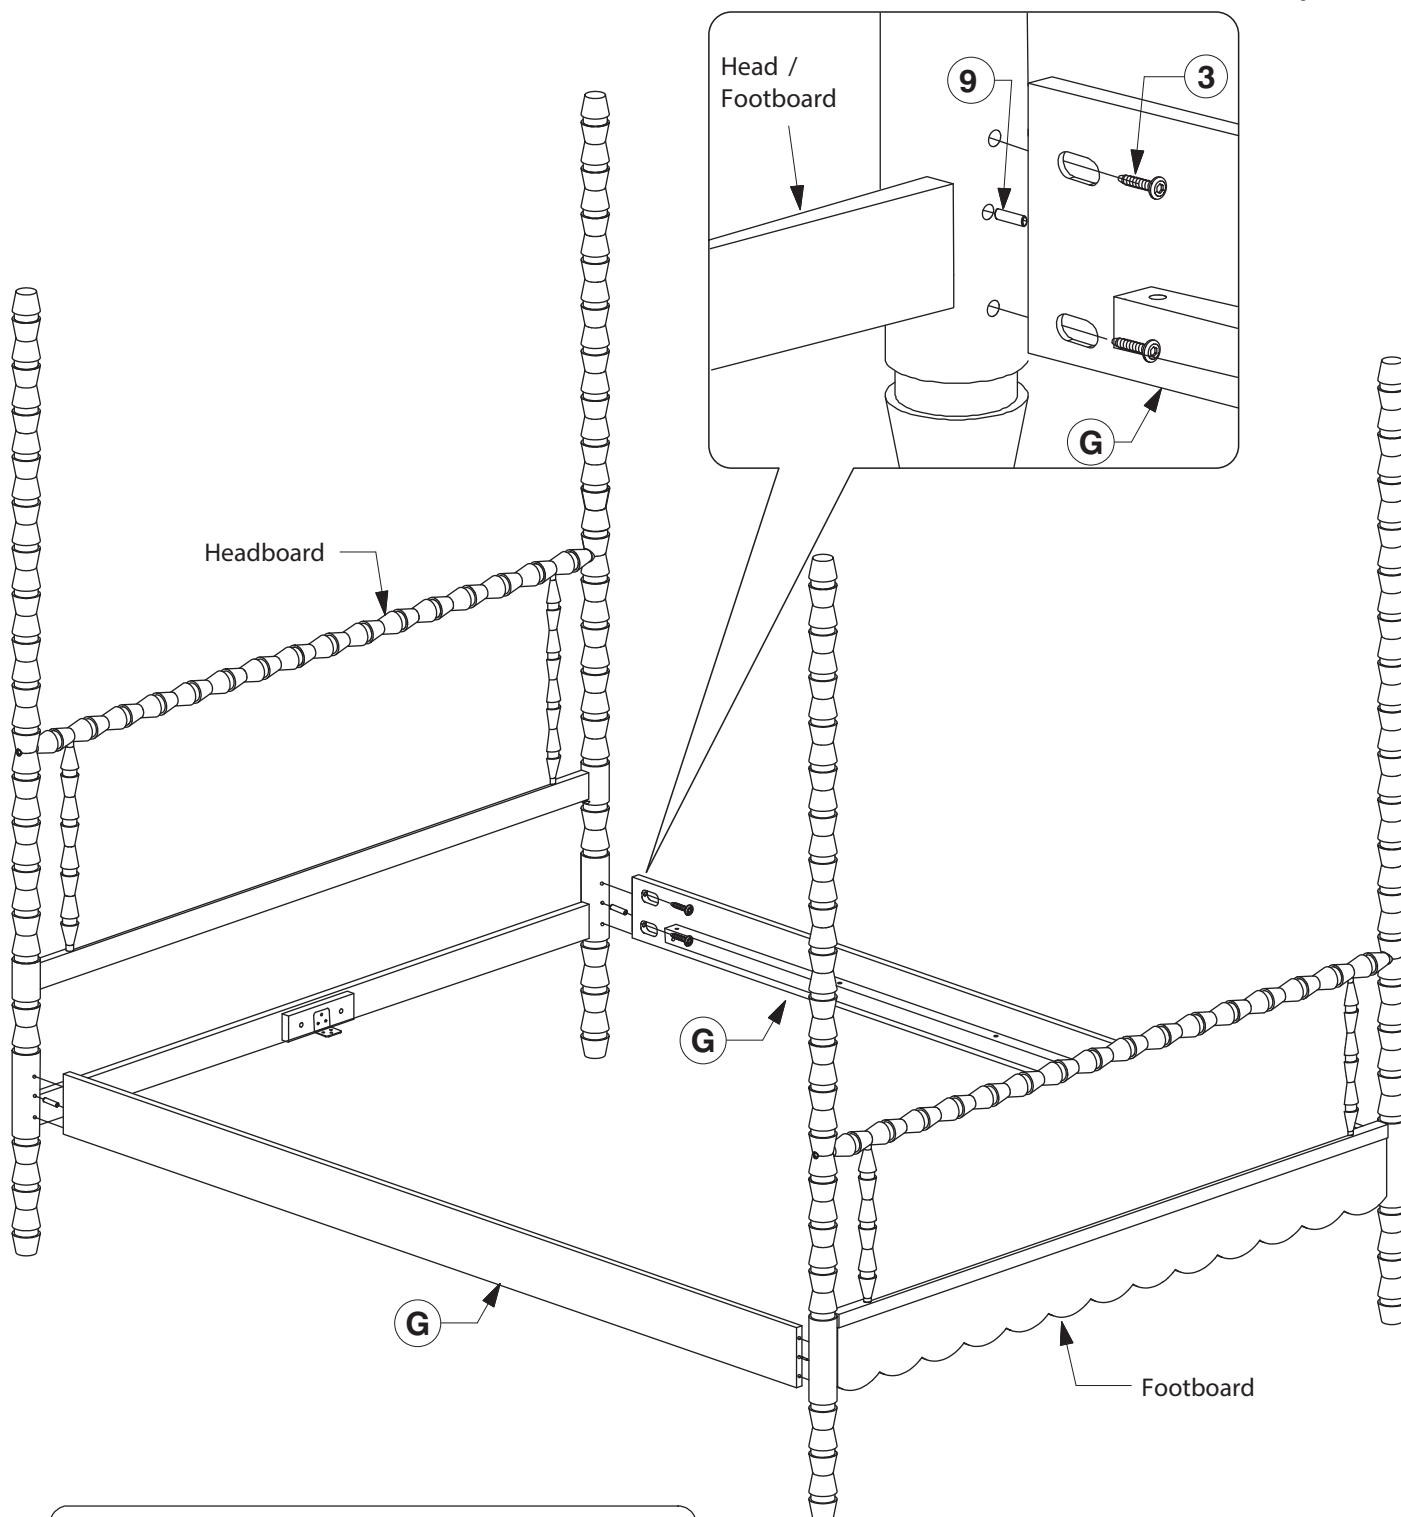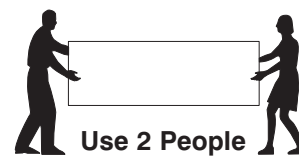

Step 1
Use the ball end of Allen key to start the bolt.

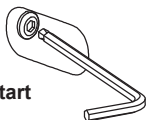

Step 2
Tighten fully with the straight end.




0260-2 Canopy Queen Bed

Assembly Instructions

WI-0226

- 11** Bolt the Long Support (H) to the Center Rail Brackets on the Headboard/Footboard.

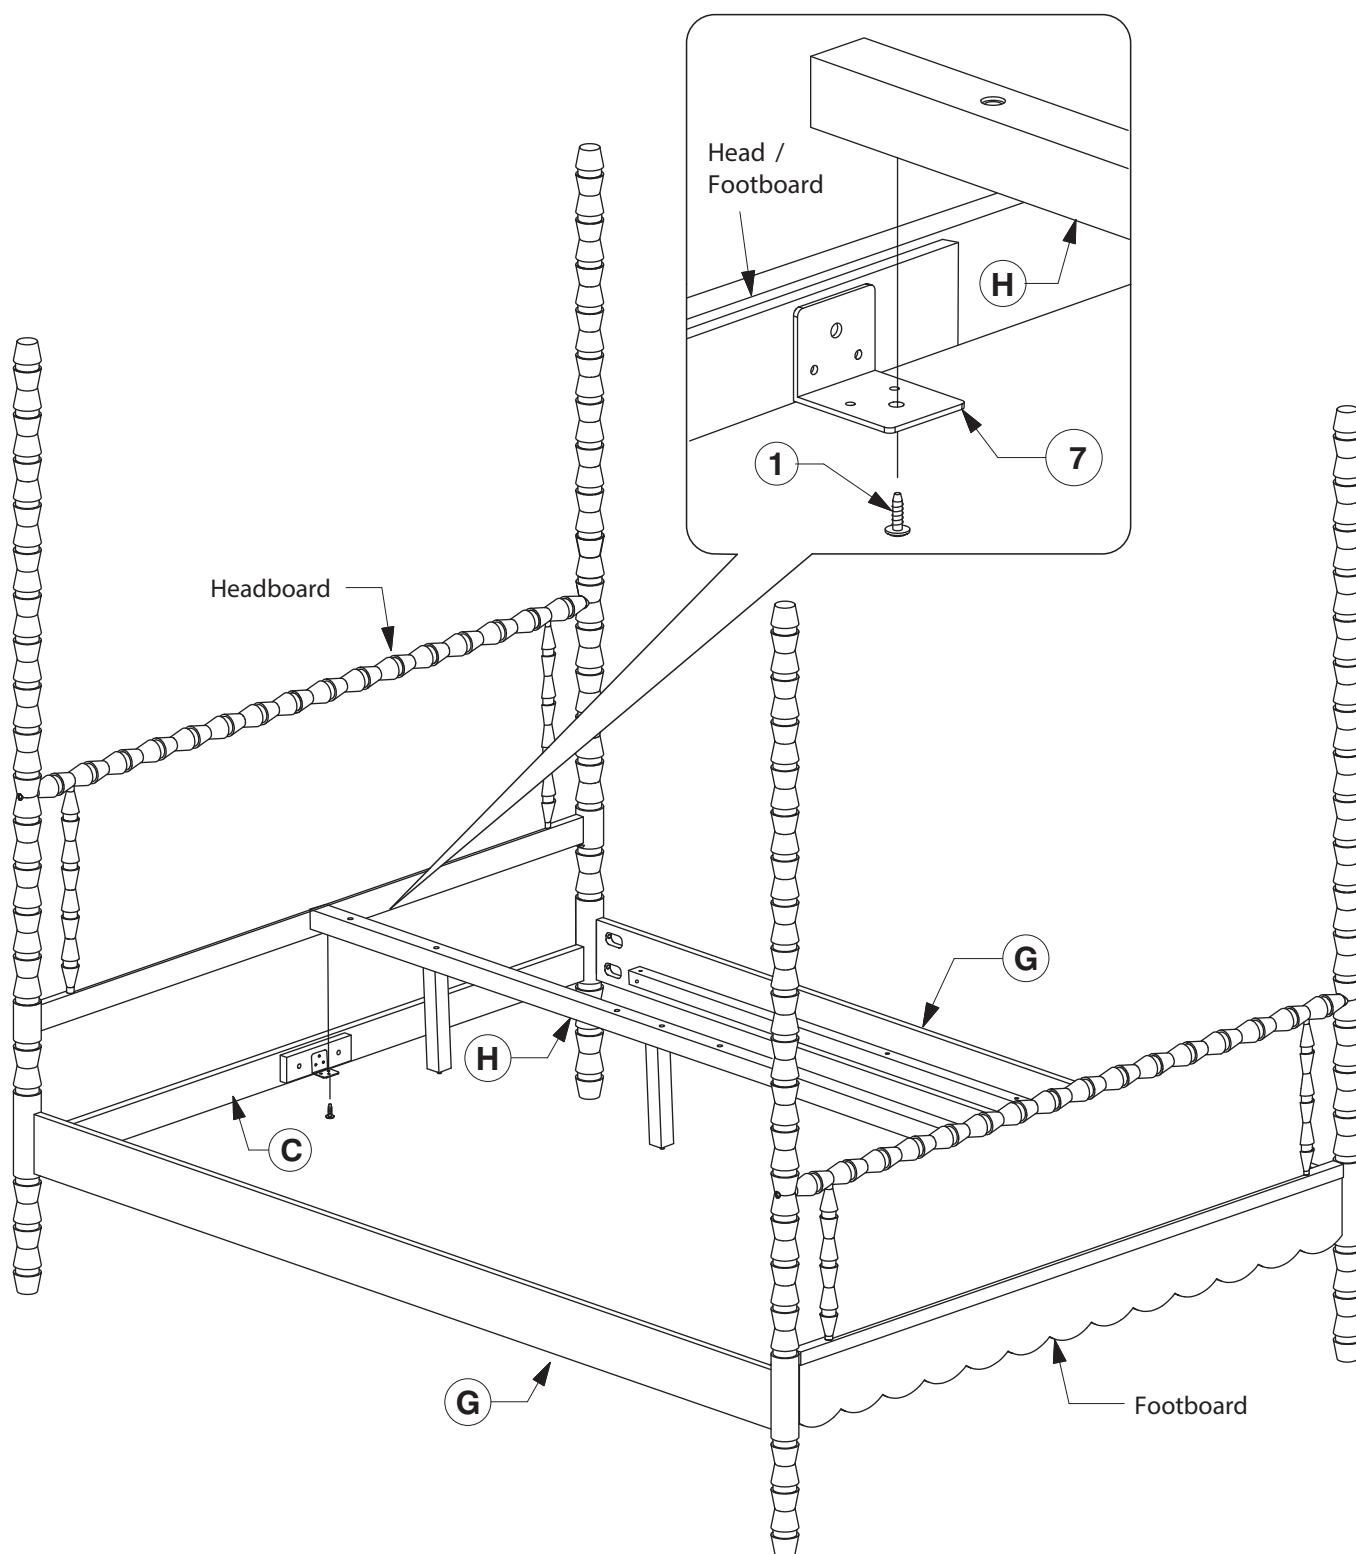


0260-2 Canopy Queen Bed

Assembly Instructions

WI-0226

- 12** Bolt & Screw the Bed Slats (L) to the Side Rail (G) and Long Support (H).

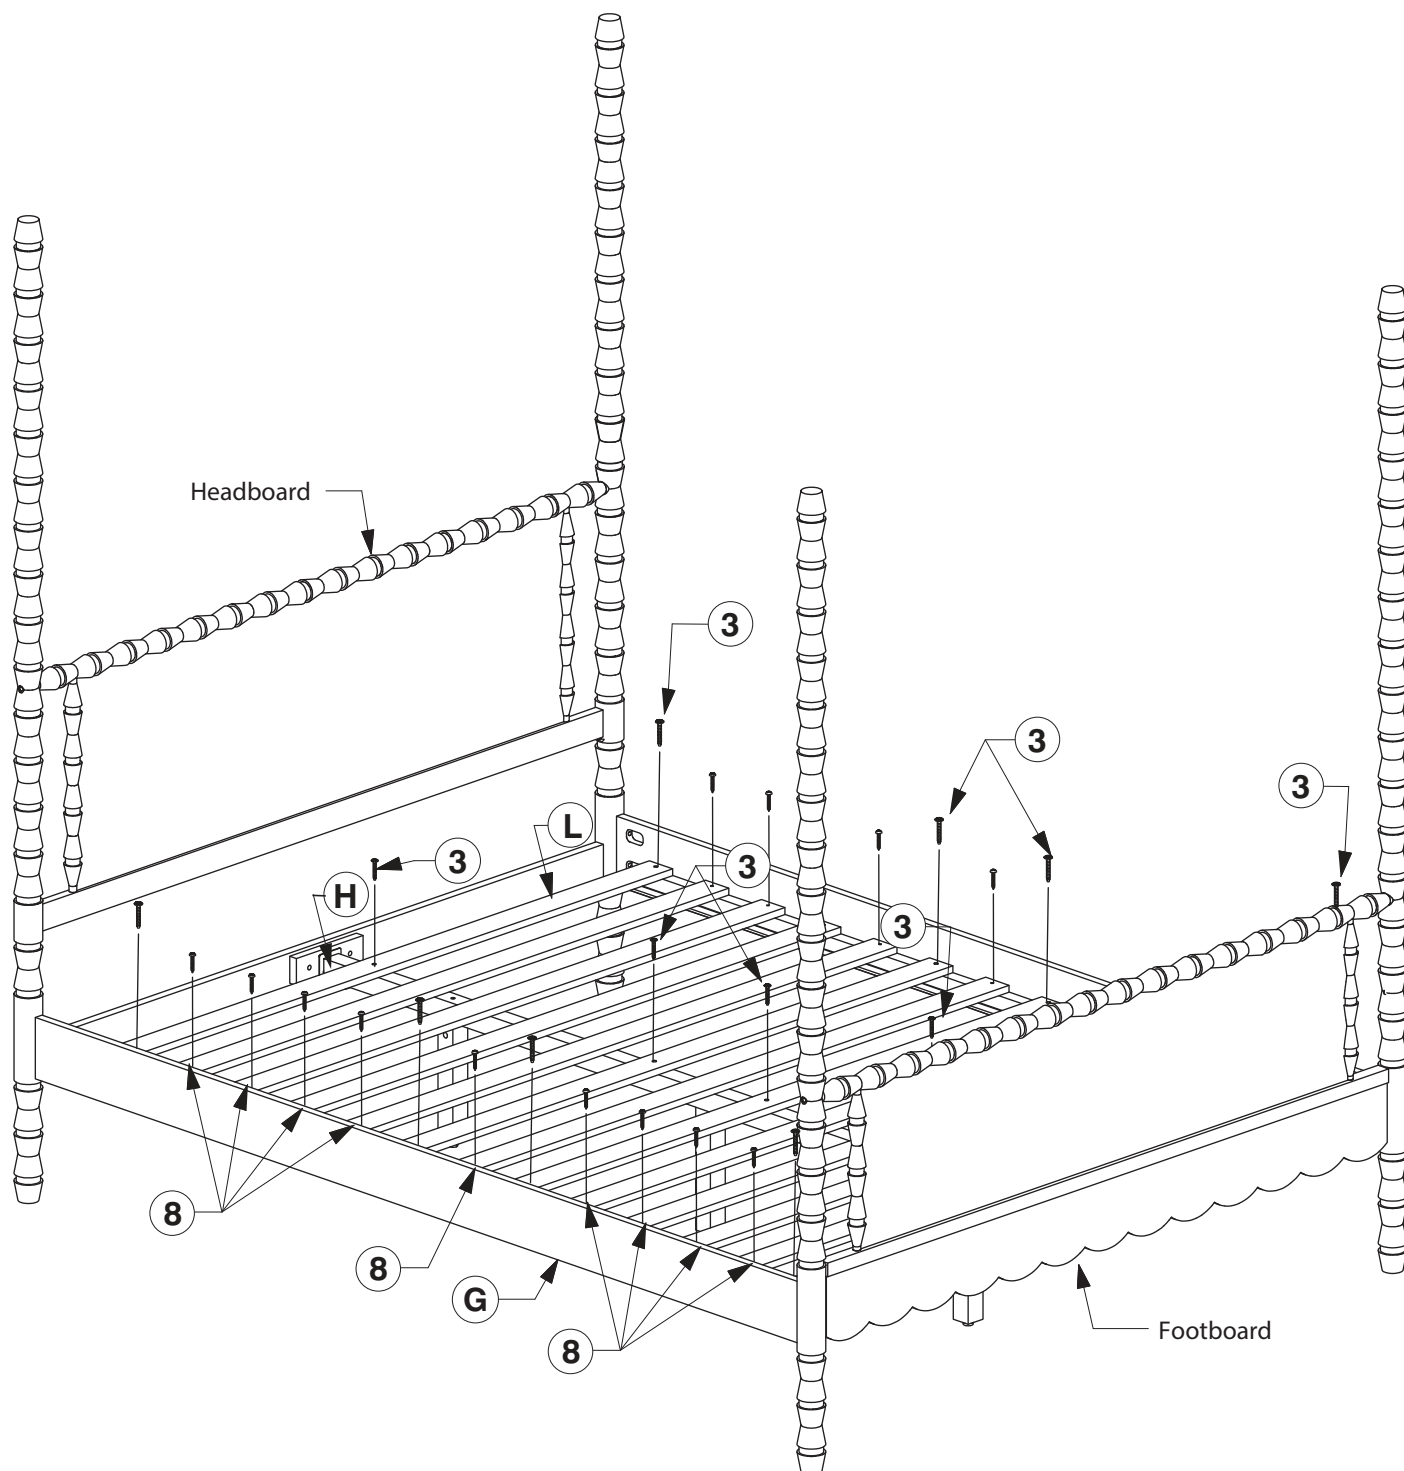


0260-2 Canopy Queen Bed

Assembly Instructions

WI-0226

- 13** Remove the Upper Post (J) from the Headboard Post (M & N) and Footboard Post (O & P).

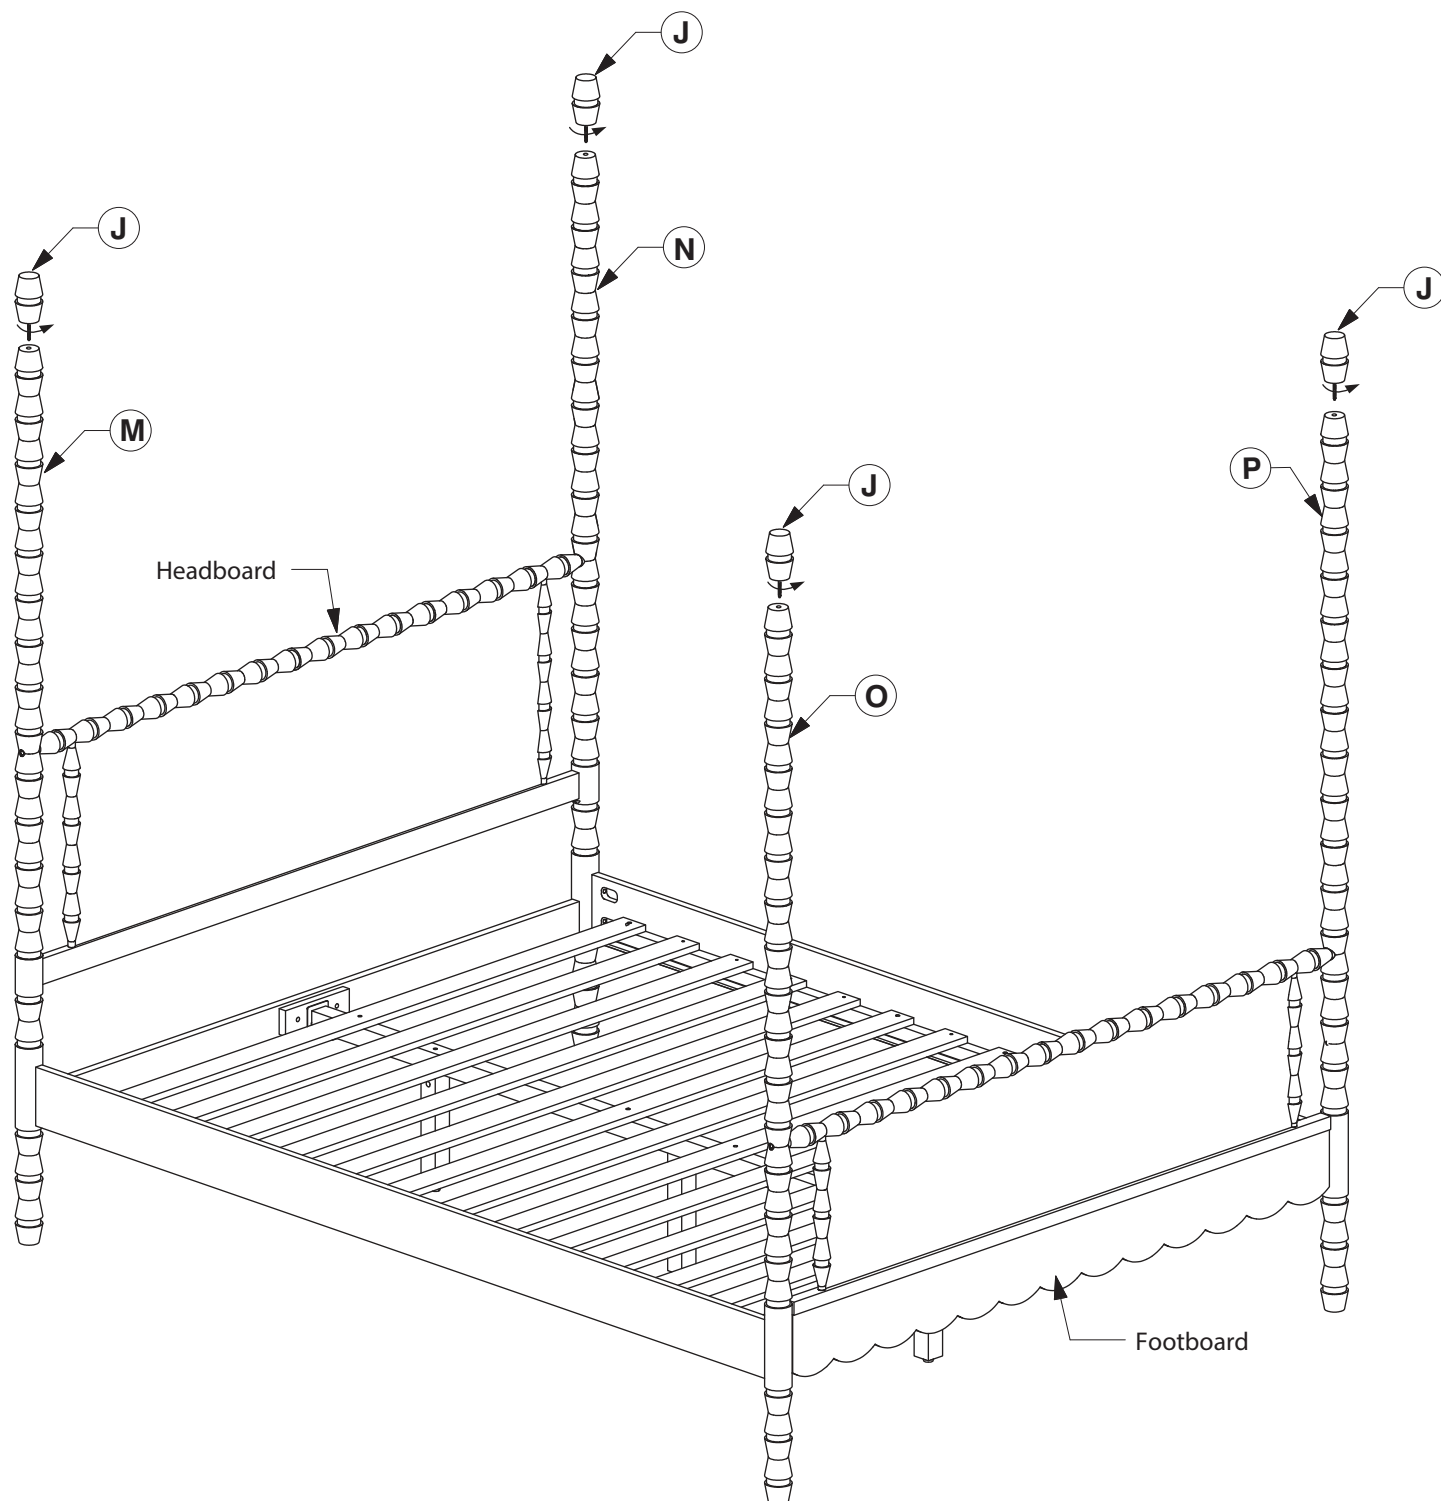


0260-2 Canopy Queen Bed

Assembly Instructions

WI-0226



- 14** Attach the Top Bar-Short (D) to the Top of the Posts.
Then place the Top Bar-Long (F) on top of (D) on the both sides.
Bolt the Upper Post (J) to lock the Top Bars (D & F).

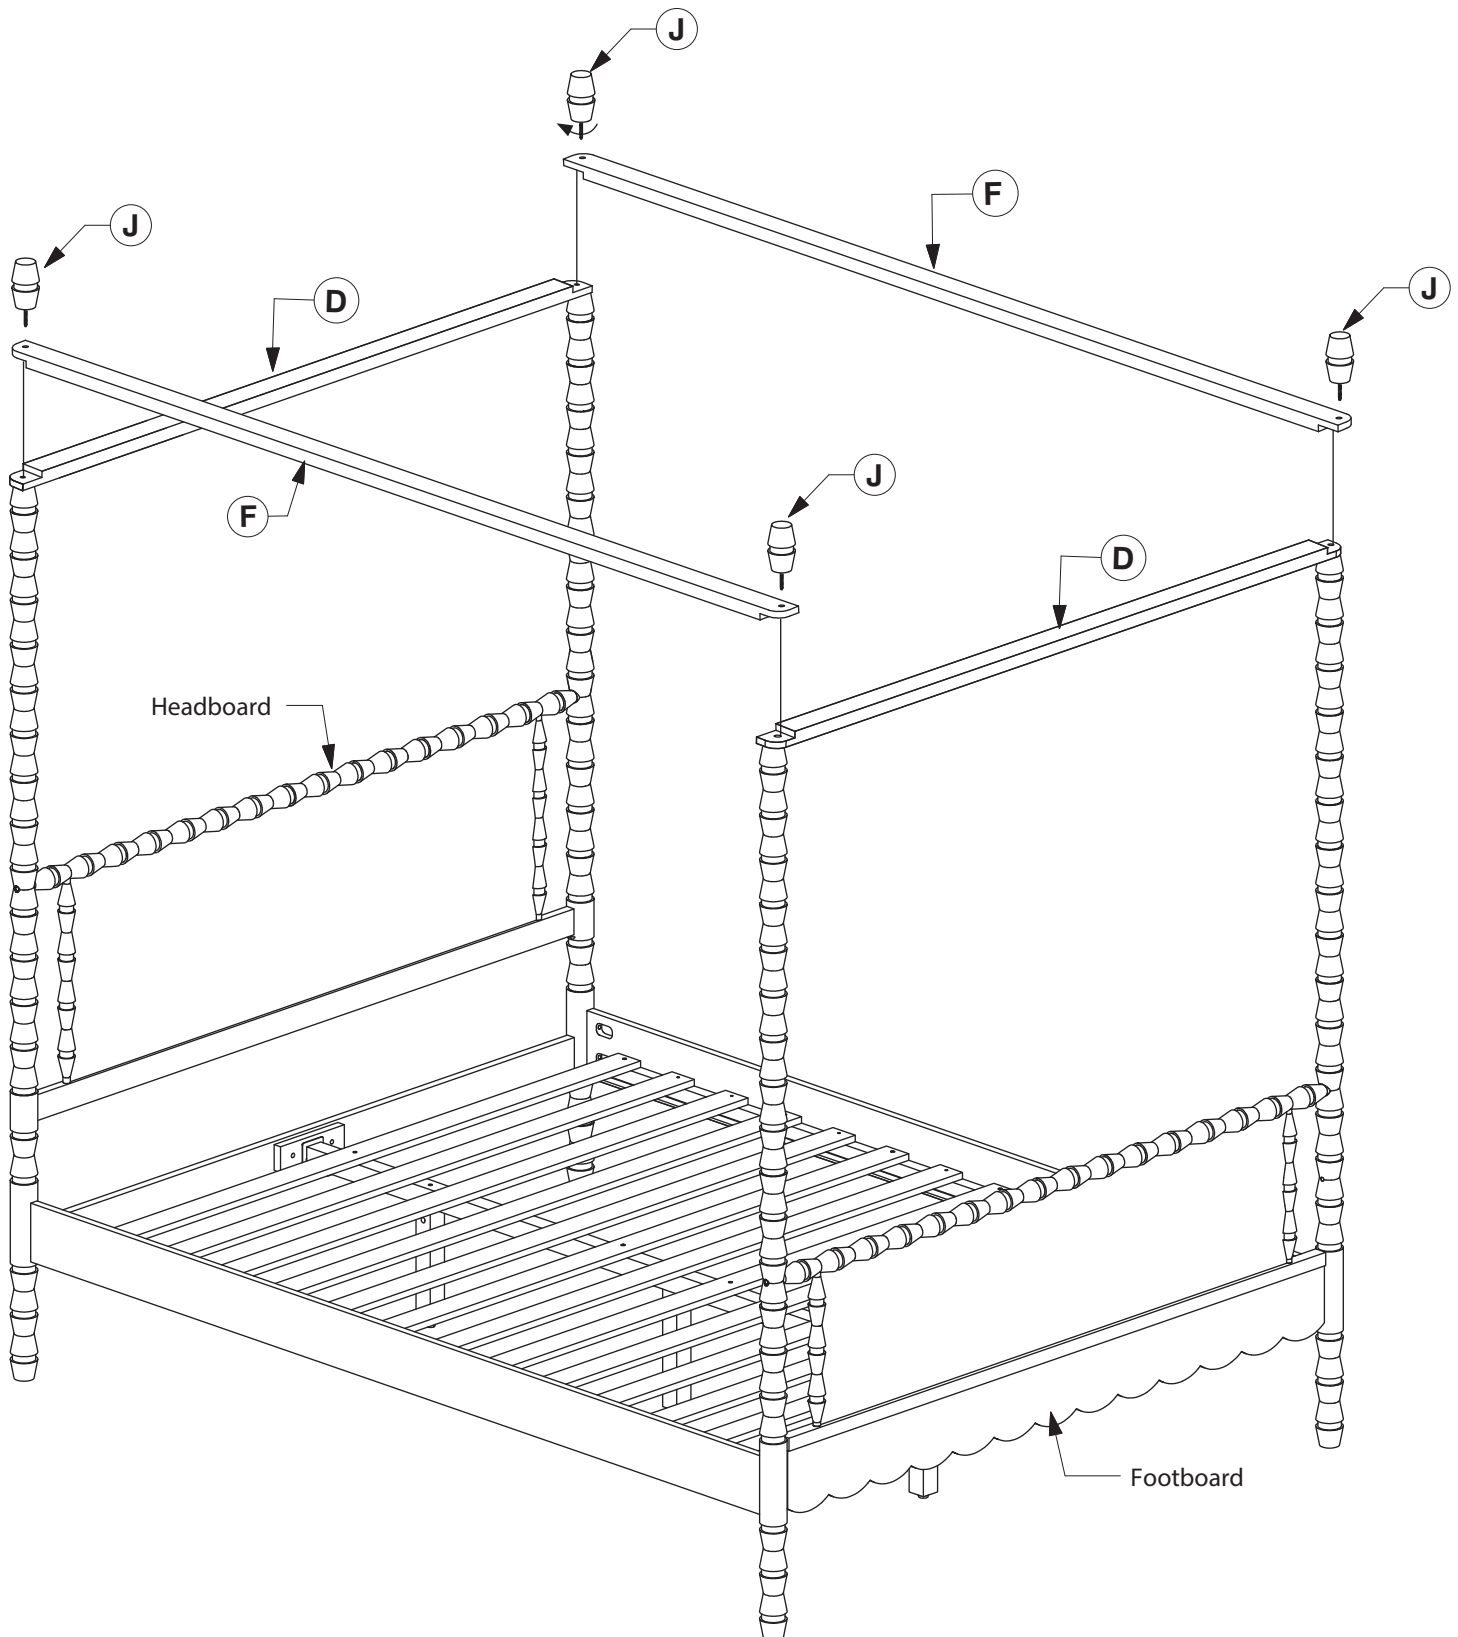

9021 2 Drawer Nightstand


Assembly Instructions

WI-0126

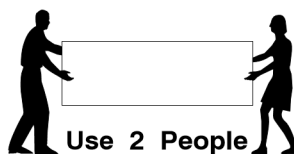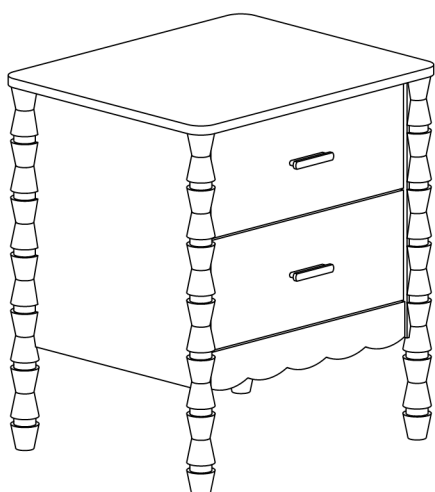

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

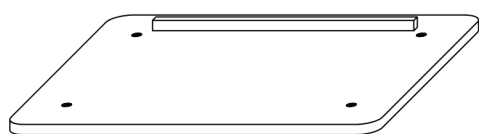


A Top Panel x 1




B Upper Support x 2




C Bottom Front Support x 1

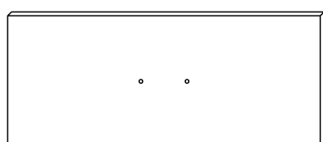

H Drawer Face x 2




K Drawer Side (Left Hand) x 2

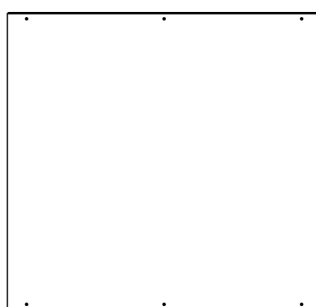


D Back Panel x 1




E Bottom Rear Support x 1




J Drawer Back x 2



L Drawer Side (Right Hand) x 2

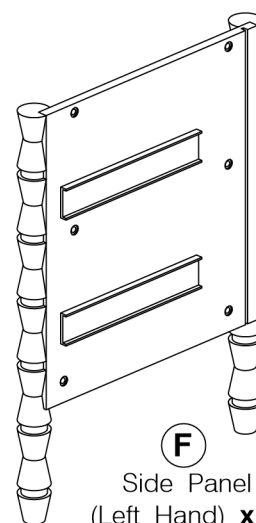

F Side Panel (Left Hand) x 1

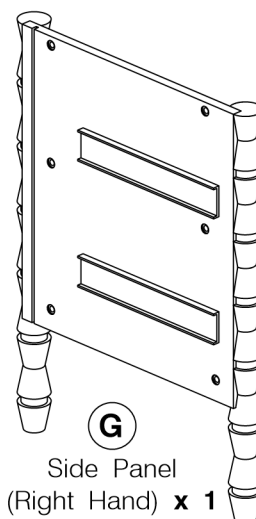

G Side Panel (Right Hand) x 1



M Drawer Bottom x 2

9021 2 Drawer Nightstand

Assembly Instructions

WI-1225

2 Hardware List

① M6 x 15mm
JCB x 24

② M4 x 25mm
Wood
Screw x 16

③ M4 x 20mm
Wood
Screw x 8

④ M4 x 16mm
Wood
Screw x 6


⑤ 'L' Bracket
(5005-3)
x 12

⑥ M4 x 22mm
Wood Screw
x 4


⑦ Handle
(3321-64)
x 2

⑧ Allen Key
x 1


3 Assemble the Drawer Sides (K & L) to the Drawer Face (H).

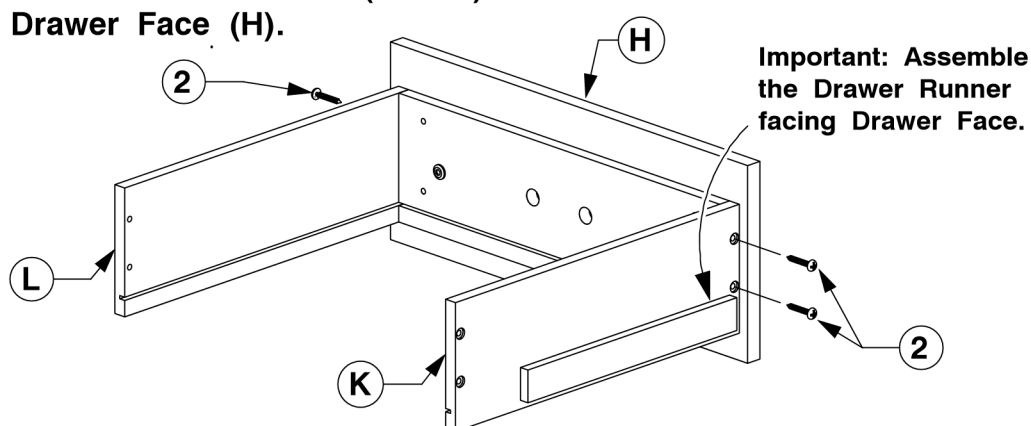

4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

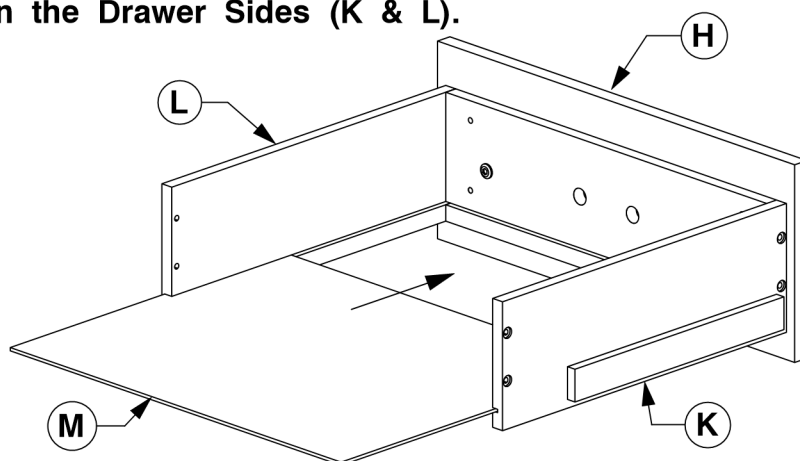

5 Assemble the Drawer Back (J) to the Drawer Sides (K & L). Fit the Handle to the Drawer Face (H).

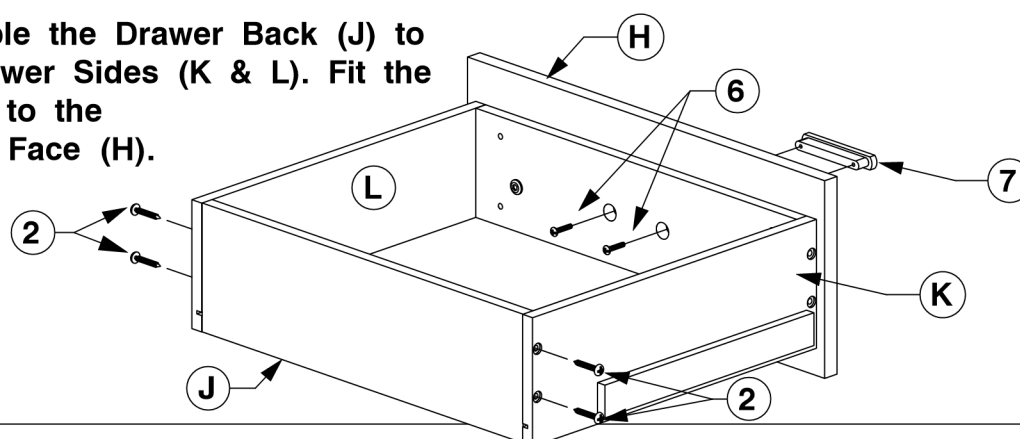


9021 2 Drawer Nightstand


Assembly Instructions

WI-0126

- 6** Fit the 'L' Bracket to the Side Panel (F & G).

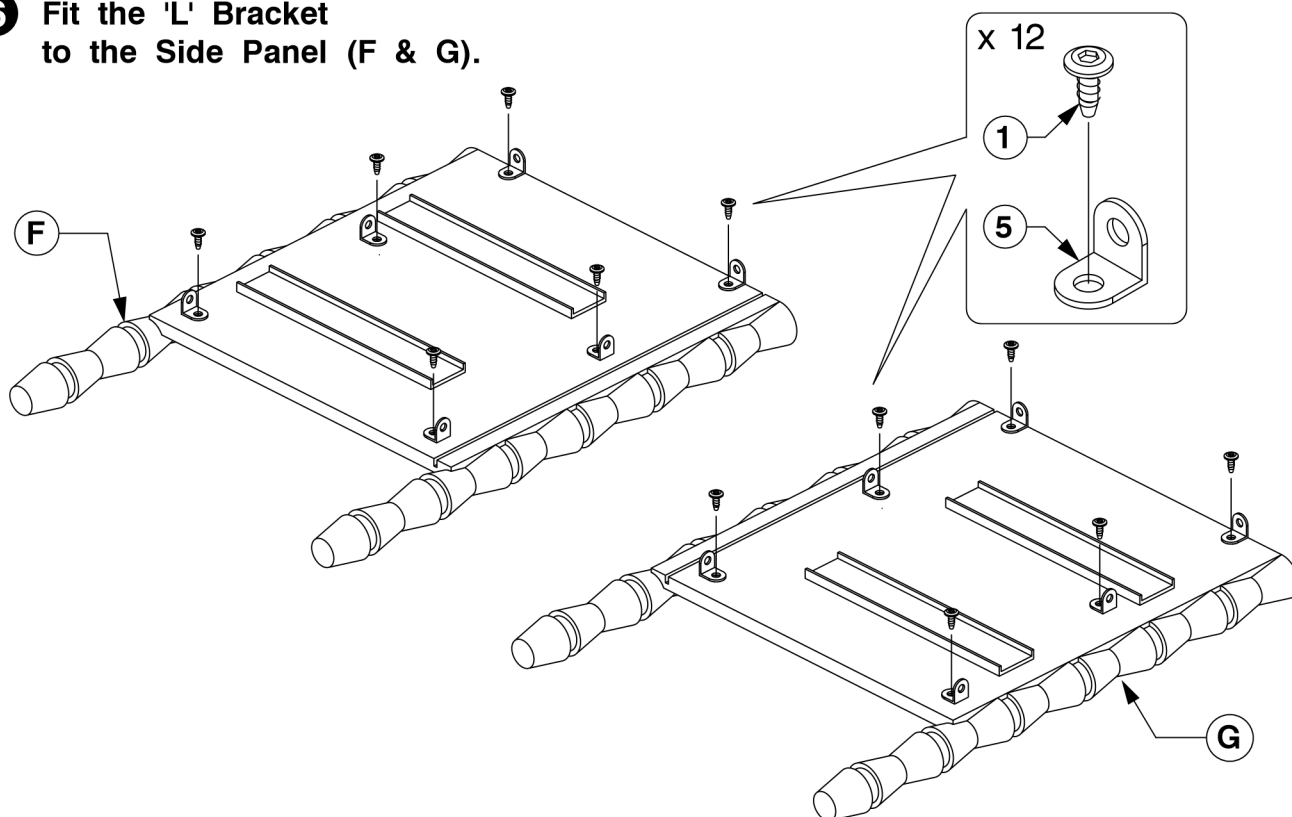

- 7** Assembled the Side Panel (F & G) to the Top Panel (A).

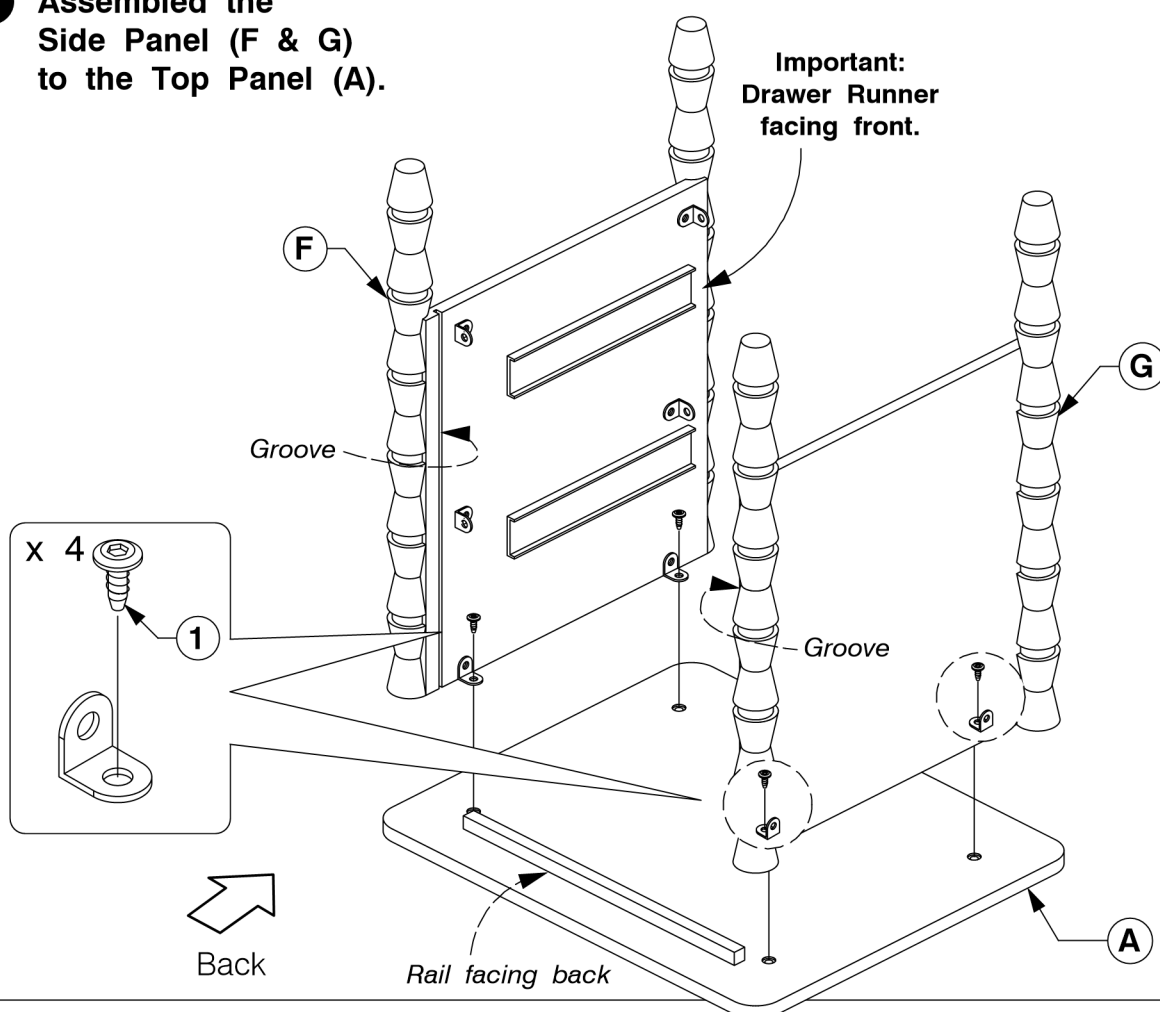


9021 2 Drawer Nightstand


Assembly Instructions

WI-0126

- 8** Fit the Upper Support Bar (B), Bottom Front & Rear Support (C & E) to the Side Panel (F & G).

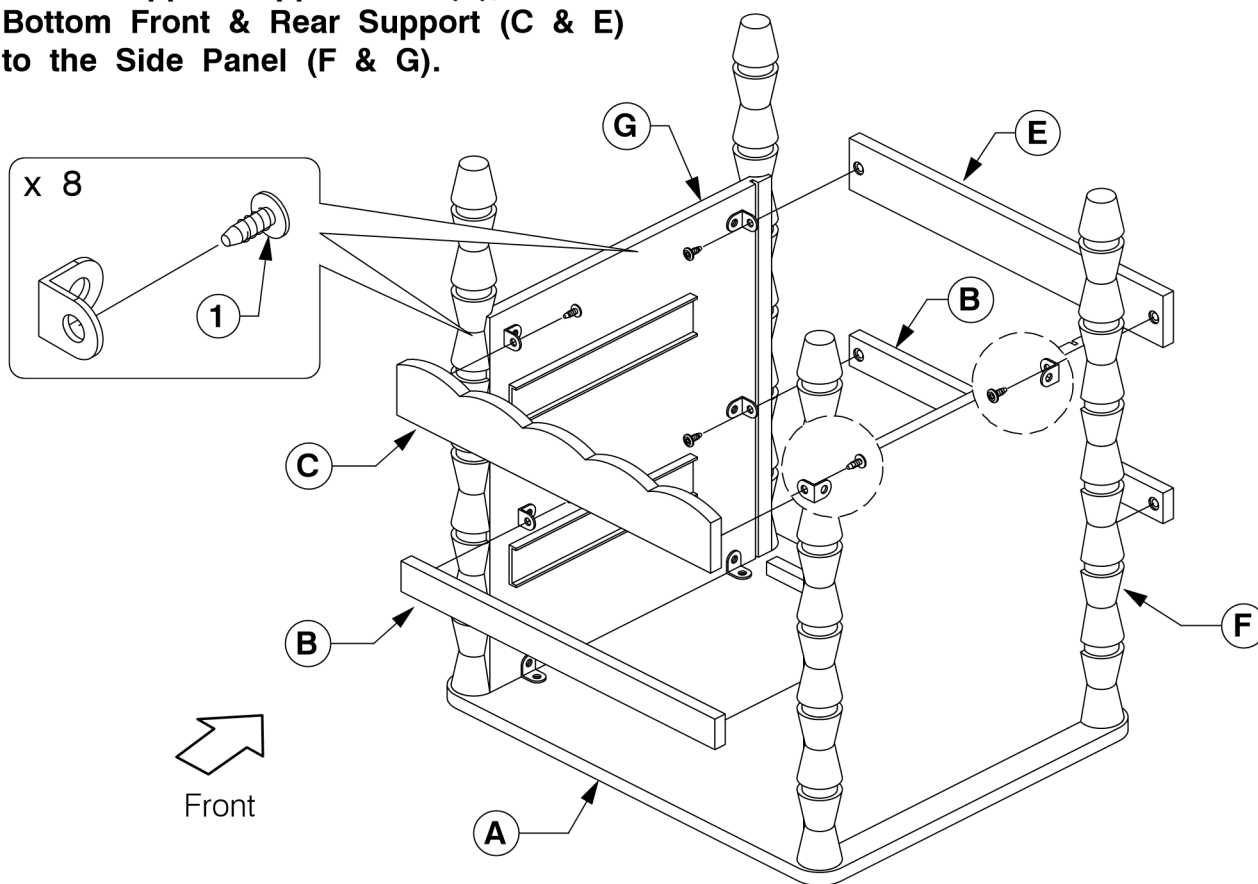

- 9** Slide the Back Panel (D) into the groove on the back of the Side Panel (F & G).

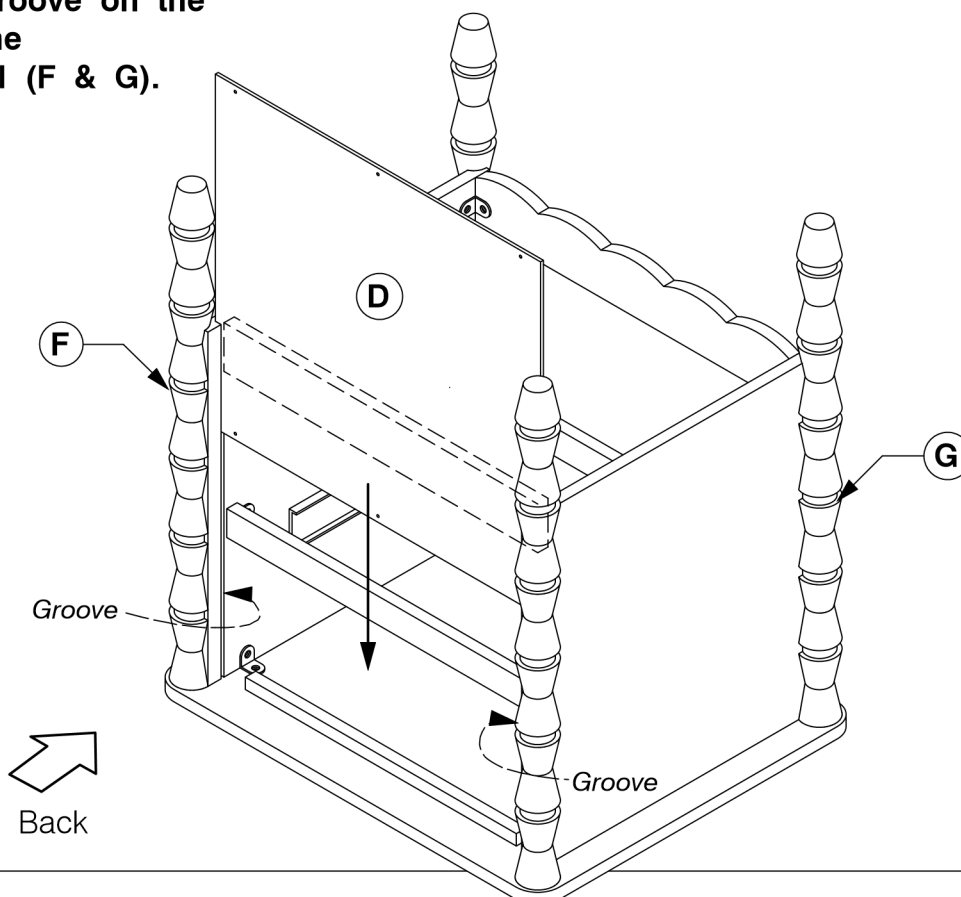


9021 2 Drawer Nightstand


Assembly Instructions

WI-0126

- 10** Use screws to tighten the Back Panel (D).

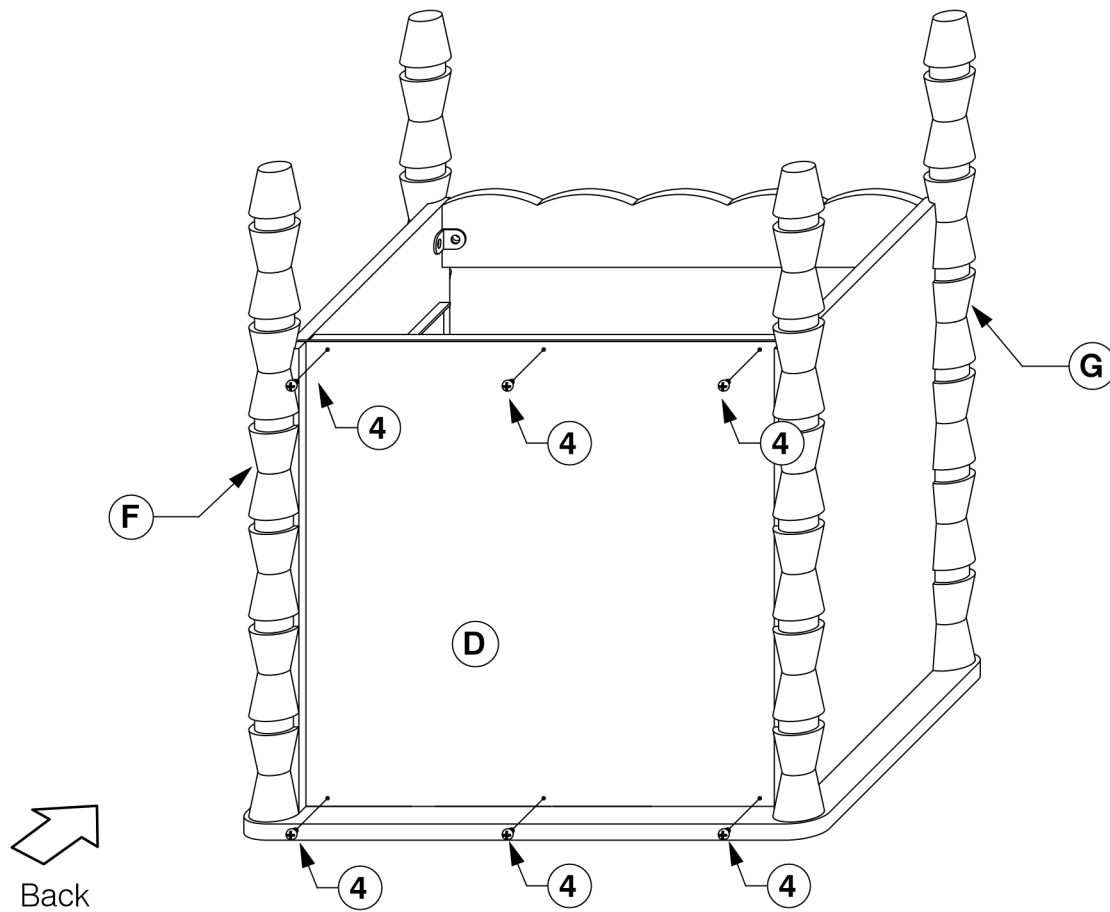

- 11** Fit the Drawer Box to the Casegood Body.

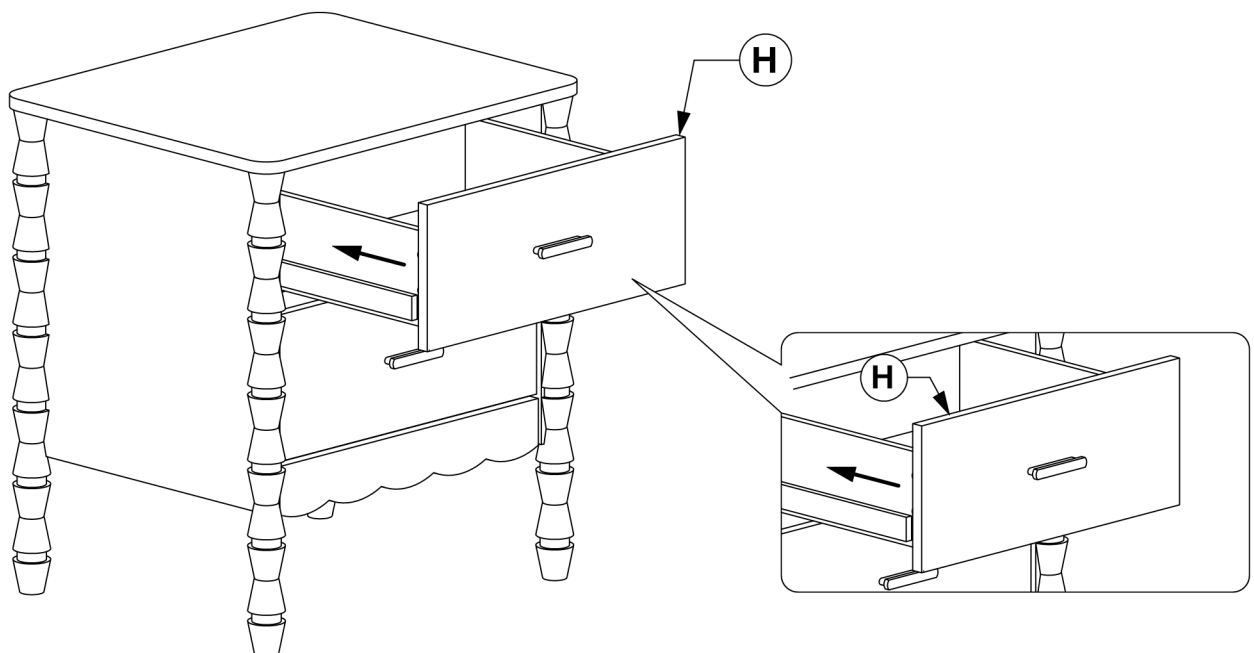


9021 2 Drawer Nightstand

Assembly Instructions


WI-0126

12 Fit and adjust the Drawer Face (H).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

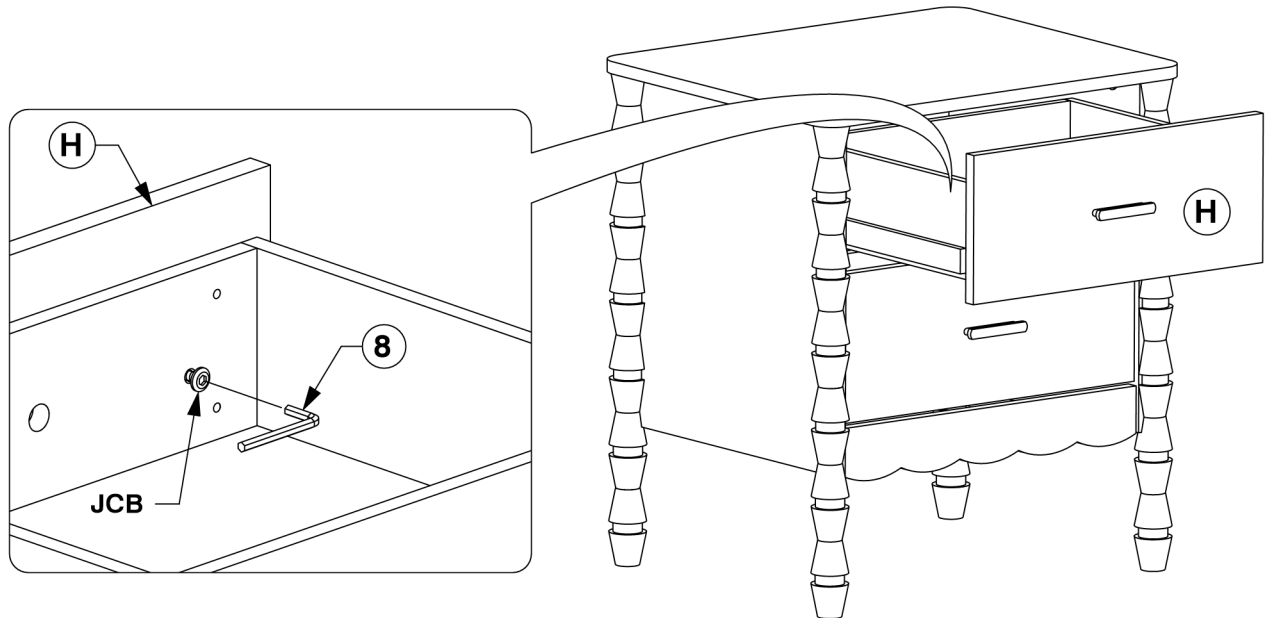


13 After the Drawer Faces (H) are aligned, secure with wood screws.

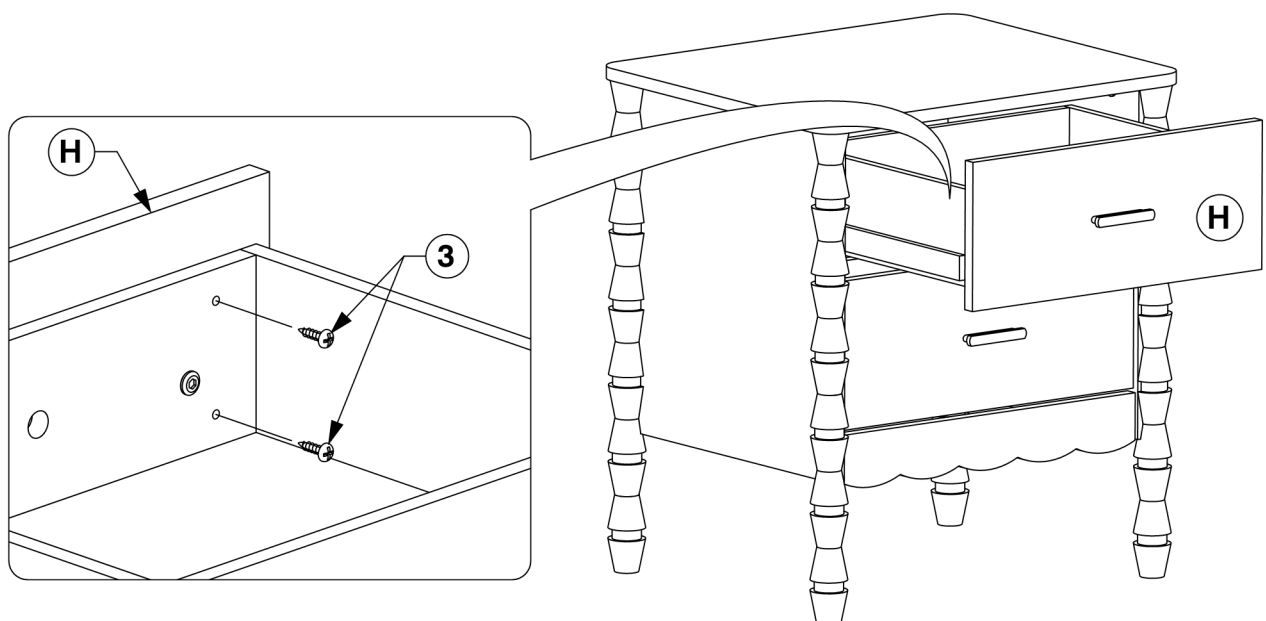


9021 6 Drawer Dresser

Assembly Instructions


WI-0126

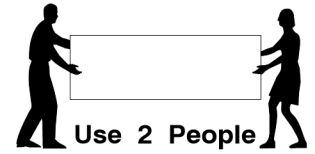

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

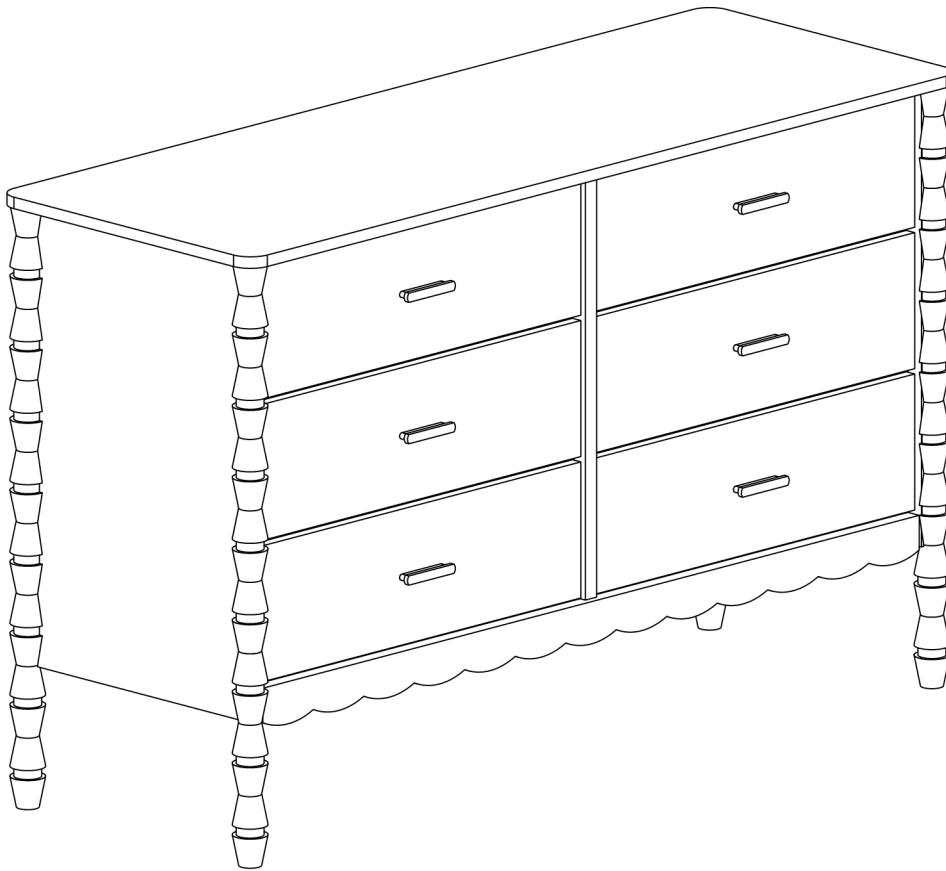

WARNING

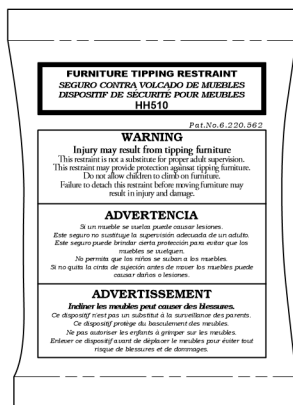

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9021 6 Drawer Dresser

Assembly Instructions

WI-0126

1 Parts List

Parts in Box A:




A Top Panel x 1




B Upper Support Bar x 2




C Bottom Front Support Bar x 1




D Bottom Rear Support Bar x 1

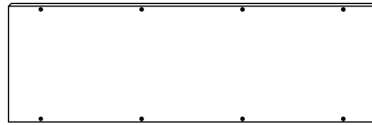


E Back Panel (Wider) x 1



F Back Panel (Narrow) x 1



G Drawer Face x 6



H Drawer Back x 6




J Drawer Bottom x 6




K Drawer Rail x 6


Parts in Box B:

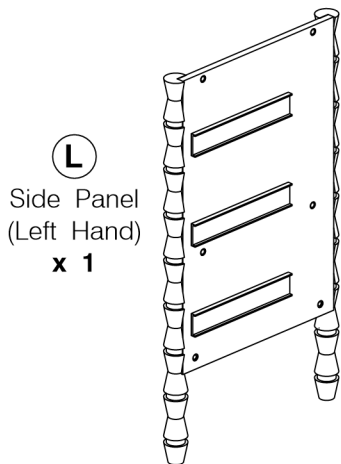

L Side Panel (Left Hand) x 1

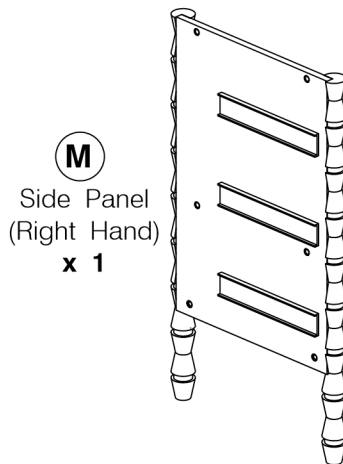


M Side Panel (Right Hand) x 1

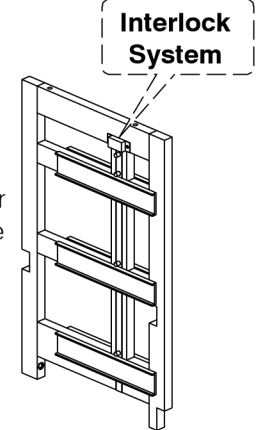


N Center Frame x 1


Parts for LEFT Side Drawer

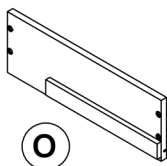



O LEFT Drawer Side (Left Hand) x 3

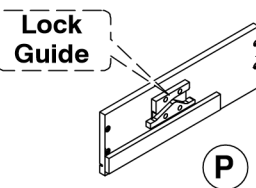


P LEFT Drawer Side (Right Hand) x 3

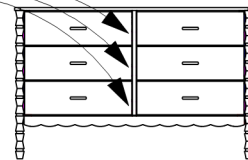

Parts for RIGHT Side Drawer

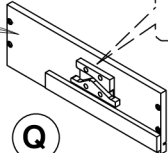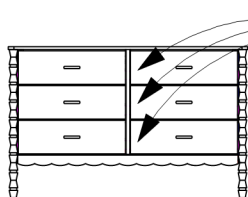

Q RIGHT Drawer Side (Left Hand) x 3

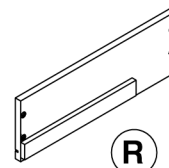






R RIGHT Drawer Side (Right Hand) x 3

9021 6 Drawer Dresser

Assembly Instructions

WI-0126


2 Hardware List

- | | | | |
|--|--|---|--|
| 
1 M6 x
15mm JCB
x 24 | 
2 M6 x
30mm JCB
x 4 | 
3 M6 x
60mm JCB
x 2 | 
4 Wood Screw
(M4 x 32mm) x 16 |
| 
5 Wood Screw
(M4 x 20mm) x 24 | 
6 Wood Screw
(M4 x 25mm) x 60 | 
7 M6 x 25mm
Wood Dowel x 24 | 
8 'L' Bracket
(5005-3) x 12 |
| 
9 Handle
(3321-64)
x 6 | 
10 M4 x 22mm
Wood Screw x 12 | 
11 Allen Key
x 1 | |


3 Assemble the Drawers.

STEP 3.1


LEFT

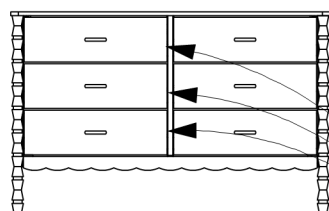

**Important: Assemble the
Drawer Runner facing
Drawer Face.**

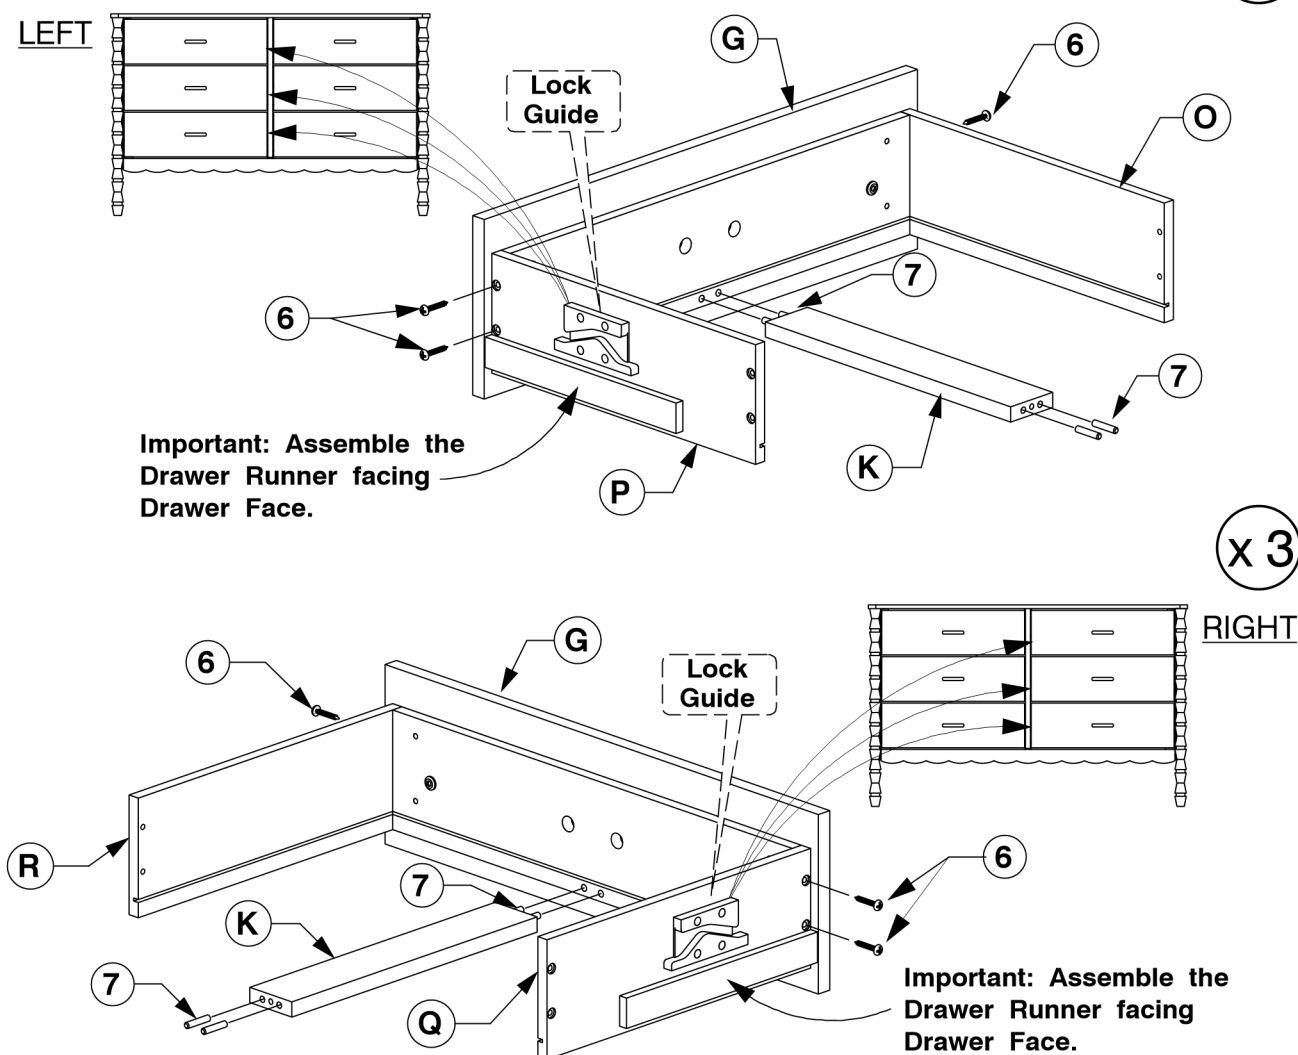

RIGHT

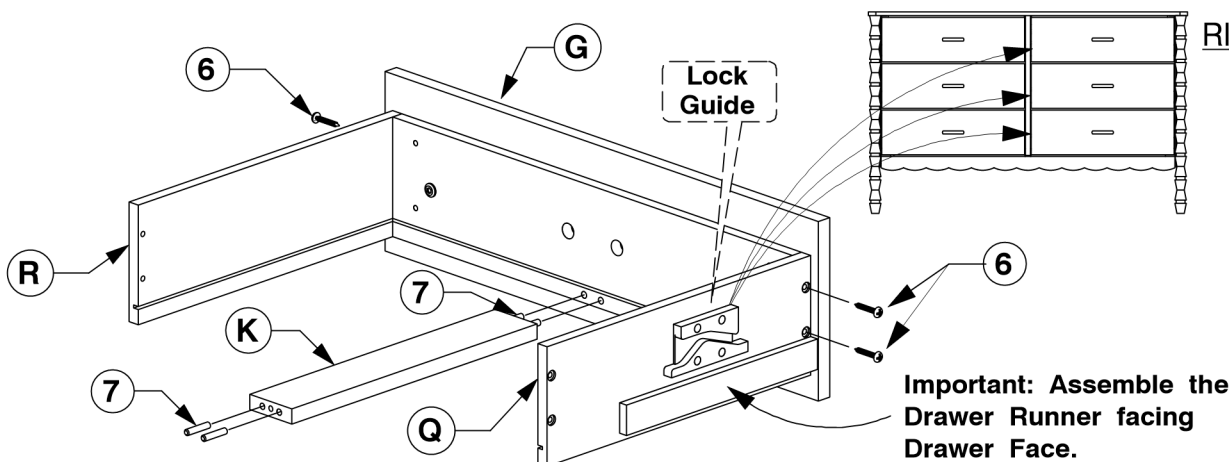

**Important: Assemble the
Drawer Runner facing
Drawer Face.**

9021 6 Drawer Dresser


Assembly Instructions

WI-0126


③ Assemble the Drawers.

STEP 3.2


* 3 Assemble the left and right drawers as shown below

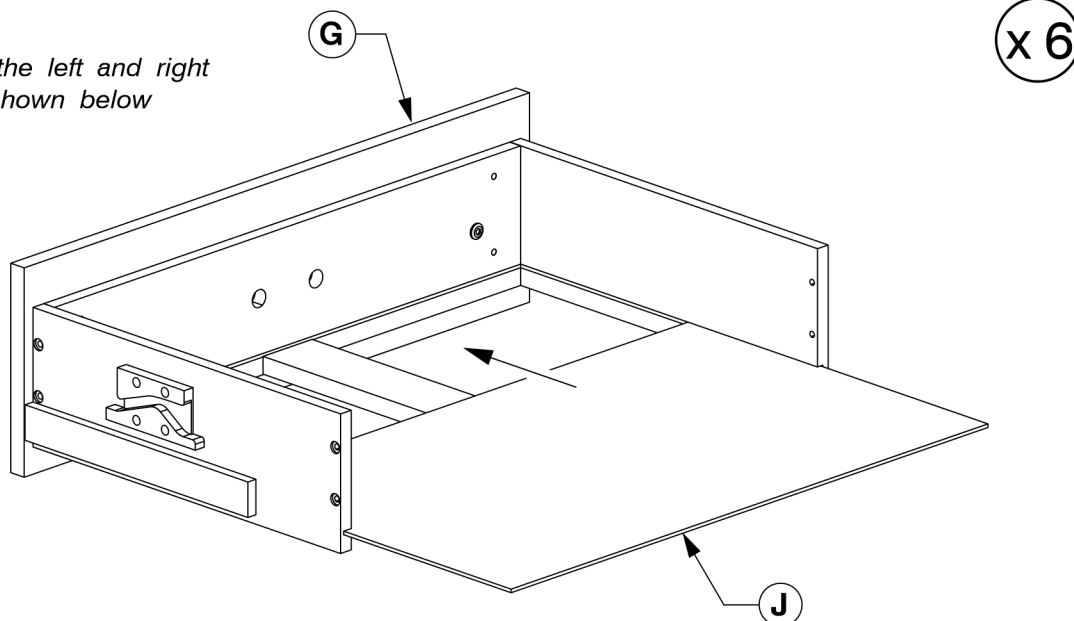

STEP 3.3

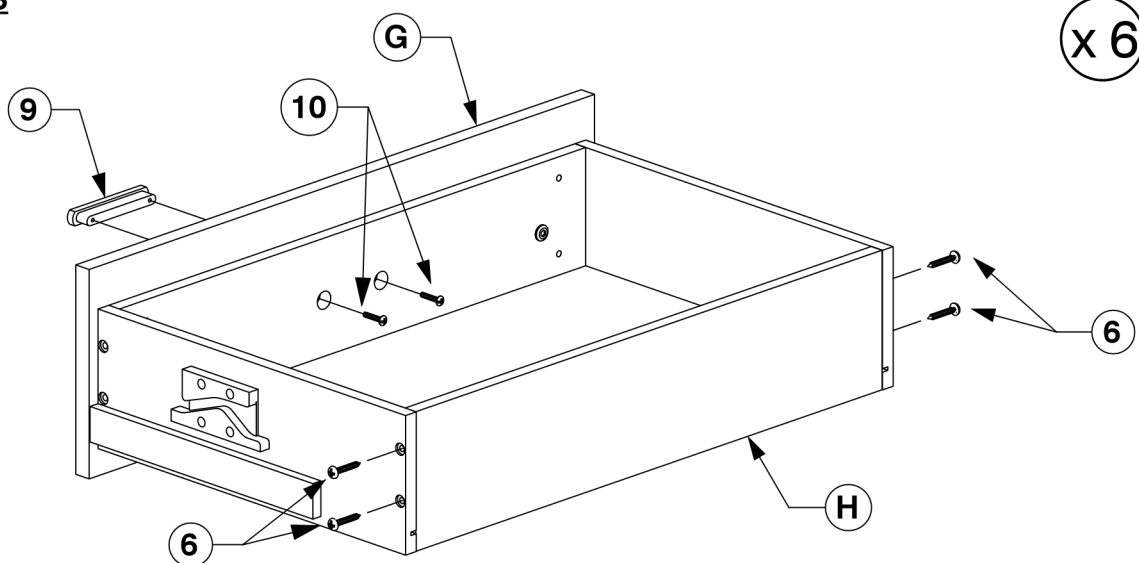

STEP 3.4

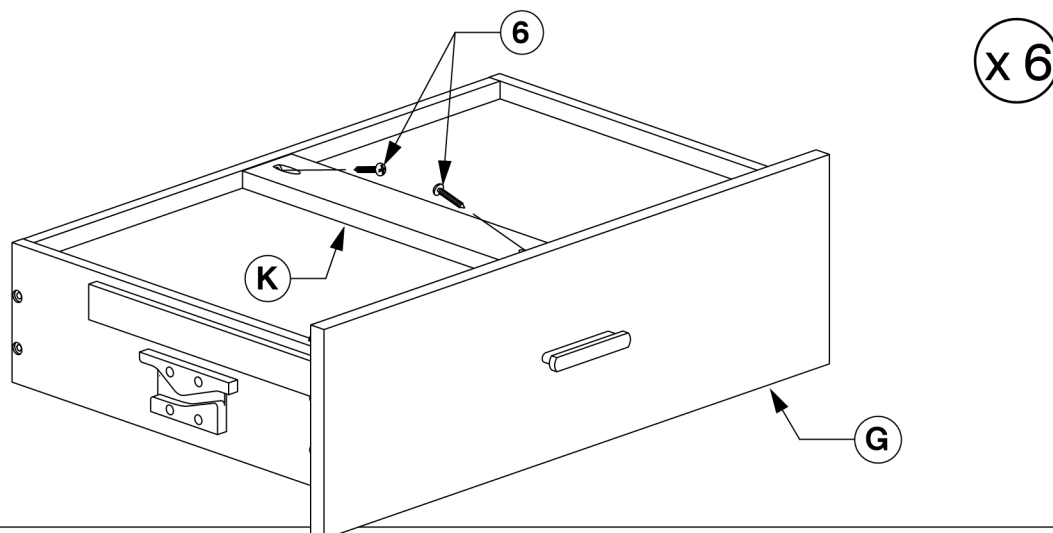


9021 6 Drawer Dresser


Assembly Instructions

WI-0126

4 Fit the 'L' Bracket to the Side Panel (L & M).

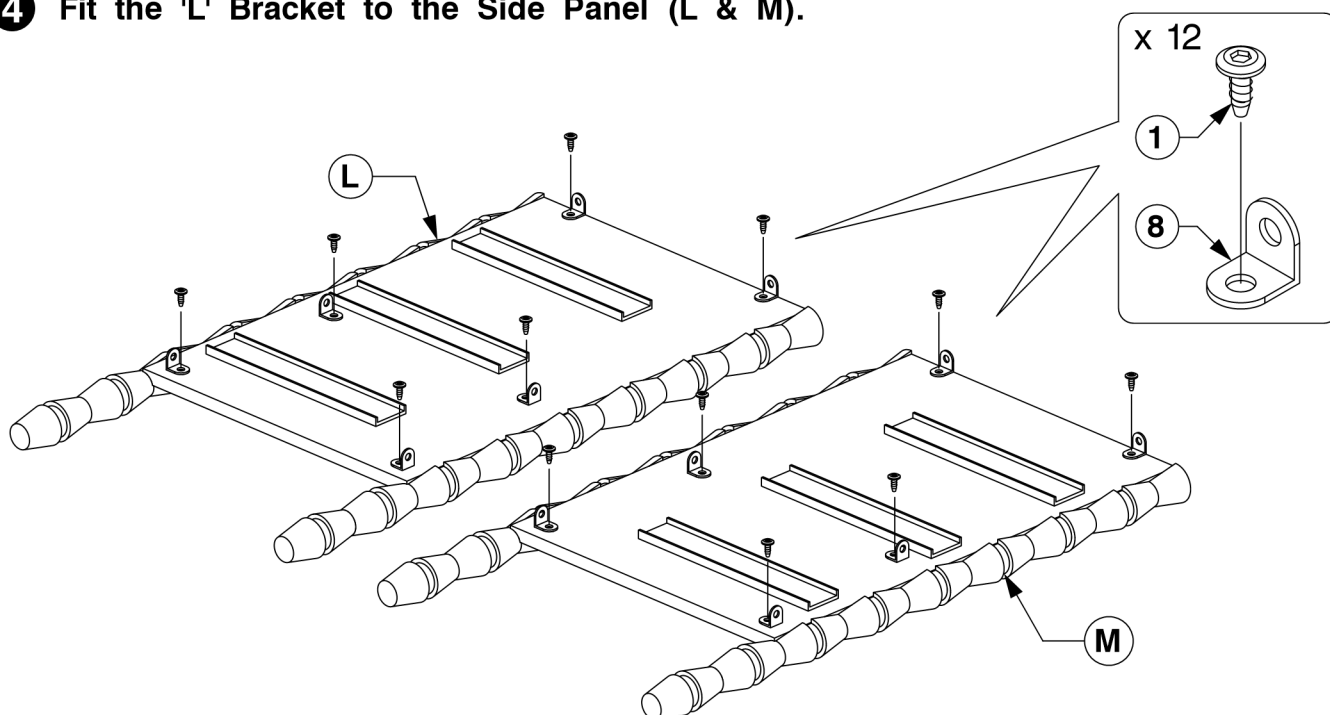

5 Fit the Side Panel- Right Hand (M) & Center Frame (N) to the Top Panel (A).

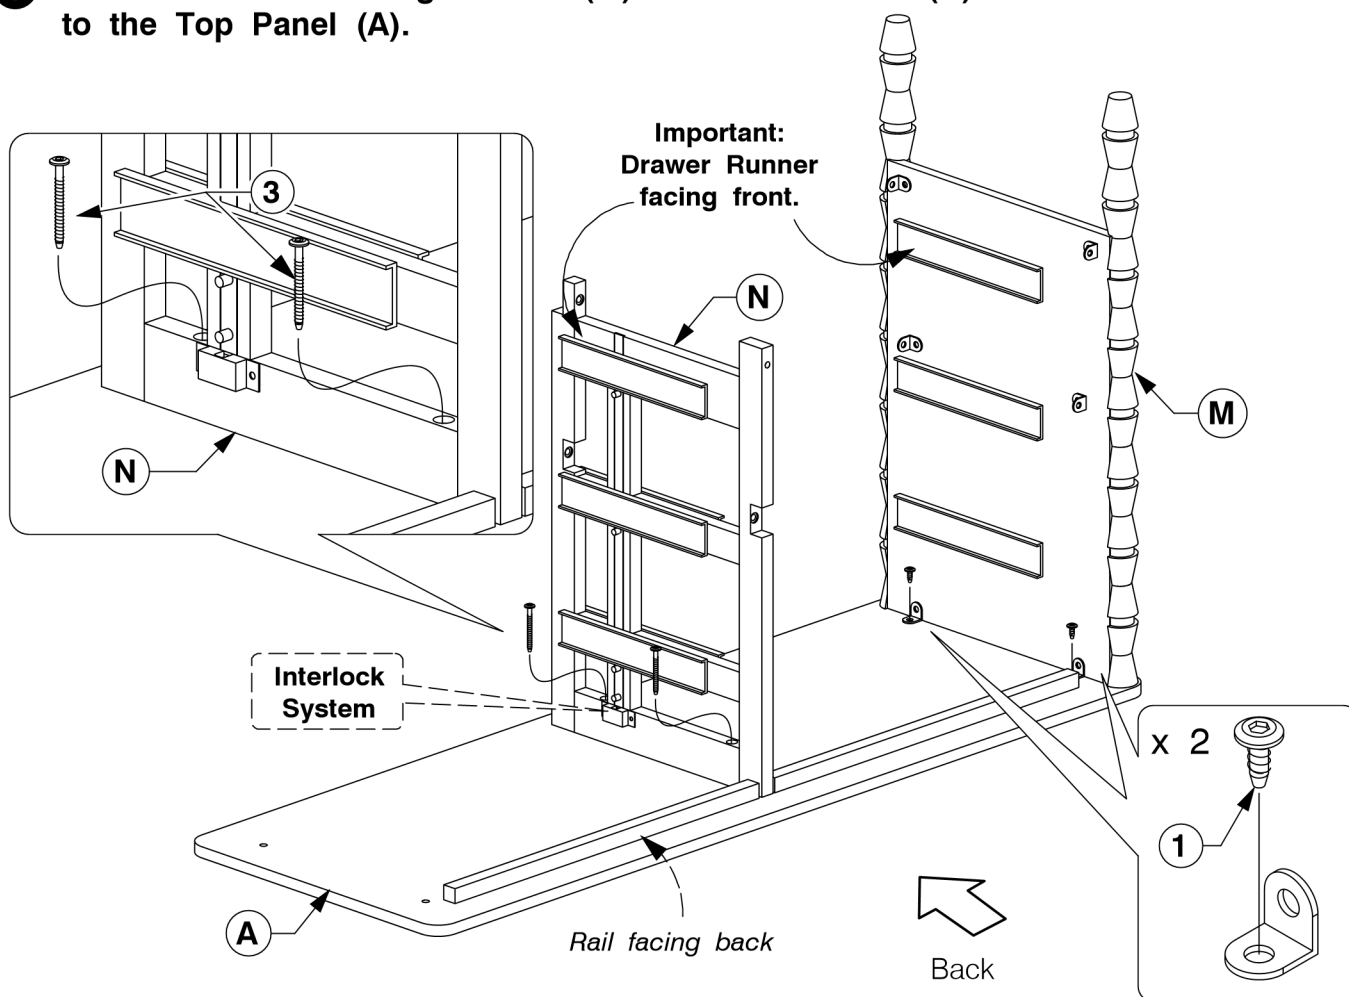


9021 6 Drawer Dresser


Assembly Instructions

WI-0126

- 6** Attach the following parts to the Right-Hand Side Panel (M) and the Center Frame (N), as shown:
Upper Support Bar (B)
Bottom Front Support Bar (C)
Bottom Rear Support Bar (D)

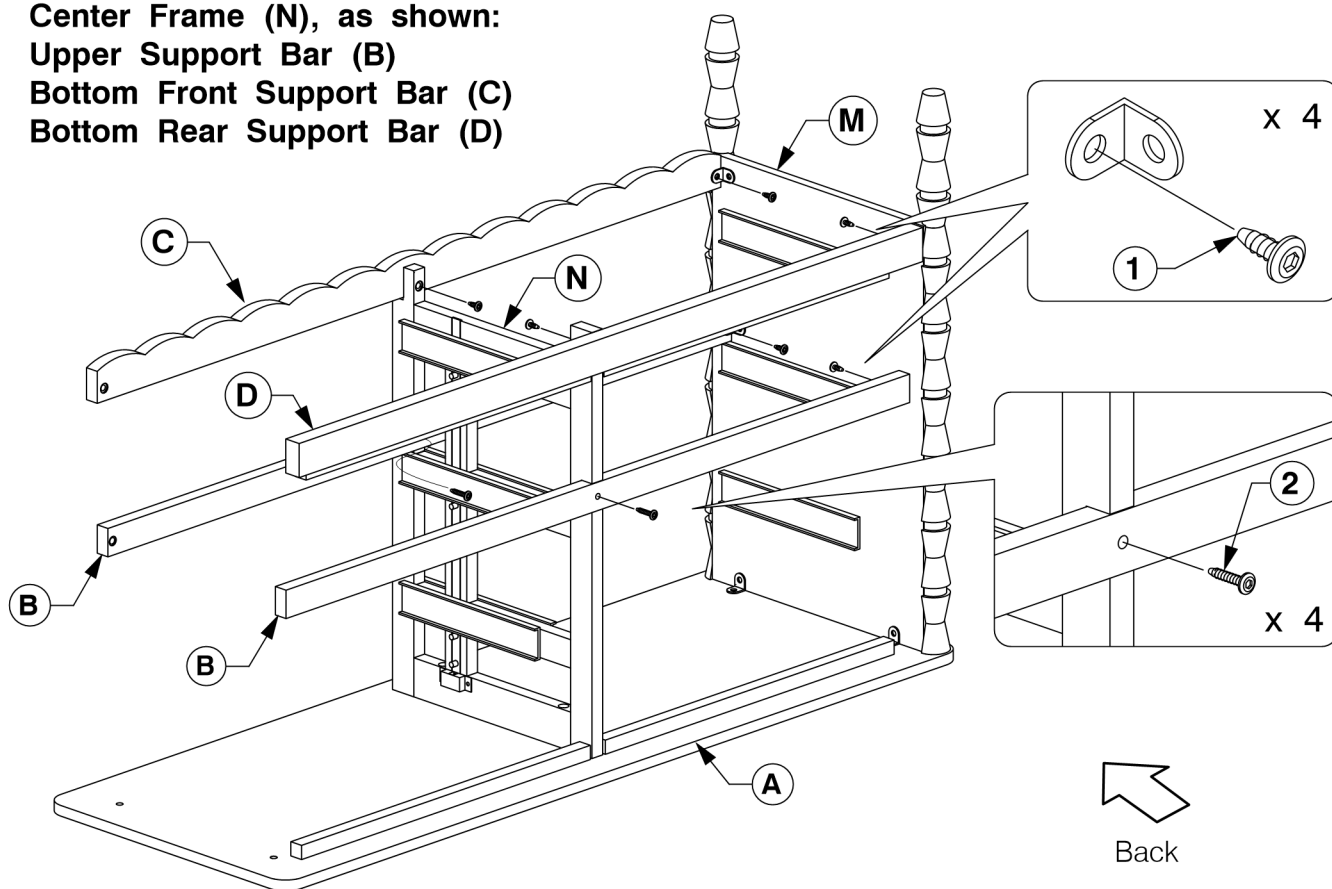

- 7** Fit the Left-Hand Side Panel (L) to the:
Upper Support Bar (B)
Bottom Front Support Bar (C)
Bottom Rear Support Bar (D)

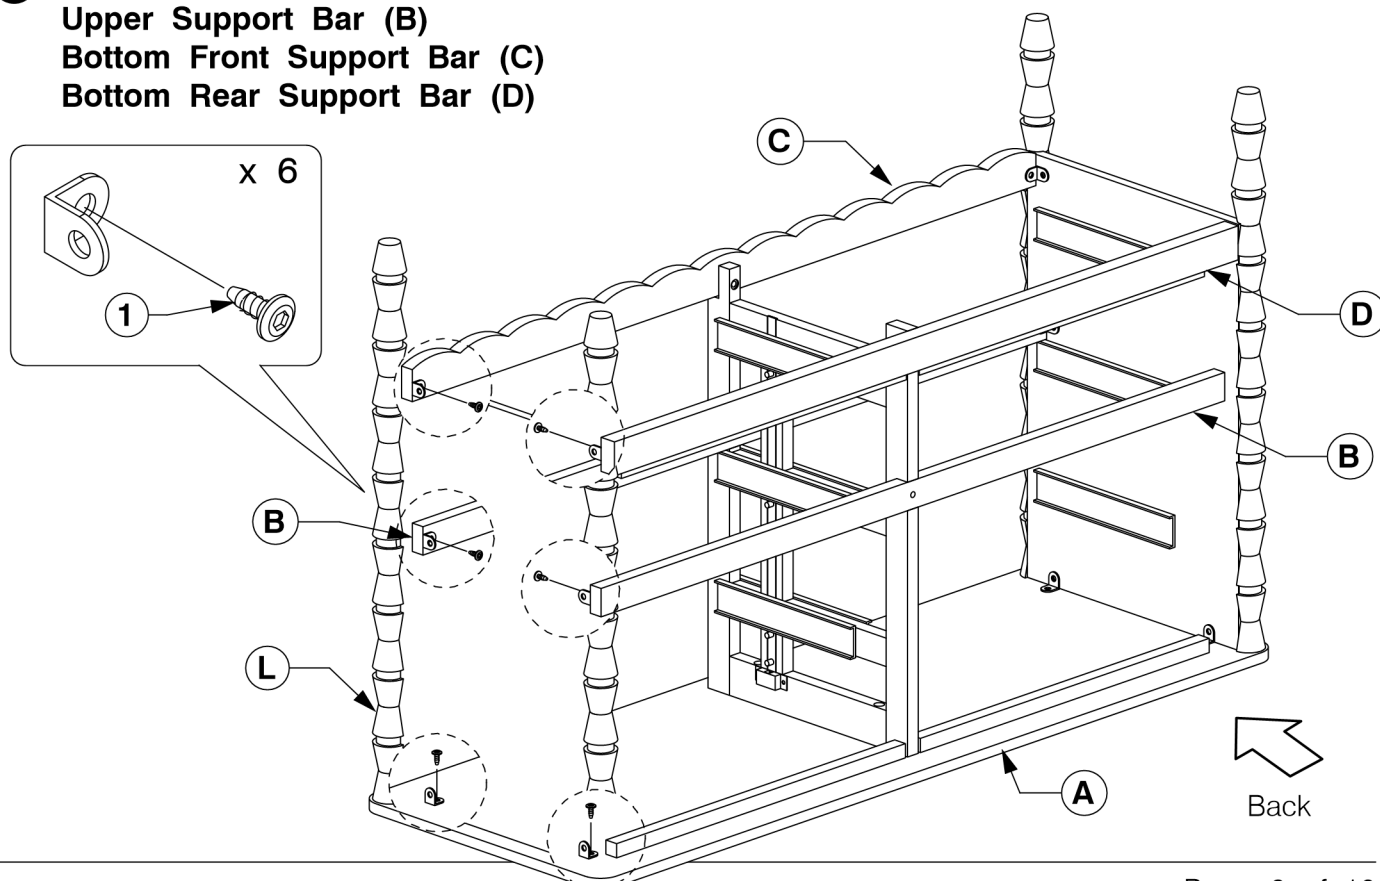


9021 6 Drawer Dresser


Assembly Instructions

WI-0126

- 8** Attached the Back Panel- Wider (E) to the back of the frame.

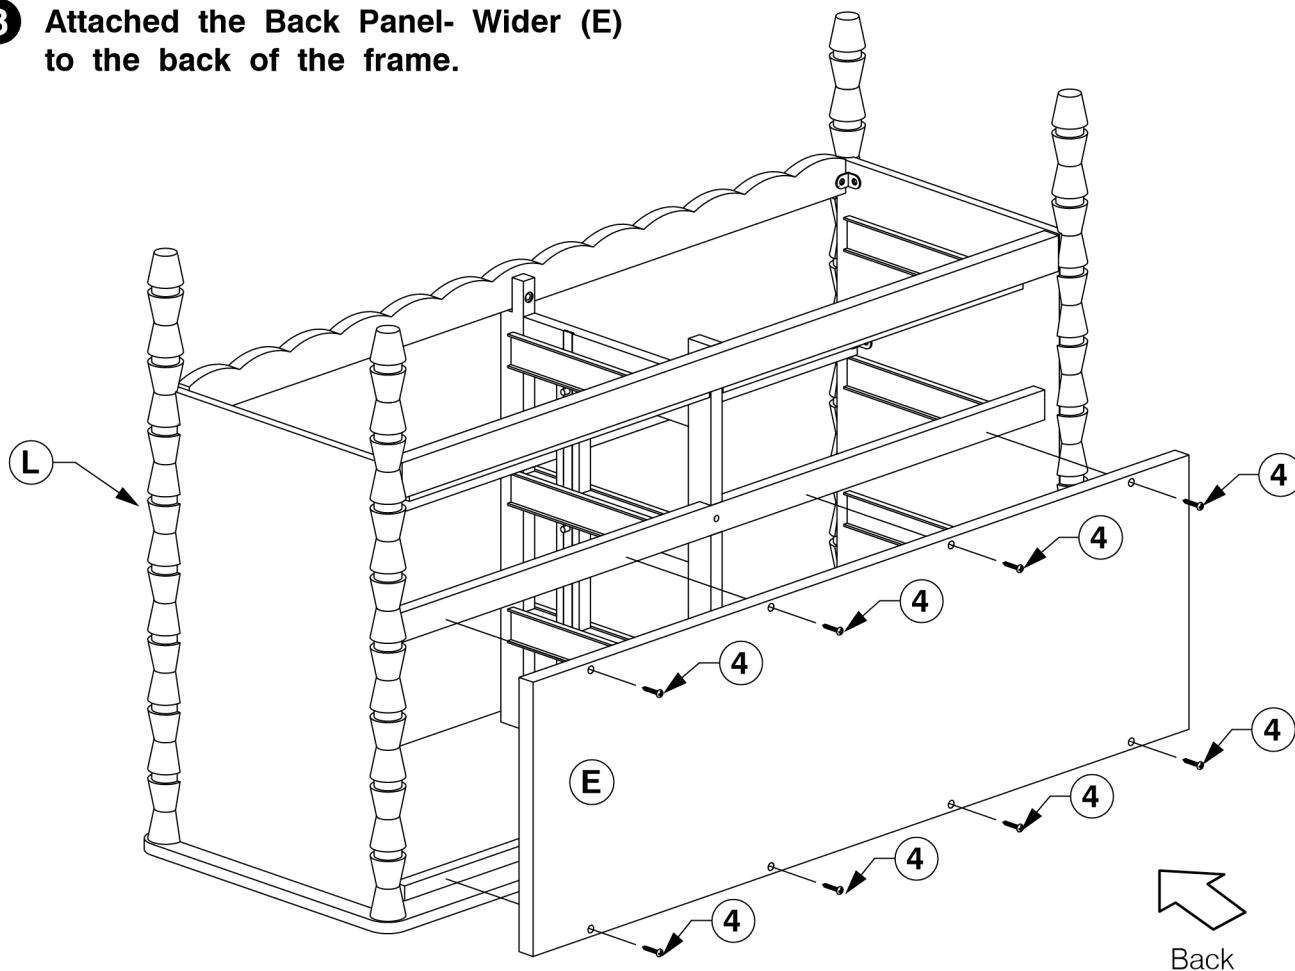

- 9** Attached the Back Panel- Narrow (F) to the back of the frame.

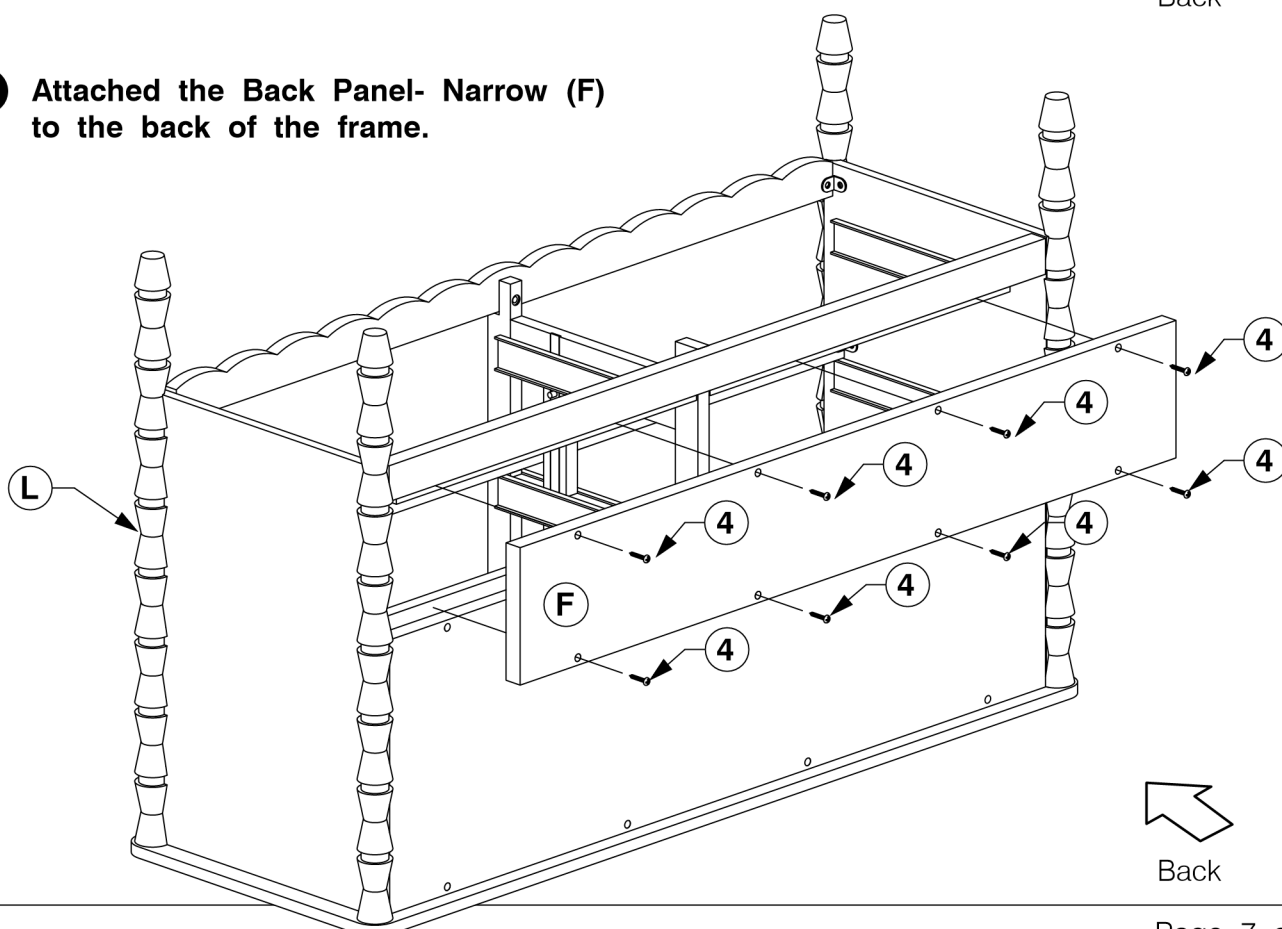


9021 6 Drawer Dresser

Assembly Instructions




WI-0126

10 Install the Drawers.


LEFT

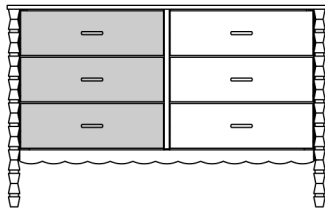




- Push the interlock bar **upwards** before inserting the drawers.

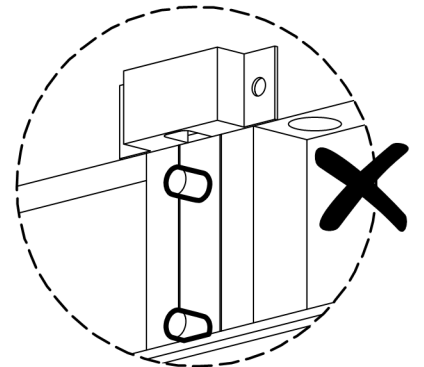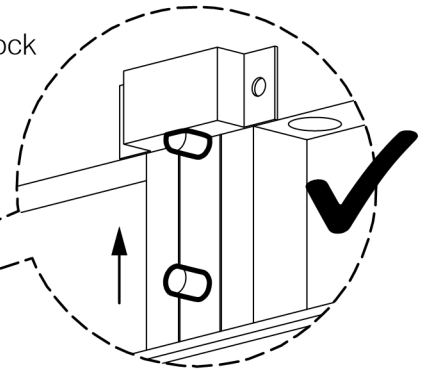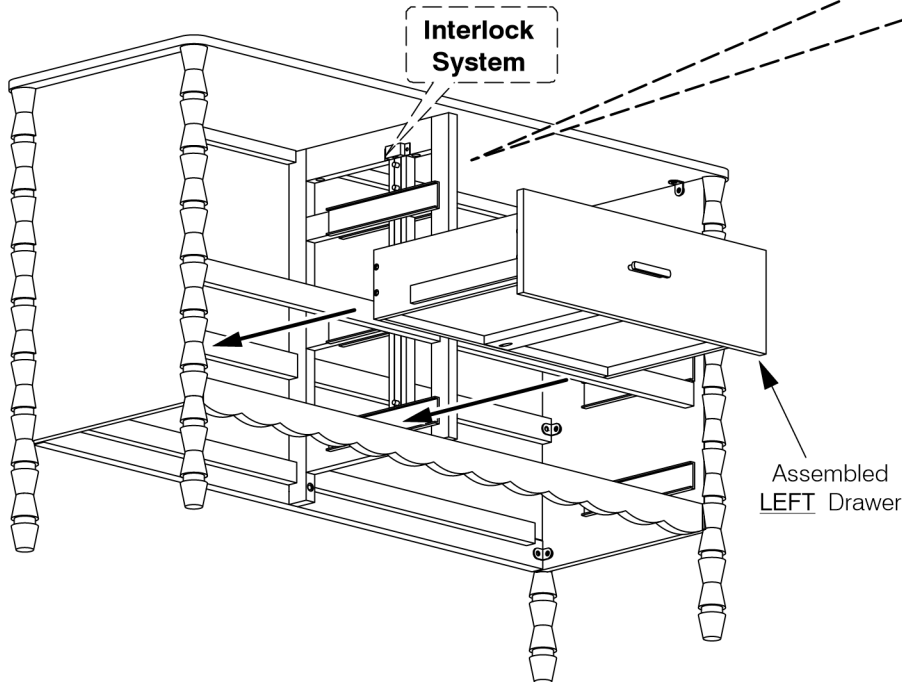

RIGHT

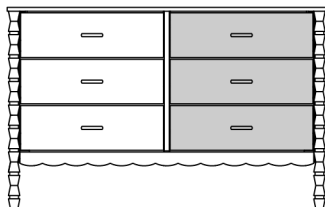

- Push the interlock bar **upwards** before inserting the drawers.

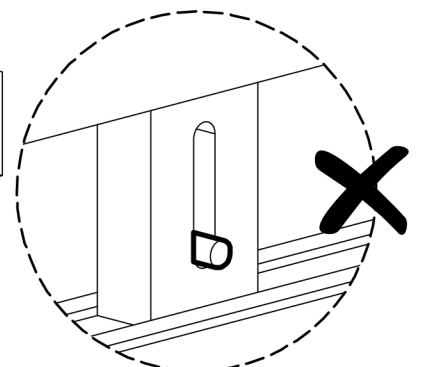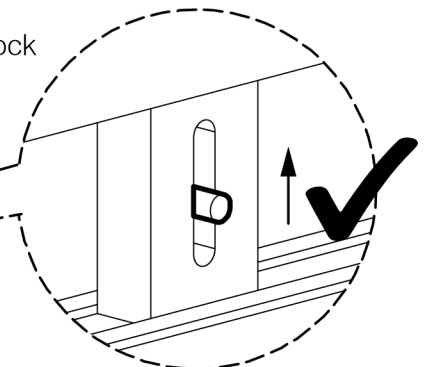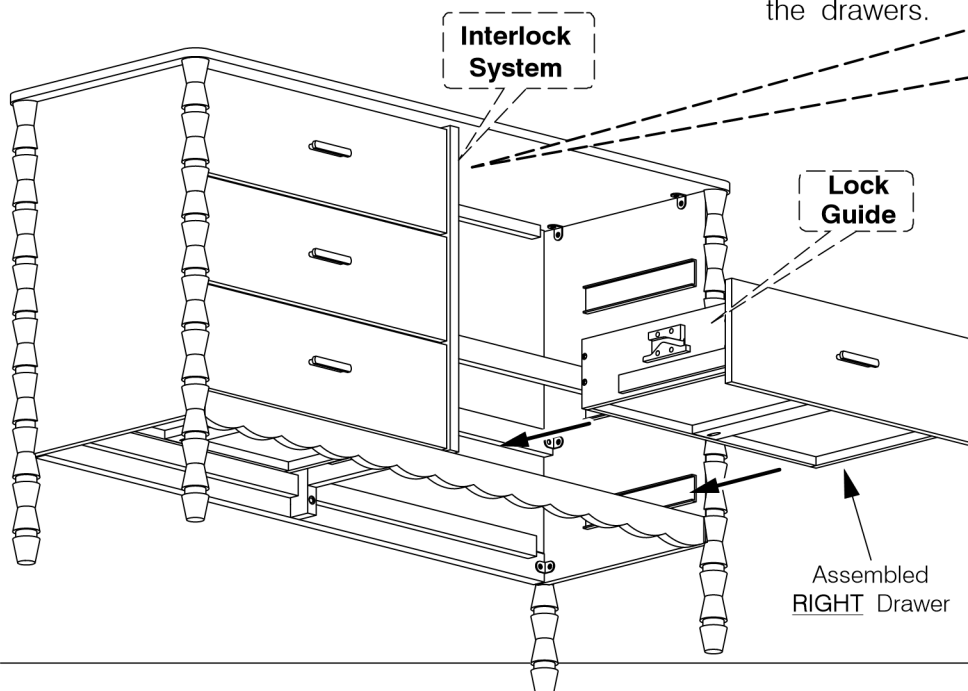


9021 6 Drawer Dresser

Assembly Instructions


WI-0126

11 Adjust the Drawer Face (G).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.


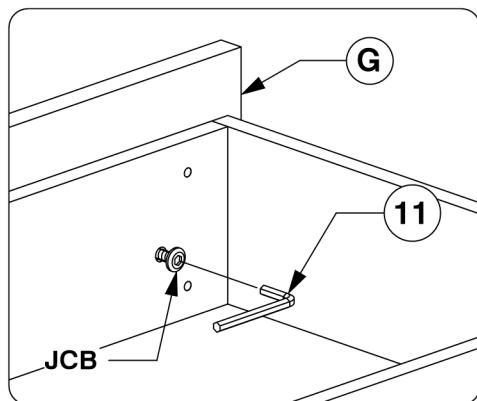


* NOTE: Only one drawer
can be open at a time.

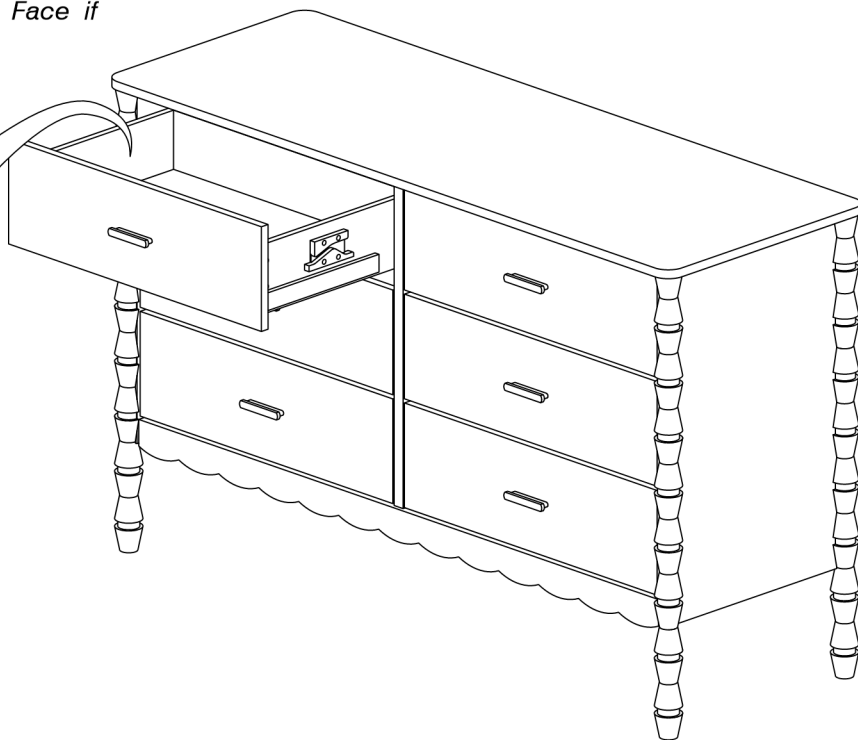

12 After the Drawer Faces (G) are aligned, secure with wood screws.

* NOTE: Only one drawer
can be open at a time.

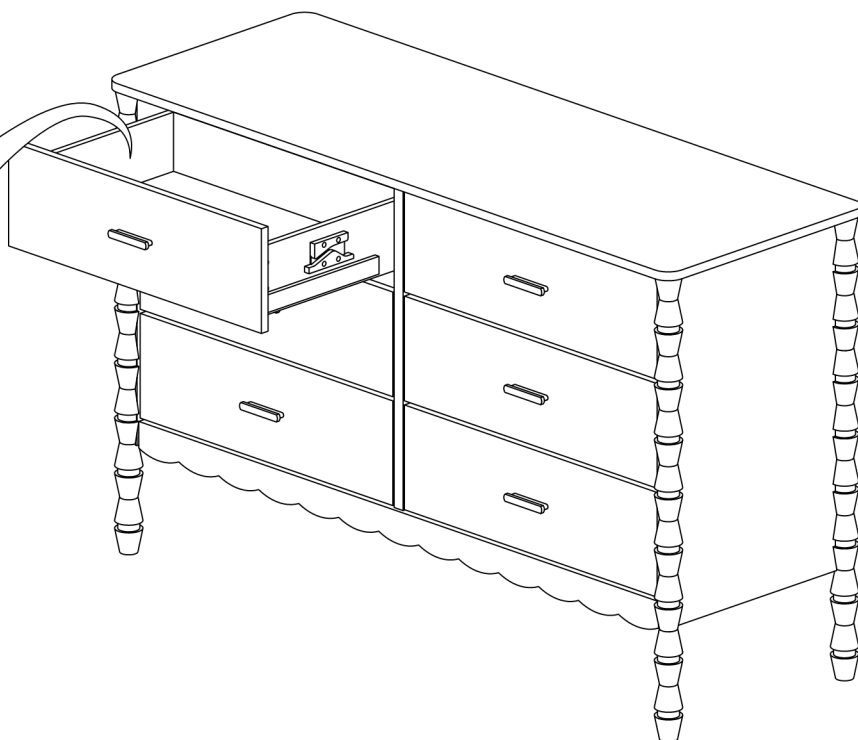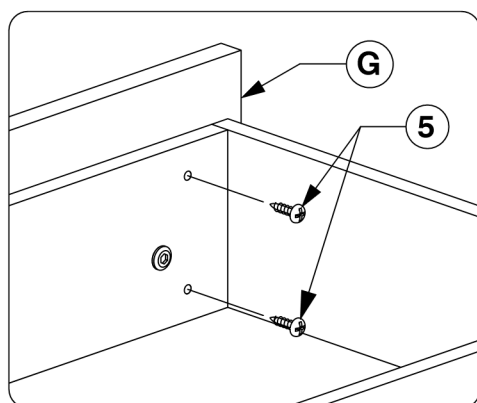




9021 6 Drawer Dresser

Assembly Instructions


WI-0126

13 Remove the Drawers.


- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

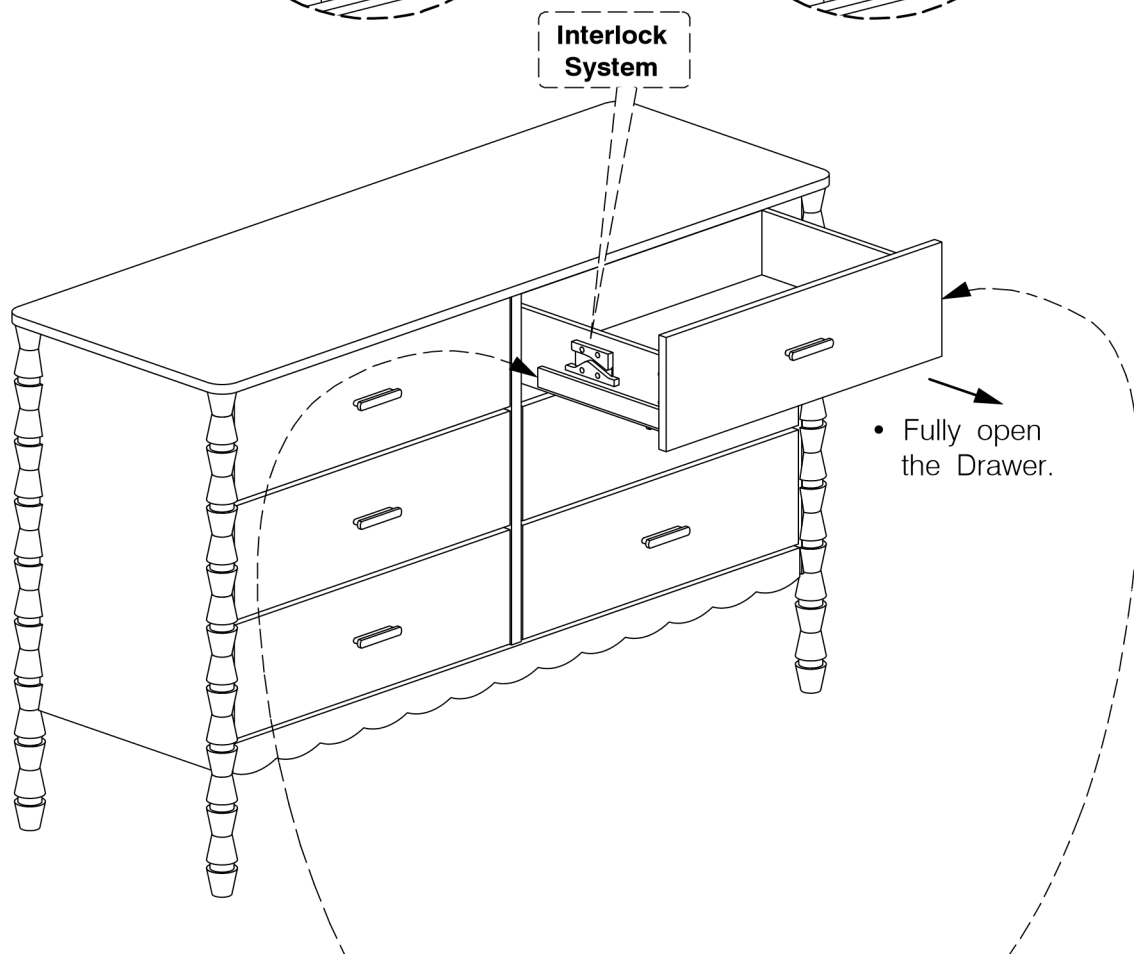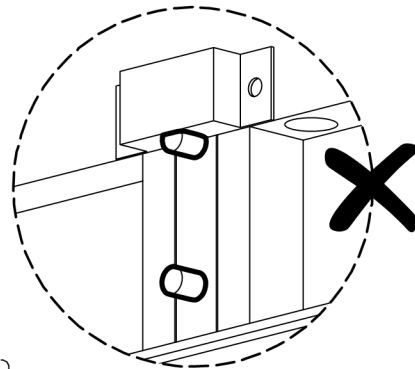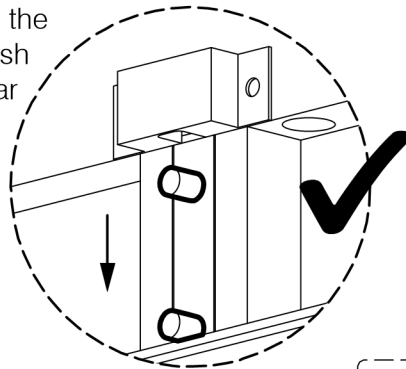

- Fully open the Drawer.

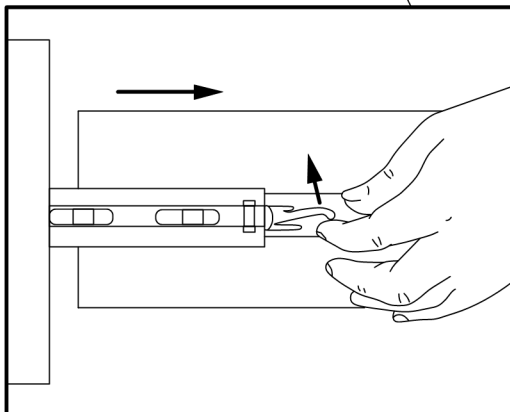

- Lift the **LEFT** side clip up.

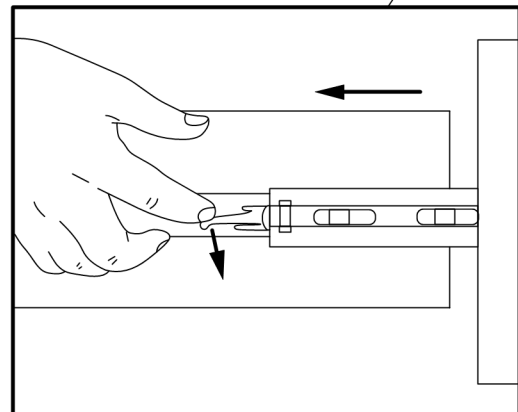

- Push **RIGHT** side clip down.