
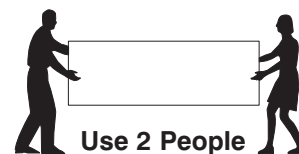


0260-2 Canopy Queen Bed


Assembly Instructions

WI-0226

1 Assembled View

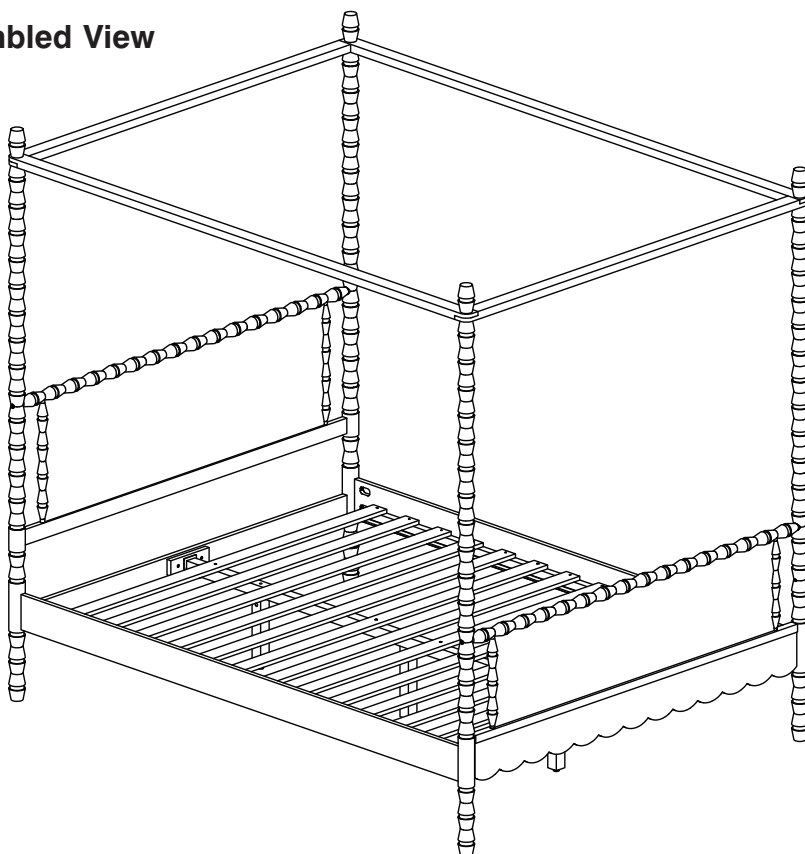


Use 2 People

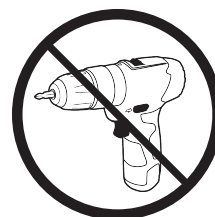


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

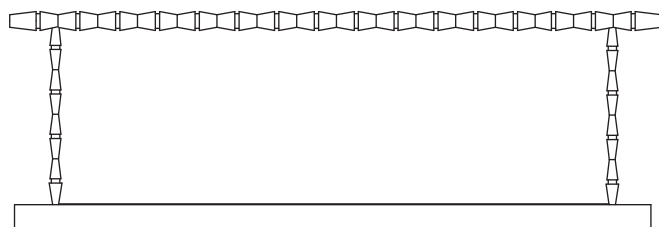

A Headboard Panel x 1

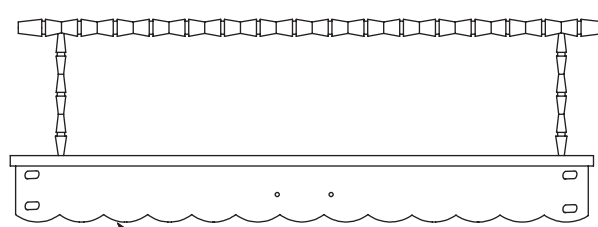

B Footboard Panel x 1



C Headboard Support x 1


0260-2 Canopy Queen Bed

Assembly Instructions

WI-0226

3 Parts List

Parts in Box B:

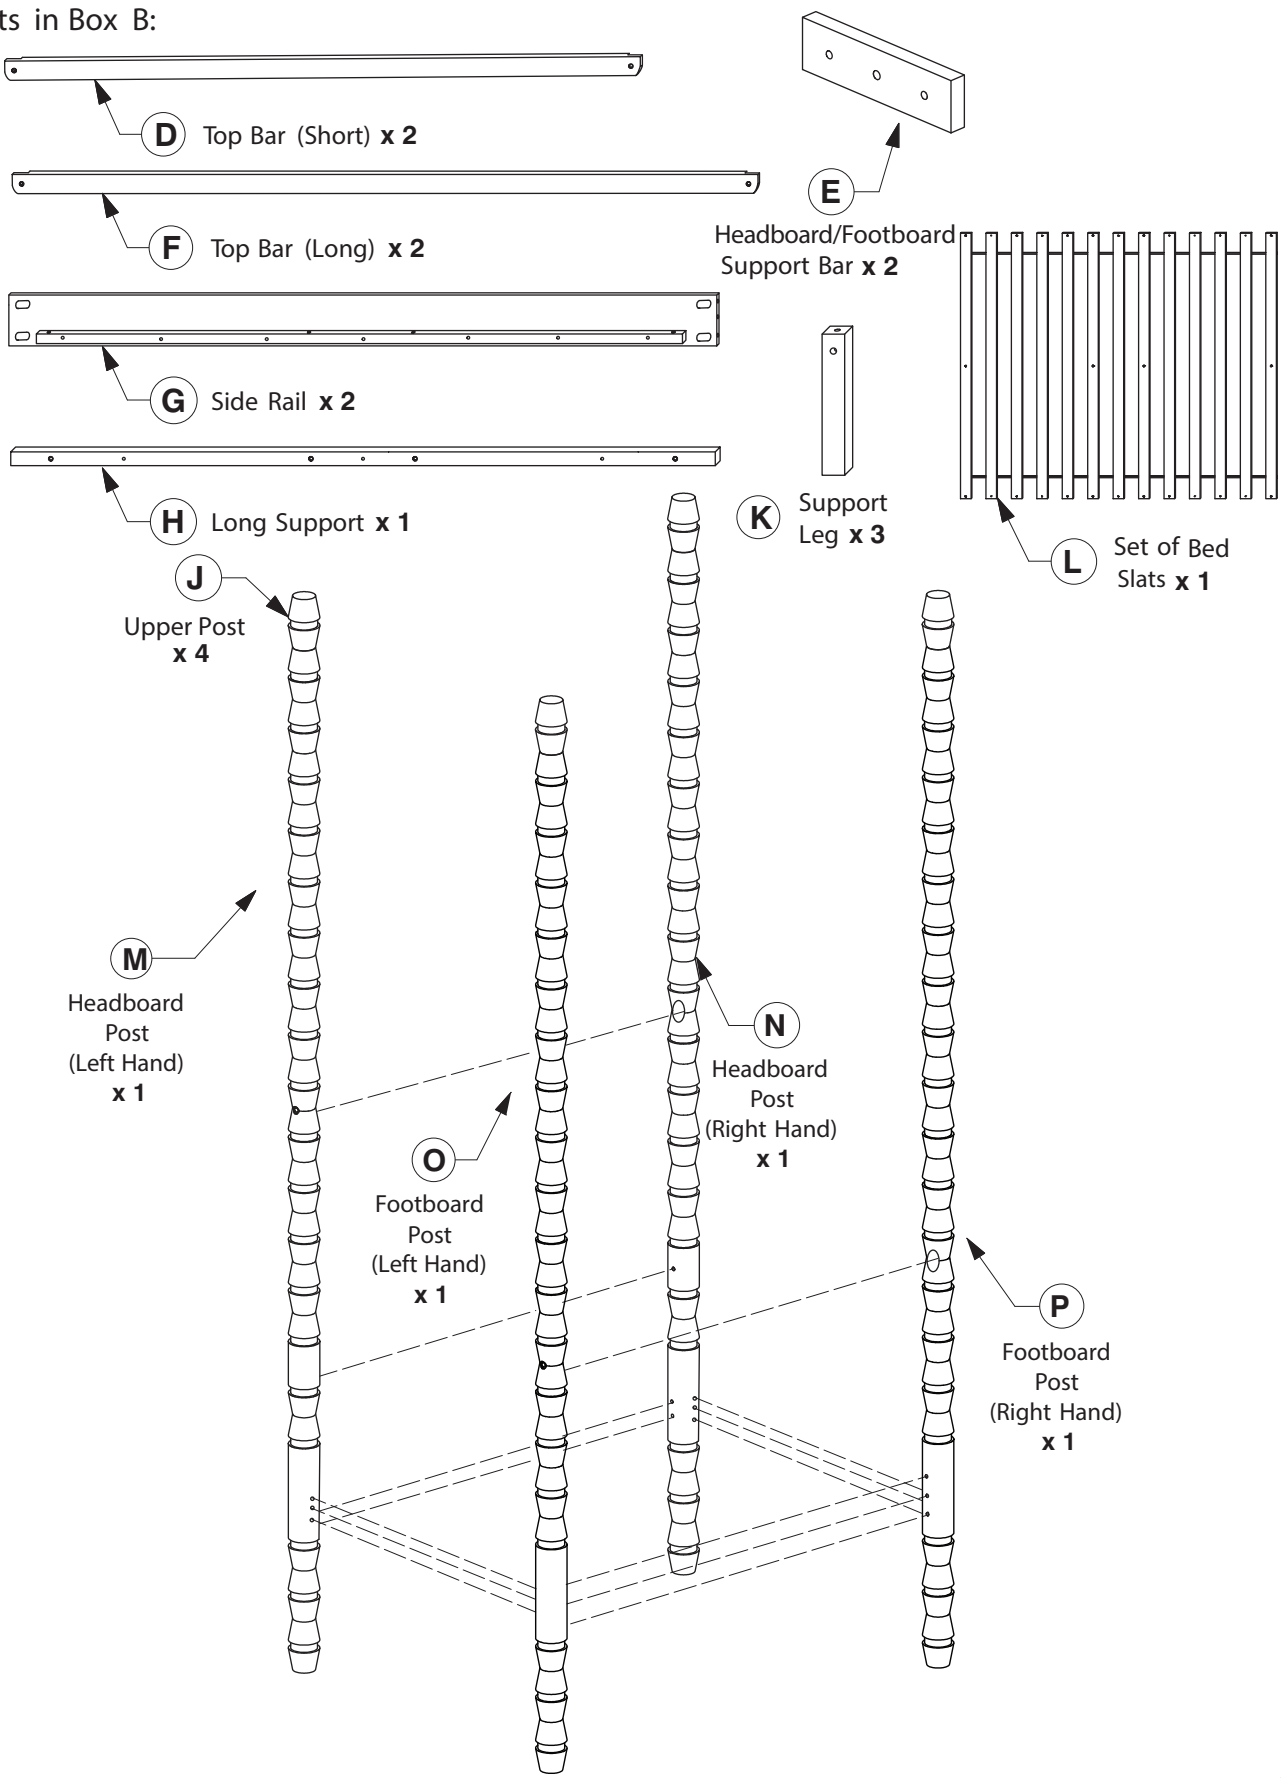


0260-2 Canopy Queen Bed


Assembly Instructions

WI-0226

4 Hardware List

- | | | | |
|--|--|---|--|
| 
1 M6 x 15mm JCB
x 4 | 
2 M6 x 30mm JCB
x 4 | 
3 M6 x 40mm JCB
x 34 | 
4 M6 x 90mm JCB
x 3 |
| 
5 Barrel Nut
x 3 | 
6 Adjustable
Foot x 3 | 
7 Center Rail
Bracket x 2 | 
8 Wood Screw
(M4 x 32mm) x 18 |
| 
9 Wood Dowel
(M10 x 40mm) x 6 | | 
10 Allen Key
x 1 | |

5 Assemble the Support Leg (K) to the Long Support (H).

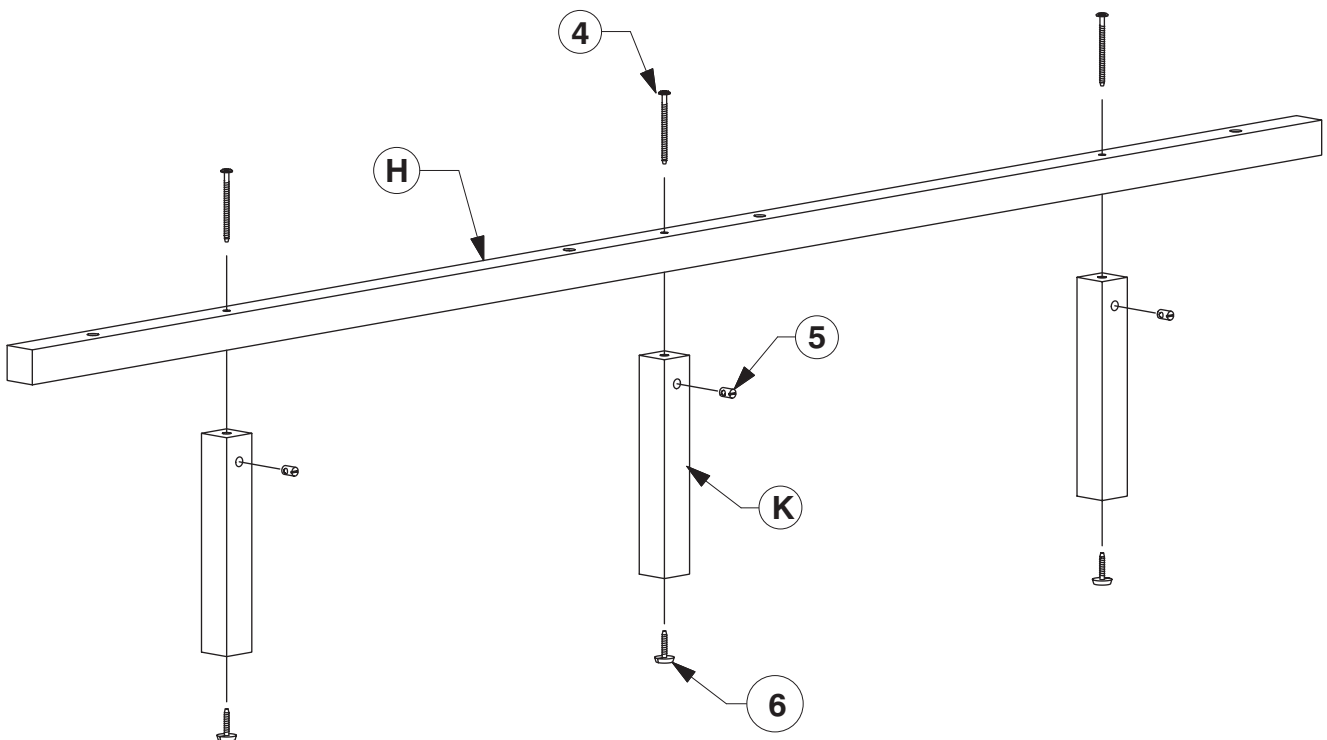


0260-2 Canopy Queen Bed



Assembly Instructions

WI-0226

- 6** Attach the Headboard Post (M & N) to the Headboard Panel (A) and Headboard Support (C).

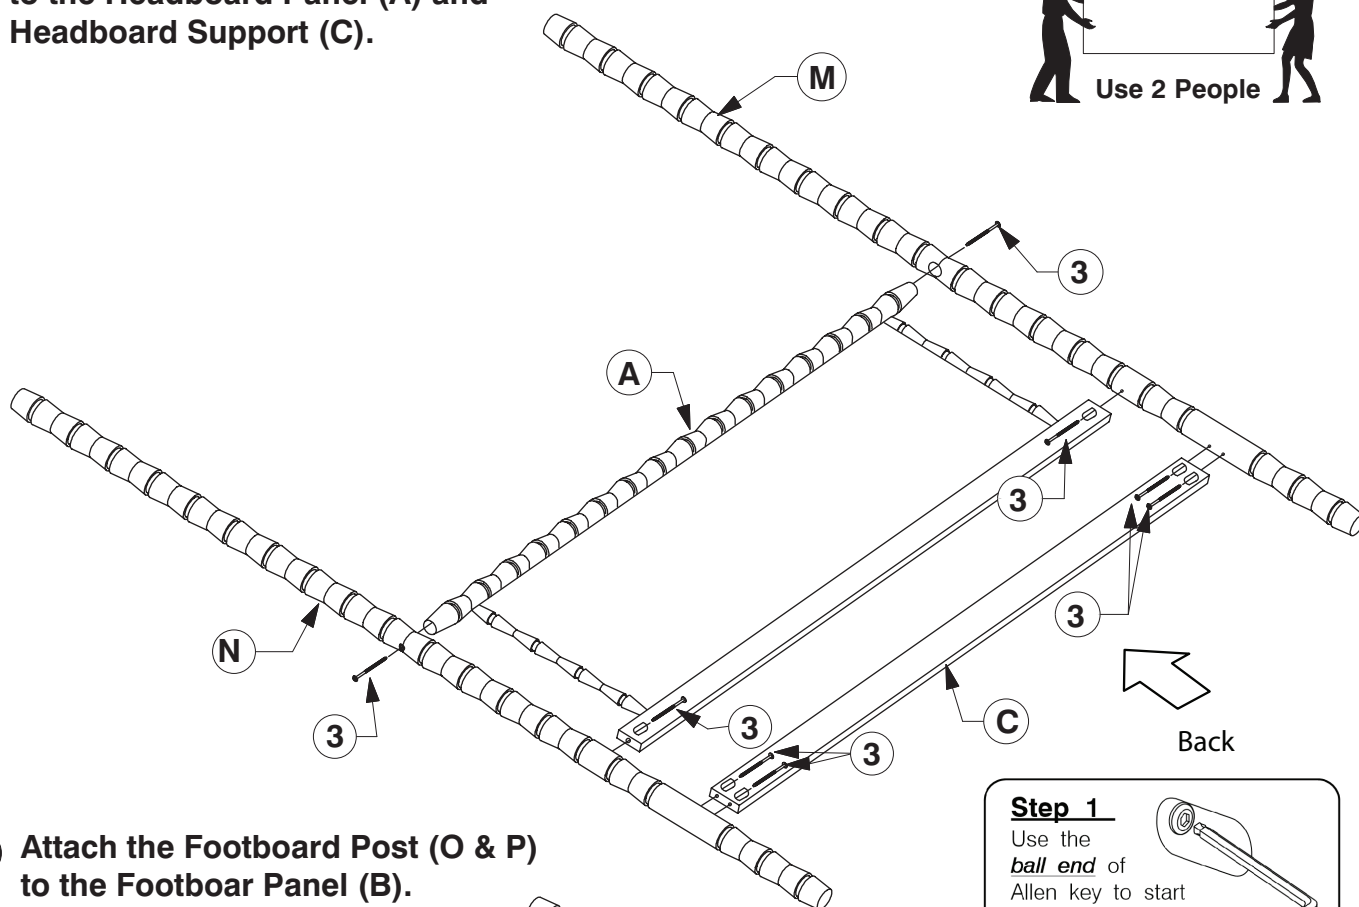

- 7** Attach the Footboard Post (O & P) to the Footboard Panel (B).

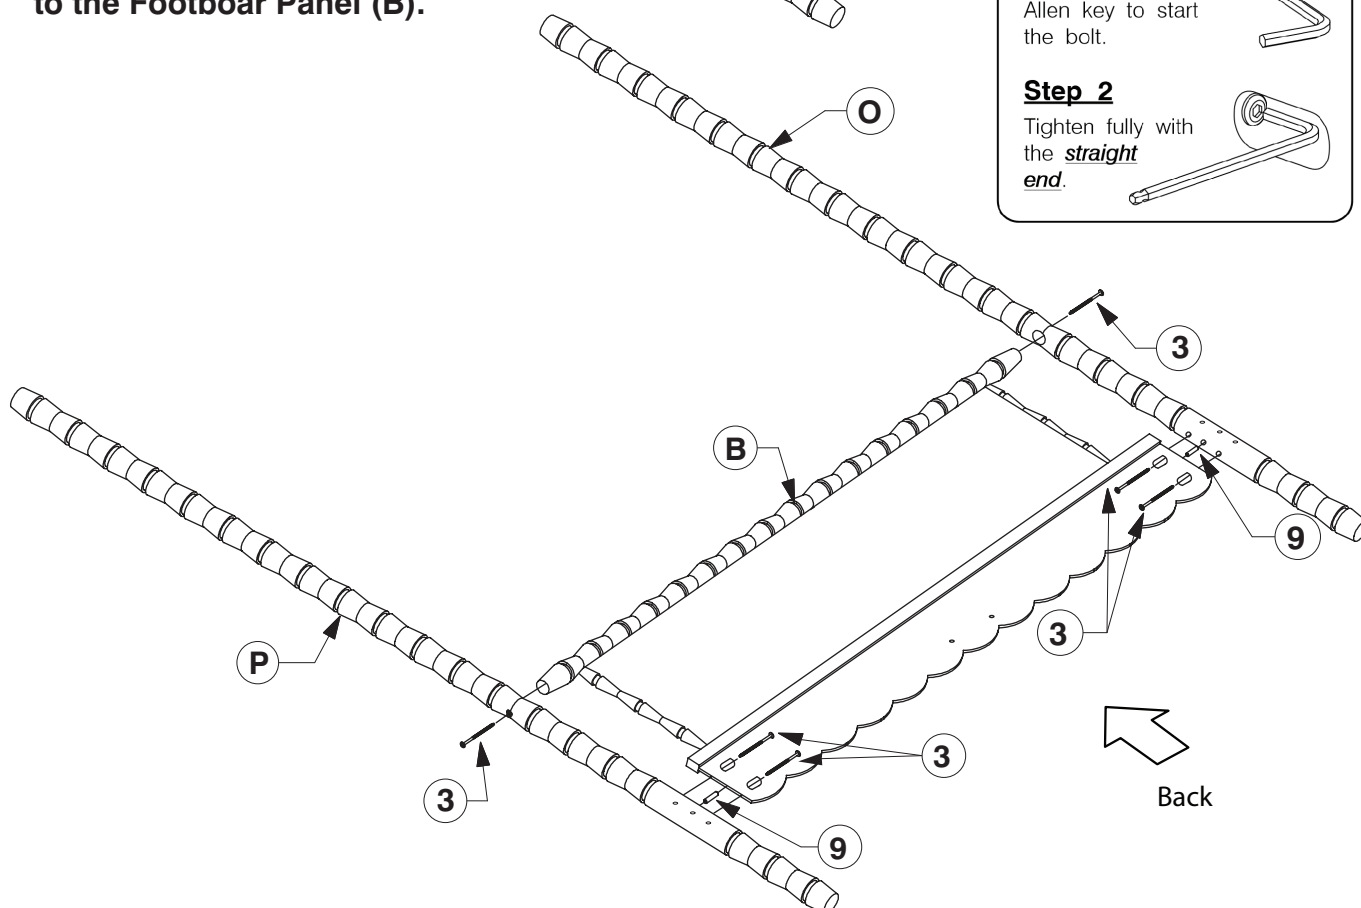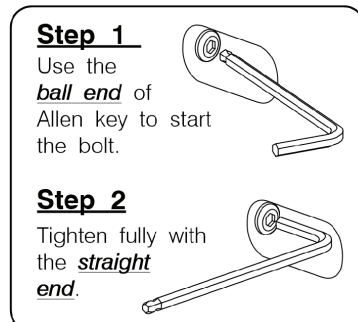


0260-2 Canopy Queen Bed



Assembly Instructions

WI-0226

- 8** Fit the Headboard/Foodboard Support Bar (E) to the HB Support (C). Fit the Center Rail Bracket (7) to the Headboard/Footboard Support Bar (E).

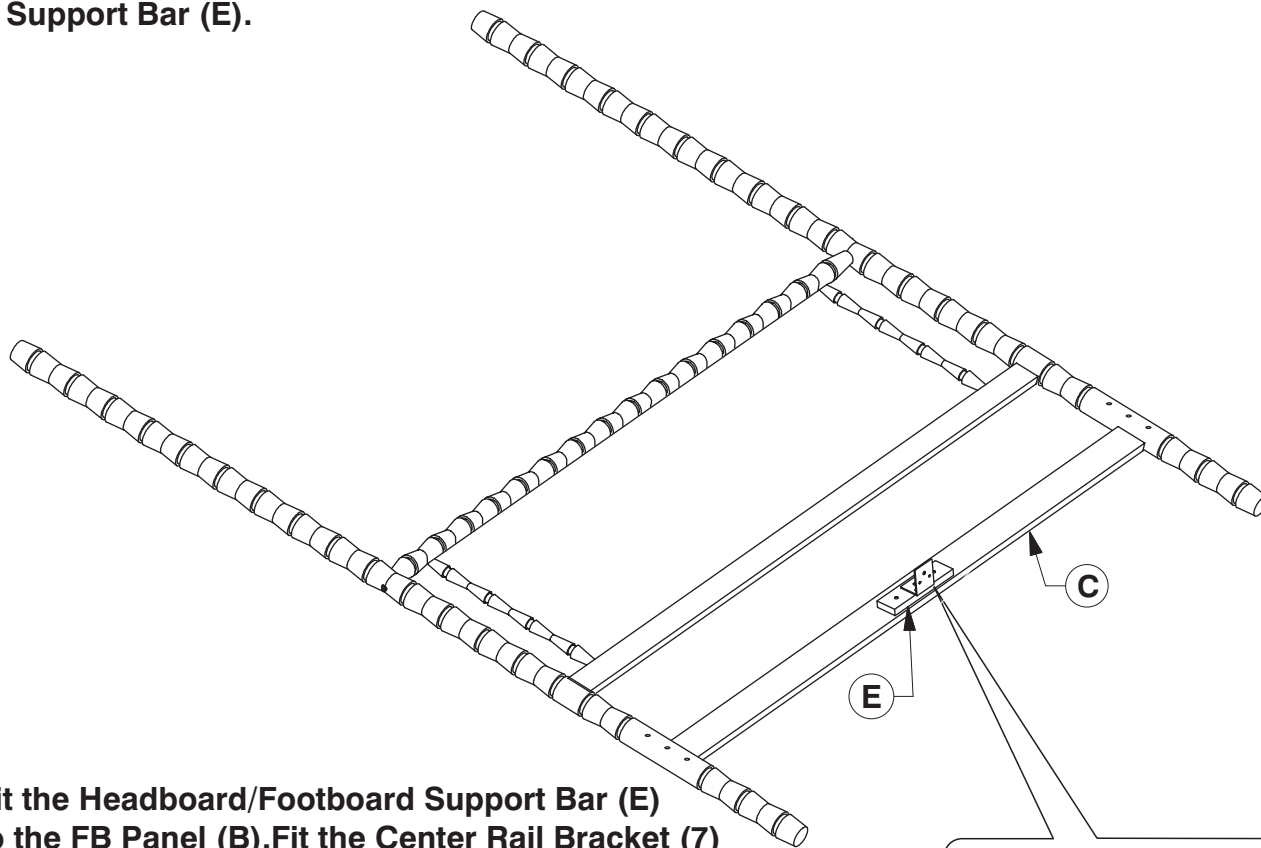

- 9** Fit the Headboard/Footboard Support Bar (E) to the FB Panel (B). Fit the Center Rail Bracket (7) to the Headboard/Footboard Support Bar (E).


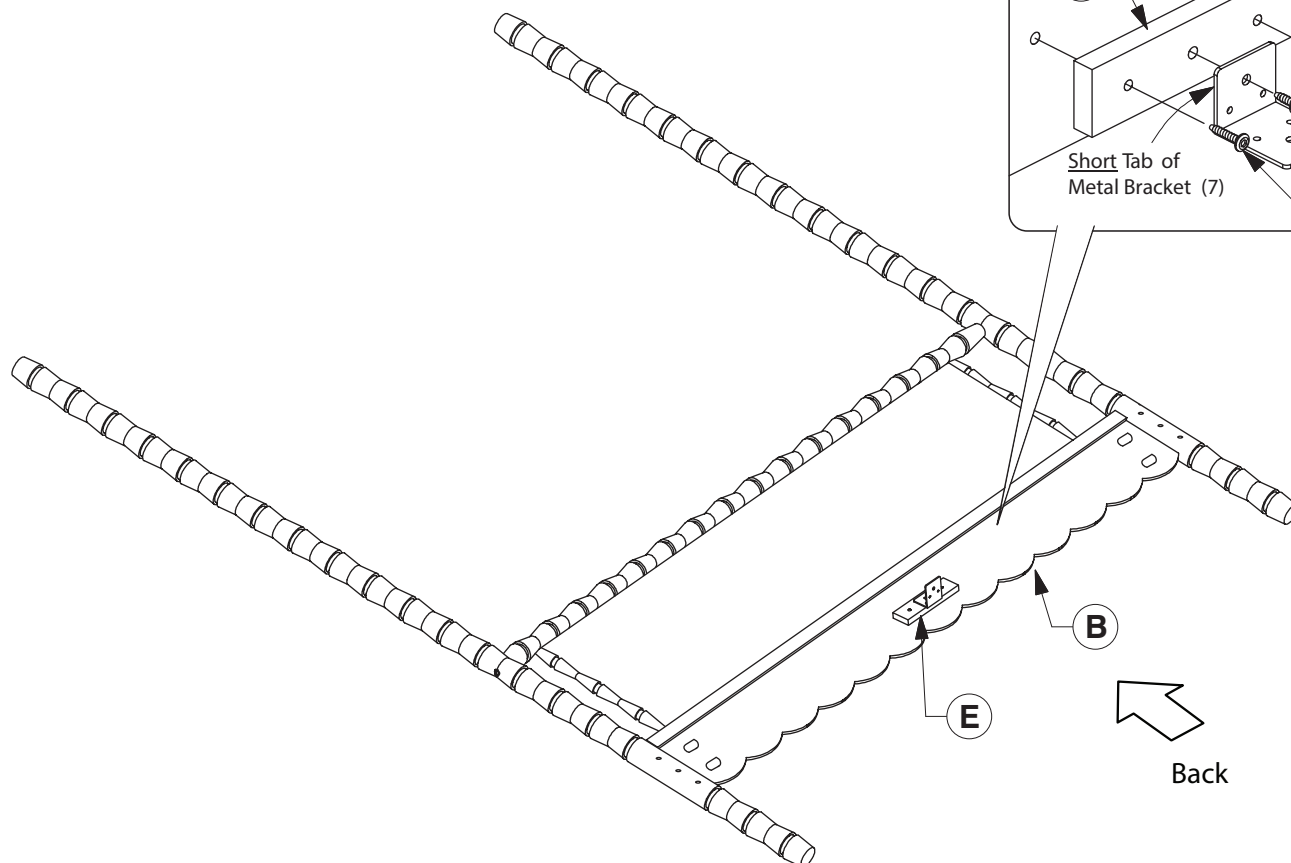


0260-2 Canopy Queen Bed


Assembly Instructions

WI-0226


- 10** Assemble the Side Rail (G) to the Head / Footboard.

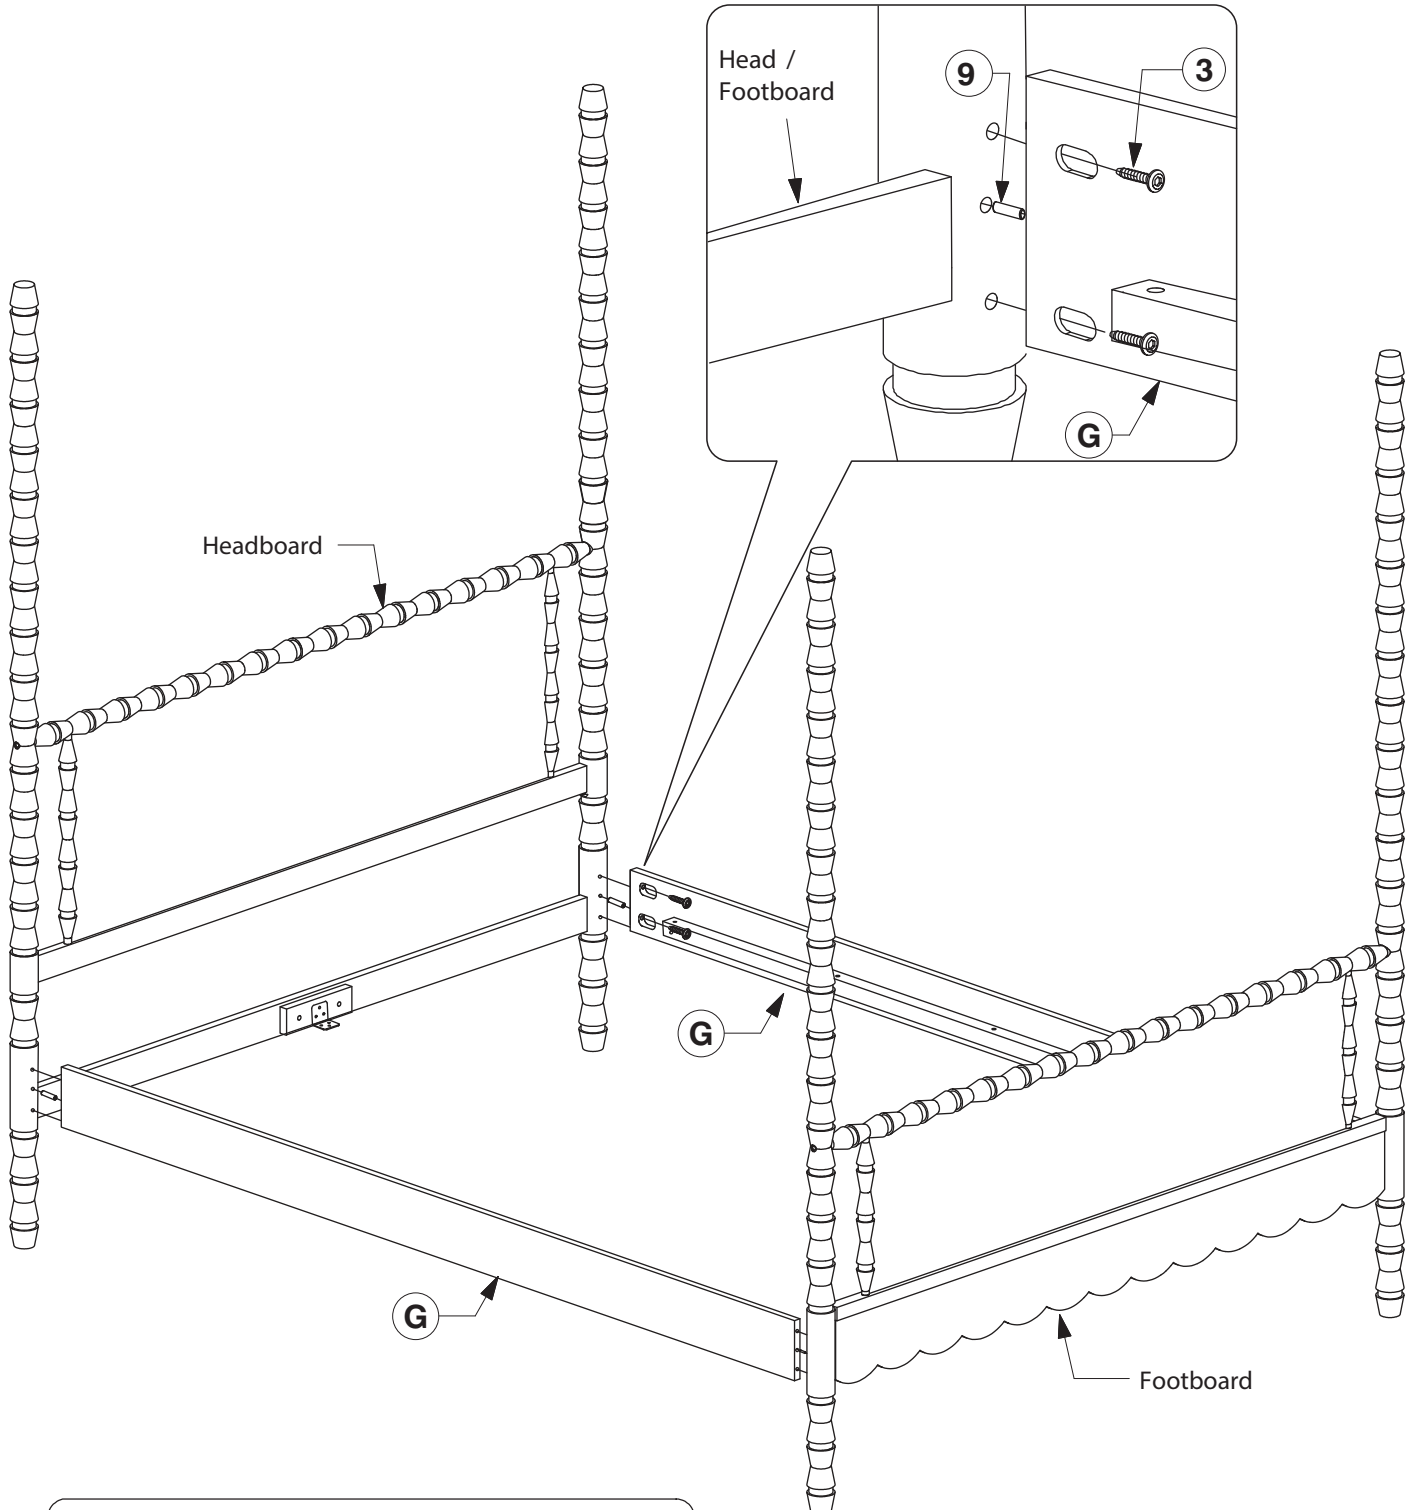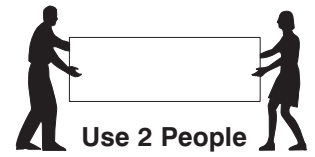

Step 1
Use the ball end of Allen key to start the bolt.

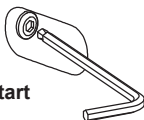

Step 2
Tighten fully with the straight end.




0260-2 Canopy Queen Bed

Assembly Instructions

WI-0226

- 11** Bolt the Long Support (H) to the Center Rail Brackets on the Headboard/Footboard.

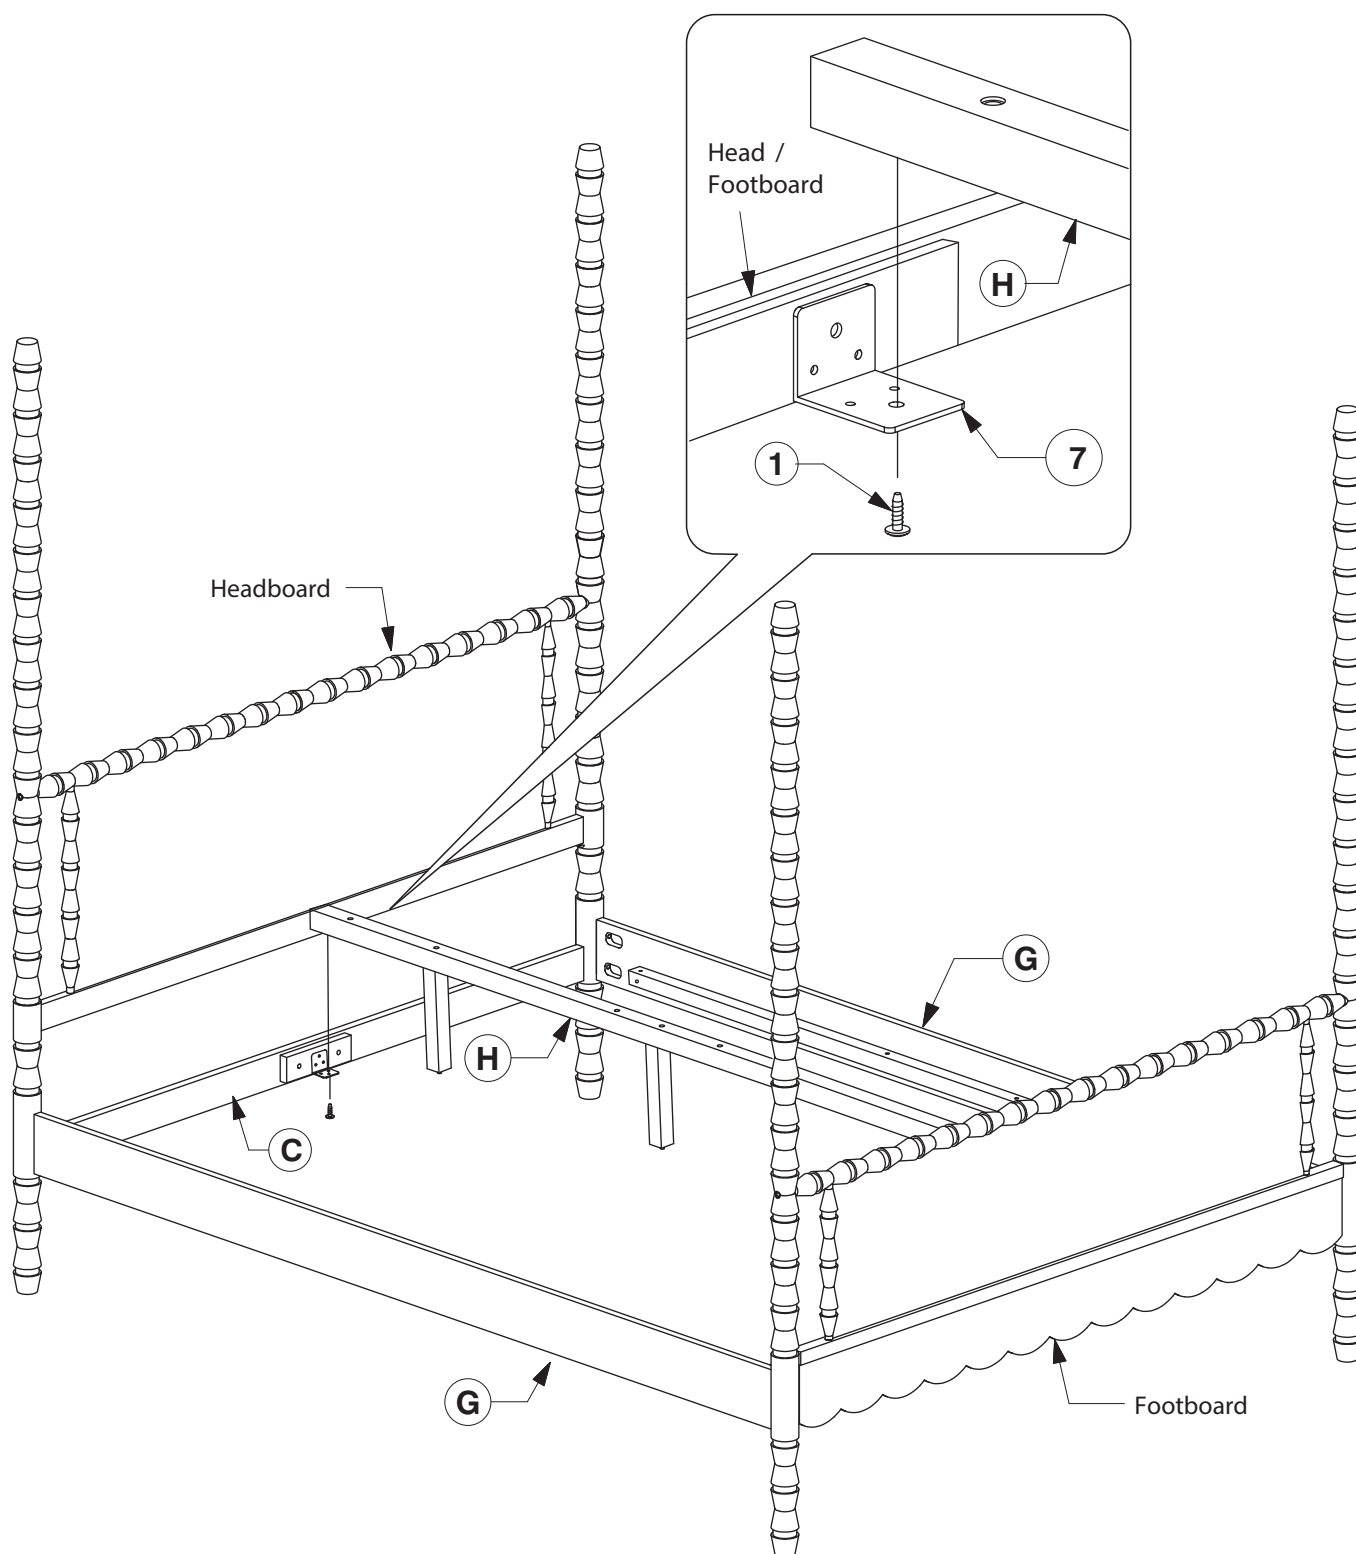


0260-2 Canopy Queen Bed

Assembly Instructions

WI-0226

- 12** Bolt & Screw the Bed Slats (L) to the Side Rail (G) and Long Support (H).

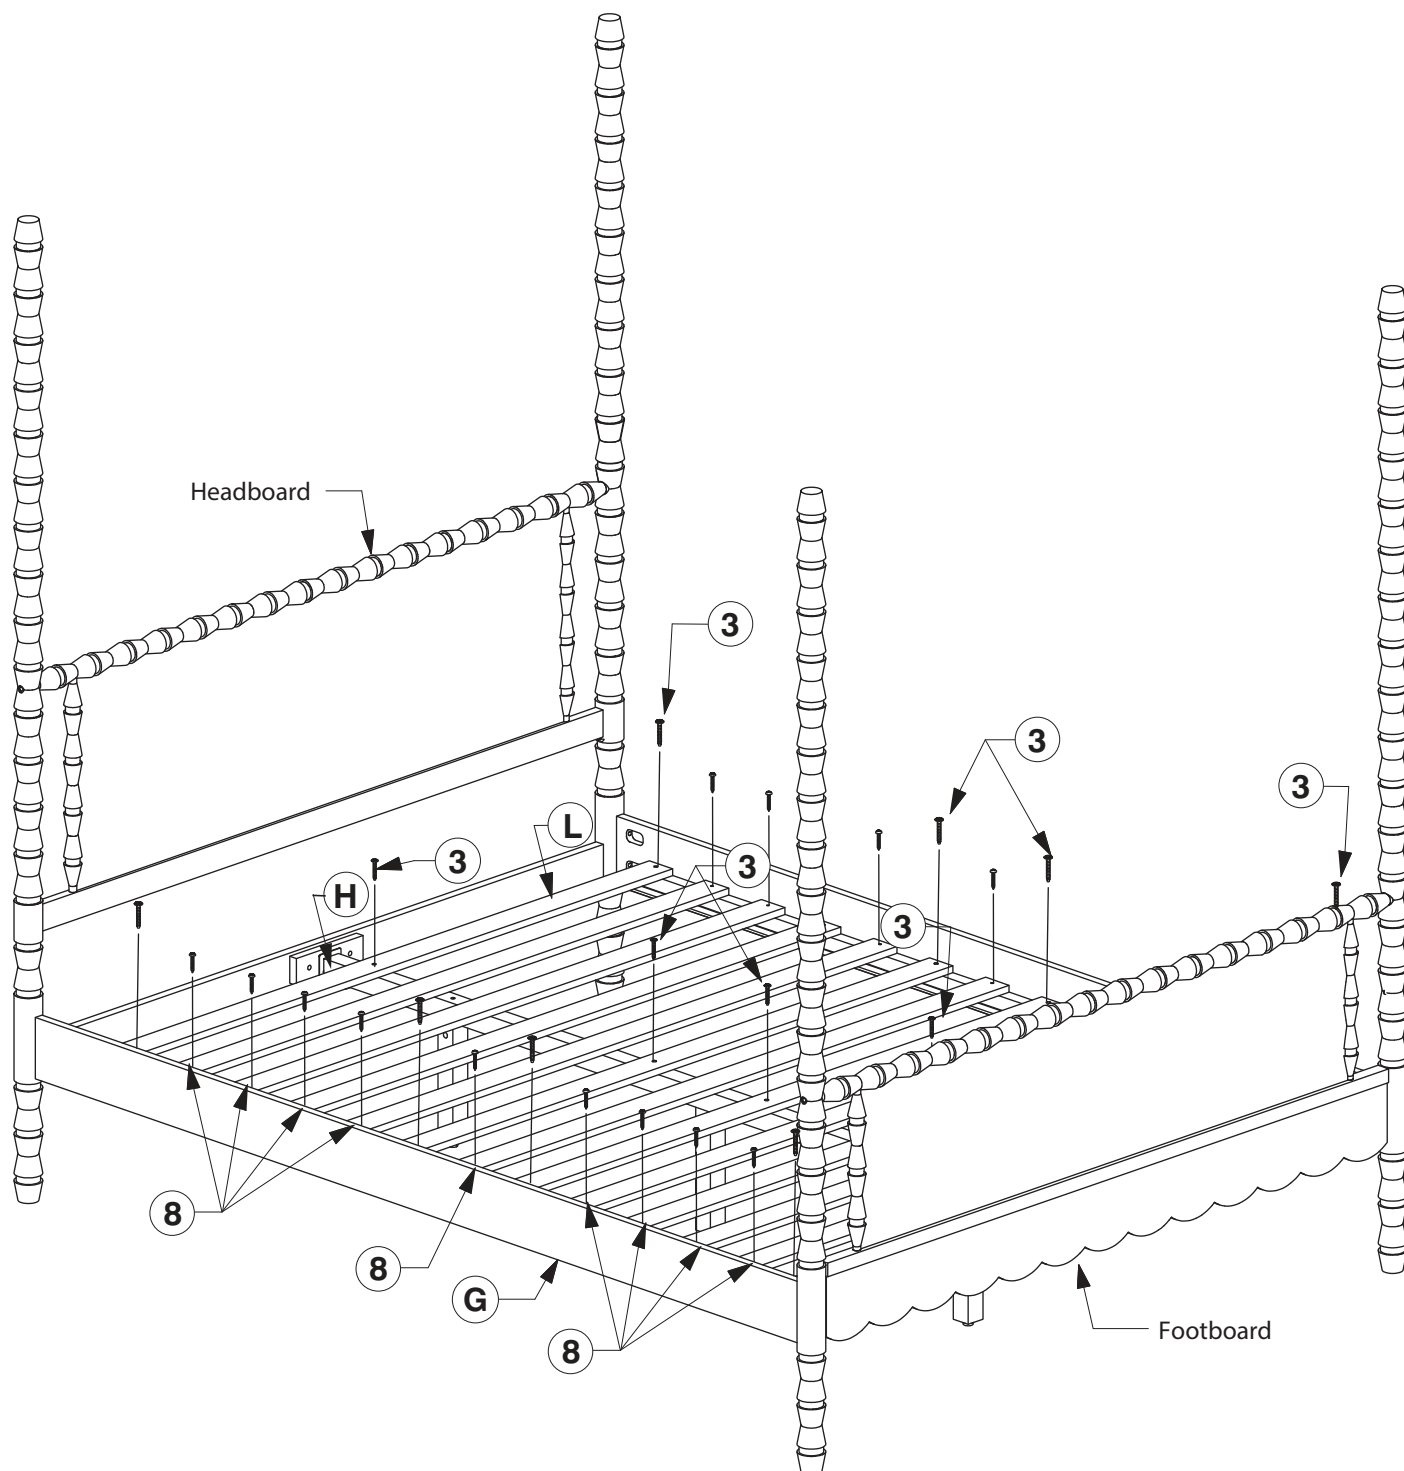


0260-2 Canopy Queen Bed

Assembly Instructions

WI-0226

- 13** Remove the Upper Post (J) from the Headboard Post (M & N) and Footboard Post (O & P).

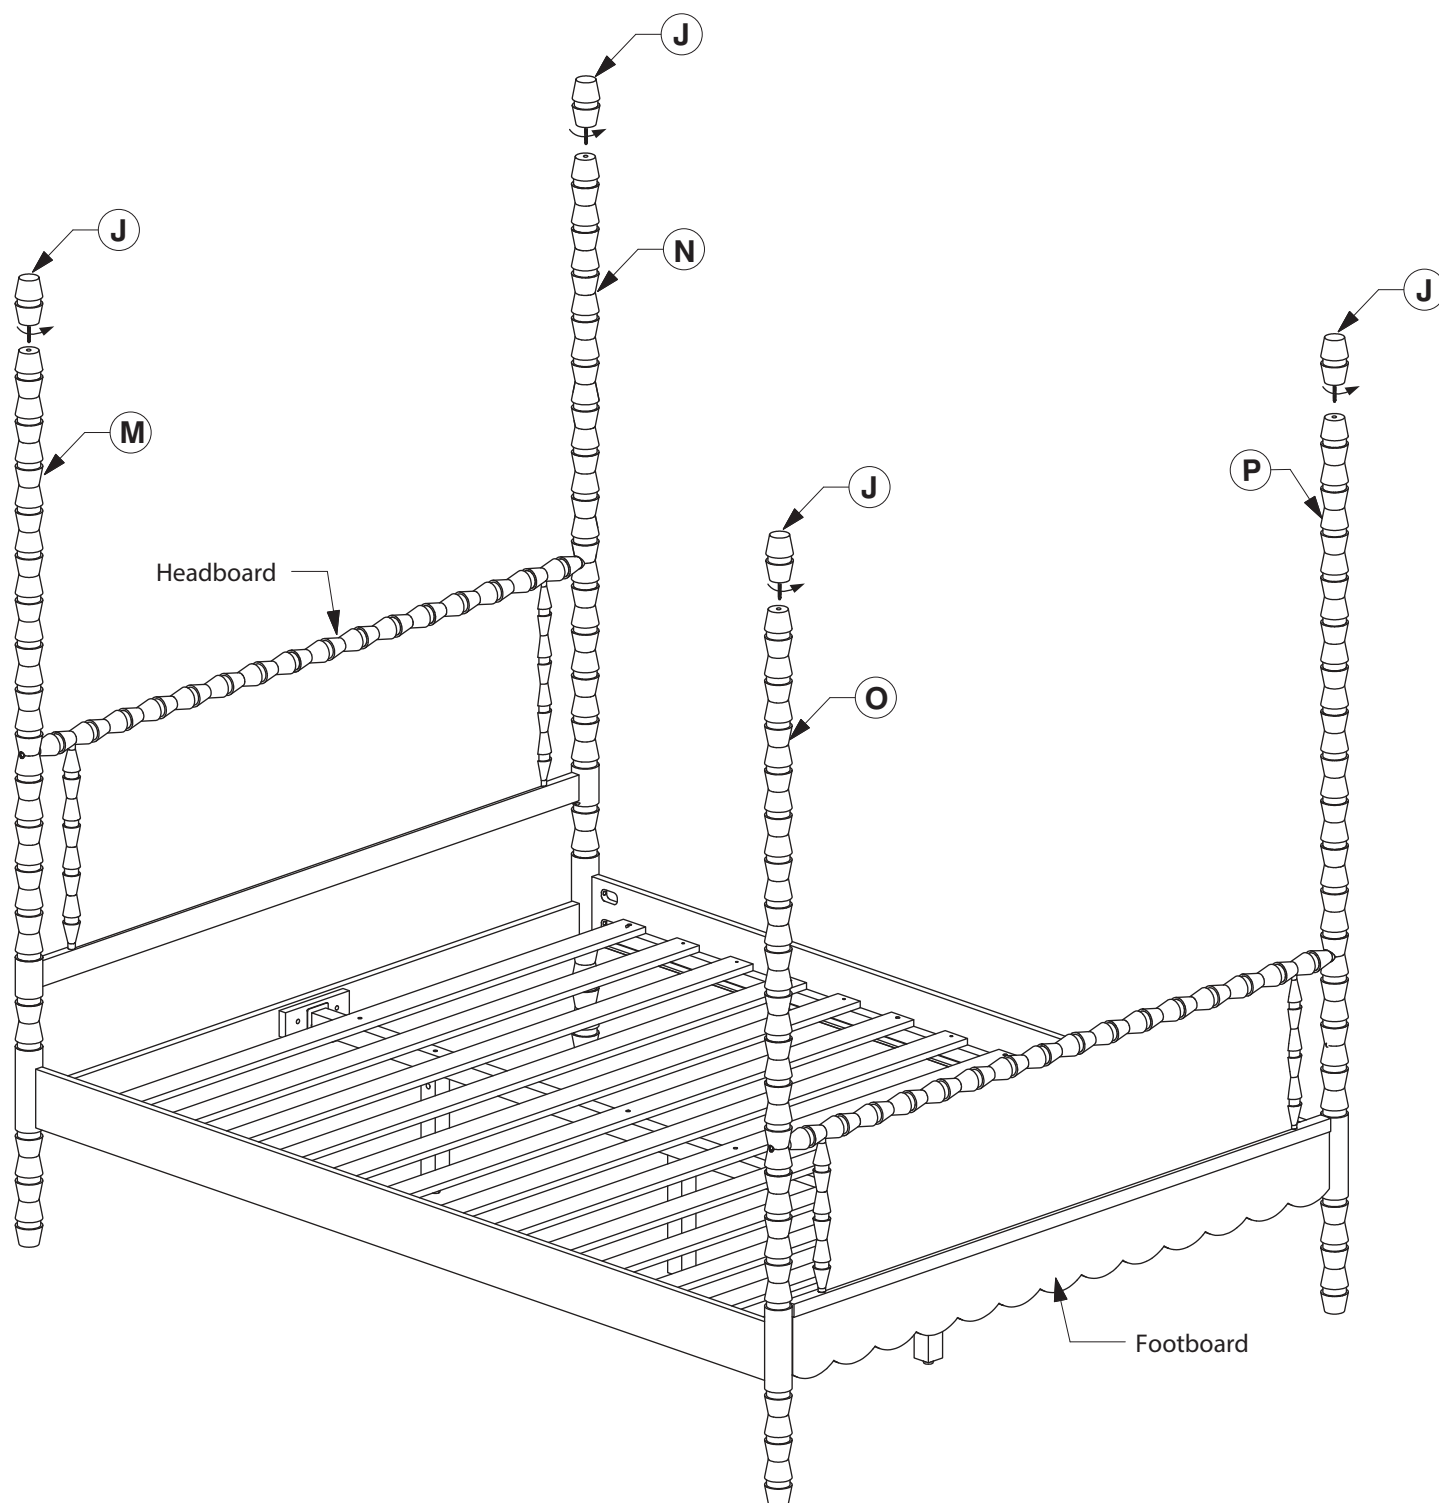

0260-2 Canopy Queen Bed

Assembly Instructions

WI-0226

- 14** Attach the Top Bar-Short (D) to the Top of the Posts.
Then place the Top Bar-Long (F) on top of (D) on the both sides.
Bolt the Upper Post (J) to lock the Top Bars (D & F).

