
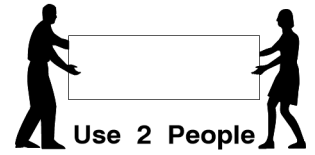


0260 Queen Bed

Assembly Instructions

WI-0126


1 Assembled View

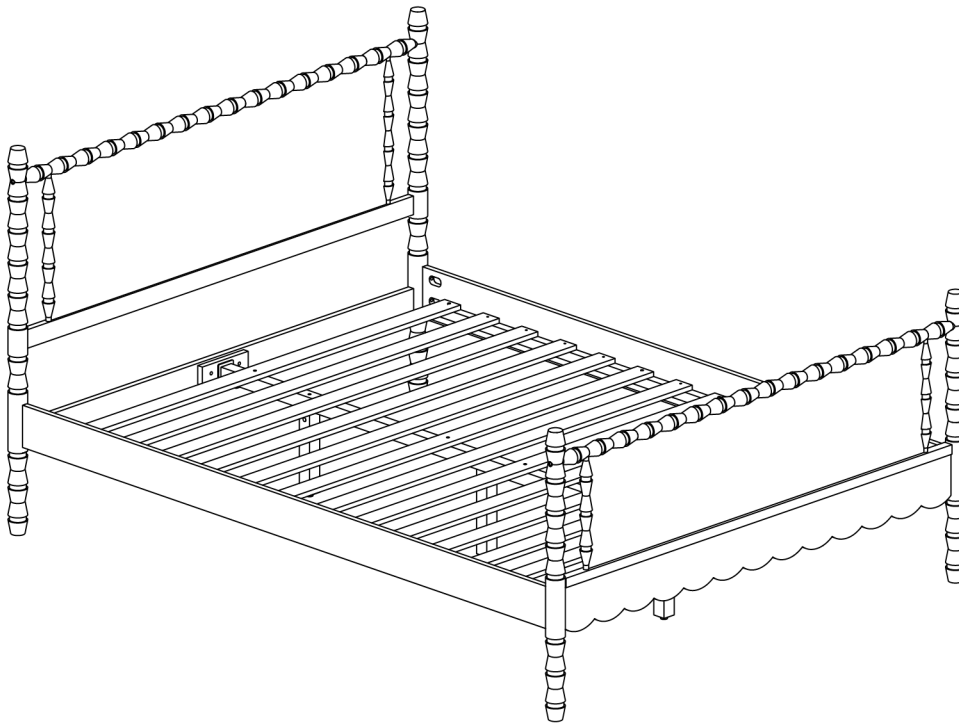

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List


Parts in Box A:

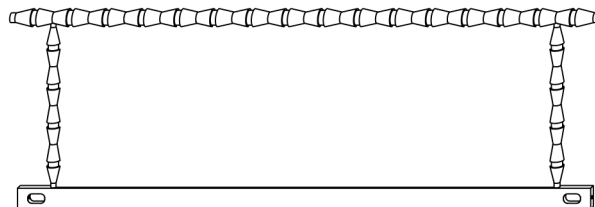

A Headboard Panel x 1



B Headboard Support x 1

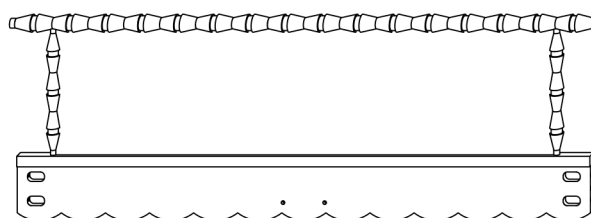

C Footboard Panel x 1

0260 Queen Bed

Assembly Instructions

WI-0126

2 Parts List

Parts in Box B:




E

Headboard
Post
(Left Hand)
x 1



F

Headboard
Post
(Right Hand)
x 1

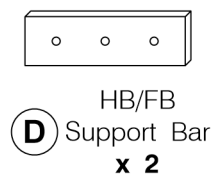

D HB/FB
Support Bar
x 2




G

Footboard
Post
(Left Hand)
x 1



H

Footboard
Post
(Right Hand)
x 1




J Side Rail x 2



K Long Support x 1



L Support
Leg x 3

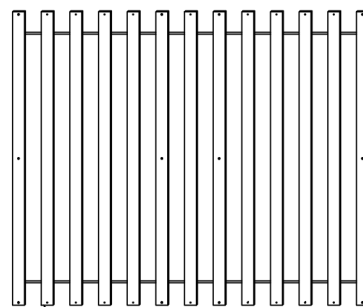


M Set of Bed Slats x 1


3 Hardware List



1 M4 Long Allen Key
x 1



2 Center Rail
Bracket x 2



3 Adjustable
Foot x 3



4 Barrel Nut
x 3



5 Wood Screw
(M4 x 32mm)
x 18



6 Wood Dowel
(10 x 40mm) x 6



7 M6 x
15mm
JCB x 4



8 M6 x
30mm
JCB x 4




9 M6 x
40mm
JCB x 34



10 M6 x
90mm
JCB x 3

4 Fit the Center Rail Bracket to the HB/FB Support Bar (D).

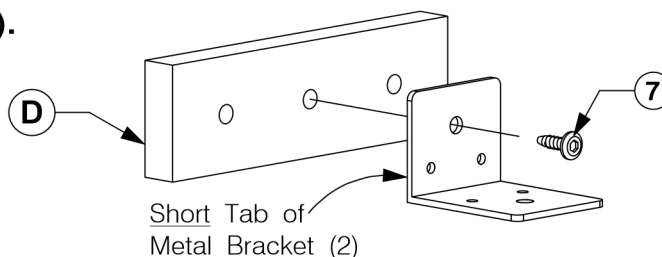


0260 Queen Bed


Assembly Instructions

WI-0126


- 5** Fit the HB/FB Support Bar (D) to the Headboard Support (B).

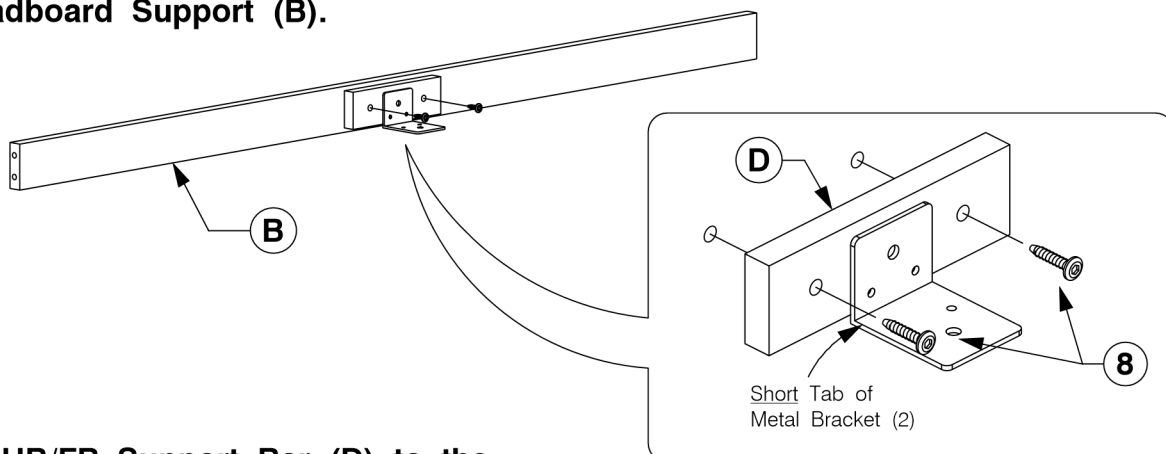

- 6** Fit the HB/FB Support Bar (D) to the Footboard Panel (C).

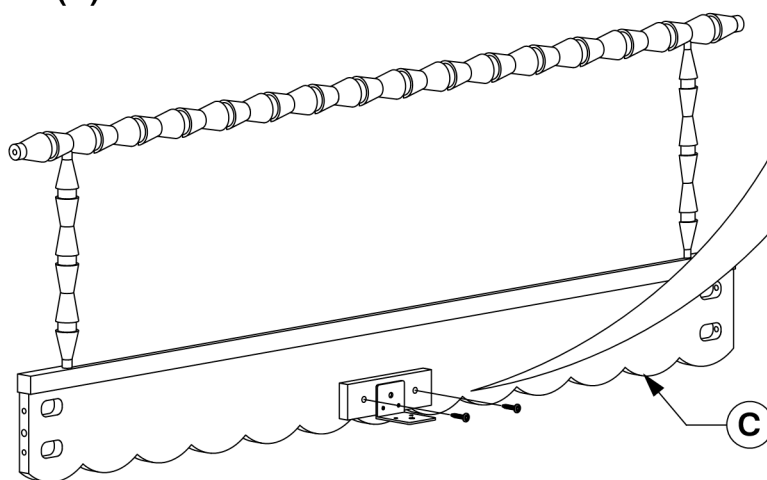

- 7** Assemble the Footboard Panel (C) to the Footboard Post (G & H).

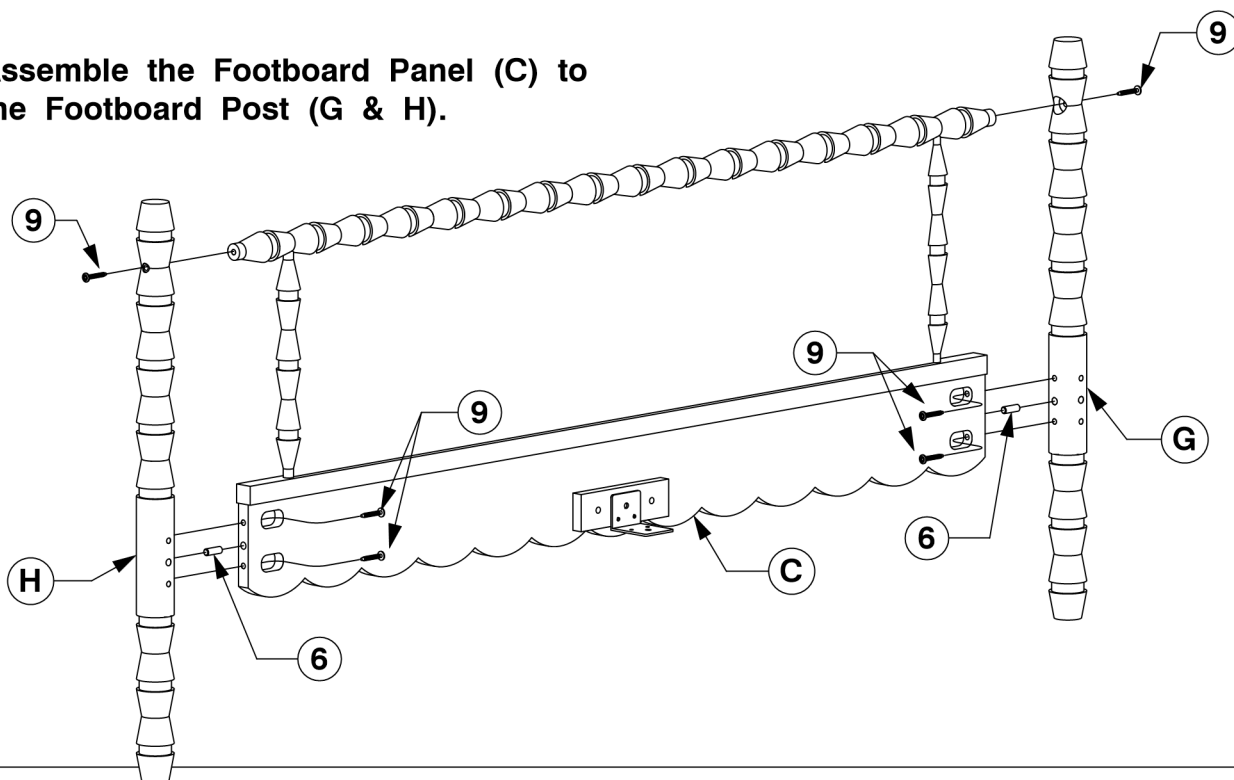


0260 Queen Bed


Assembly Instructions

WI-0126

8 Assembled the Support Leg (L) to the Long Support (K).

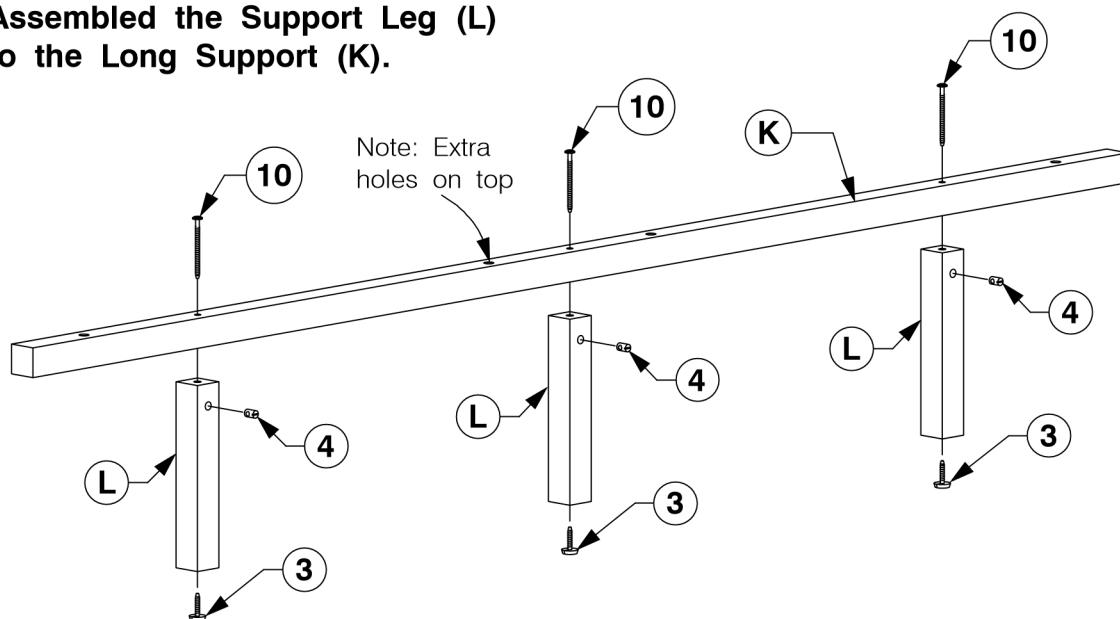


9 Assemble the Headboard Panel (A) and Headboard Support (B) to the Headboard Post (E & F).

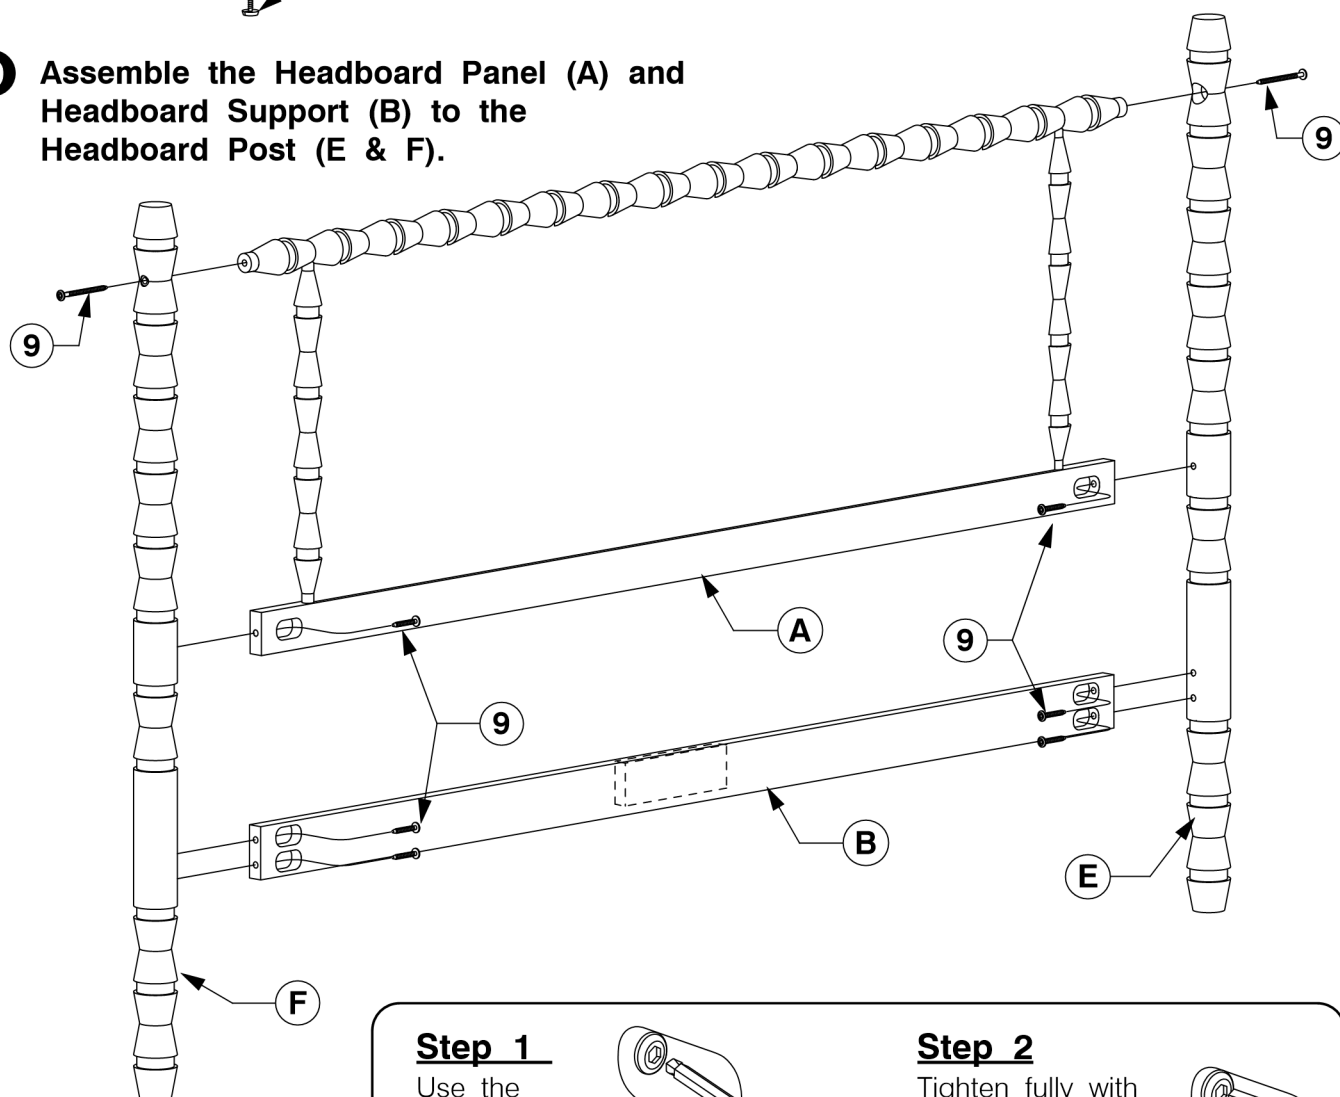


Step 1

Use the **ball end** of Allen key to start the bolt.

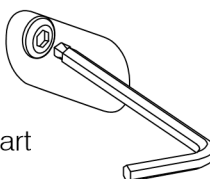

Step 2

Tighten fully with the **straight end**.

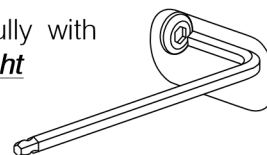


0260 Queen Bed

Assembly Instructions


WI-0126

- 10** Assemble the Side Rail (J) to the Headboard & Footboard Post.

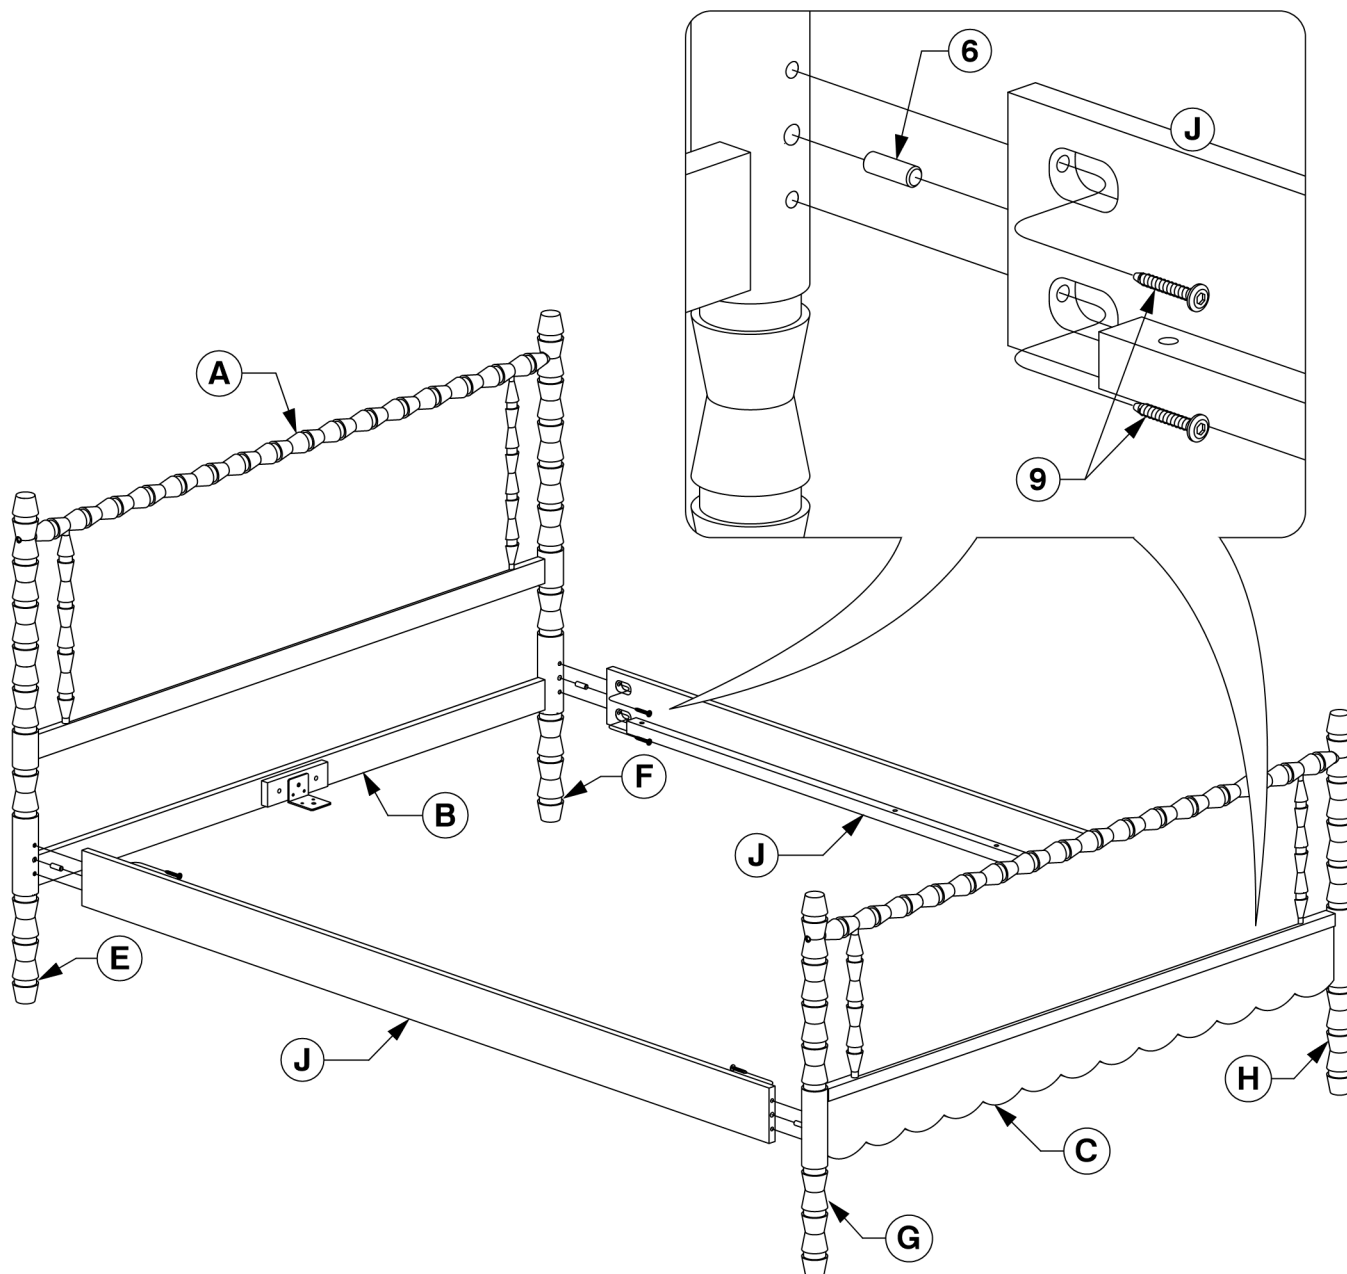


Step 1

Use the **ball end** of the Allen key to start the bolt.

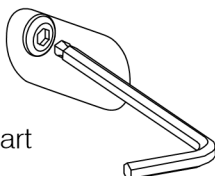

Step 2

Tighten fully with the **straight end**.

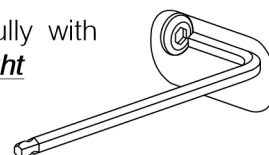


0260 Queen Bed


Assembly Instructions

WI-0126

- 11** Bolt the Long Support (K) to the Center Rail Brackets on the Headboard Support (B) and Footboard Panel (C).

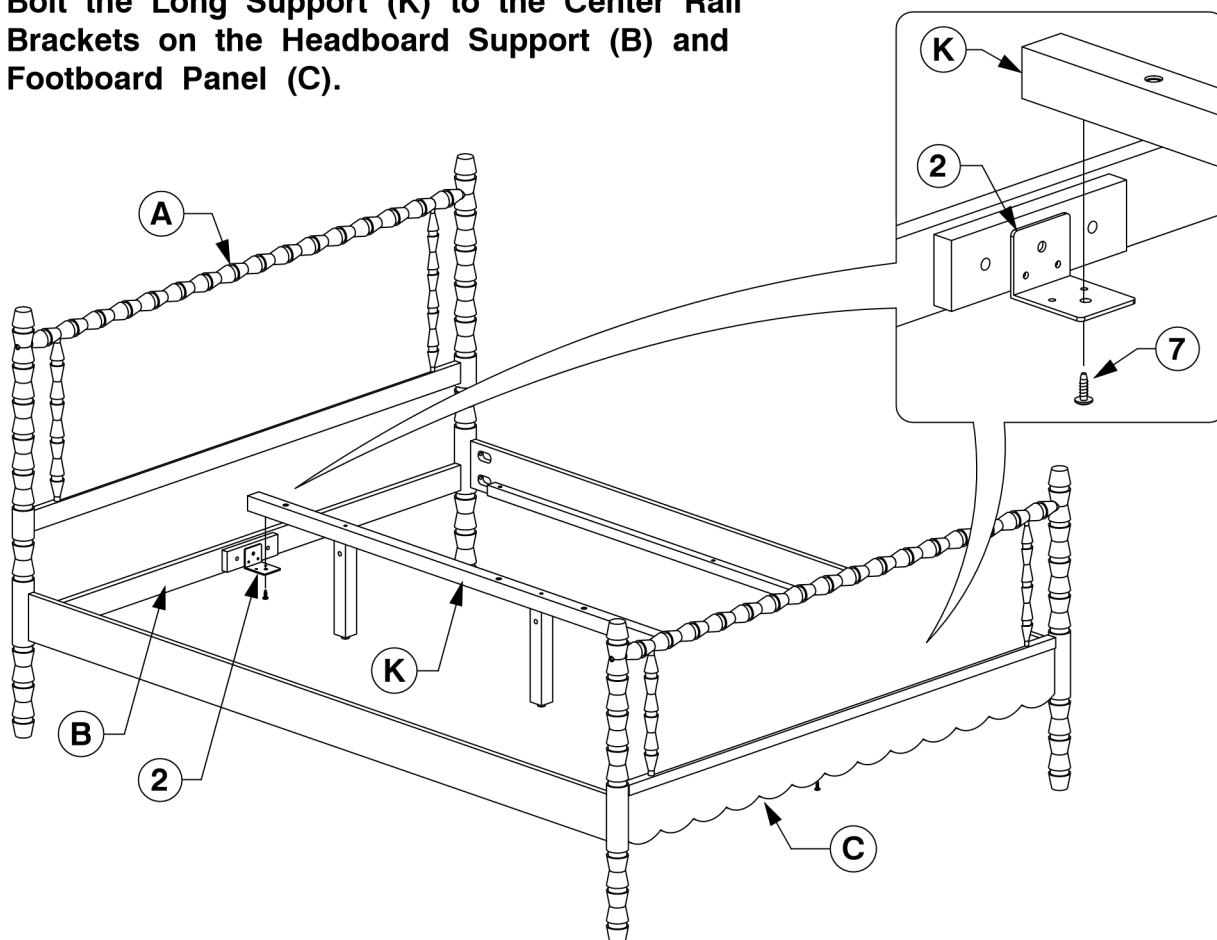



- 12** Bolt & screw the Bed Slats (M) to the Side Rails (J).

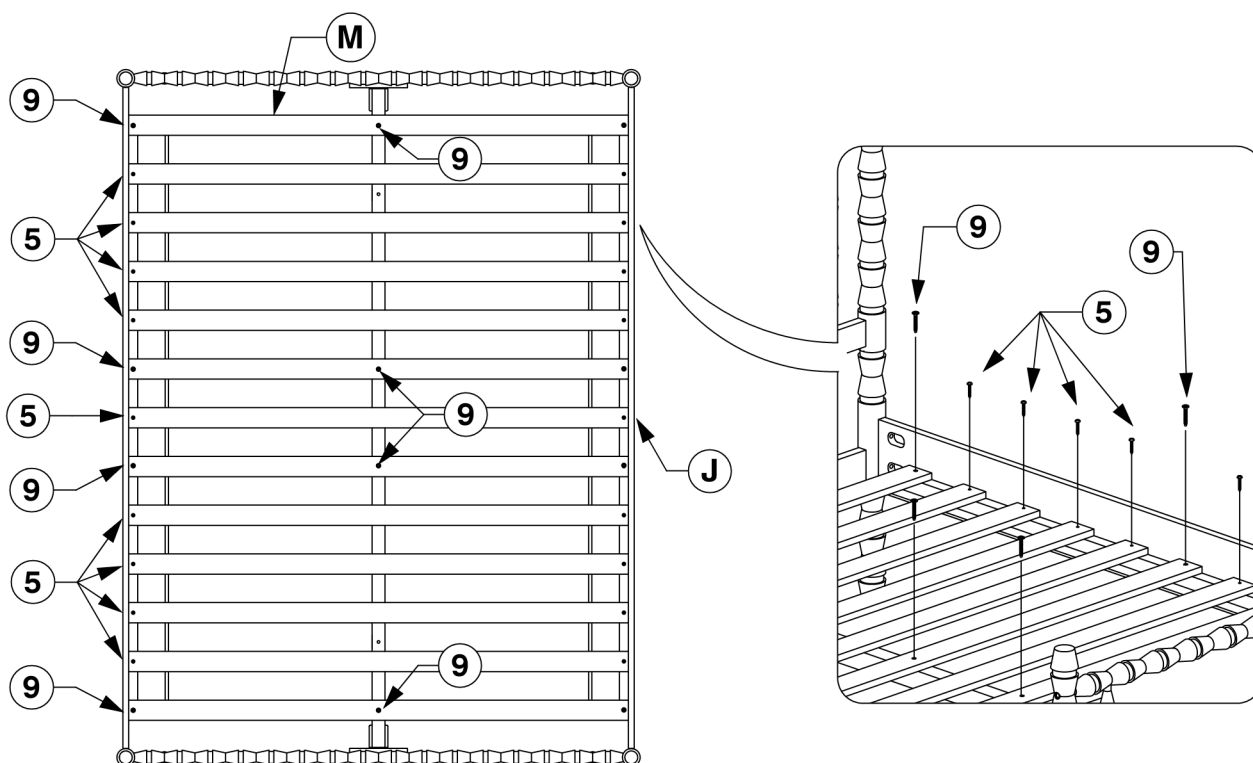

9021 2 Drawer Nightstand


Assembly Instructions

WI-0126

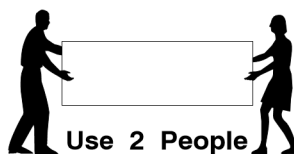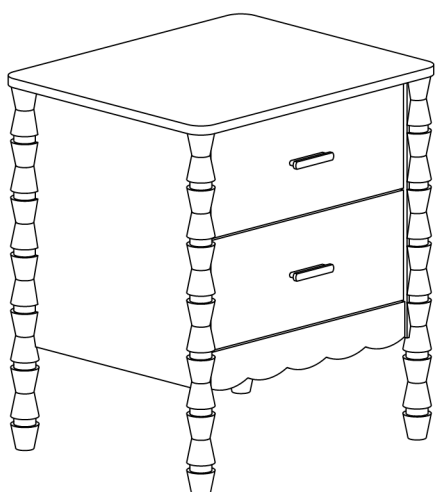

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

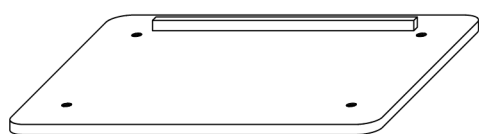


A Top Panel x 1




B Upper Support x 2




C Bottom Front Support x 1

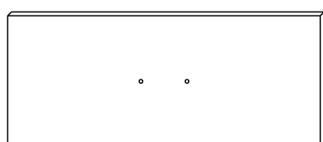

H Drawer Face x 2




K Drawer Side (Left Hand) x 2

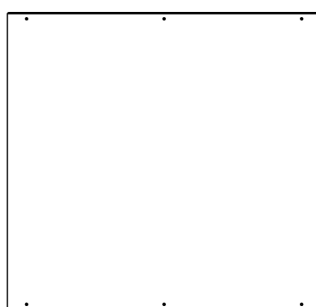


D Back Panel x 1




E Bottom Rear Support x 1




J Drawer Back x 2



L Drawer Side (Right Hand) x 2

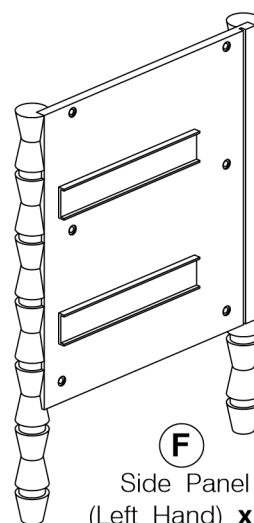

F Side Panel (Left Hand) x 1

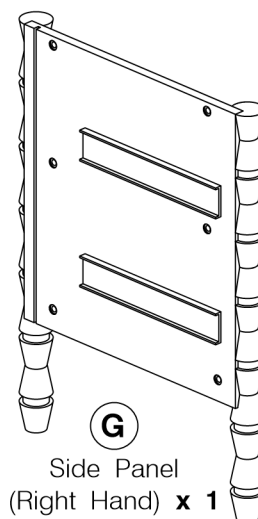

G Side Panel (Right Hand) x 1



M Drawer Bottom x 2

9021 2 Drawer Nightstand

Assembly Instructions

WI-1225

2 Hardware List

① M6 x 15mm
JCB x 24

② M4 x 25mm
Wood
Screw x 16

③ M4 x 20mm
Wood
Screw x 8

④ M4 x 16mm
Wood
Screw x 6


⑤ 'L' Bracket
(5005-3)
x 12

⑥ M4 x 22mm
Wood Screw
x 4


⑦ Handle
(3321-64)
x 2

⑧ Allen Key
x 1


3 Assemble the Drawer Sides (K & L) to the Drawer Face (H).

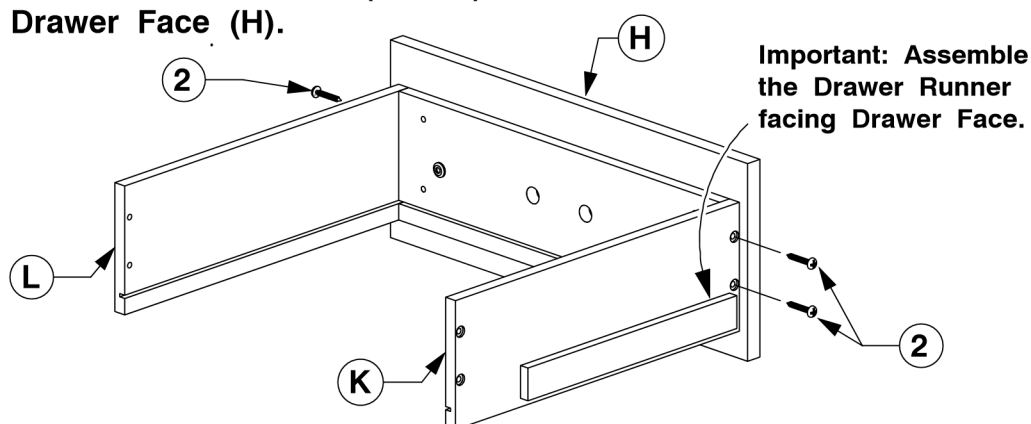

4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

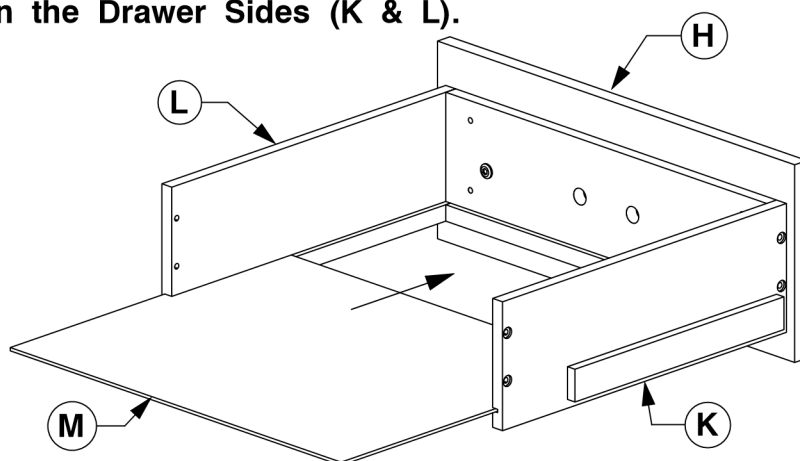

5 Assemble the Drawer Back (J) to the Drawer Sides (K & L). Fit the Handle to the Drawer Face (H).

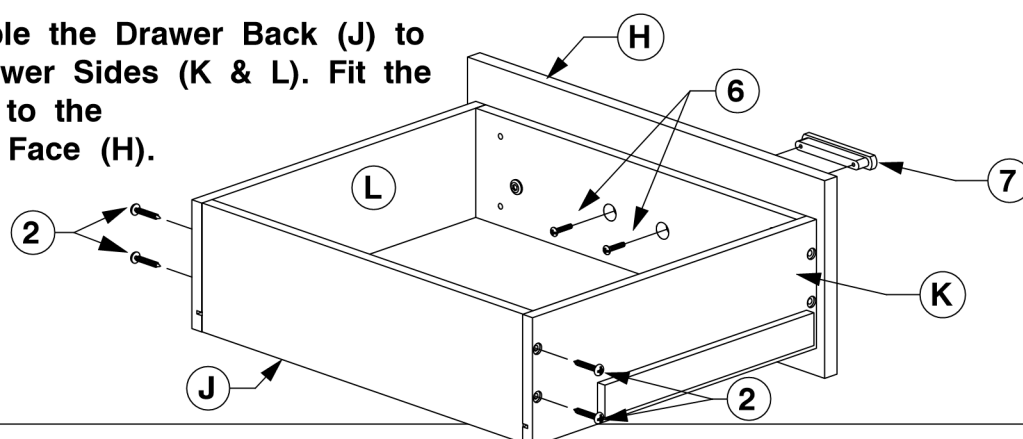


9021 2 Drawer Nightstand


Assembly Instructions

WI-0126

- 6** Fit the 'L' Bracket to the Side Panel (F & G).

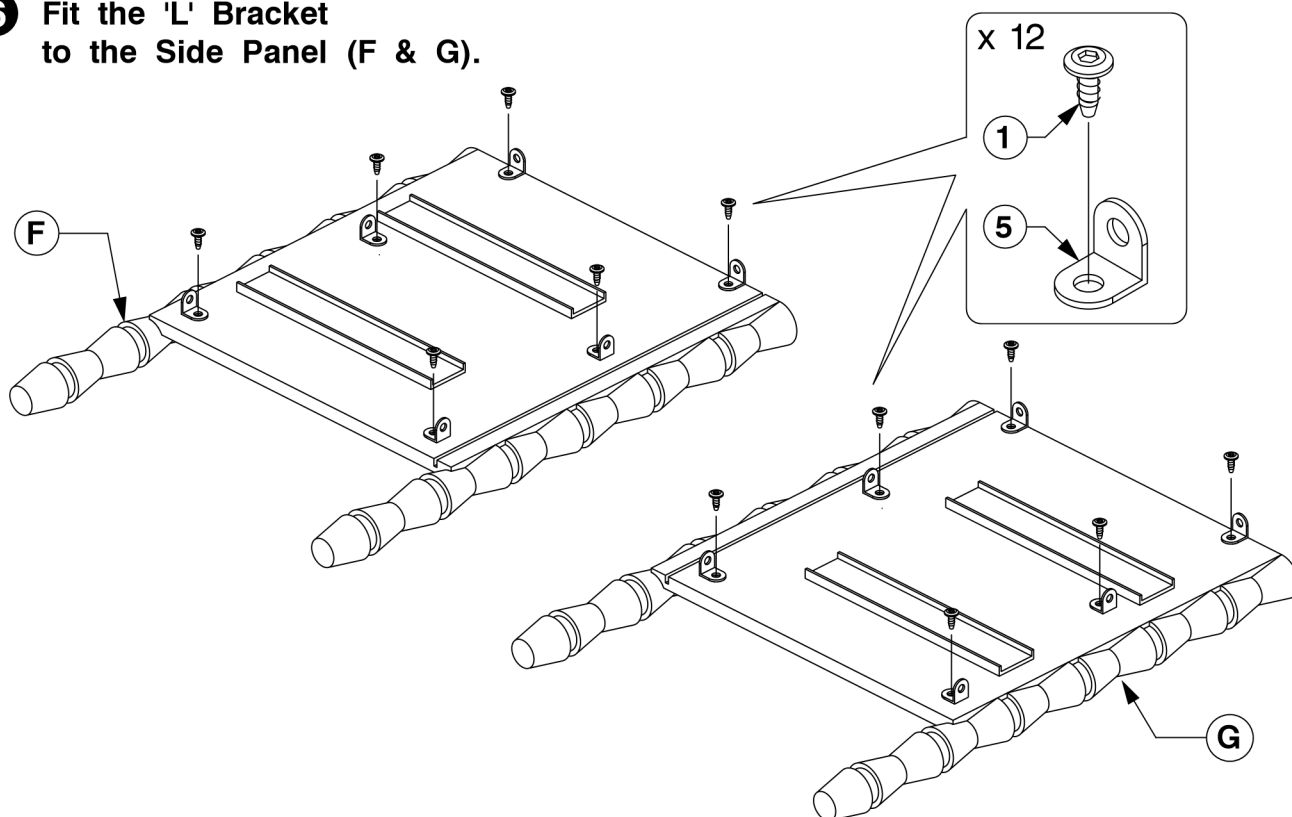

- 7** Assembled the Side Panel (F & G) to the Top Panel (A).

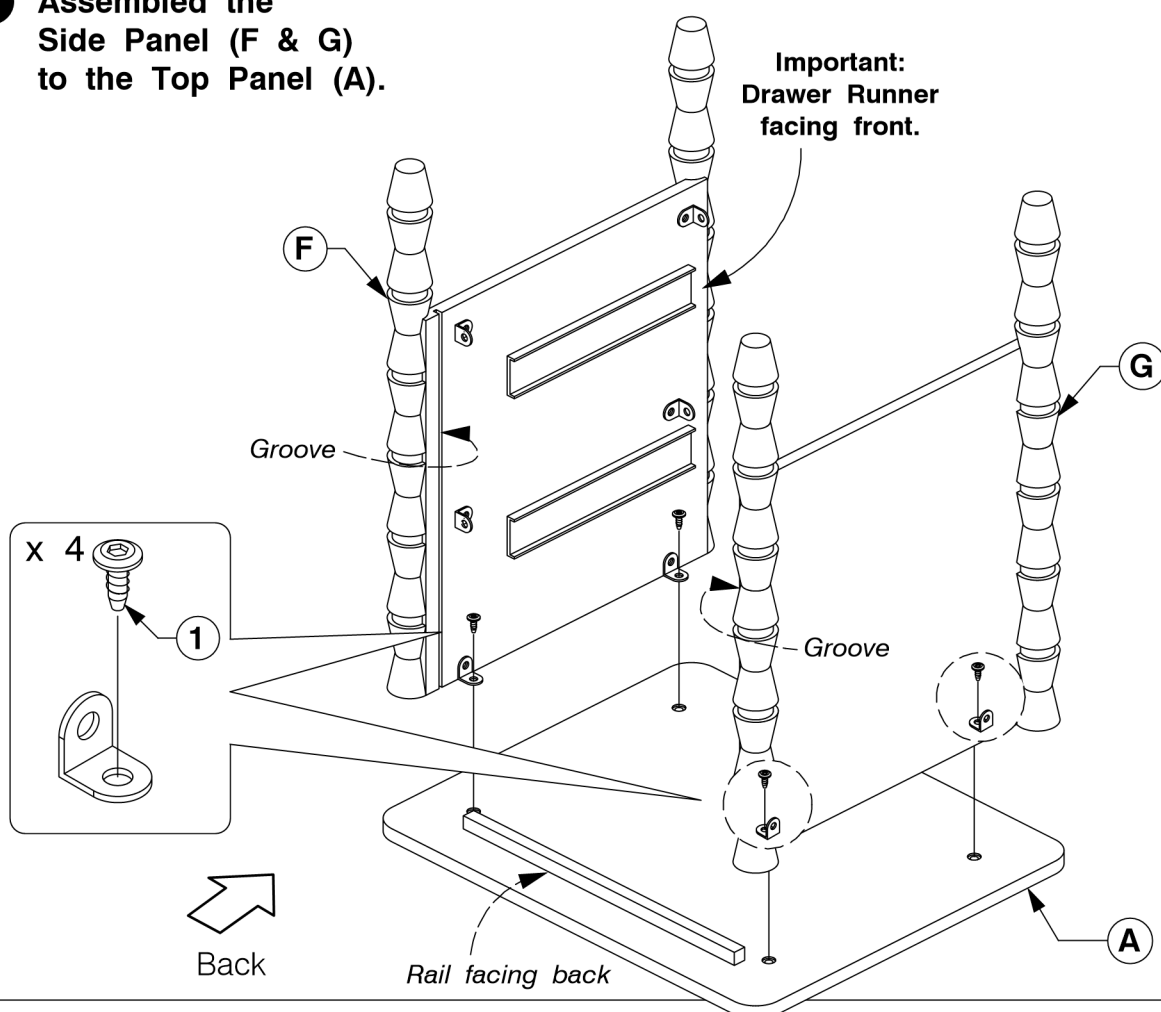


9021 2 Drawer Nightstand


Assembly Instructions

WI-0126

- 8** Fit the Upper Support Bar (B), Bottom Front & Rear Support (C & E) to the Side Panel (F & G).

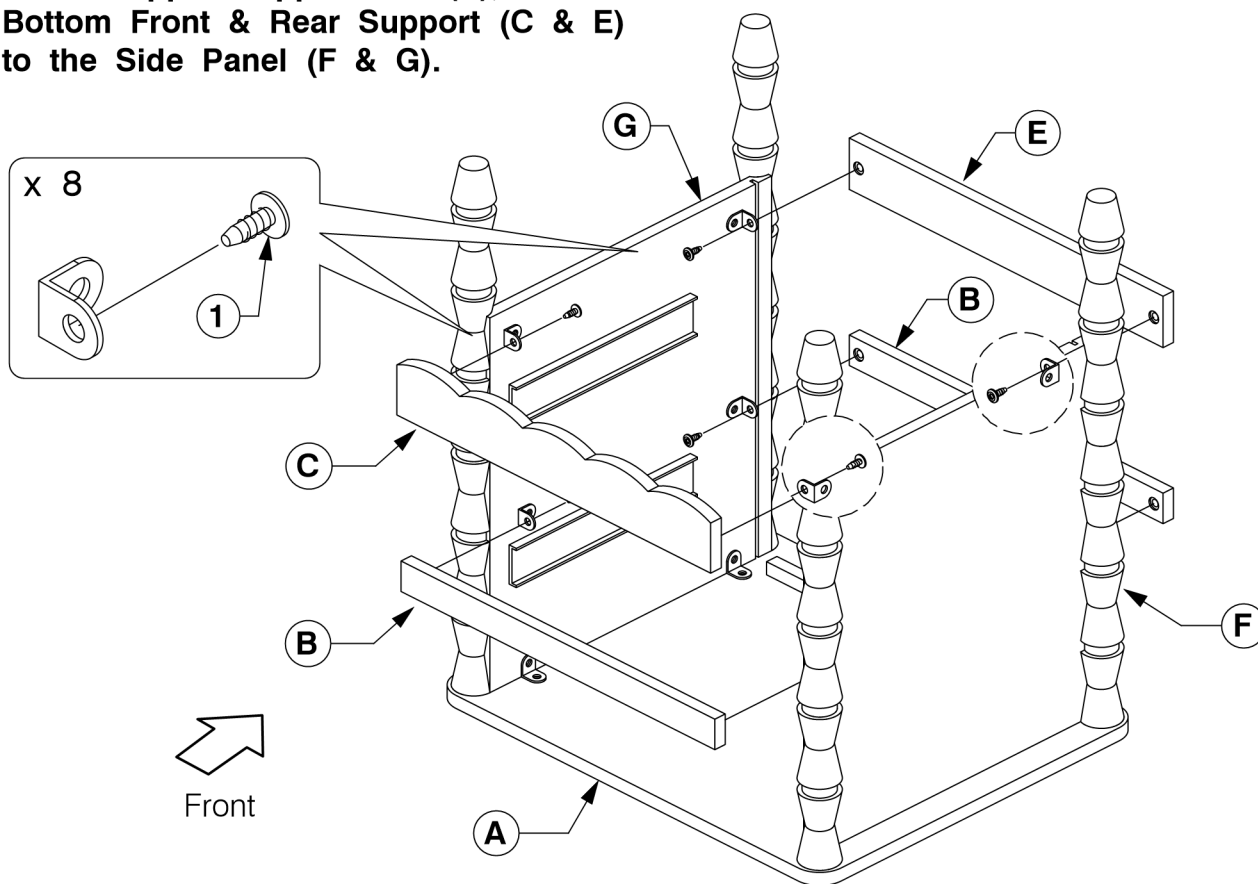

- 9** Slide the Back Panel (D) into the groove on the back of the Side Panel (F & G).

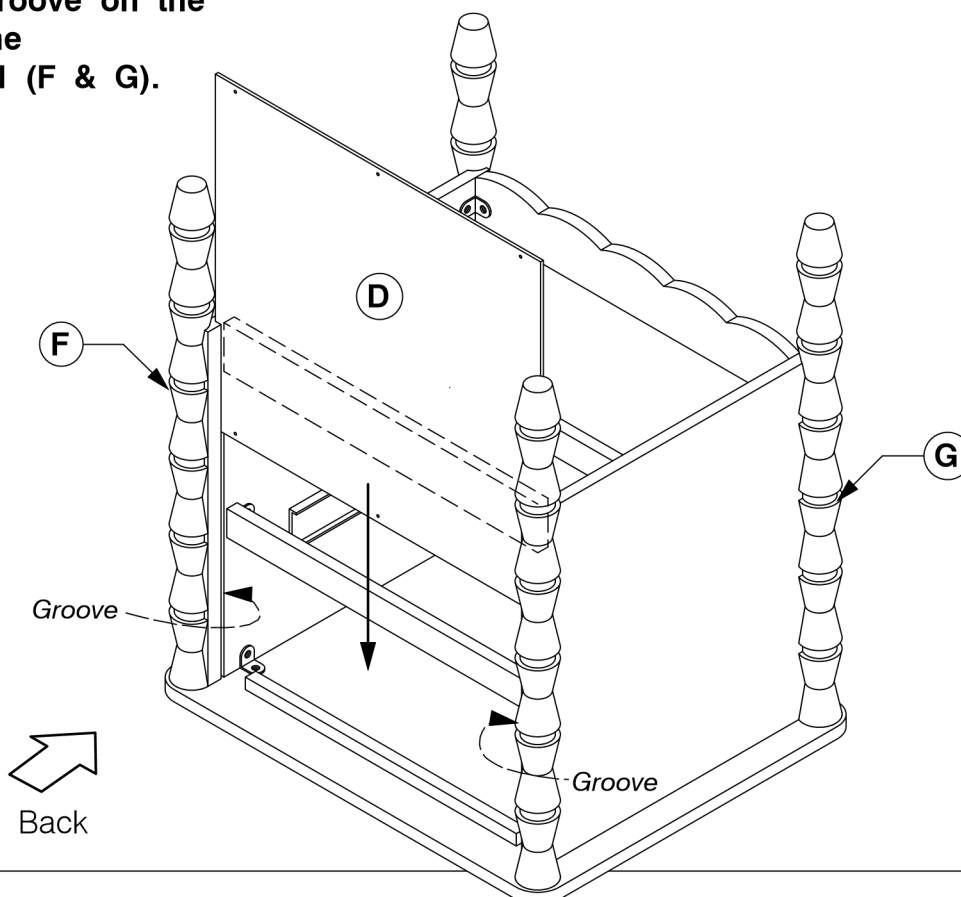


9021 2 Drawer Nightstand


Assembly Instructions

WI-0126

- 10** Use screws to tighten the Back Panel (D).

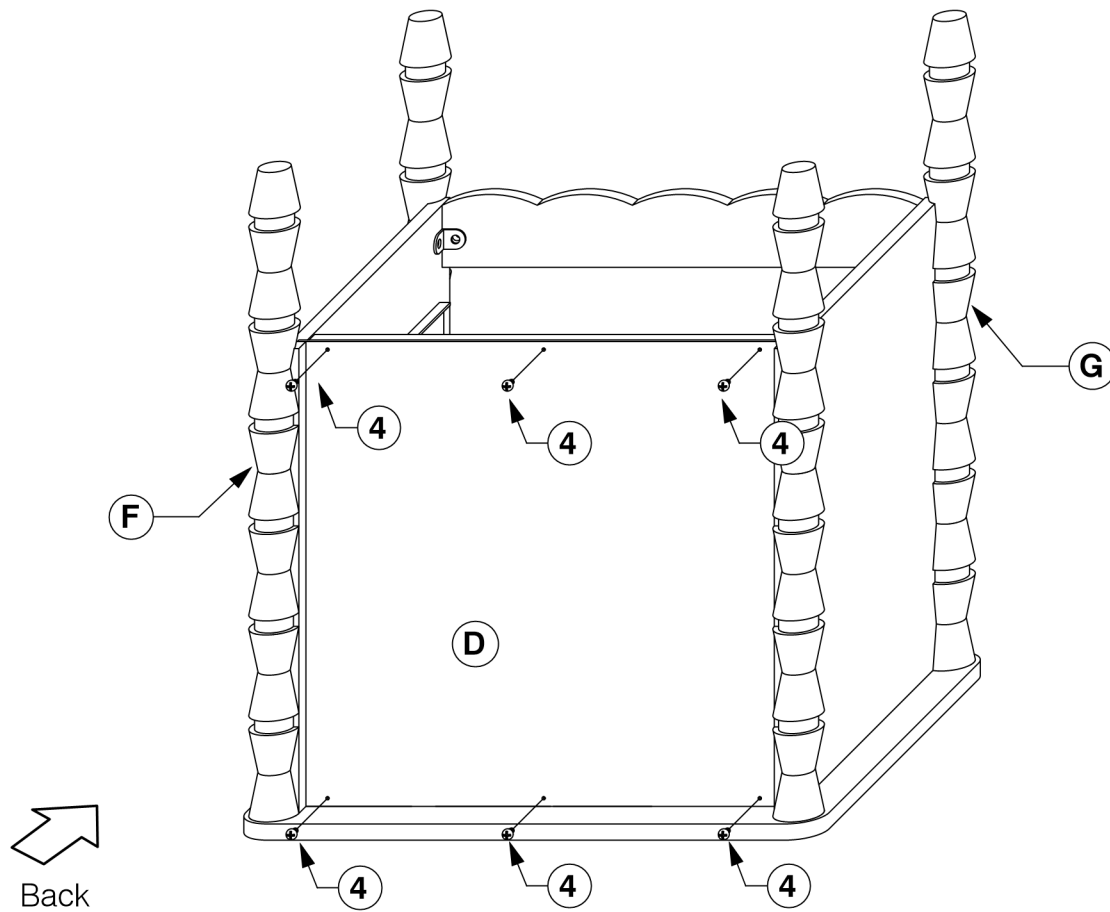

- 11** Fit the Drawer Box to the Casegood Body.

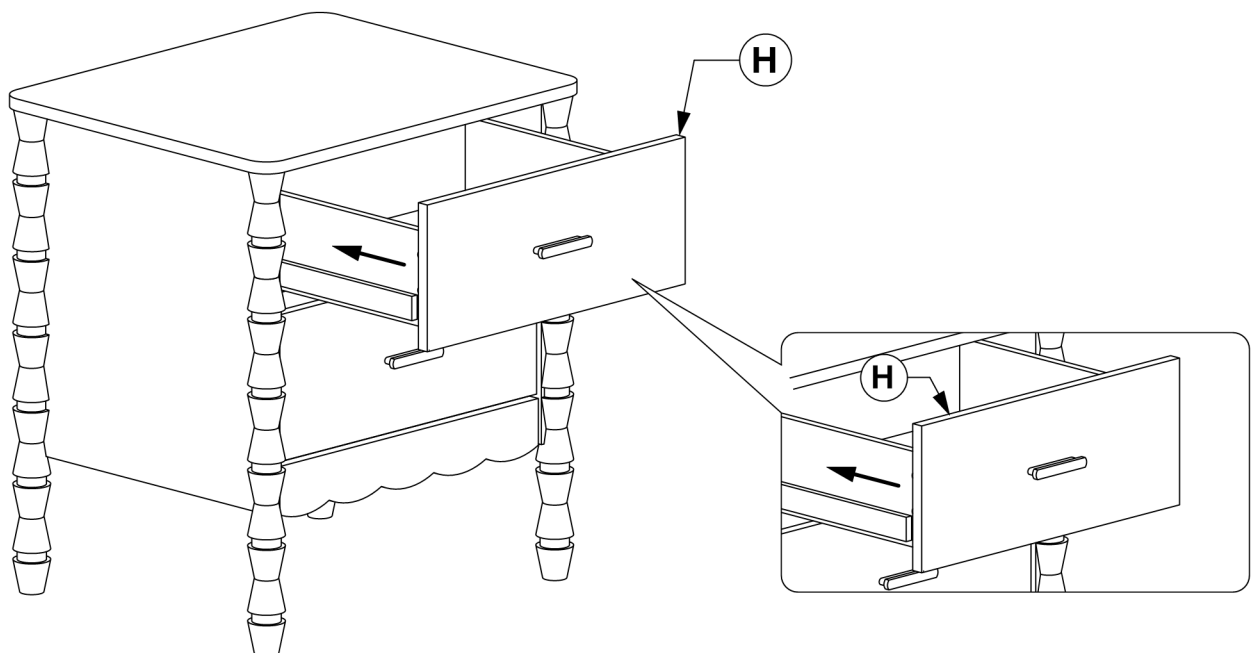


9021 2 Drawer Nightstand

Assembly Instructions


WI-0126

12 Fit and adjust the Drawer Face (H).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

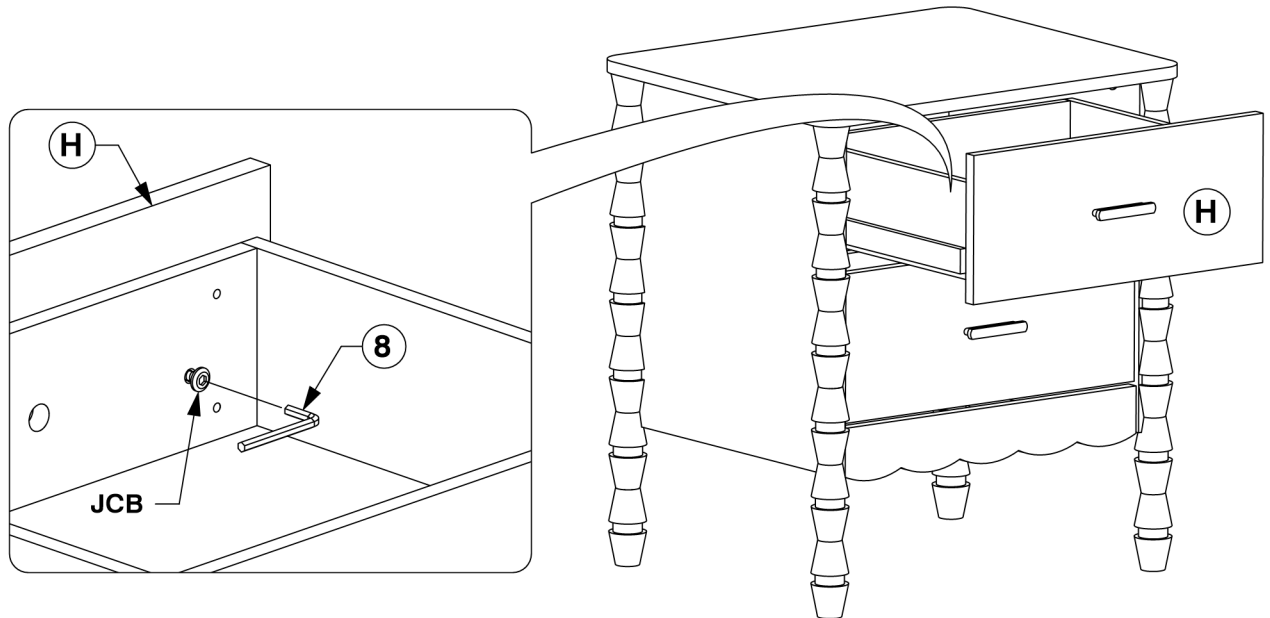


13 After the Drawer Faces (H) are aligned, secure with wood screws.

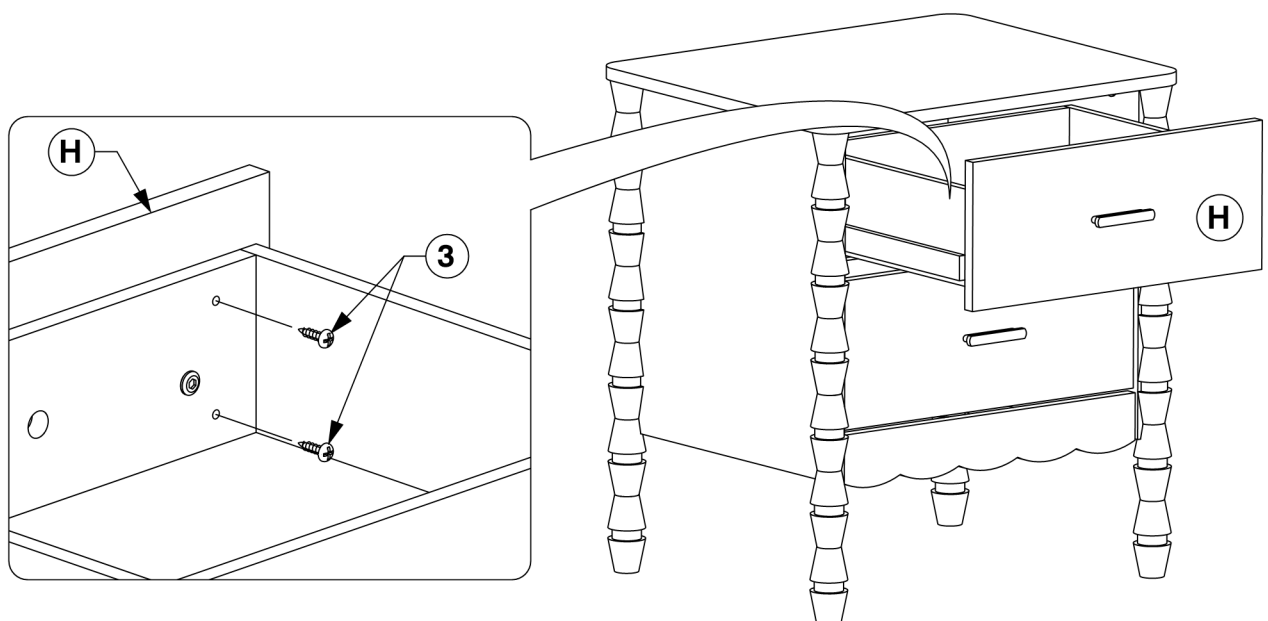


9021 6 Drawer Dresser

Assembly Instructions


WI-0126

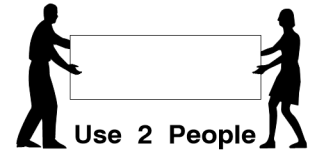

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

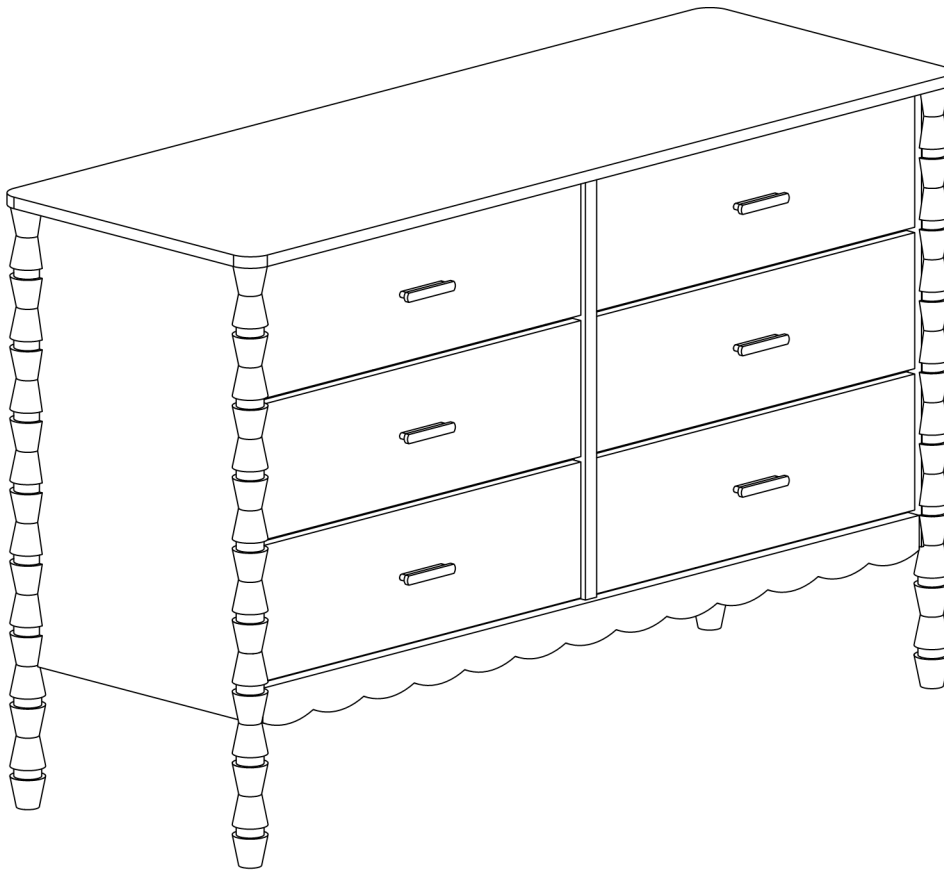

WARNING

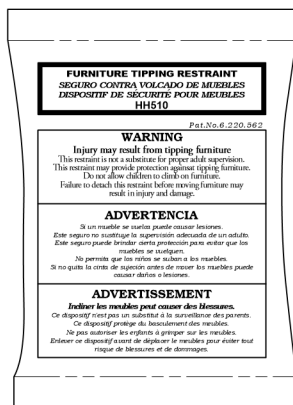

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9021 6 Drawer Dresser

Assembly Instructions

WI-0126

1 Parts List

Parts in Box A:




A Top Panel x 1




B Upper Support Bar x 2




C Bottom Front Support Bar x 1




D Bottom Rear Support Bar x 1

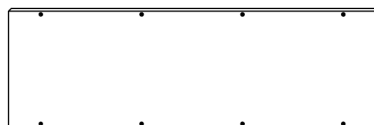


E Back Panel (Wider) x 1



F Back Panel (Narrow) x 1



G Drawer Face x 6



H Drawer Back x 6




J Drawer Bottom x 6




K Drawer Rail x 6


Parts in Box B:

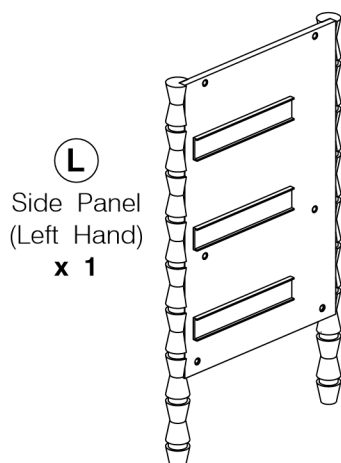

L Side Panel (Left Hand) x 1

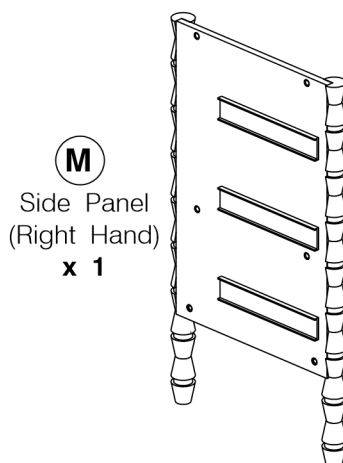


M Side Panel (Right Hand) x 1

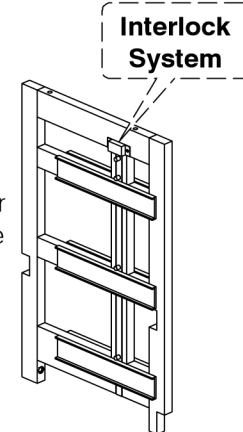


N Center Frame x 1


Parts for LEFT Side Drawer

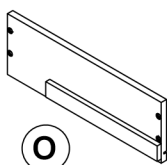



O LEFT Drawer Side (Left Hand) x 3

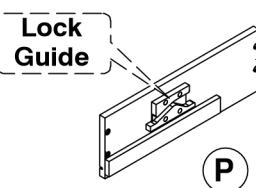


P LEFT Drawer Side (Right Hand) x 3

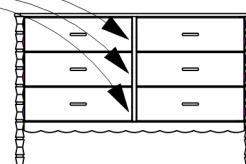

Parts for RIGHT Side Drawer

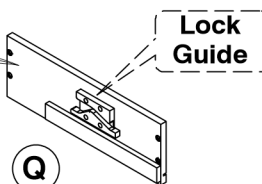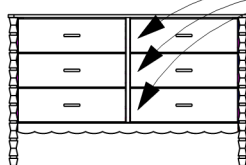

Q RIGHT Drawer Side (Left Hand) x 3

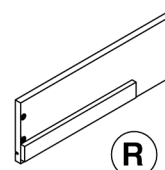






R RIGHT Drawer Side (Right Hand) x 3

9021 6 Drawer Dresser

Assembly Instructions

WI-0126


2 Hardware List

- | | | | |
|--|--|---|--|
| 
1 M6 x
15mm JCB
x 24 | 
2 M6 x
30mm JCB
x 4 | 
3 M6 x
60mm JCB
x 2 | 
4 Wood Screw
(M4 x 32mm) x 16 |
| 
5 Wood Screw
(M4 x 20mm) x 24 | 
6 Wood Screw
(M4 x 25mm) x 60 | 
7 M6 x 25mm
Wood Dowel x 24 | 
8 'L' Bracket
(5005-3) x 12 |
| 
9 Handle
(3321-64)
x 6 | 
10 M4 x 22mm
Wood Screw x 12 | 
11 Allen Key
x 1 | |


3 Assemble the Drawers.

STEP 3.1

LEFT

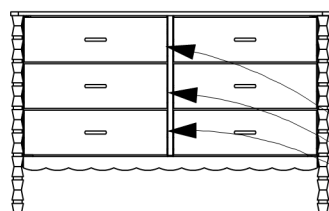

**Important: Assemble the
Drawer Runner facing
Drawer Face.**

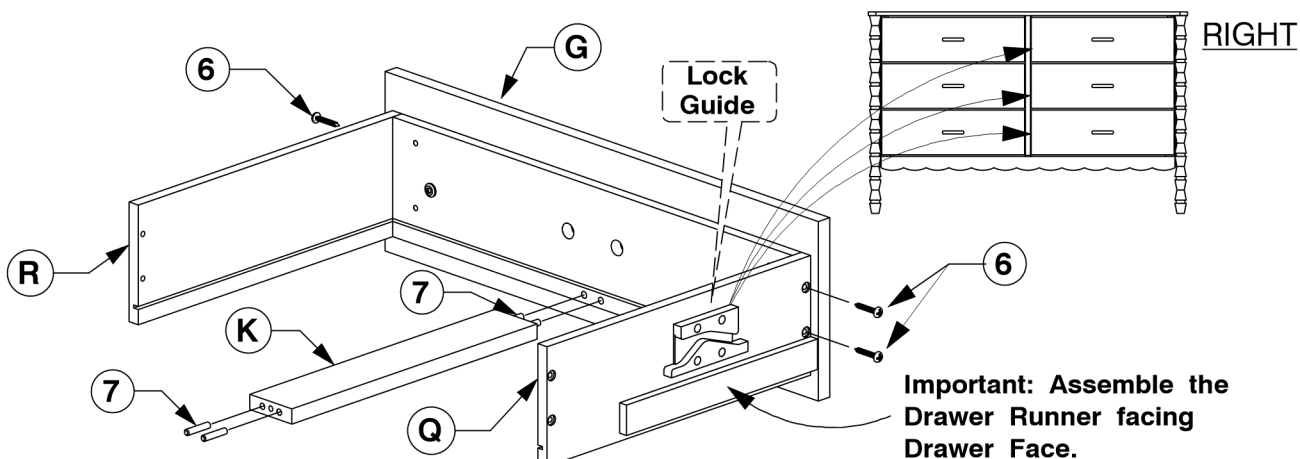

**Important: Assemble the
Drawer Runner facing
Drawer Face.**

9021 6 Drawer Dresser


Assembly Instructions

WI-0126


③ Assemble the Drawers.

STEP 3.2


* 3 Assemble the left and right drawers as shown below

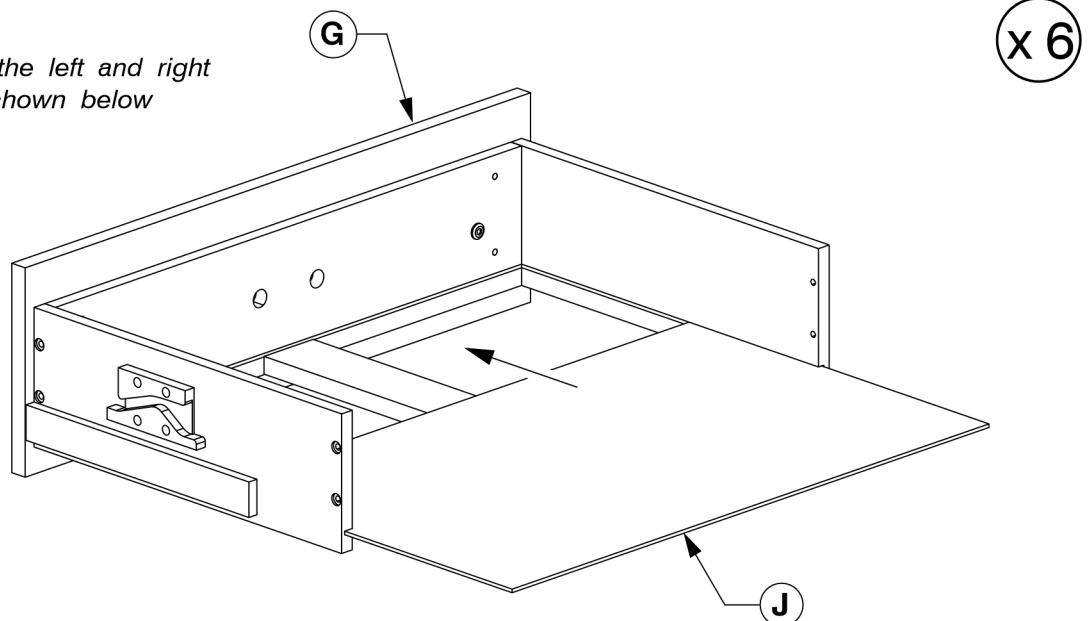

STEP 3.3

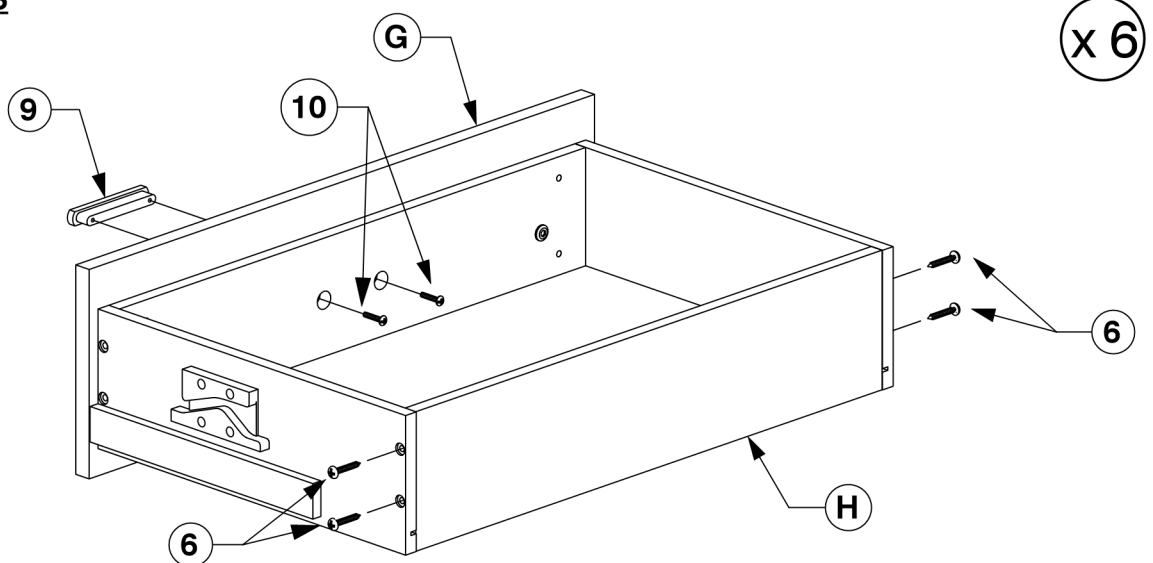

STEP 3.4

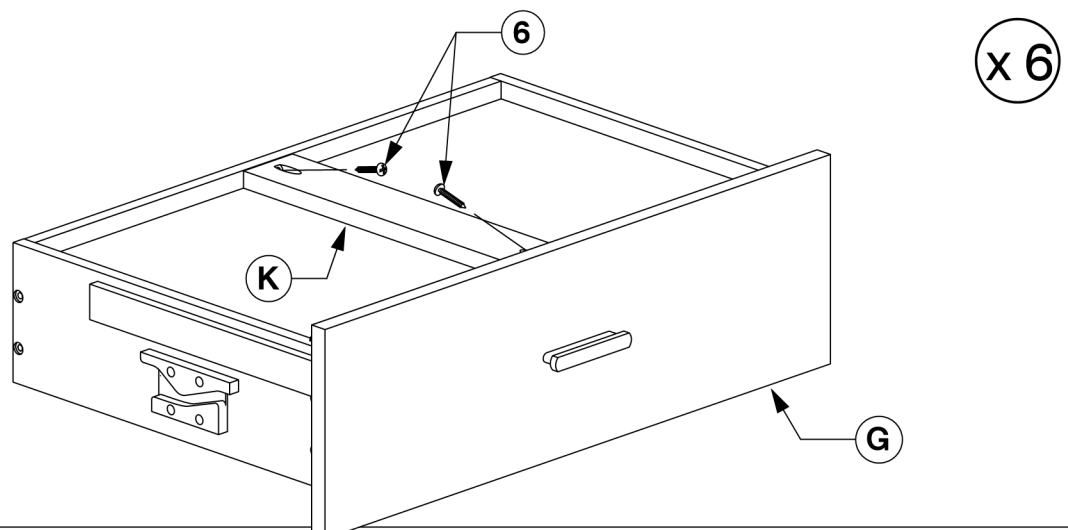


9021 6 Drawer Dresser


Assembly Instructions

WI-0126

4 Fit the 'L' Bracket to the Side Panel (L & M).

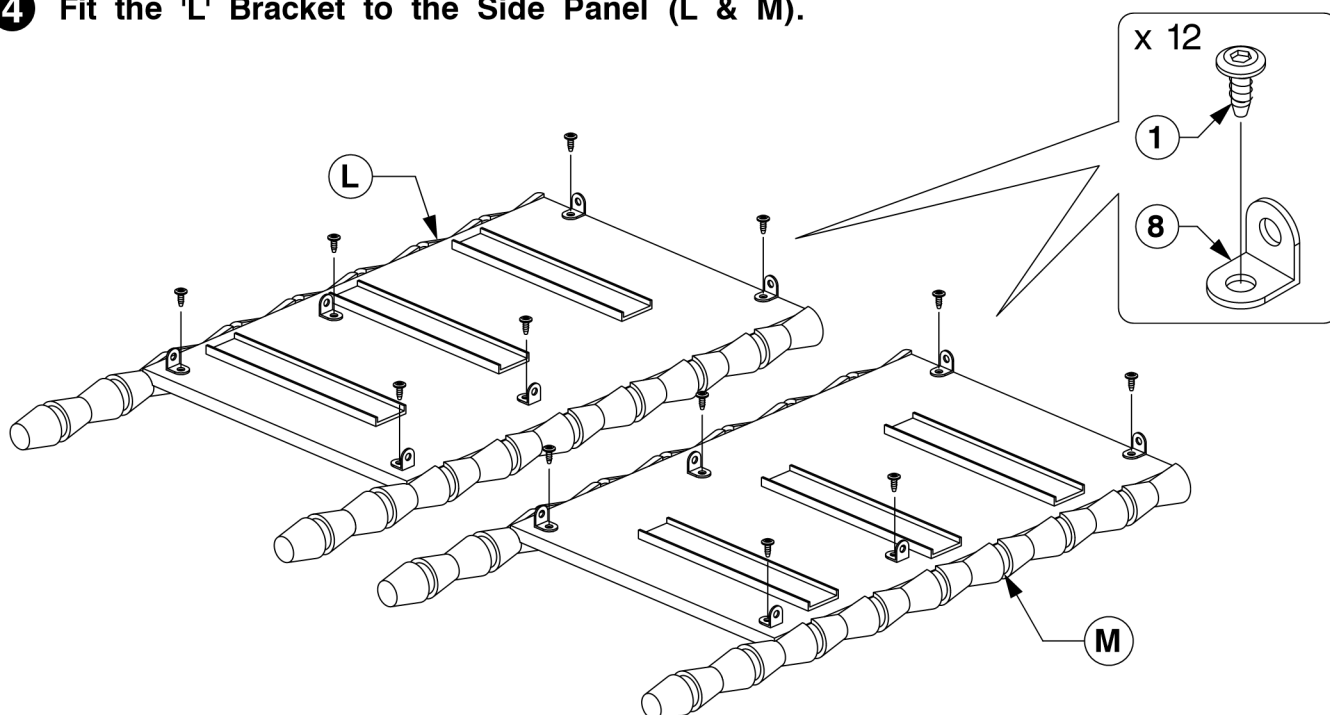

5 Fit the Side Panel- Right Hand (M) & Center Frame (N) to the Top Panel (A).

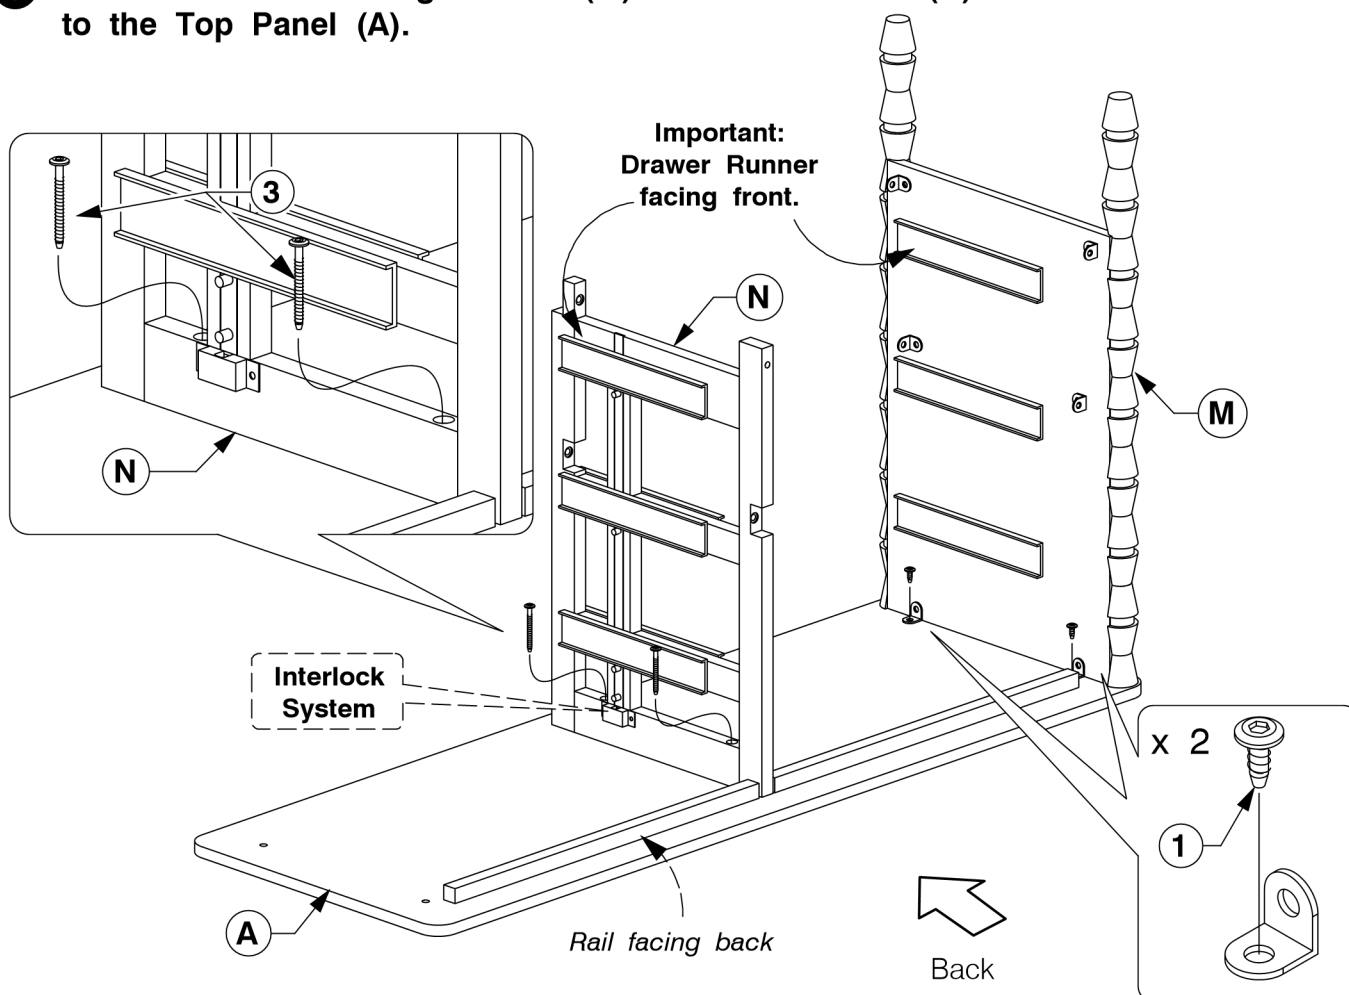


9021 6 Drawer Dresser


Assembly Instructions

WI-0126

- 6** Attach the following parts to the Right-Hand Side Panel (M) and the Center Frame (N), as shown:
Upper Support Bar (B)
Bottom Front Support Bar (C)
Bottom Rear Support Bar (D)

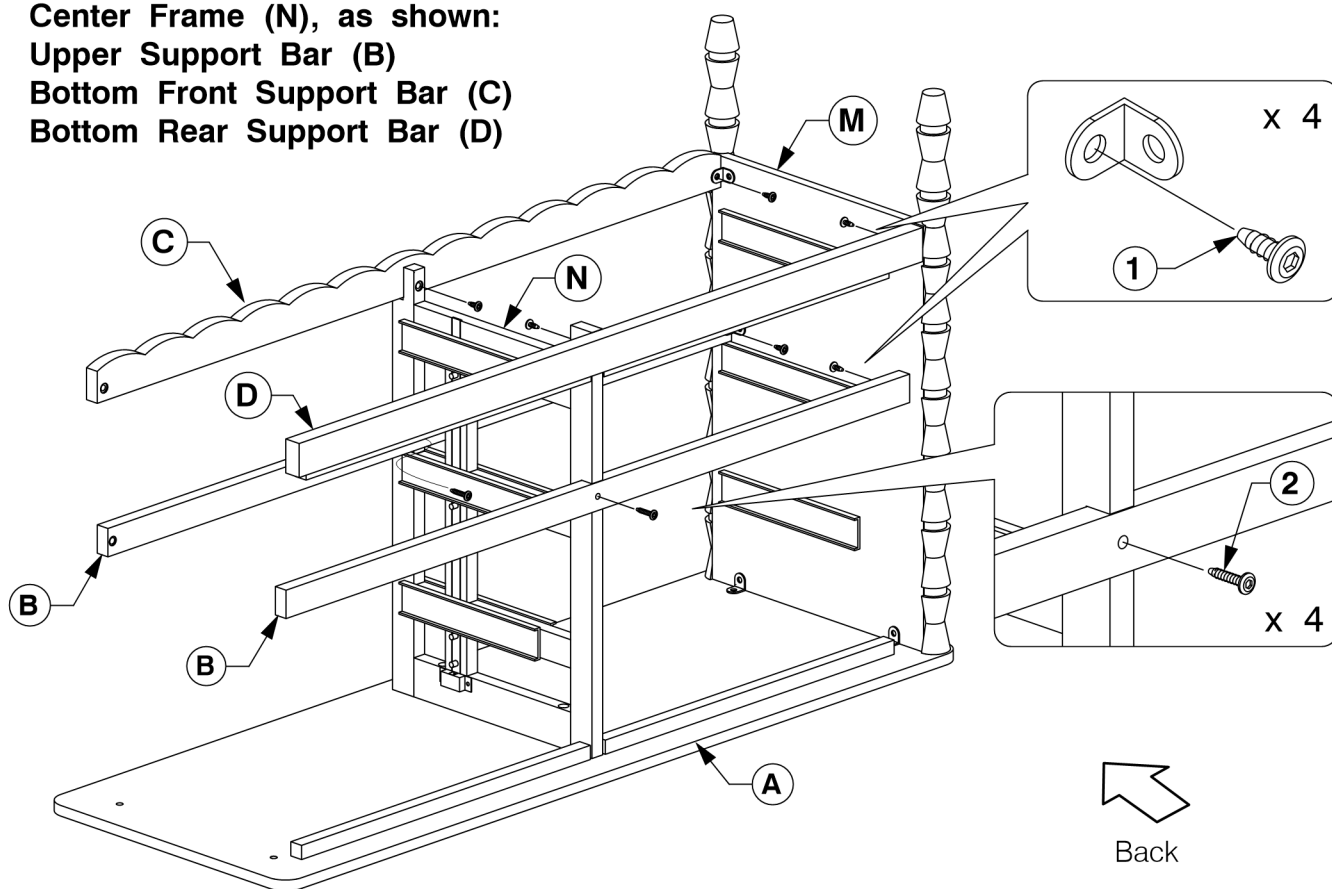

- 7** Fit the Left-Hand Side Panel (L) to the:
Upper Support Bar (B)
Bottom Front Support Bar (C)
Bottom Rear Support Bar (D)

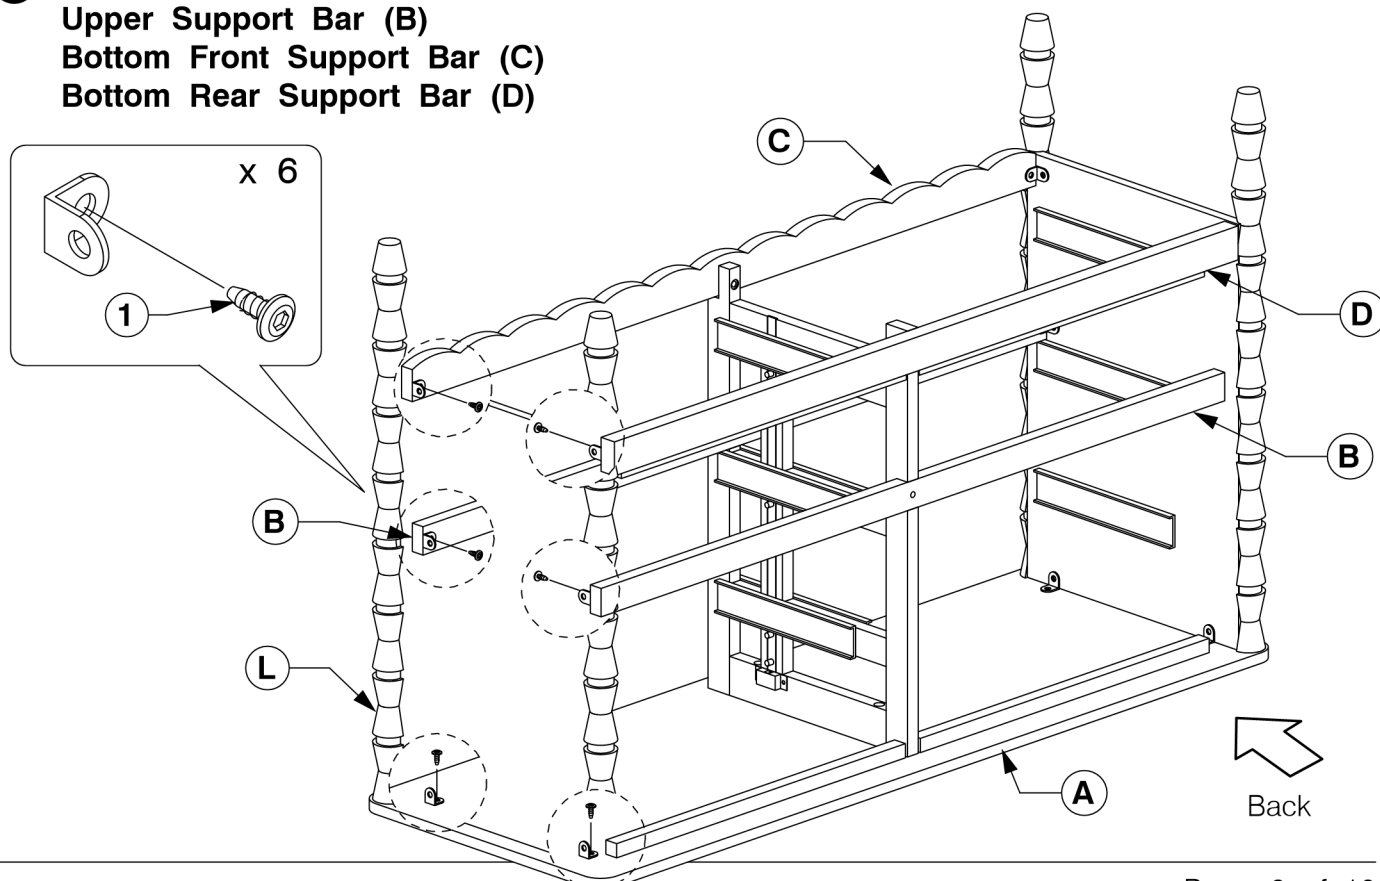


9021 6 Drawer Dresser


Assembly Instructions

WI-0126

- 8** Attached the Back Panel- Wider (E) to the back of the frame.

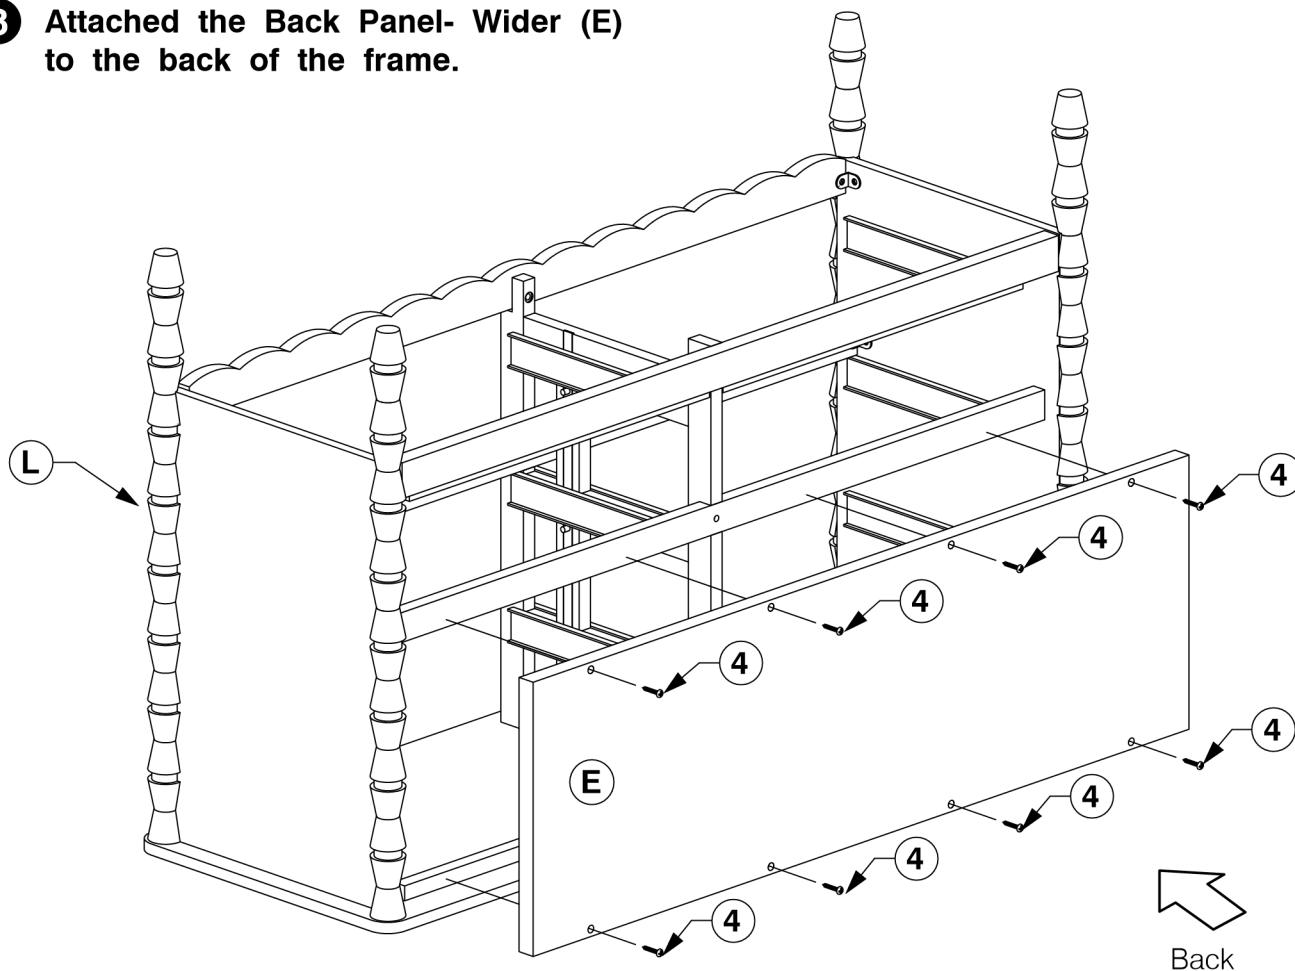

- 9** Attached the Back Panel- Narrow (F) to the back of the frame.

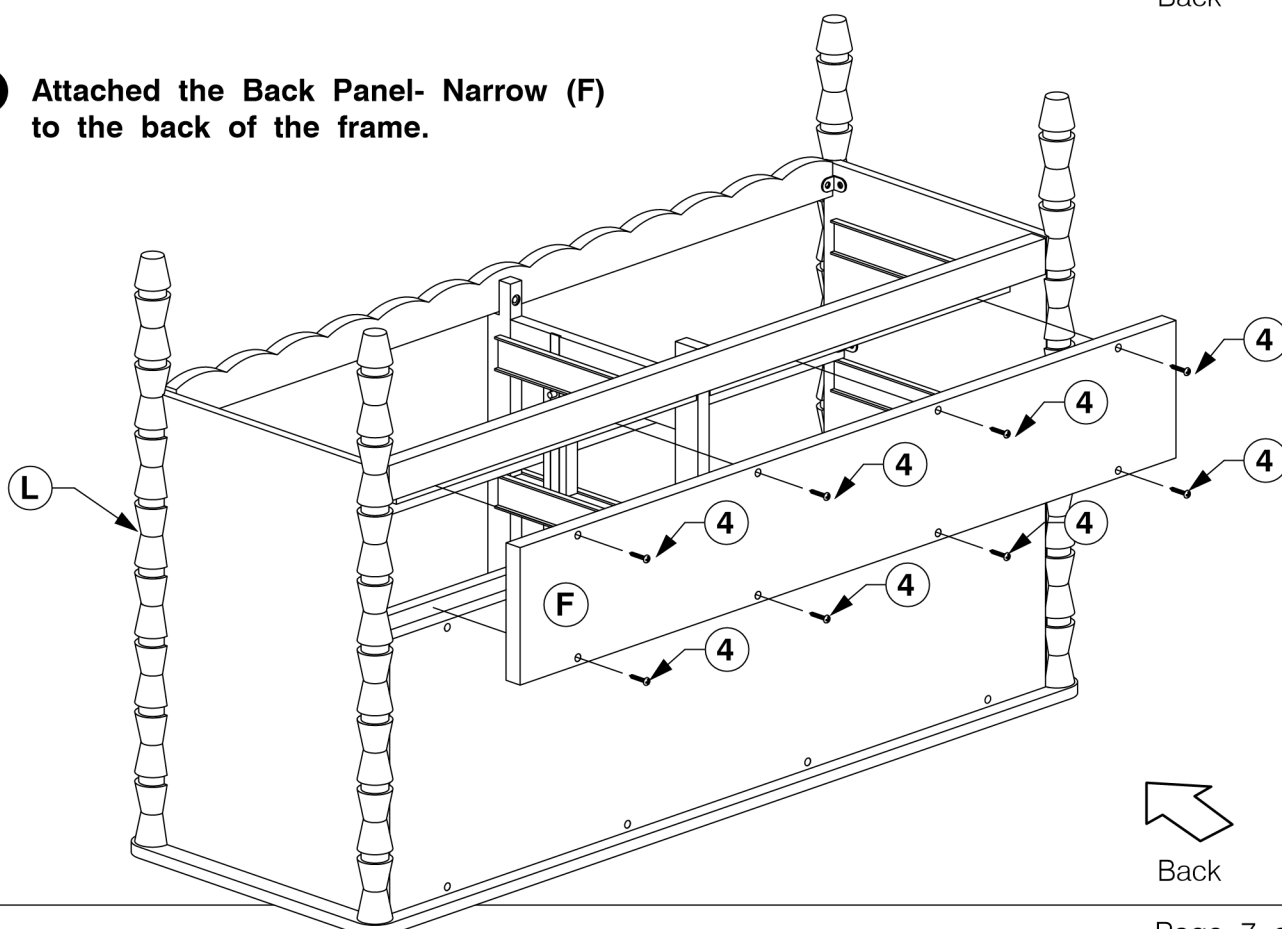


9021 6 Drawer Dresser

Assembly Instructions




WI-0126

10 Install the Drawers.


LEFT

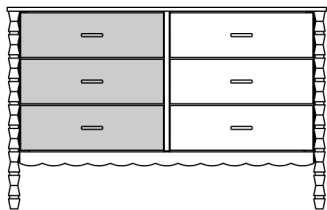




- Push the interlock bar **upwards** before inserting the drawers.

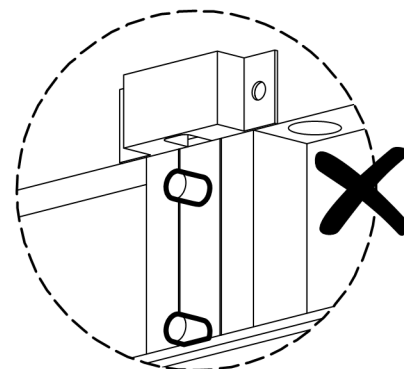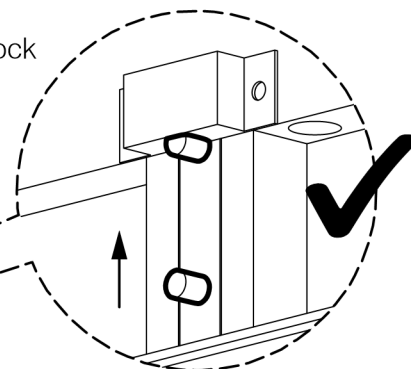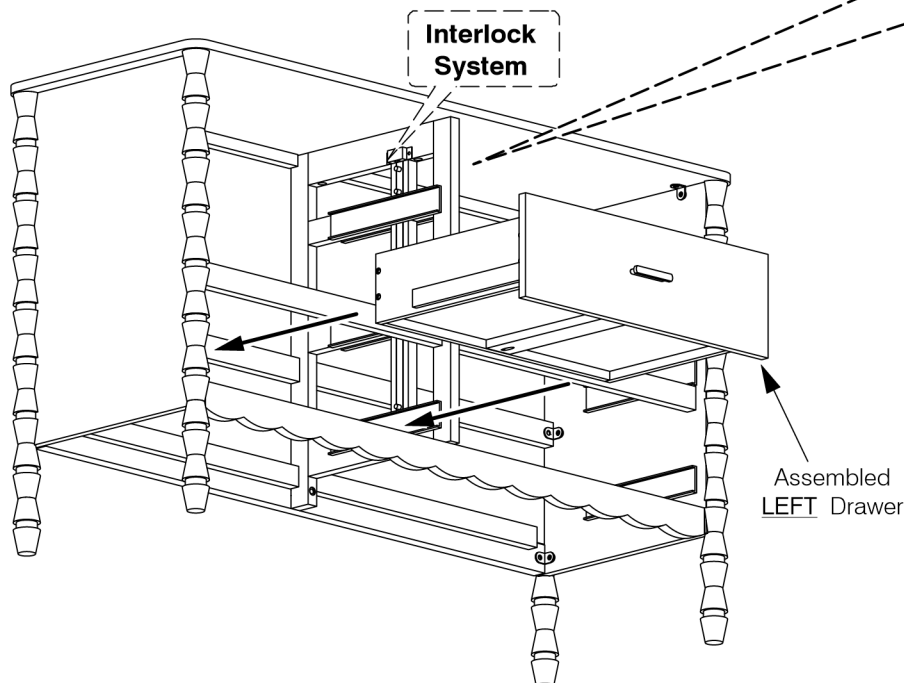

RIGHT

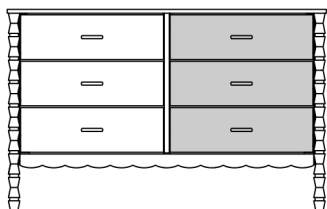

- Push the interlock bar **upwards** before inserting the drawers.

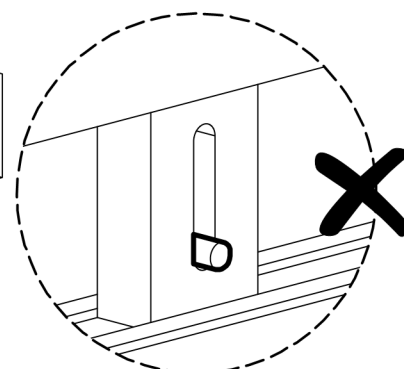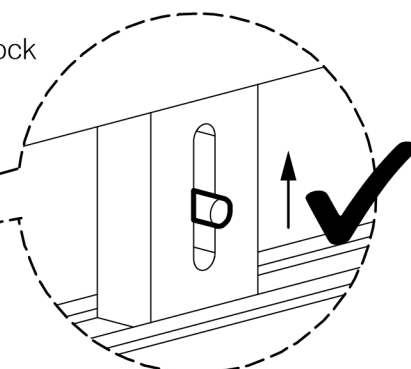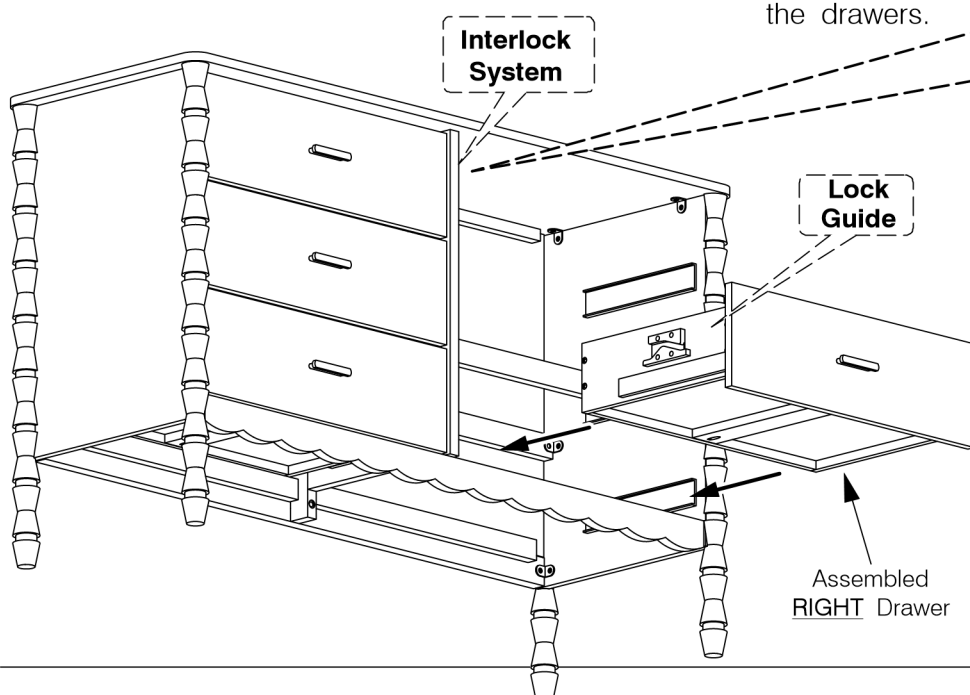


9021 6 Drawer Dresser

Assembly Instructions


WI-0126

11 Adjust the Drawer Face (G).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.


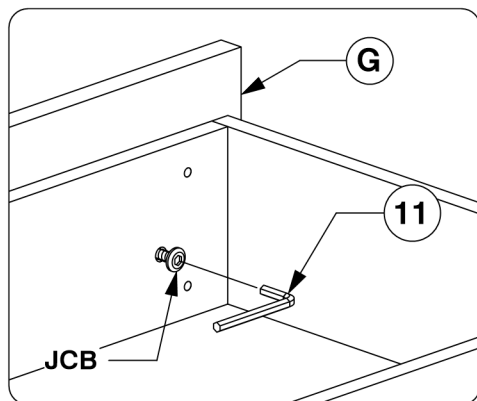


* NOTE: Only one drawer
can be open at a time.

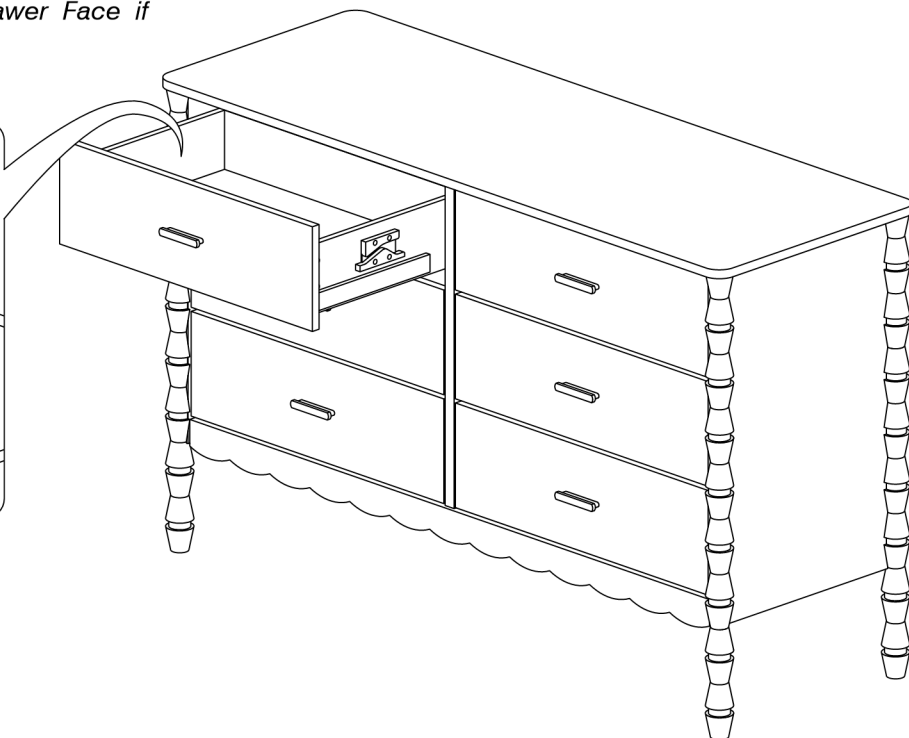

12 After the Drawer Faces (G) are aligned, secure with wood screws.

* NOTE: Only one drawer
can be open at a time.

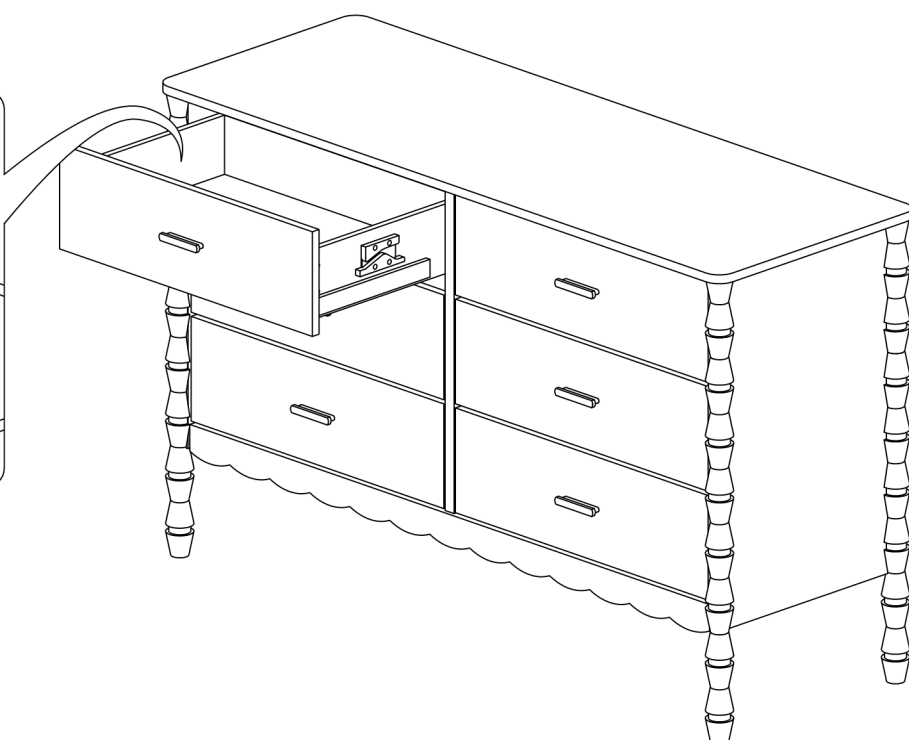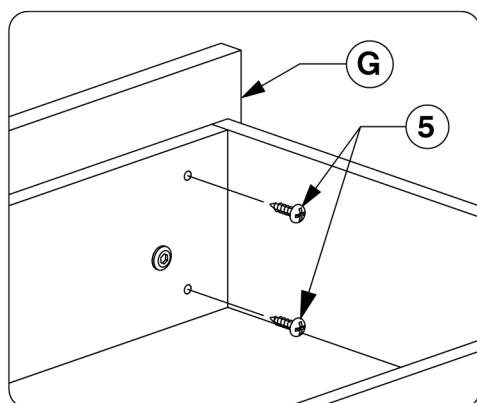




9021 6 Drawer Dresser

Assembly Instructions


WI-0126

13 Remove the Drawers.


- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

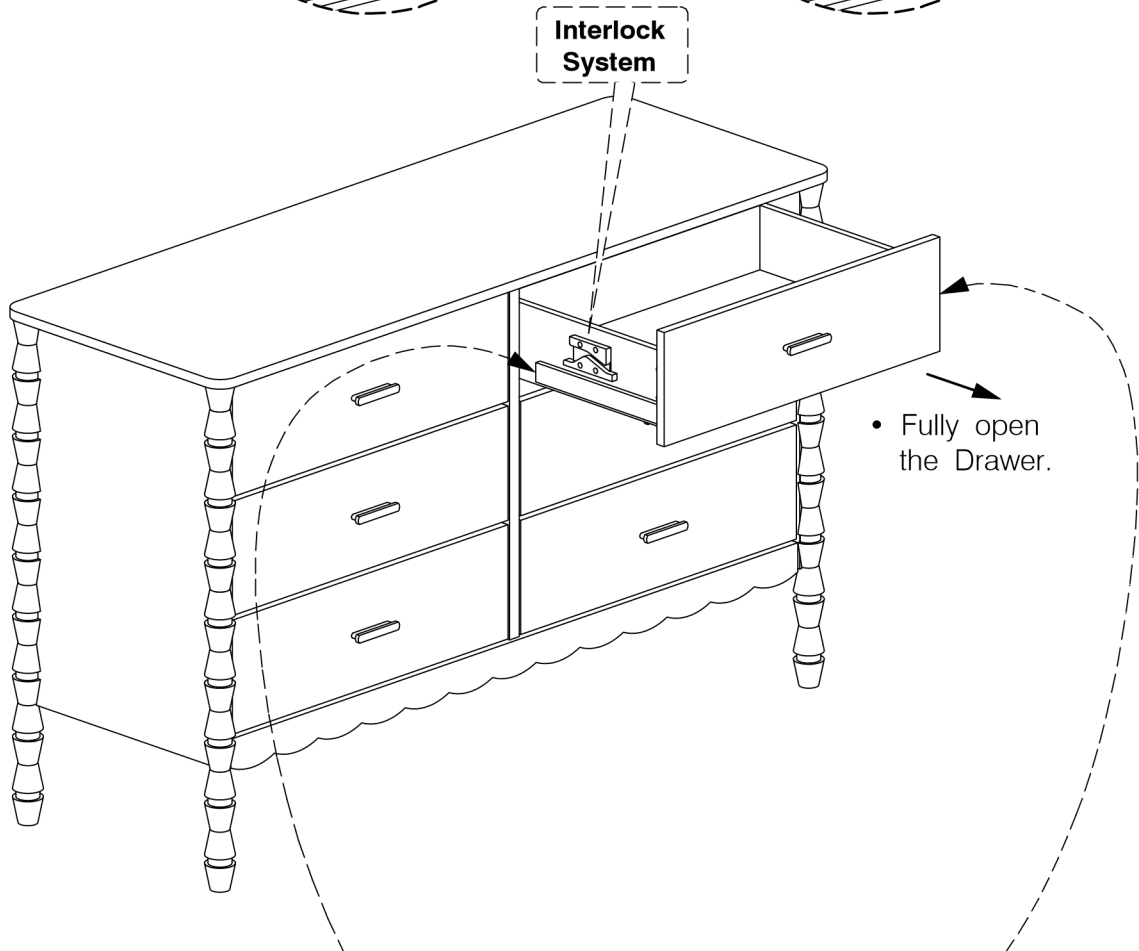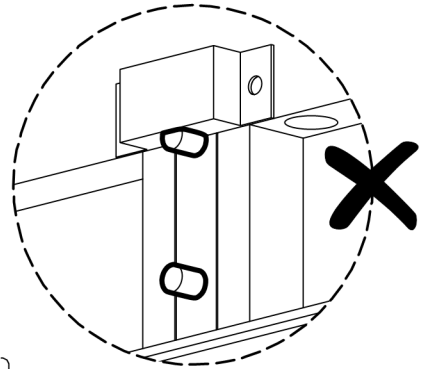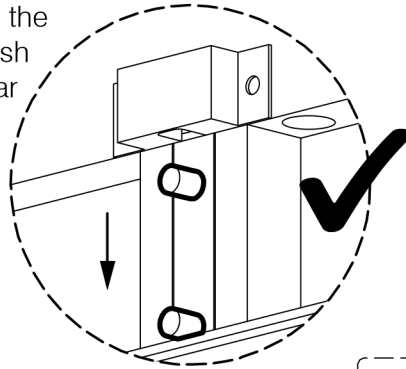

- Fully open the Drawer.

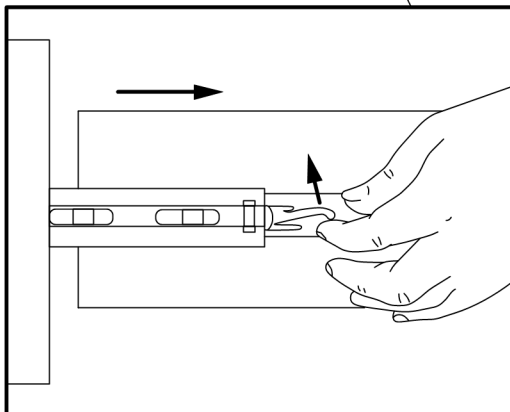

- Lift the **LEFT** side clip up.


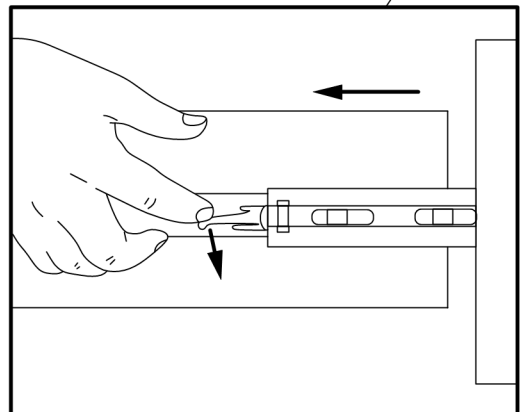


- Push **RIGHT** side clip down.

9021 4 Drawer Chest


Assembly Instructions

WI-0126

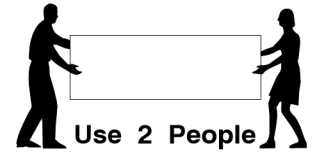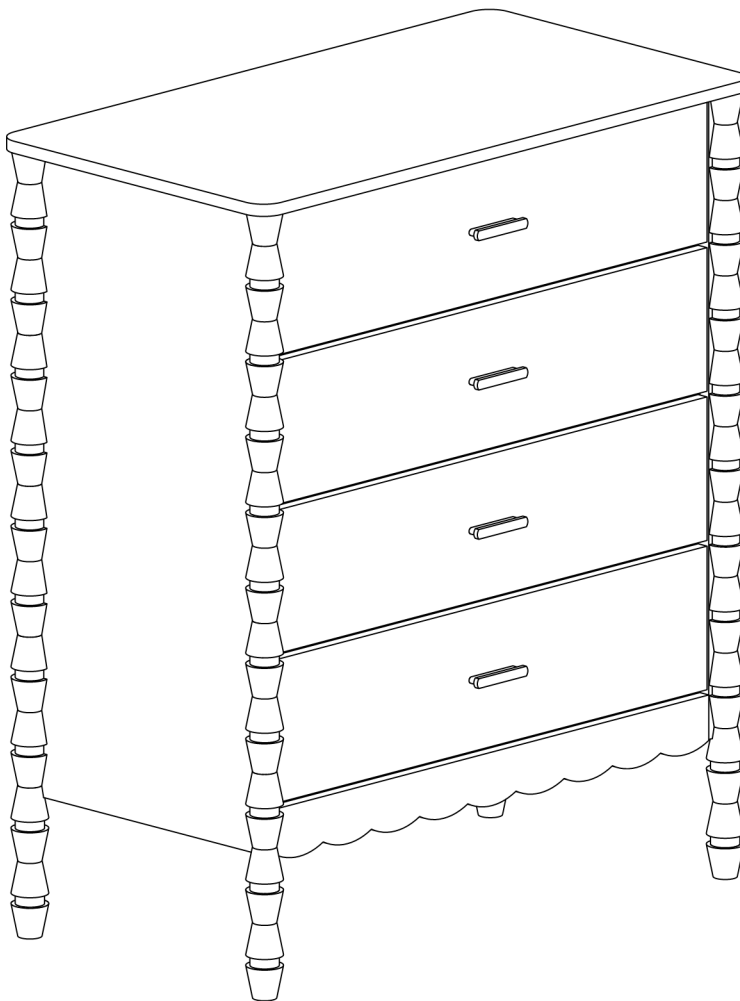

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

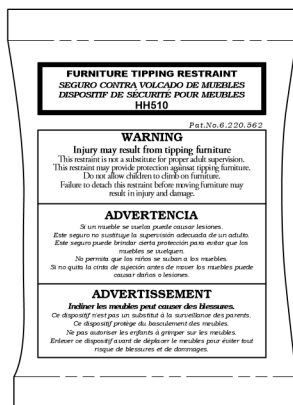

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.









9021 4 Drawer Chest

Assembly Instructions





WI-0126

1 Parts List

Parts in Box A:

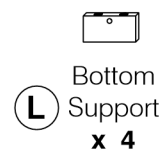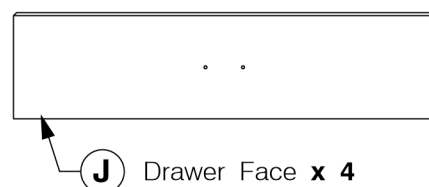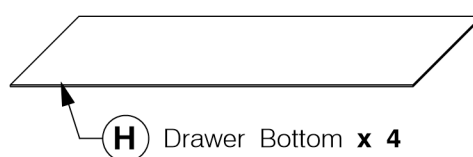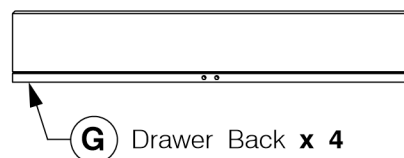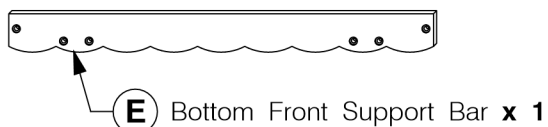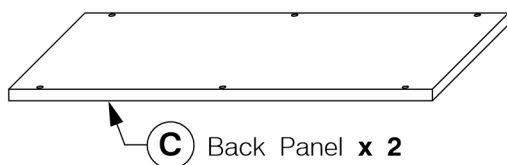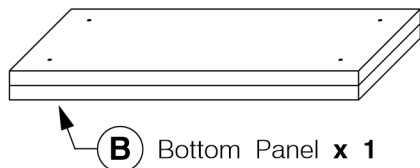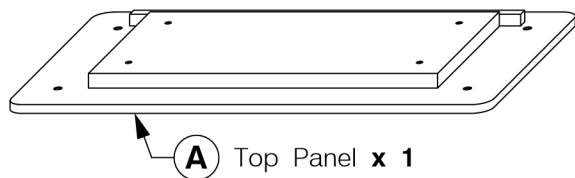

Parts in Box B:

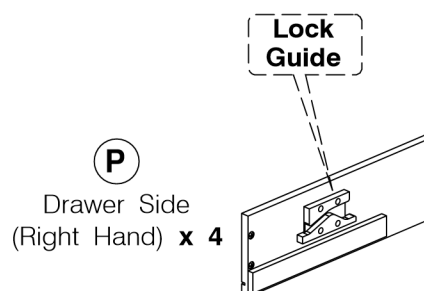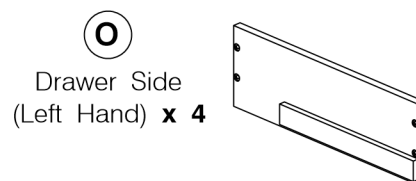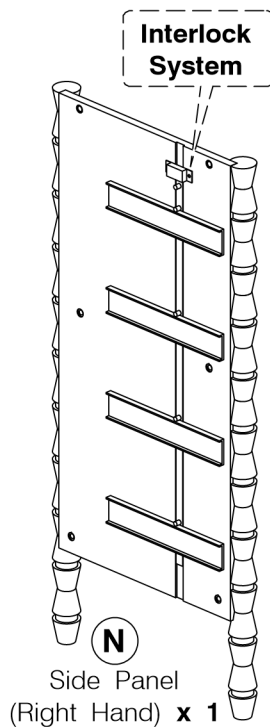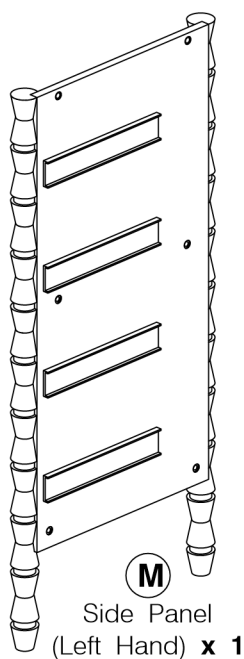


9021 4 Drawer Chest


Assembly Instructions

WI-0126

2 Hardware List

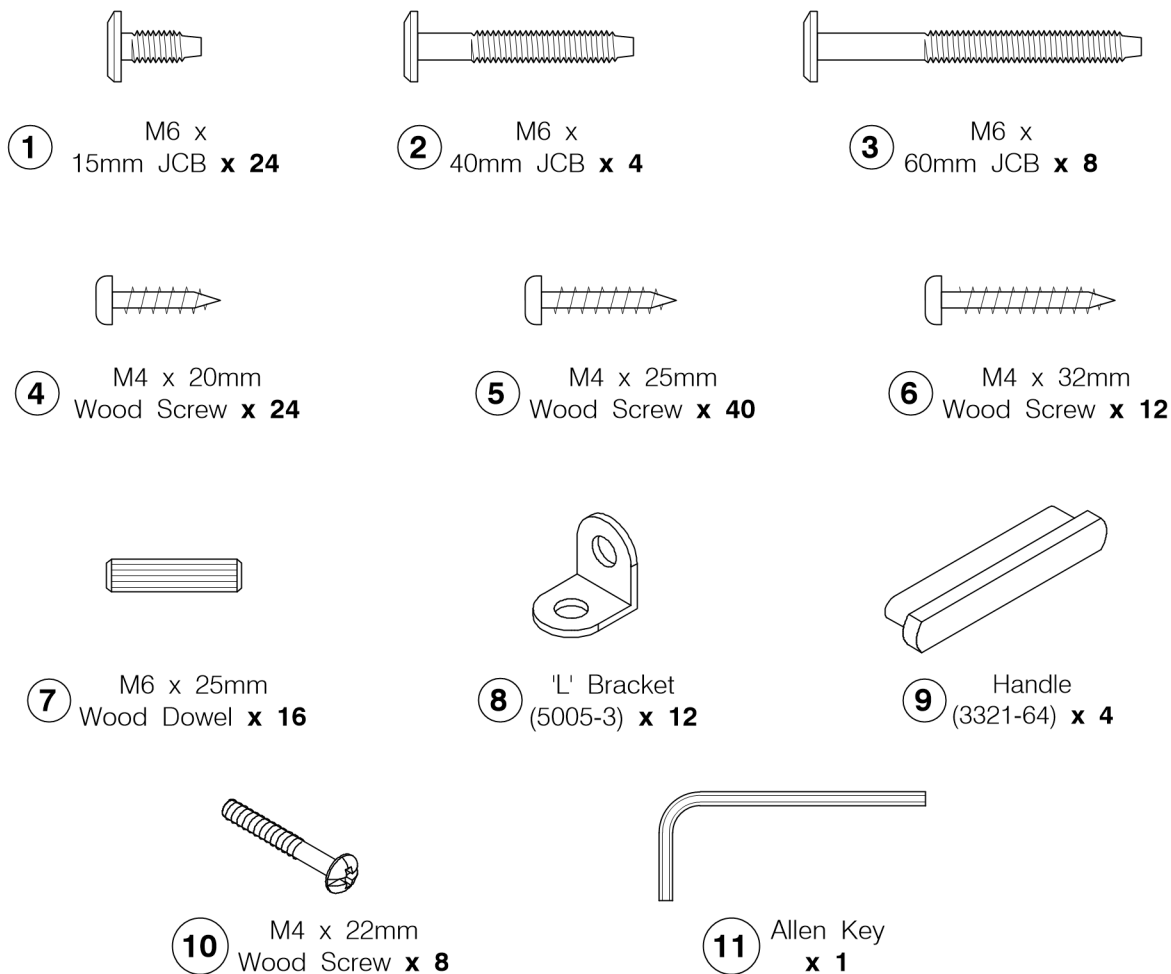

3 Assemble the Drawer Sides (O & P) & Drawer Rail (K) to the Drawer Face (J).

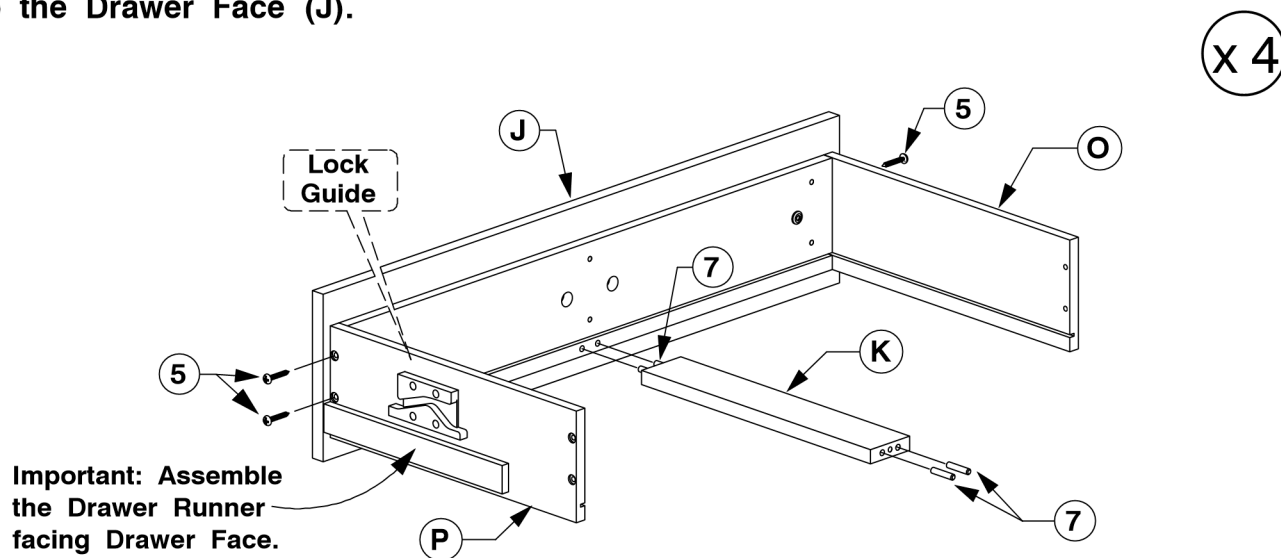


9021 4 Drawer Chest

Assembly Instructions

WI-0126


- 4** Slide the Drawer Bottom (H) into the groove on the Drawer Sides (O & P).

x 4

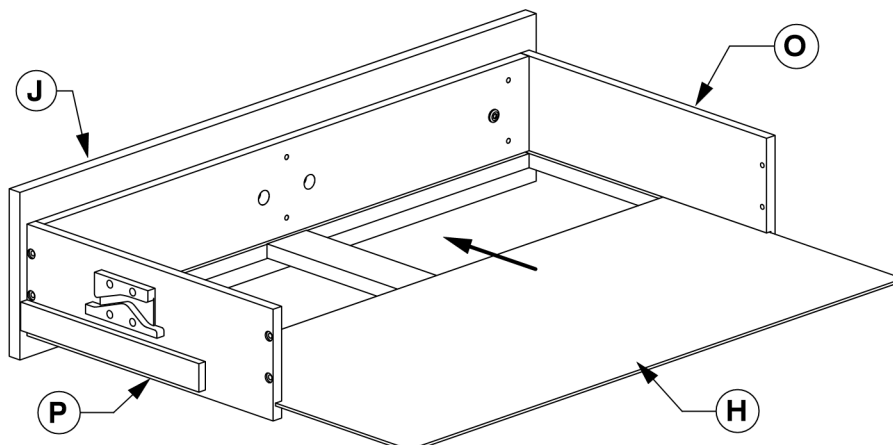


- 5** Assemble the Drawer Back (G) to the Drawer Sides (O & P). Fit the Handles to the Drawer Face (J).

x 4

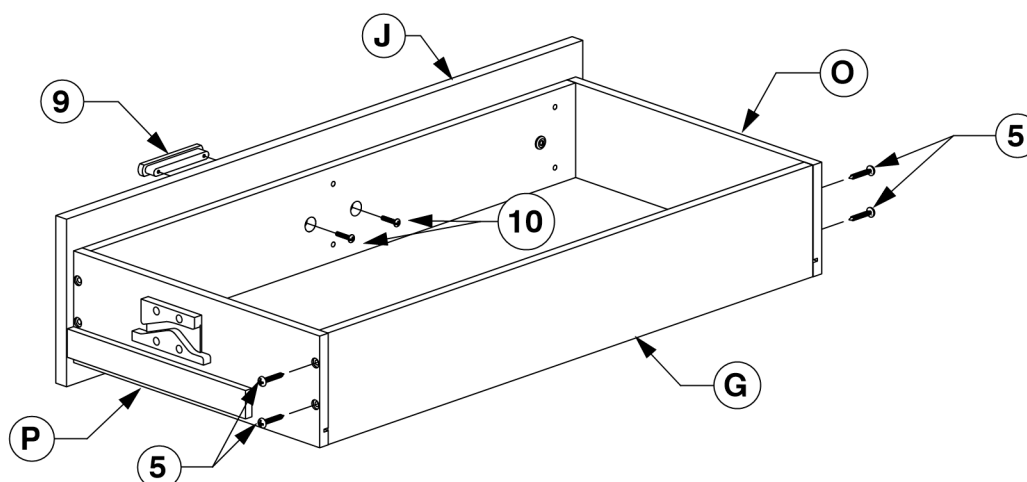

- 6** Turn the Drawer over to fit angled 25mm Wood screws (5) to the Drawer Rail (K).

x 4

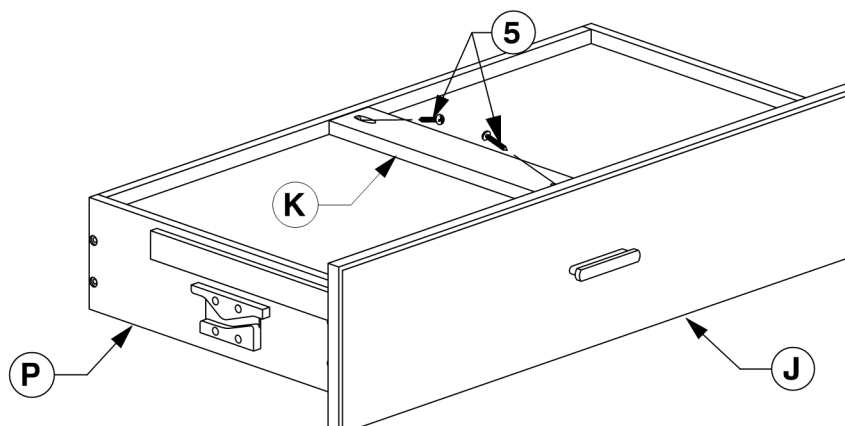


9021 4 Drawer Chest


Assembly Instructions

WI-0126

- 7** Fit the 'L' Bracket (8) to the Side Panel (M & N).

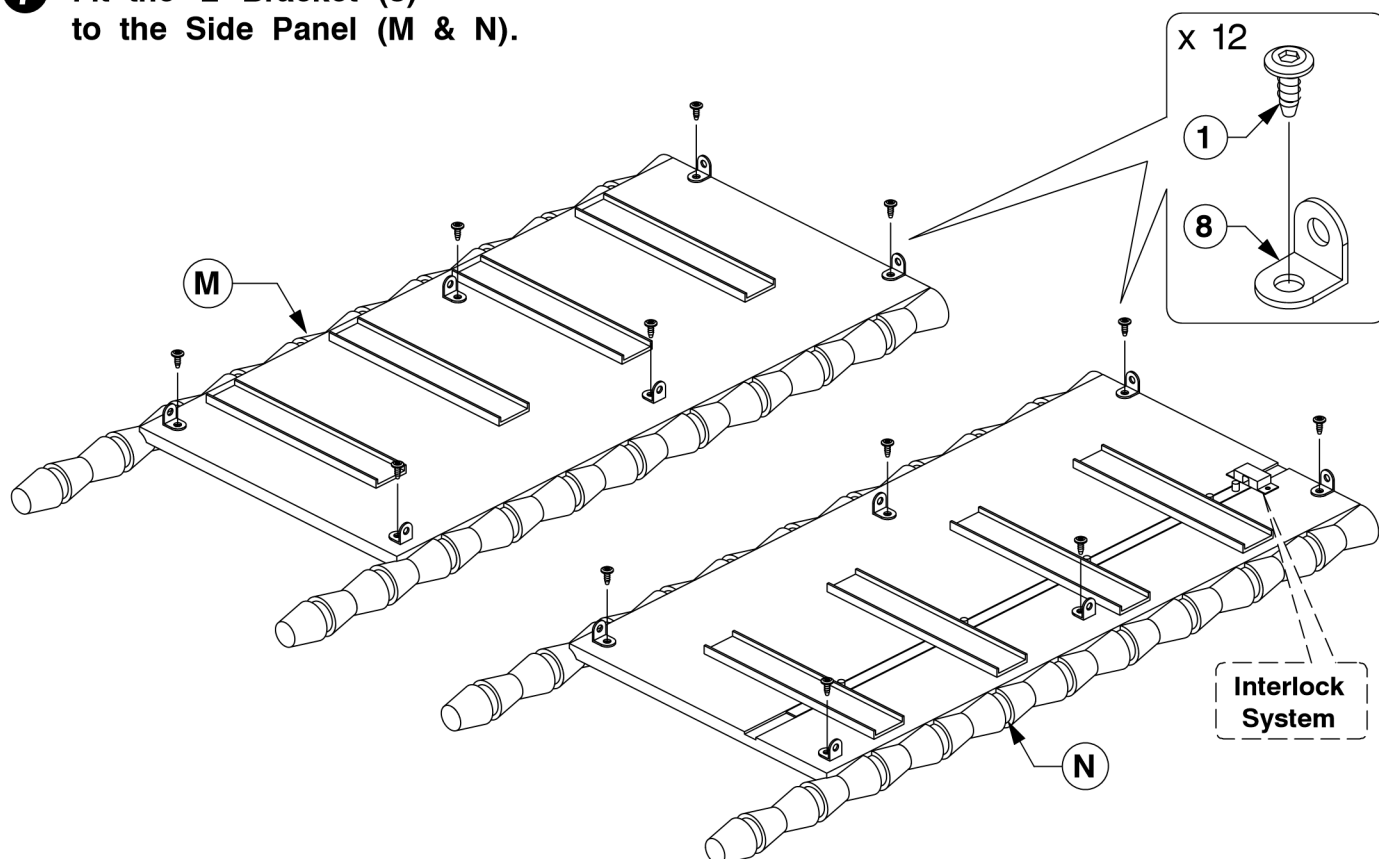

- 8** Assembled the Top Panel (A) to the Side Panel (M & N).

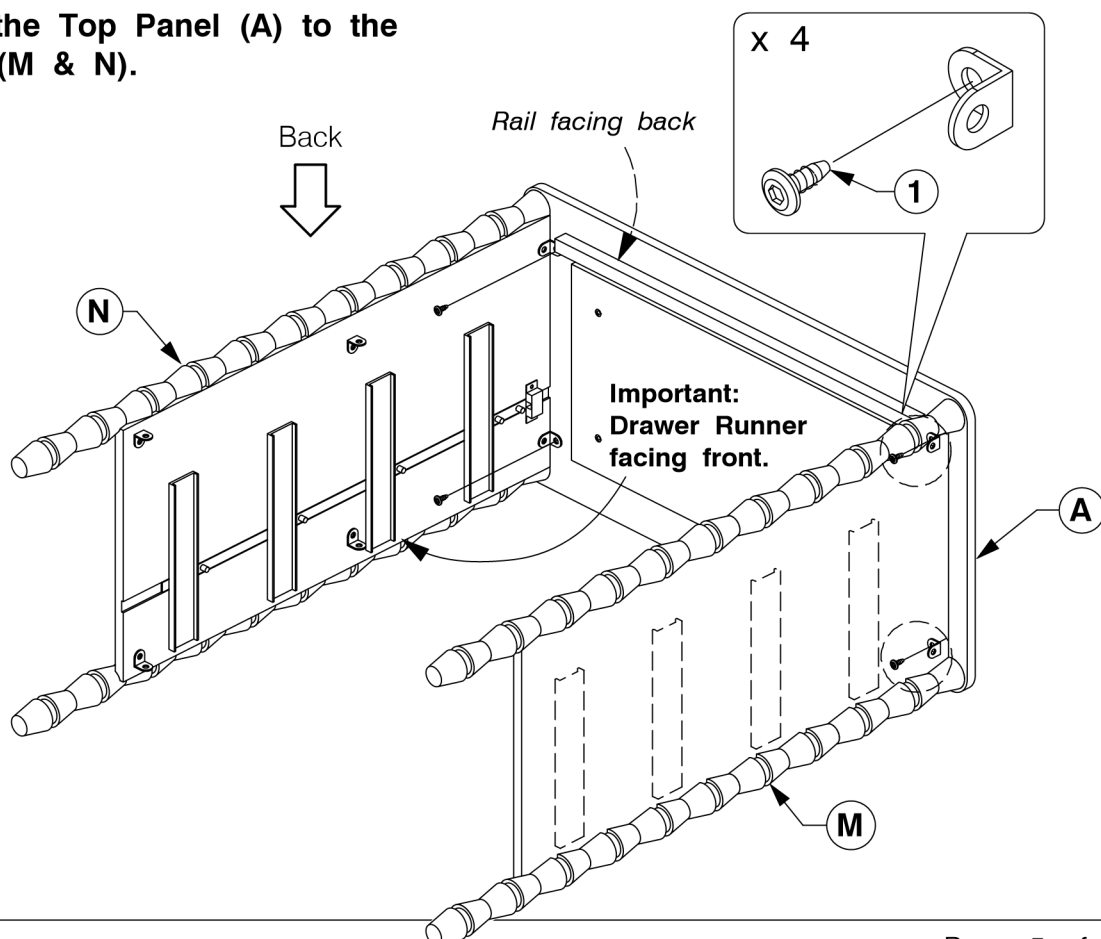


9021 4 Drawer Chest


Assembly Instructions

WI-0126

- 9** Fit the Support Bar Upper & Bottom (D, E & F) to the Side Panel (M & N) as shown.

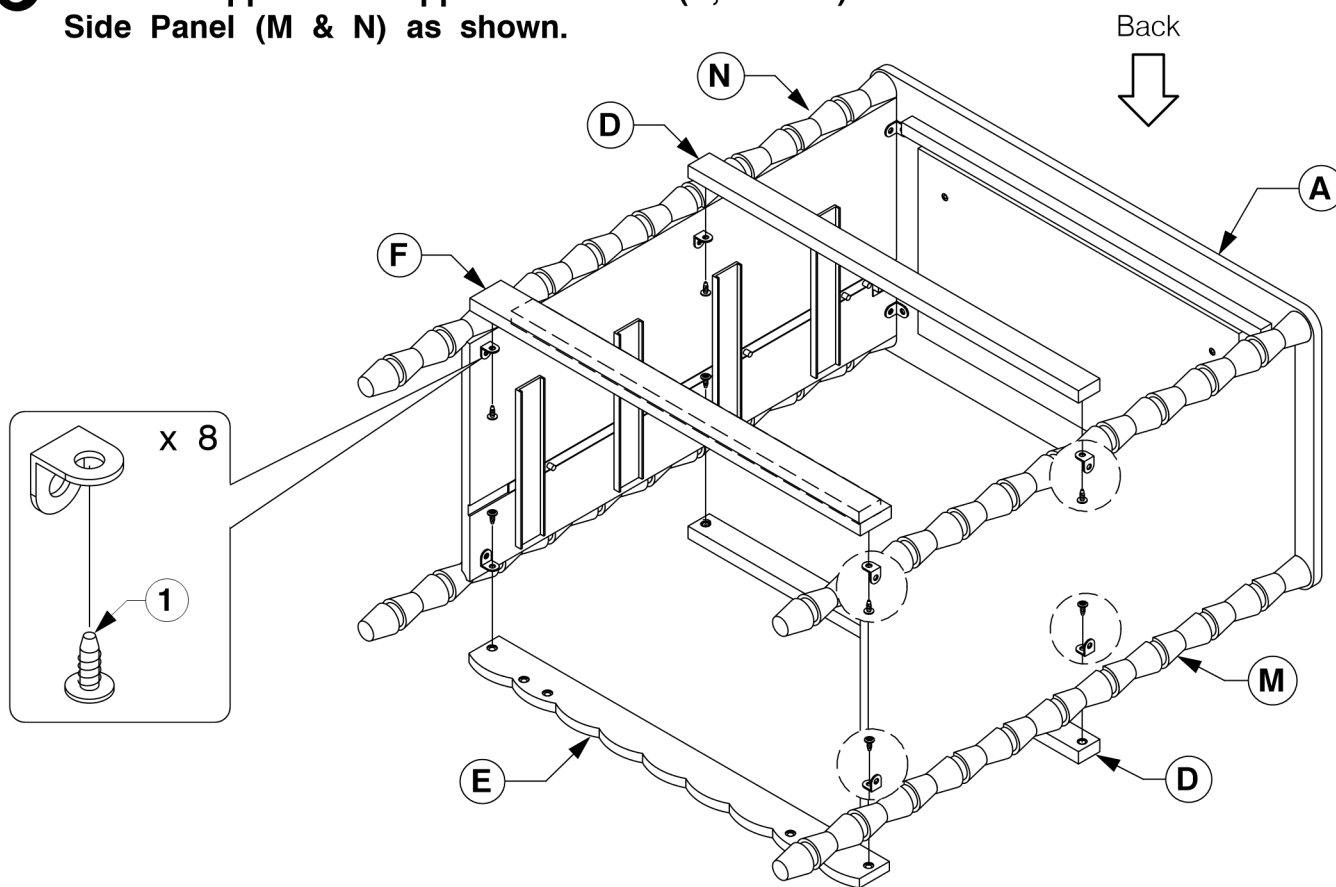

- 10** Assemble the Bottom Support (L) to the Bottom Front & Rear Support Bar (E & F) as shown.

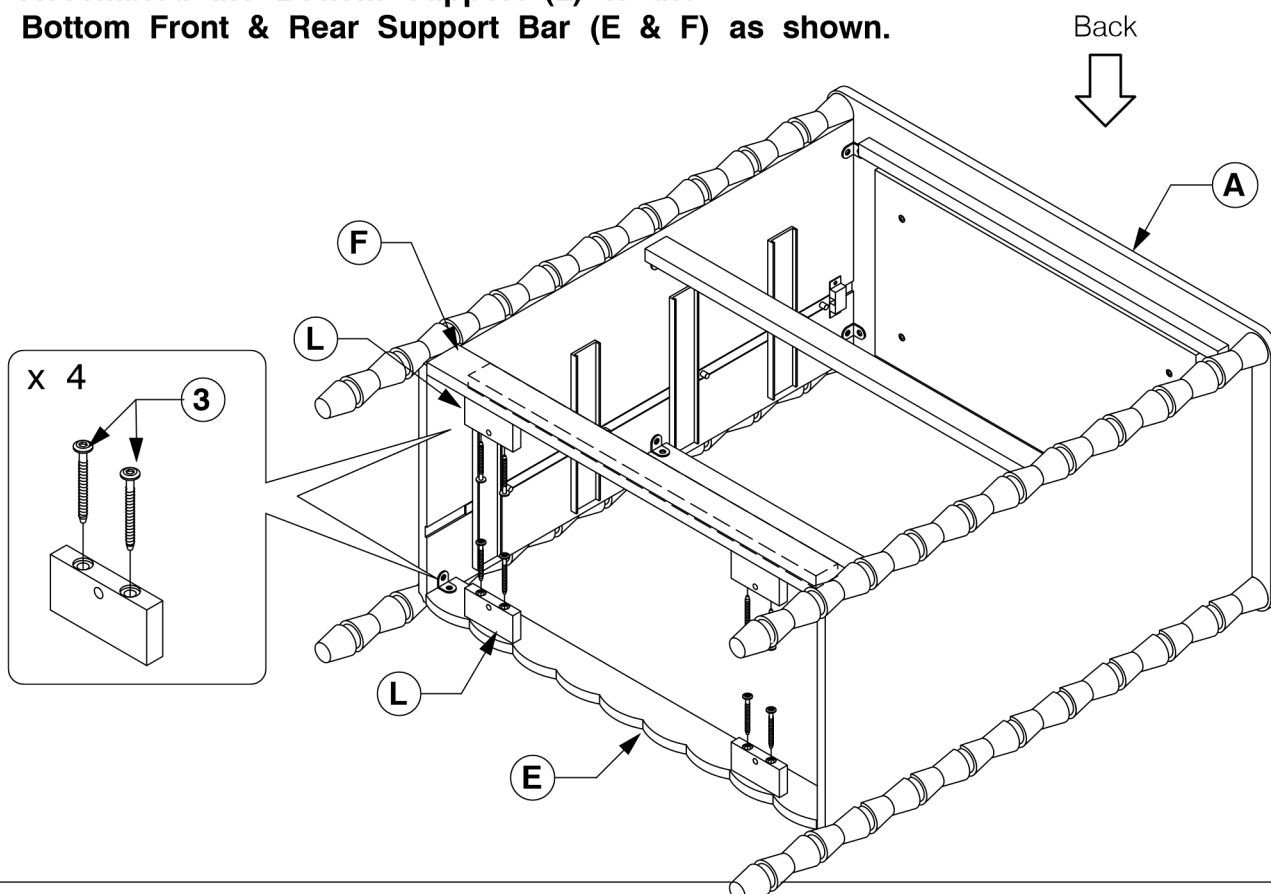


9021 4 Drawer Chest


Assembly Instructions

WI-0126

- 11** Bolt the Bottom Support (L) to the Bottom Panel (B) as shown.

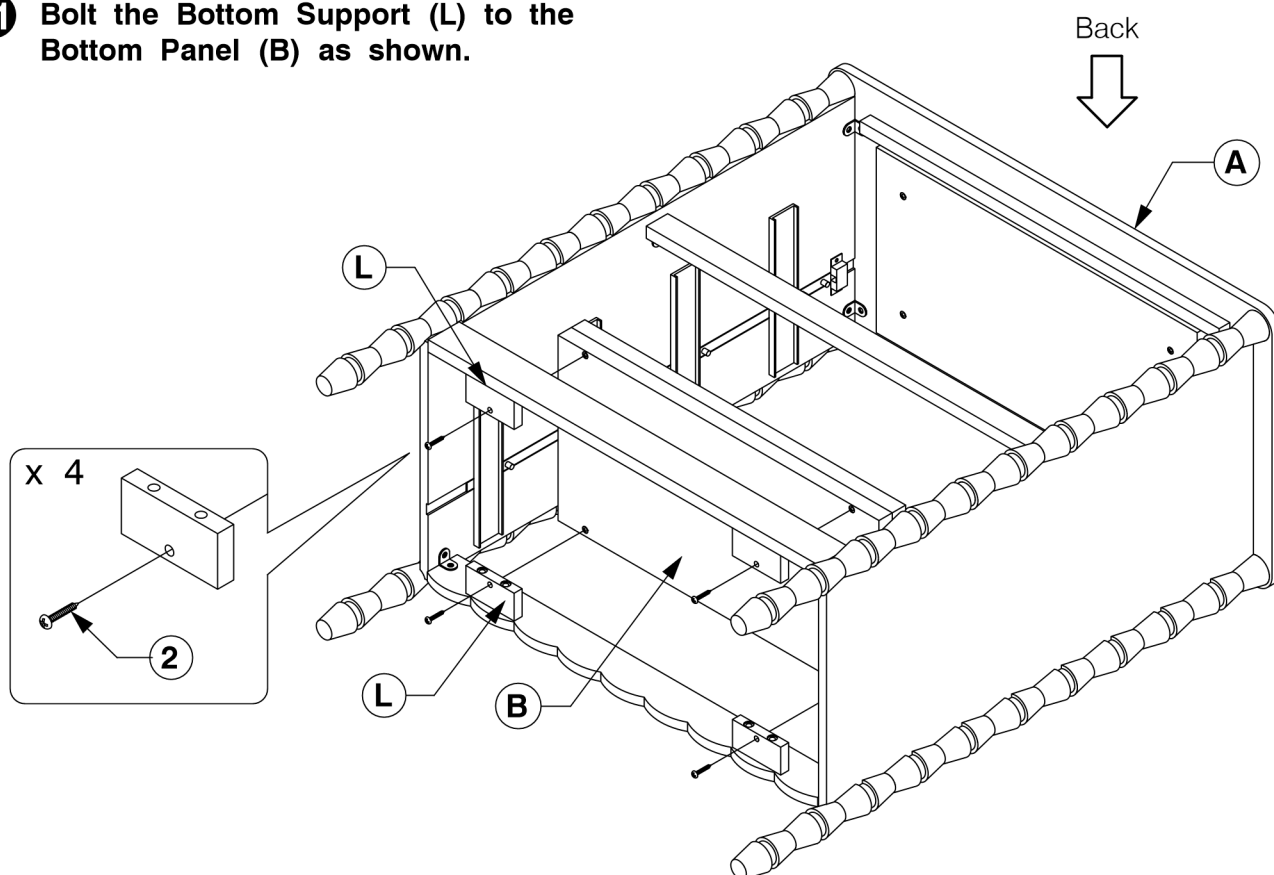

- 12** Attached the Back Panel (C) to the back of the frame.

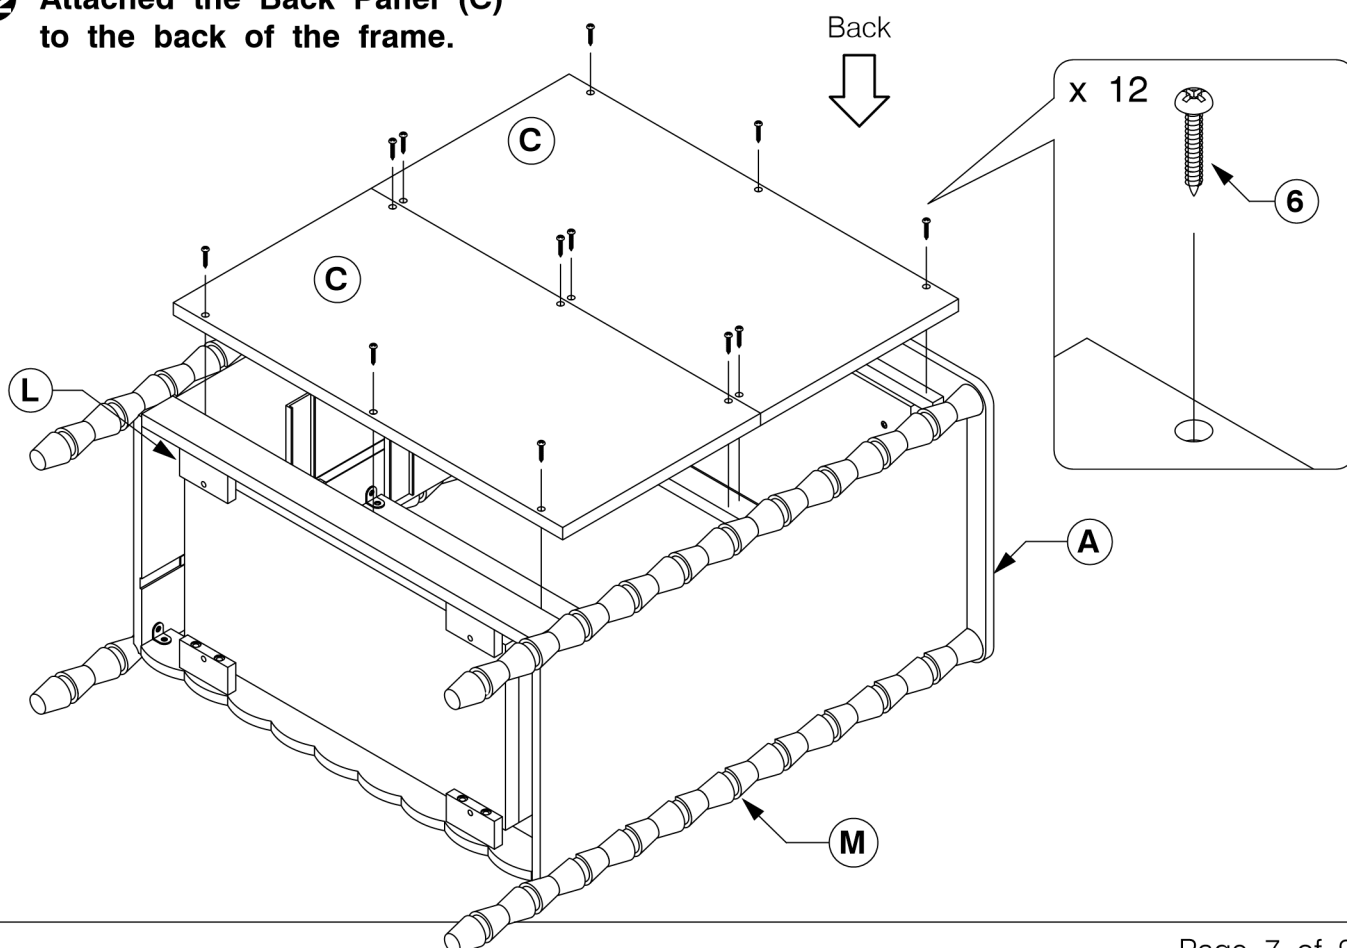


9021 4 Drawer Chest


Assembly Instructions

WI-0126

13 Install the Drawer.

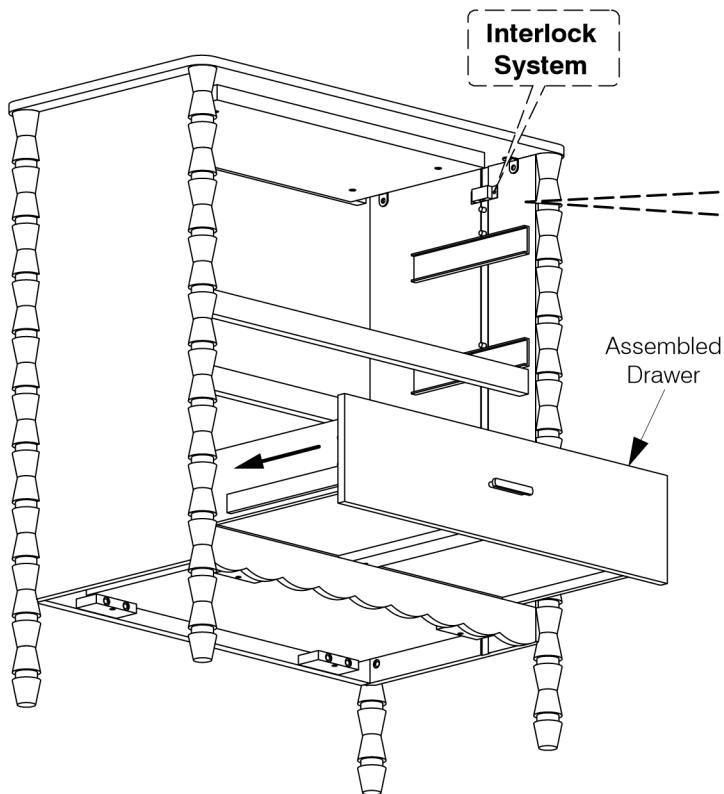


- Push the interlock bar **upwards** before inserting the drawers.

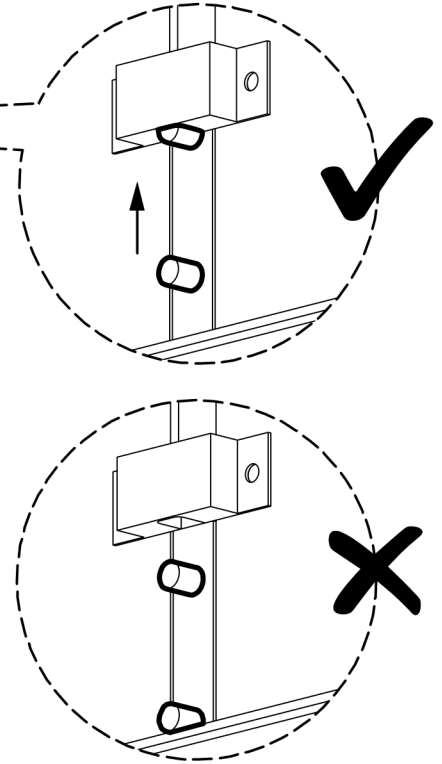


14 Fit and adjust the Drawer Face (J).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

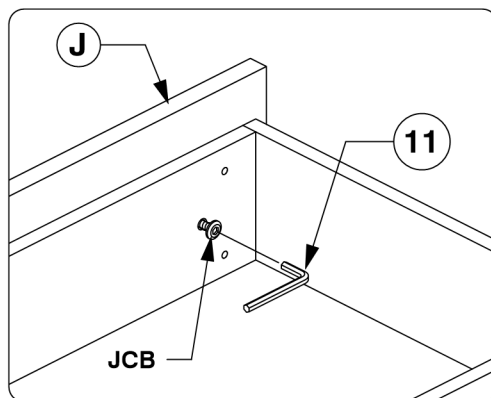

* NOTE: Only one drawer
can be open at a time.

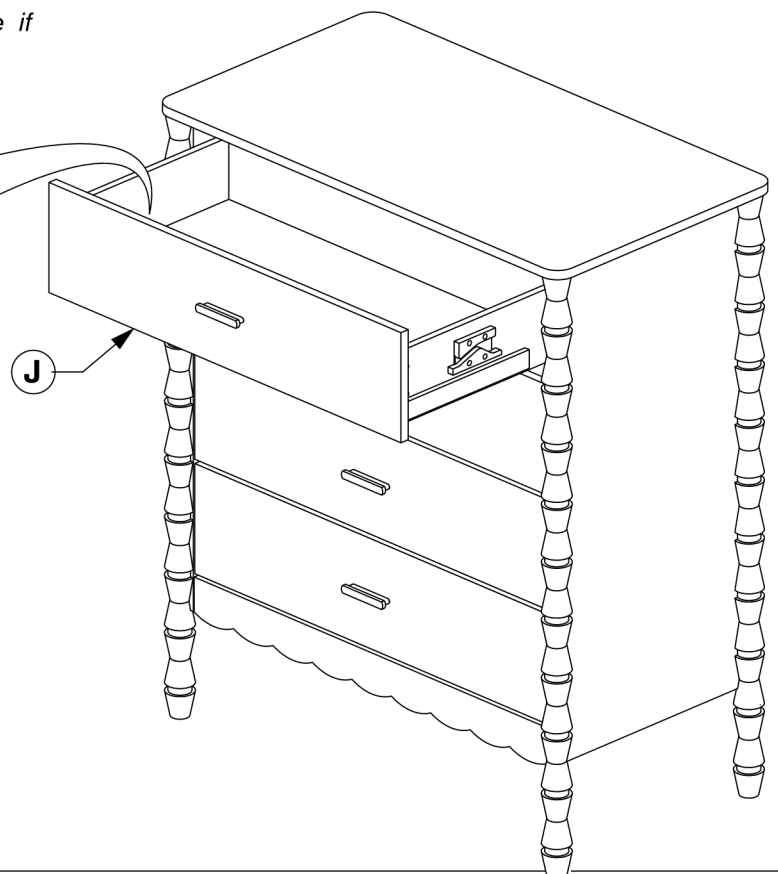



9021 4 Drawer Chest

Assembly Instructions


WI-0126

- 15** After the Drawer Faces (J) are aligned, secure with wood screws.

* NOTE: Only one drawer can be open at a time.

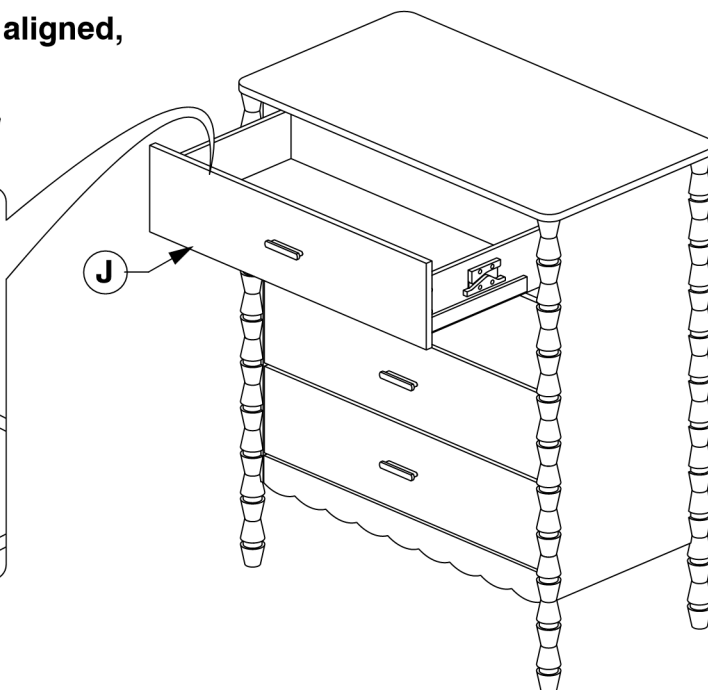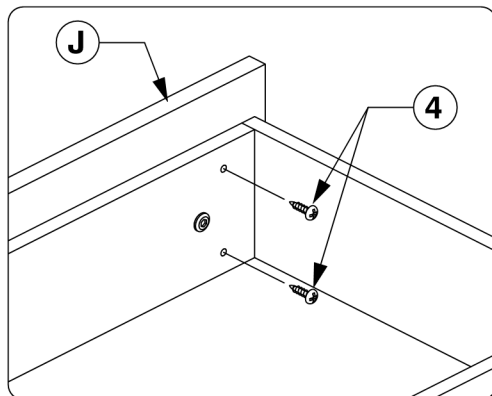

- 16** Remove the Drawers.

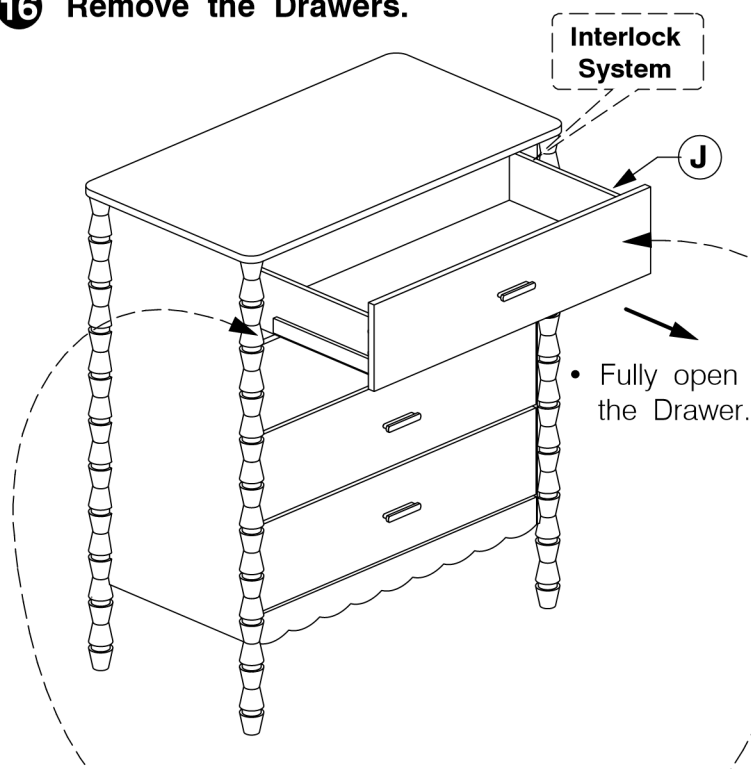

- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

