
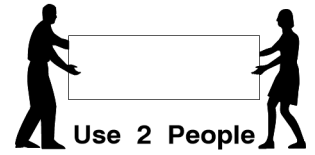


0260 Queen Bed

Assembly Instructions

WI-0126


1 Assembled View

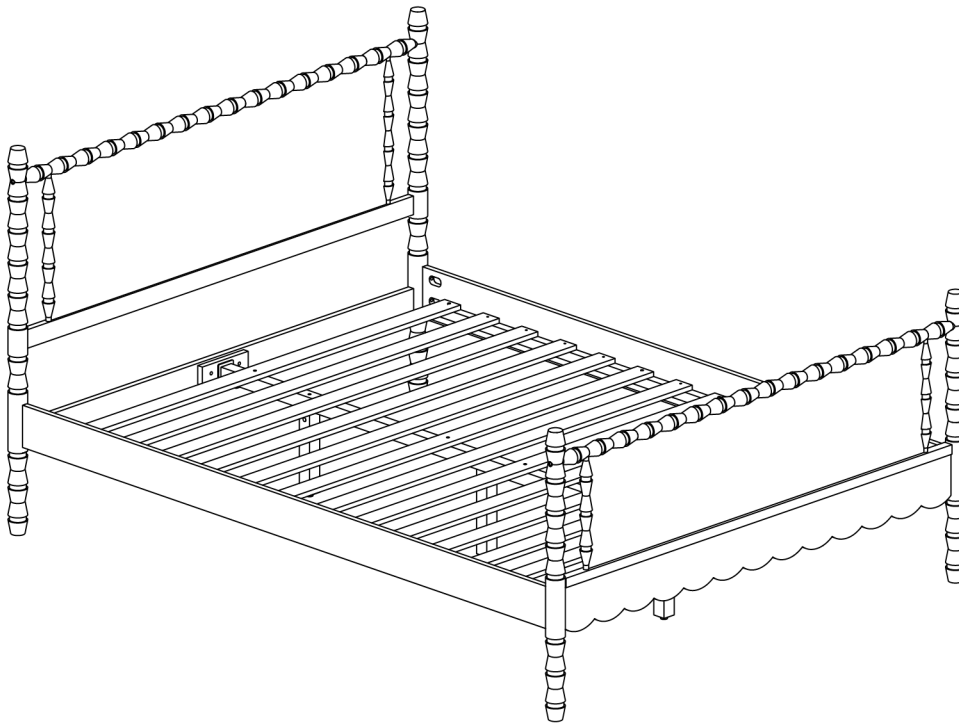

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List


Parts in Box A:

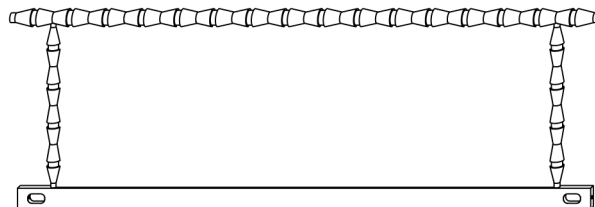

A Headboard Panel x 1



B Headboard Support x 1

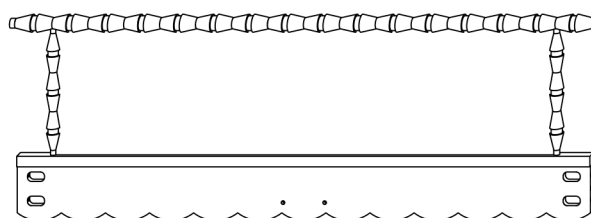

C Footboard Panel x 1

0260 Queen Bed

Assembly Instructions

WI-0126

2 Parts List

Parts in Box B:




E

Headboard
Post
(Left Hand)
x 1



F

Headboard
Post
(Right Hand)
x 1




D HB/FB
Support Bar
x 2



G

Footboard
Post
(Left Hand)
x 1




H

Footboard
Post
(Right Hand)
x 1




J Side Rail x 2



K Long Support x 1




L Support
Leg x 3

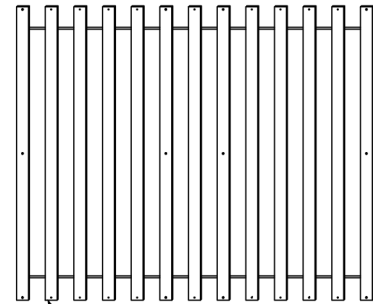


M Set of Bed Slats x 1


3 Hardware List



1 M4 Long Allen Key
x 1



2 Center Rail
Bracket x 2



3 Adjustable
Foot x 3



4 Barrel Nut
x 3



5 Wood Screw
(M4 x 32mm)
x 18



6 Wood Dowel
(10 x 40mm) x 6



7 M6 x
15mm
JCB x 4



8 M6 x
30mm
JCB x 4




9 M6 x
40mm
JCB x 34



10 M6 x
90mm
JCB x 3

4 Fit the Center Rail Bracket to the HB/FB Support Bar (D).

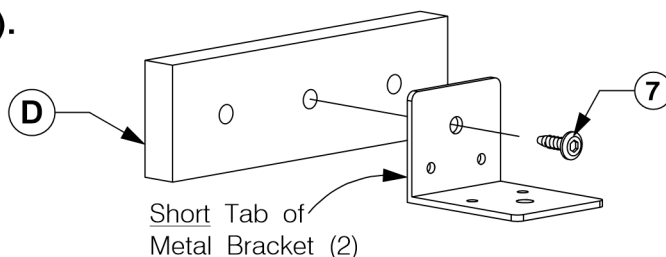


0260 Queen Bed


Assembly Instructions

WI-0126


- 5** Fit the HB/FB Support Bar (D) to the Headboard Support (B).

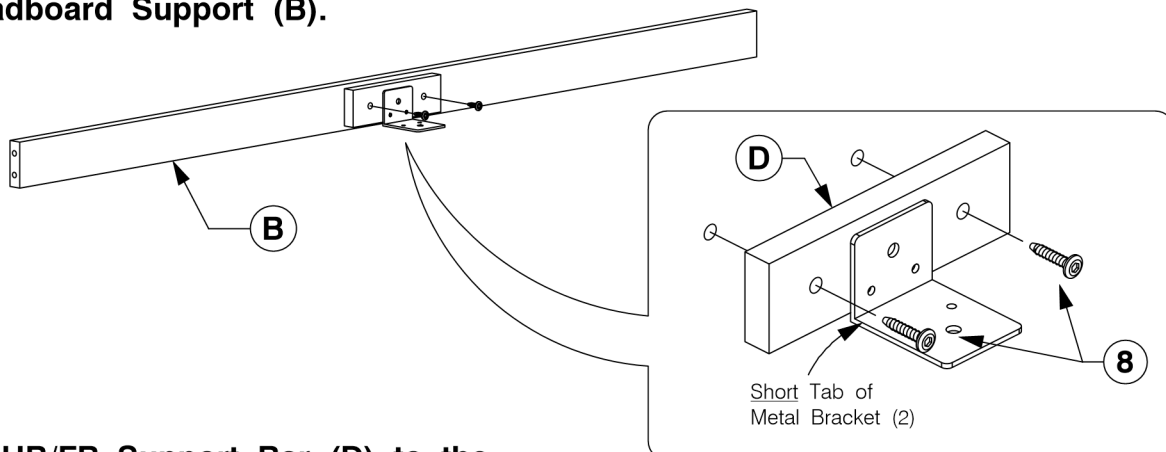

- 6** Fit the HB/FB Support Bar (D) to the Footboard Panel (C).

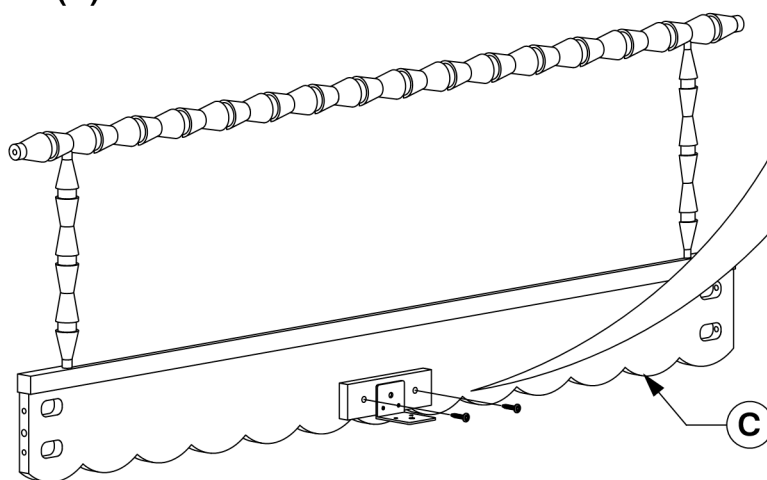

- 7** Assemble the Footboard Panel (C) to the Footboard Post (G & H).

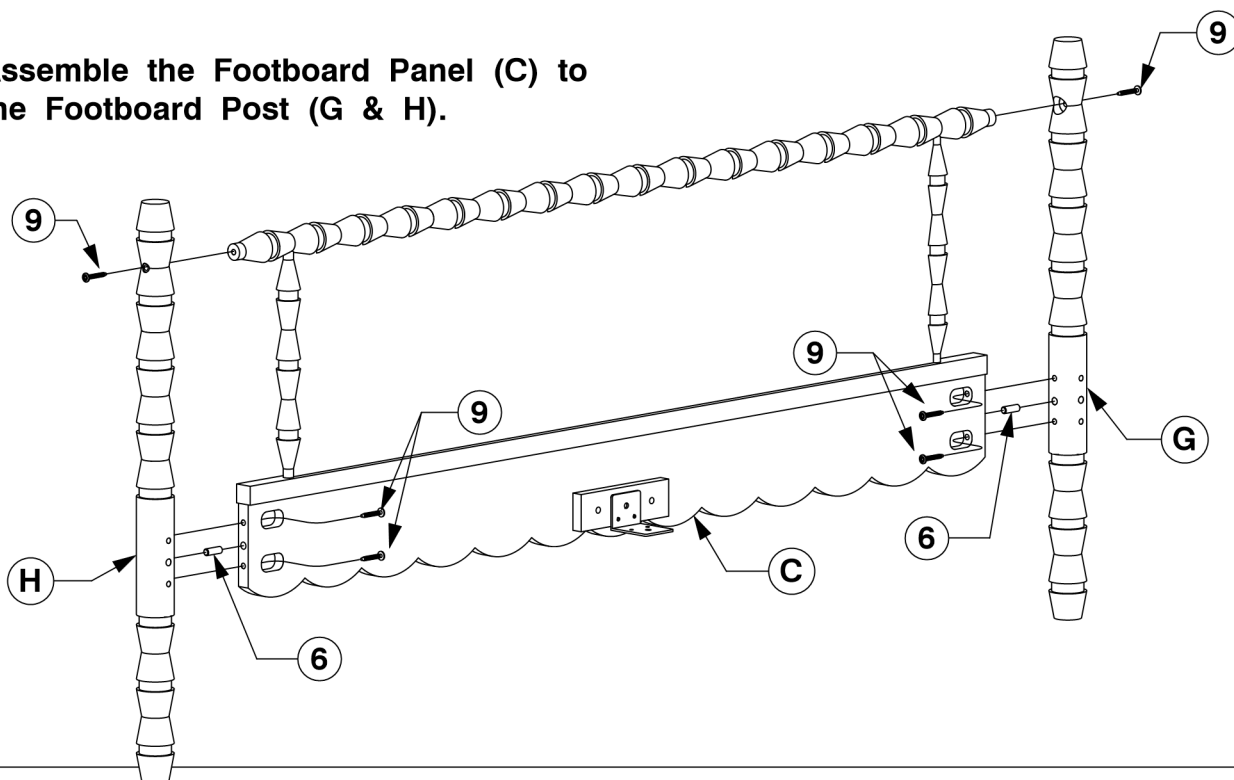


0260 Queen Bed


Assembly Instructions

WI-0126

8 Assembled the Support Leg (L) to the Long Support (K).

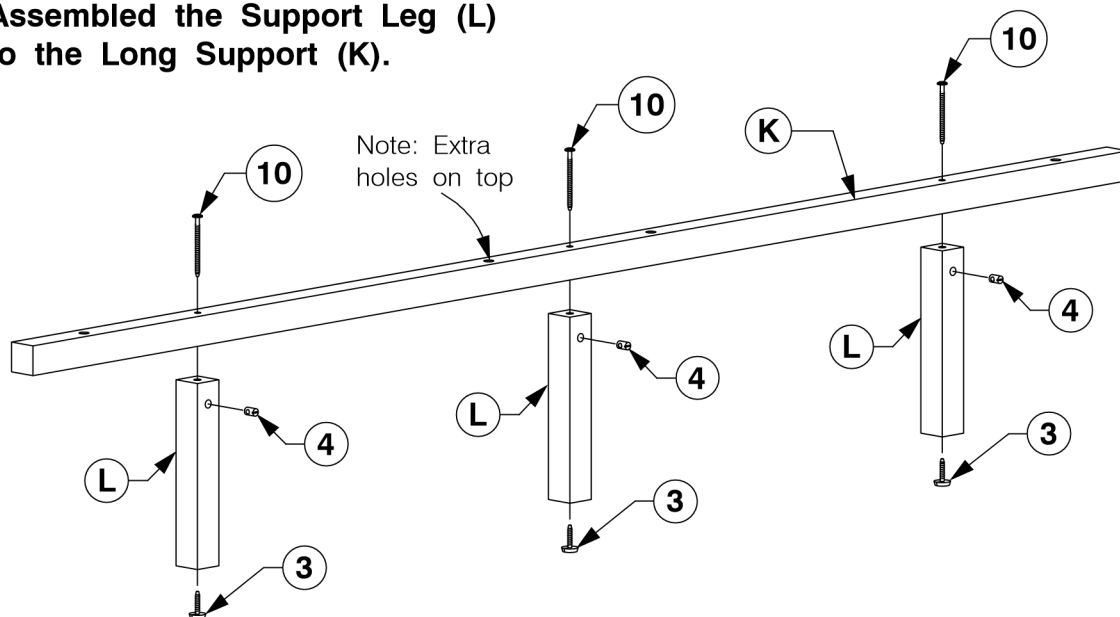


9 Assemble the Headboard Panel (A) and Headboard Support (B) to the Headboard Post (E & F).

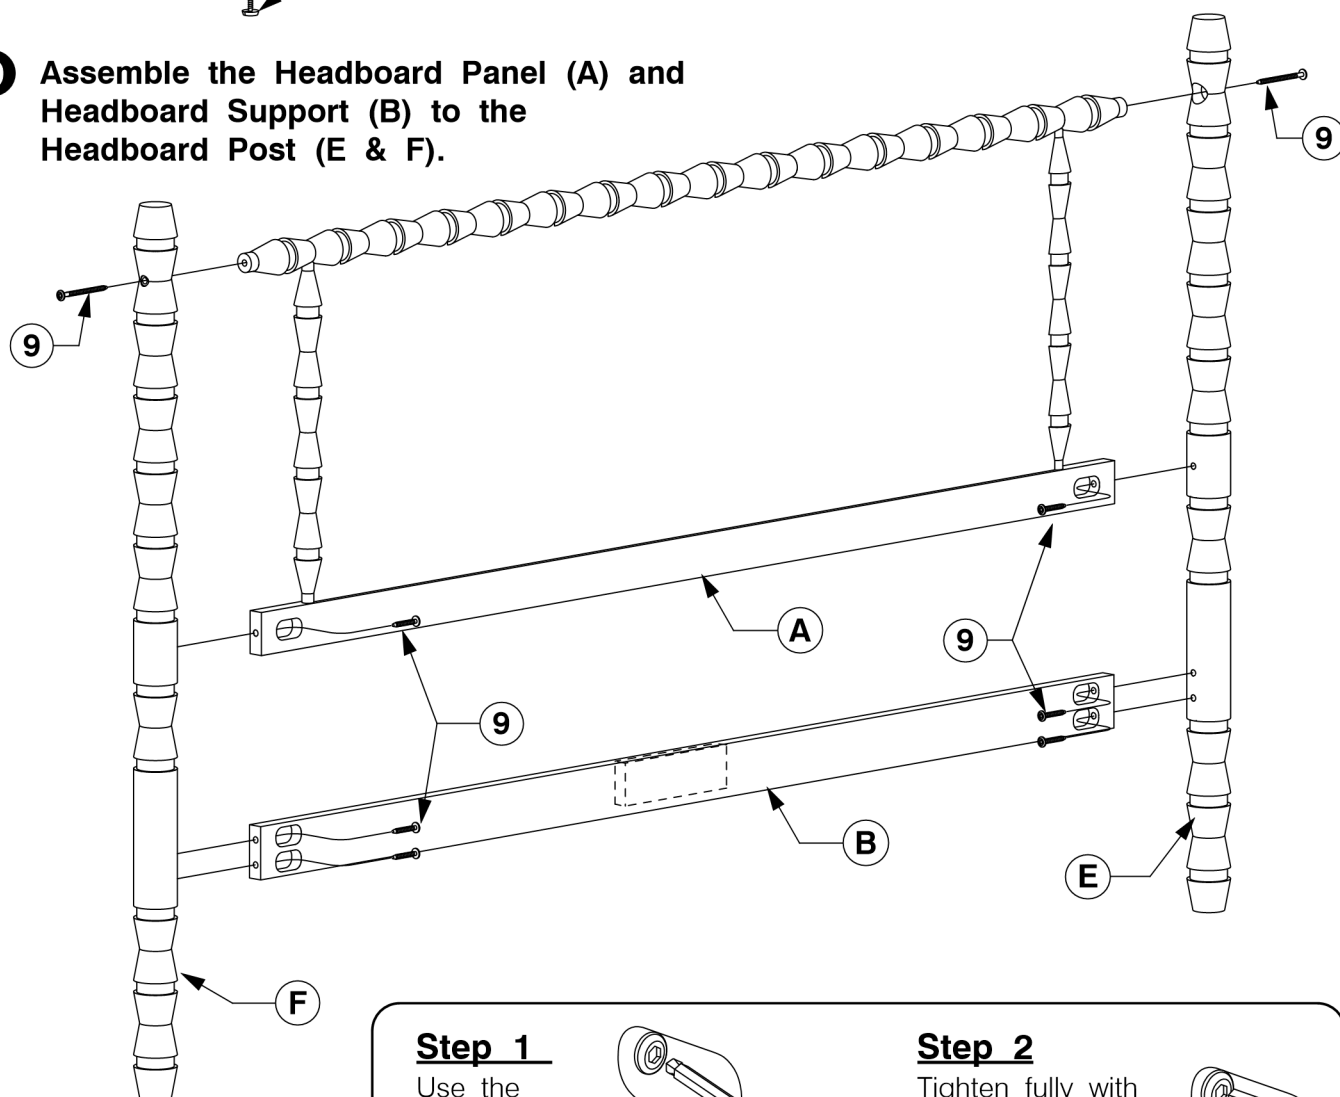


Step 1

Use the **ball end** of Allen key to start the bolt.

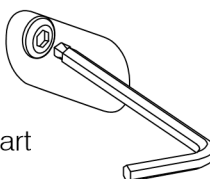

Step 2

Tighten fully with the **straight end**.

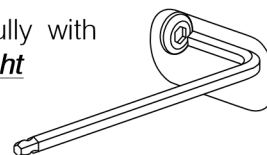


0260 Queen Bed

Assembly Instructions


WI-0126

- 10** Assemble the Side Rail (J) to the Headboard & Footboard Post.

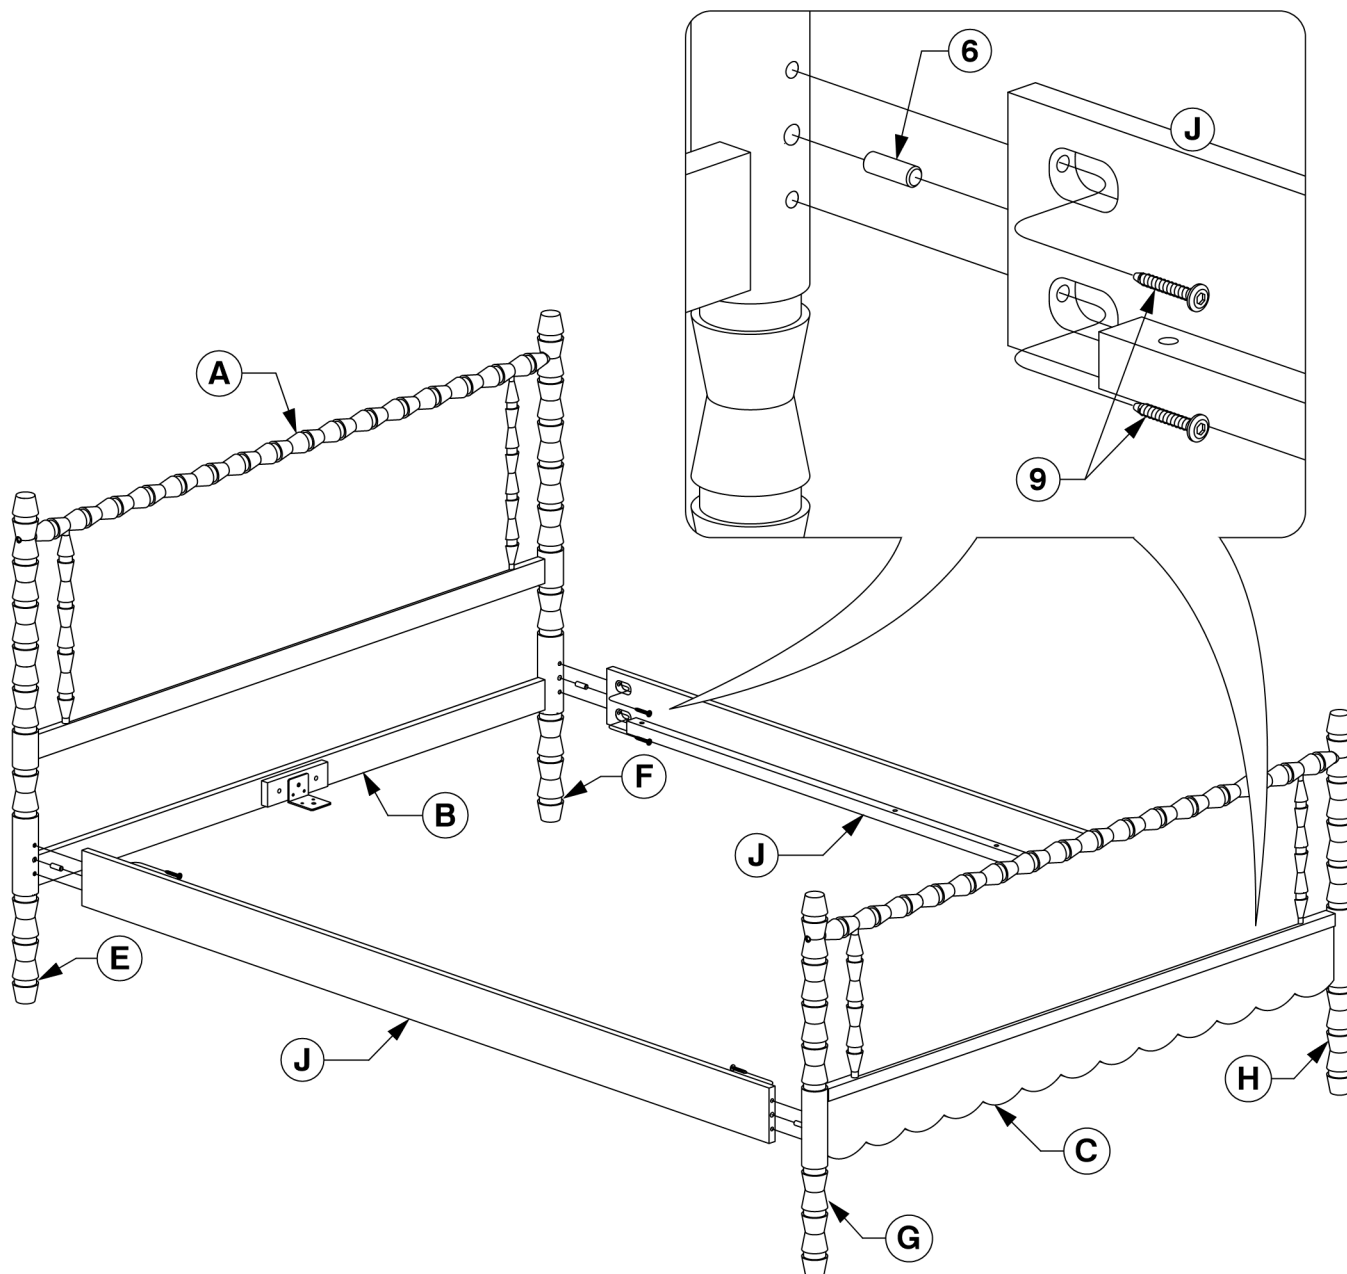


Step 1

Use the **ball end** of the Allen key to start the bolt.

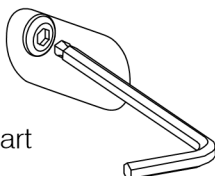

Step 2

Tighten fully with the **straight end**.

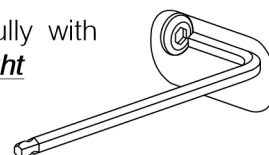


0260 Queen Bed

Assembly Instructions

WI-0126

- 11** Bolt the Long Support (K) to the Center Rail Brackets on the Headboard Support (B) and Footboard Panel (C).

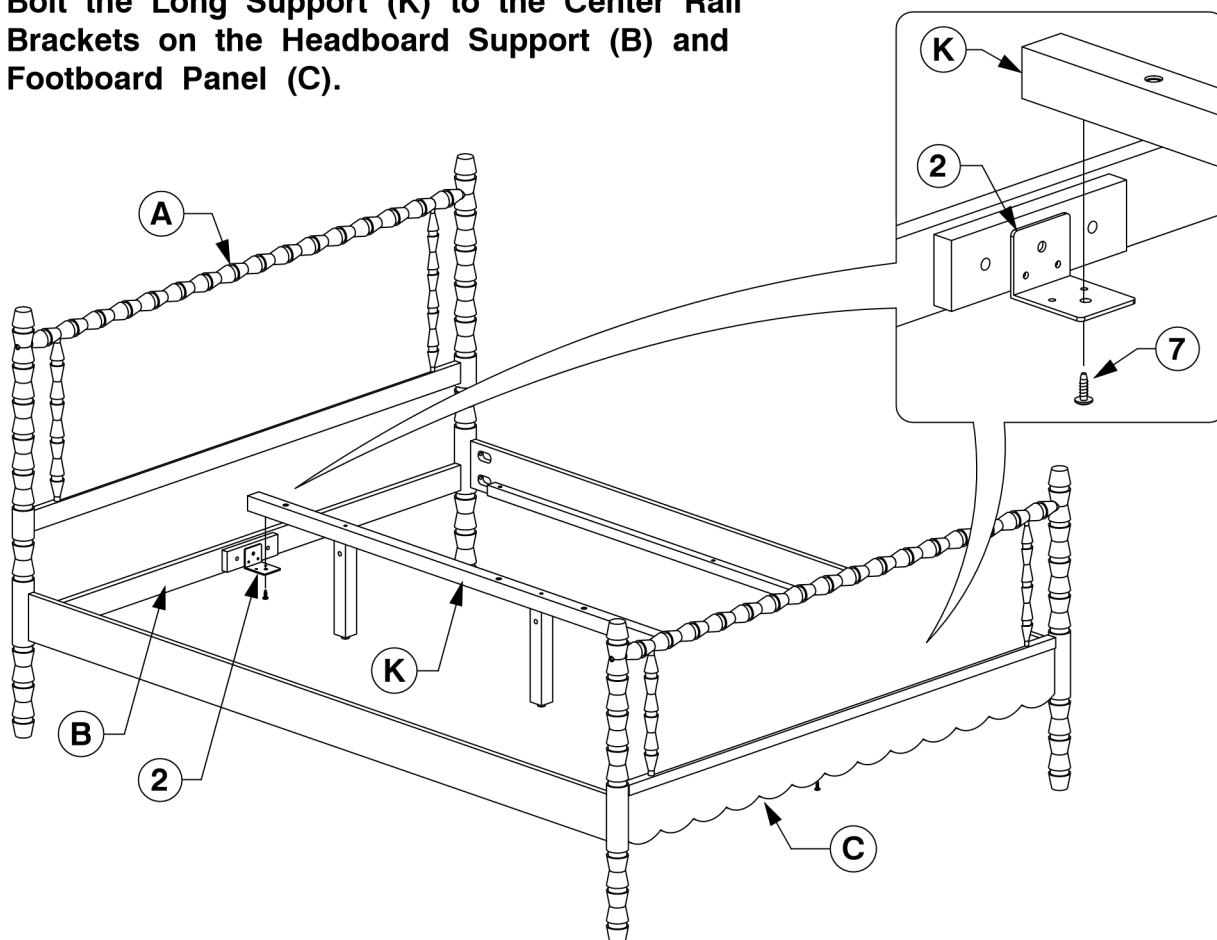

- 12** Bolt & screw the Bed Slats (M) to the Side Rails (J).

