



9021 6 Drawer Dresser

Assembly Instructions


WI-0126

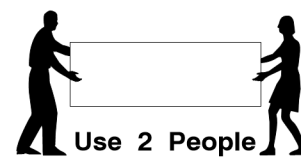

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

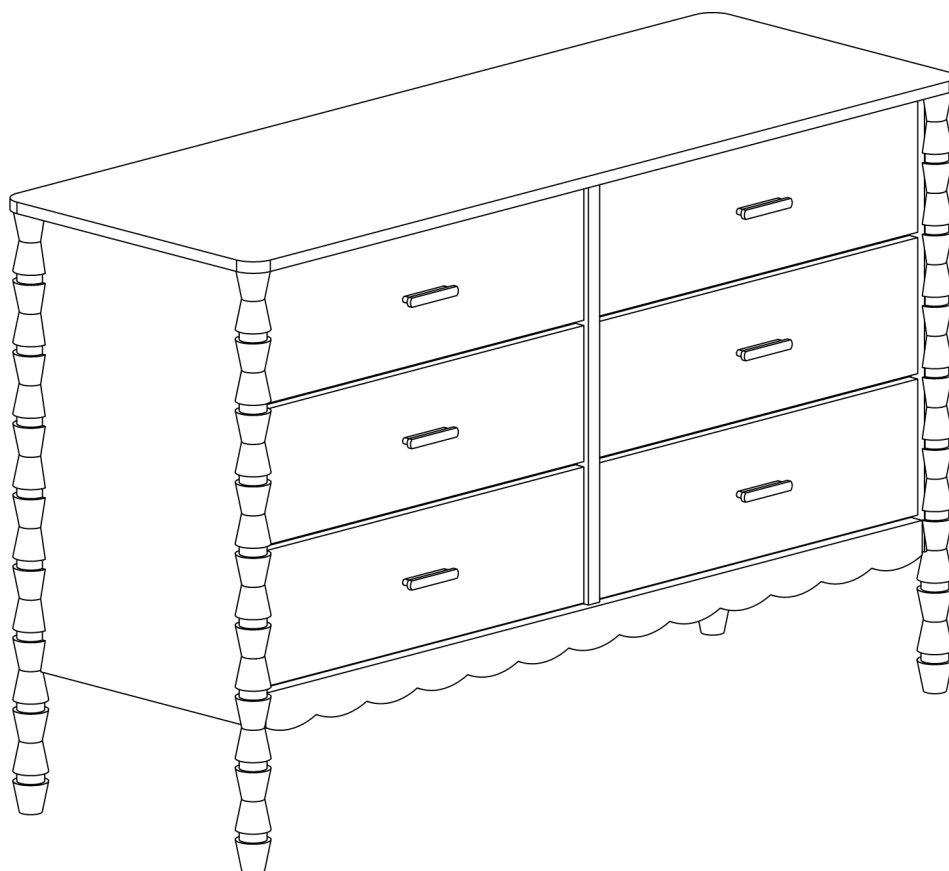

WARNING

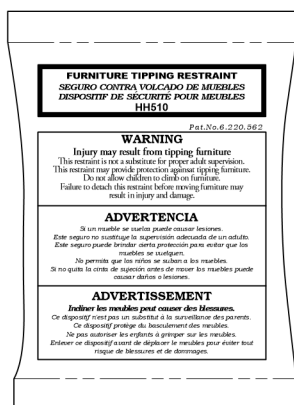

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9021 6 Drawer Dresser

Assembly Instructions

WI-0126

1 Parts List

Parts in Box A:




A Top Panel **x 1**




B Upper Support Bar **x 2**




C Bottom Front Support Bar **x 1**




D Bottom Rear Support Bar **x 1**

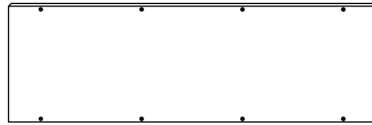


E Back Panel (Wider) **x 1**



F Back Panel (Narrow) **x 1**



G Drawer Face **x 6**



H Drawer Back **x 6**




J Drawer Bottom **x 6**




K Drawer Rail **x 6**


Parts in Box B:

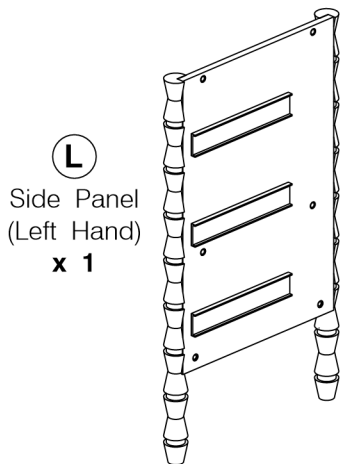

L Side Panel (Left Hand) **x 1**

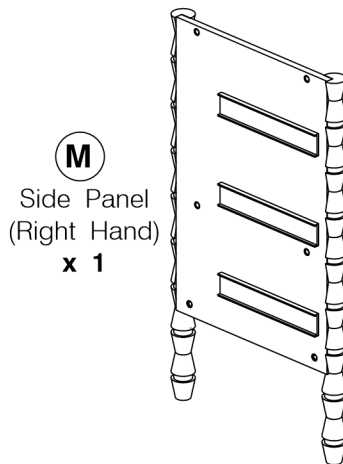


M Side Panel (Right Hand) **x 1**

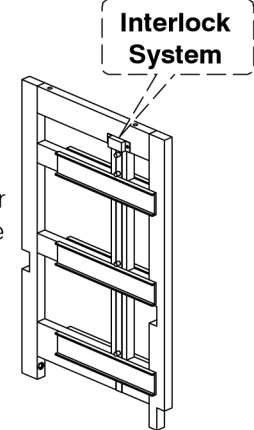


N Center Frame **x 1**


Parts for LEFT Side Drawer

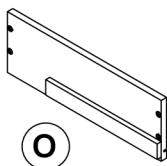



O LEFT Drawer Side (Left Hand) **x 3**

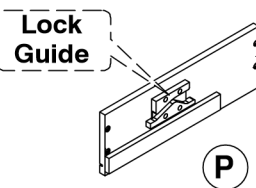


P LEFT Drawer Side (Right Hand) **x 3**

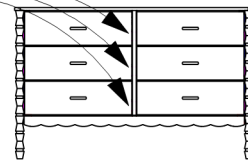

Parts for RIGHT Side Drawer

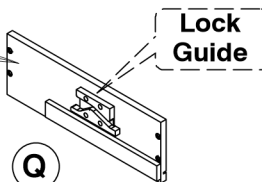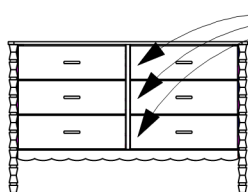

Q RIGHT Drawer Side (Left Hand) **x 3**

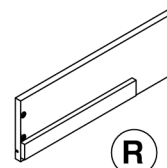






R RIGHT Drawer Side (Right Hand) **x 3**

9021 6 Drawer Dresser

Assembly Instructions

WI-0126


2 Hardware List

- | | | | |
|--|--|---|--|
| 
1 M6 x
15mm JCB
x 24 | 
2 M6 x
30mm JCB
x 4 | 
3 M6 x
60mm JCB
x 2 | 
4 Wood Screw
(M4 x 32mm) x 16 |
| 
5 Wood Screw
(M4 x 20mm) x 24 | 
6 Wood Screw
(M4 x 25mm) x 60 | 
7 M6 x 25mm
Wood Dowel x 24 | 
8 'L' Bracket
(5005-3) x 12 |
| 
9 Handle
(3321-64)
x 6 | 
10 M4 x 22mm
Wood Screw x 12 | 
11 Allen Key
x 1 | |


3 Assemble the Drawers.

STEP 3.1

LEFT

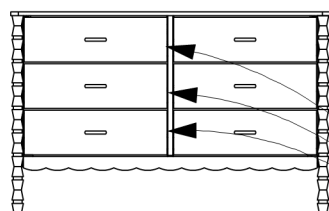

**Important: Assemble the
Drawer Runner facing
Drawer Face.**

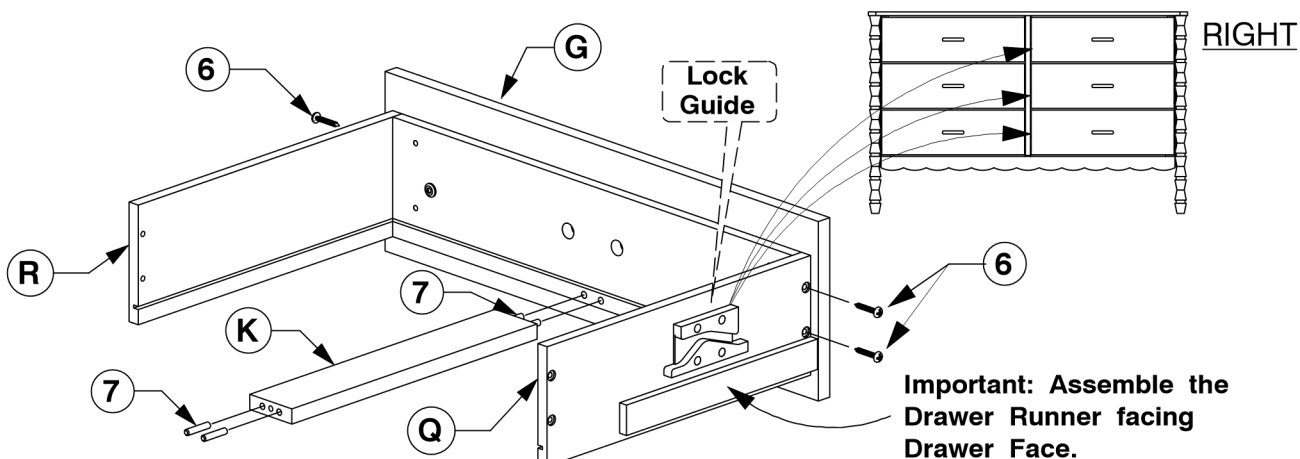

**Important: Assemble the
Drawer Runner facing
Drawer Face.**

9021 6 Drawer Dresser


Assembly Instructions

WI-0126


③ Assemble the Drawers.

STEP 3.2


* 3 Assemble the left and right drawers as shown below

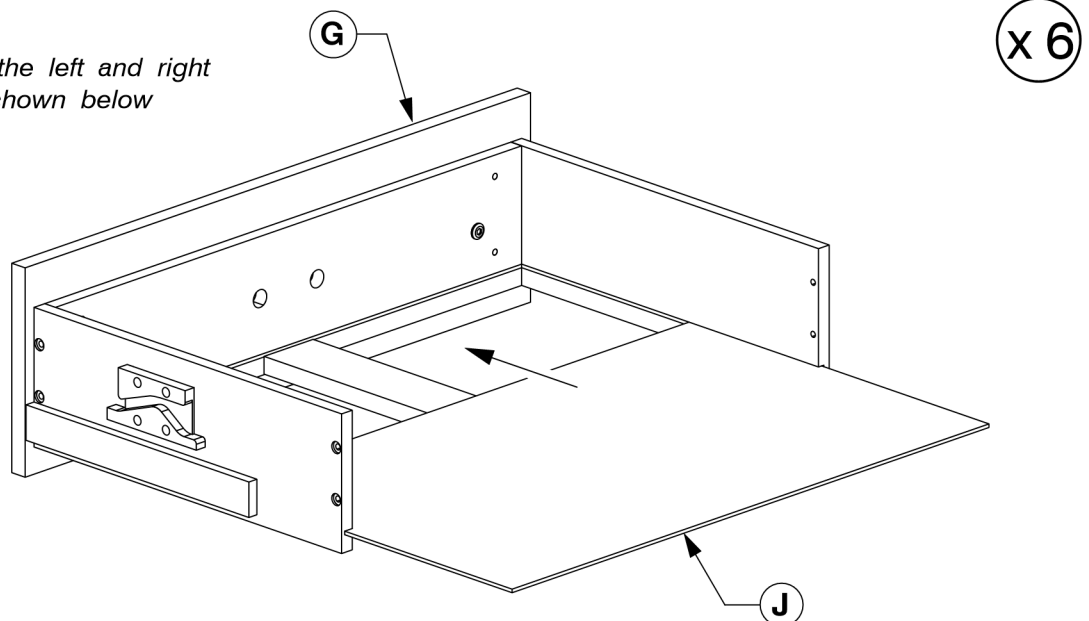

STEP 3.3

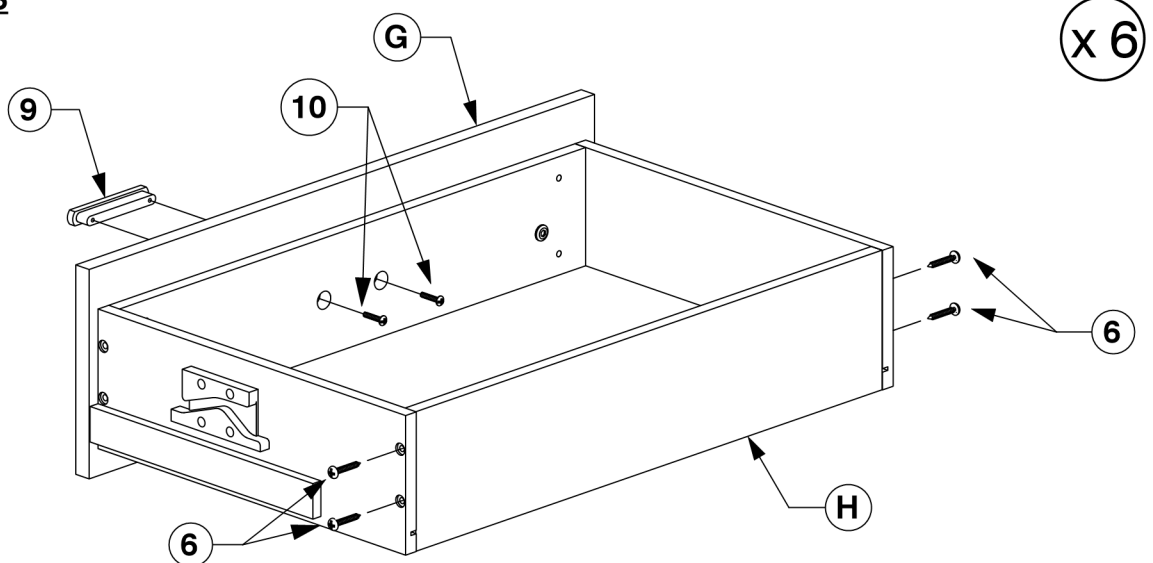

STEP 3.4

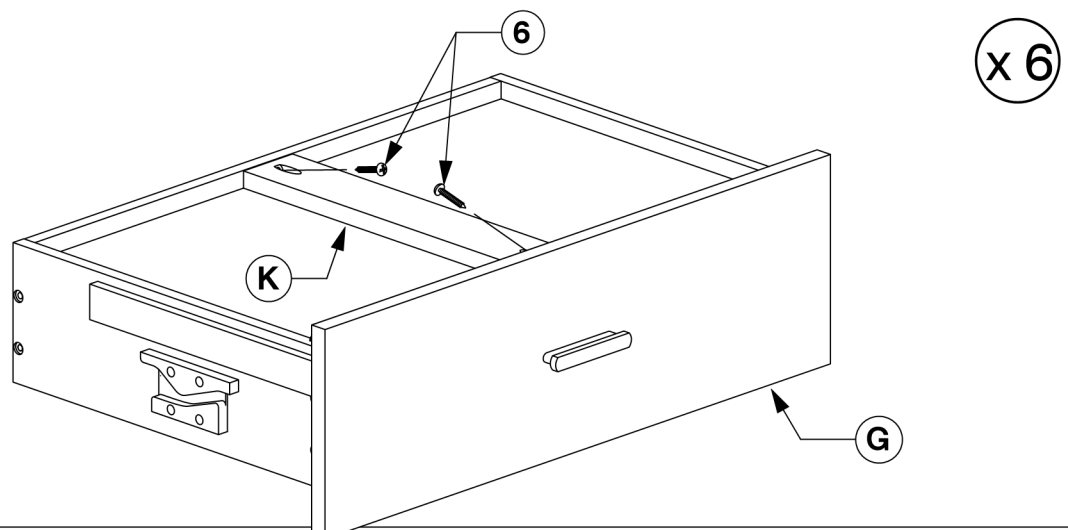


9021 6 Drawer Dresser


Assembly Instructions

WI-0126

4 Fit the 'L' Bracket to the Side Panel (L & M).

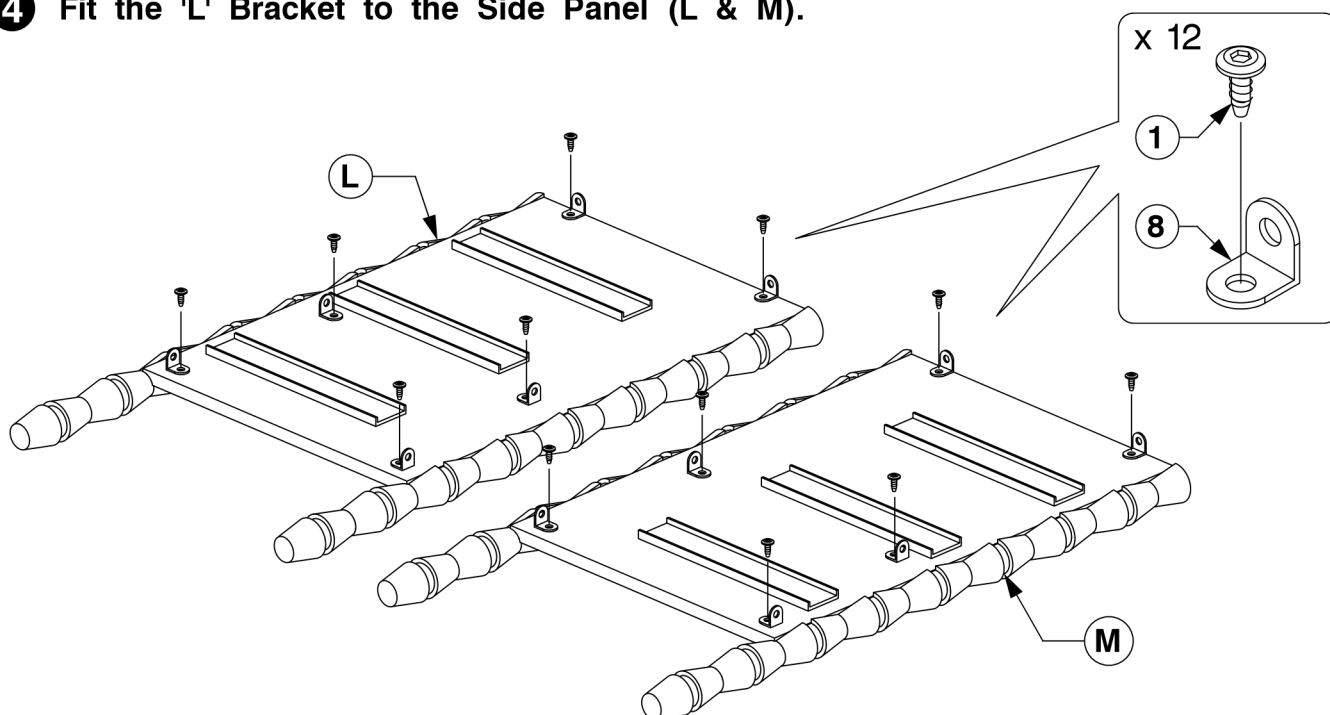

5 Fit the Side Panel- Right Hand (M) & Center Frame (N) to the Top Panel (A).

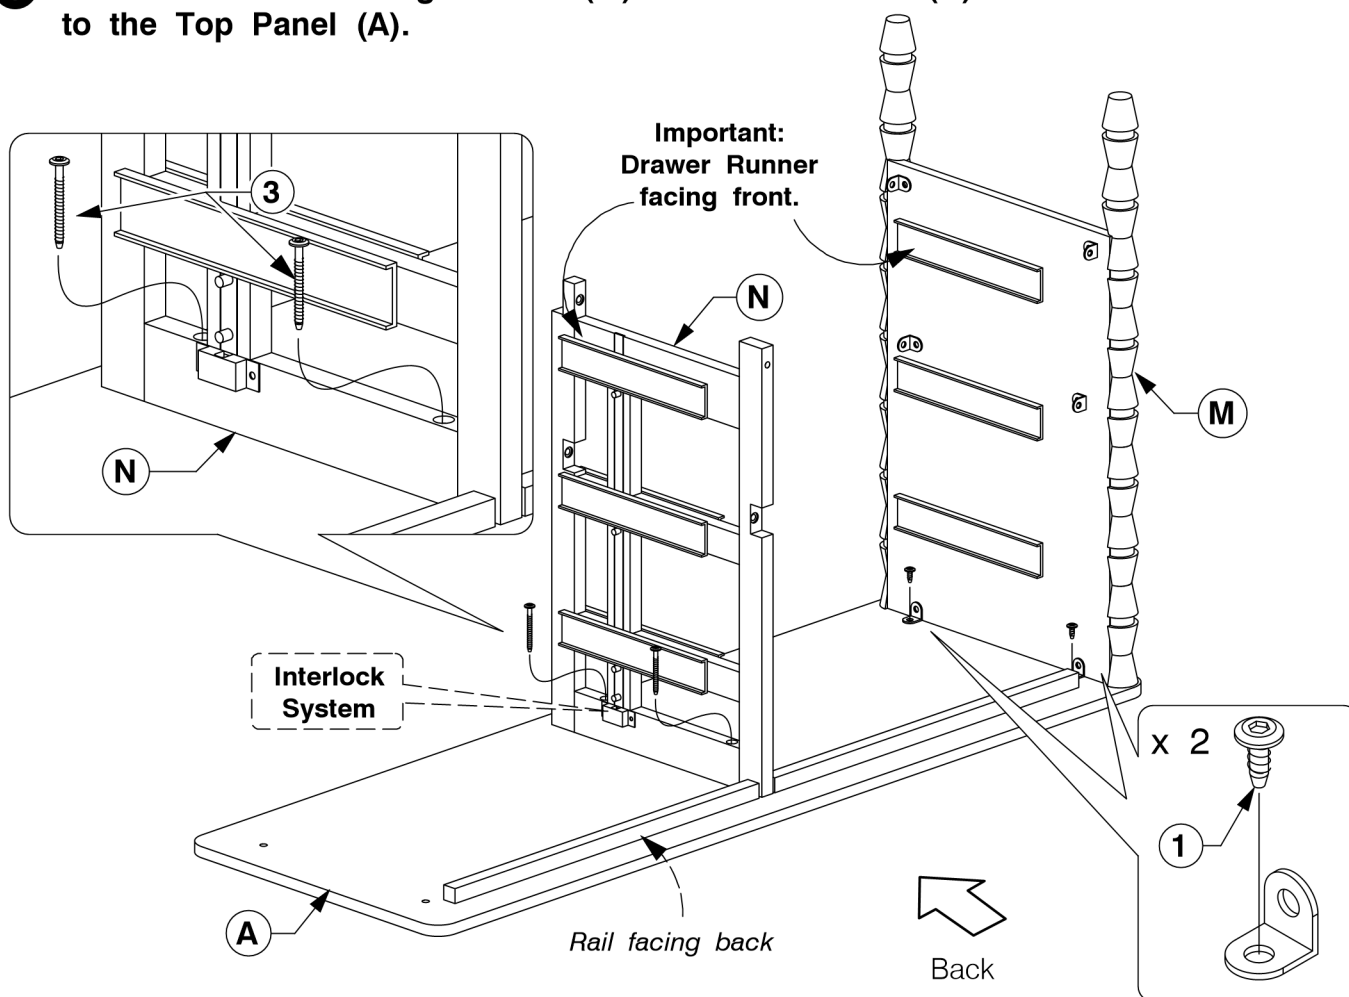


9021 6 Drawer Dresser


Assembly Instructions

WI-0126

- 6** Attach the following parts to the Right-Hand Side Panel (M) and the Center Frame (N), as shown:
Upper Support Bar (B)
Bottom Front Support Bar (C)
Bottom Rear Support Bar (D)

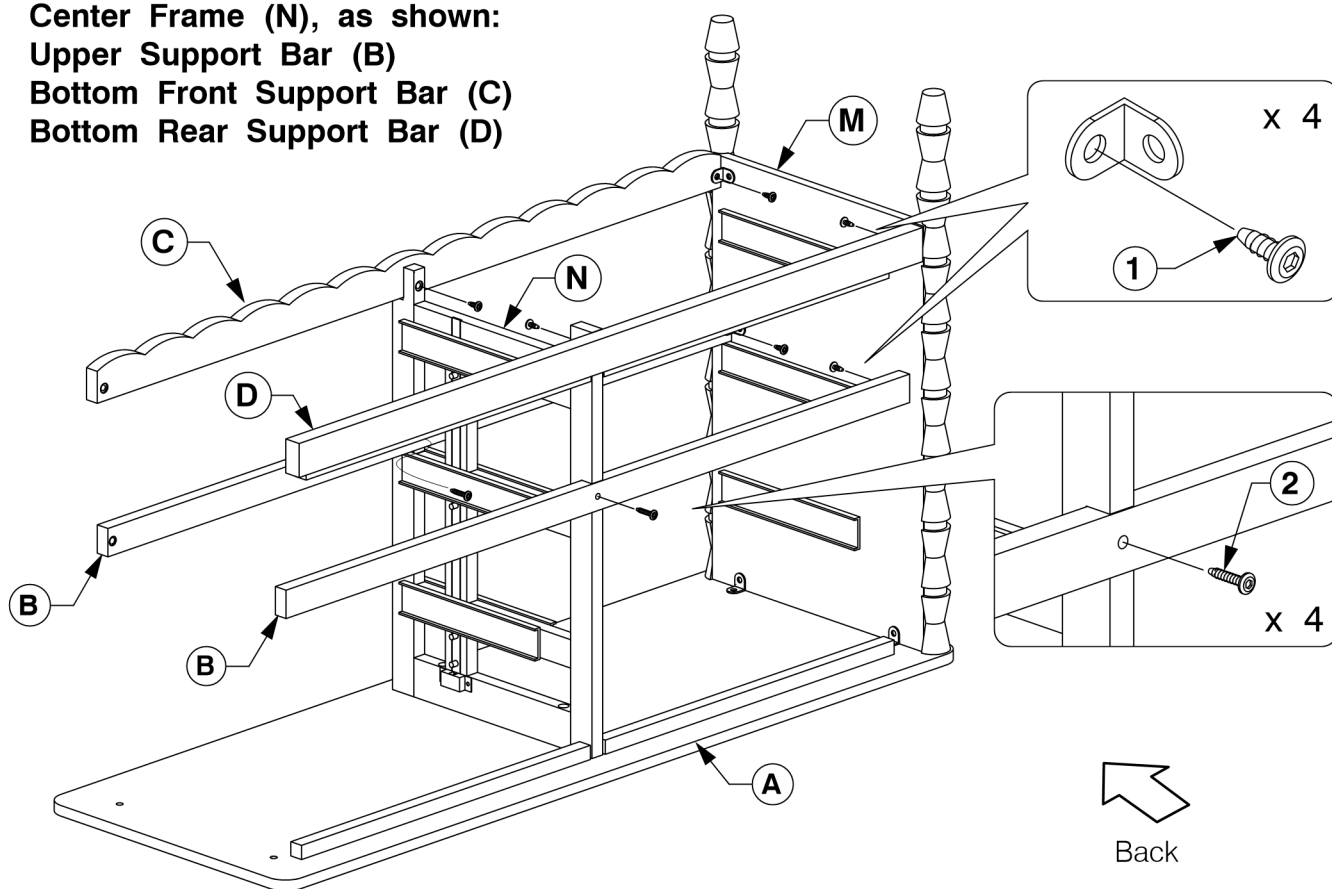

- 7** Fit the Left-Hand Side Panel (L) to the:
Upper Support Bar (B)
Bottom Front Support Bar (C)
Bottom Rear Support Bar (D)

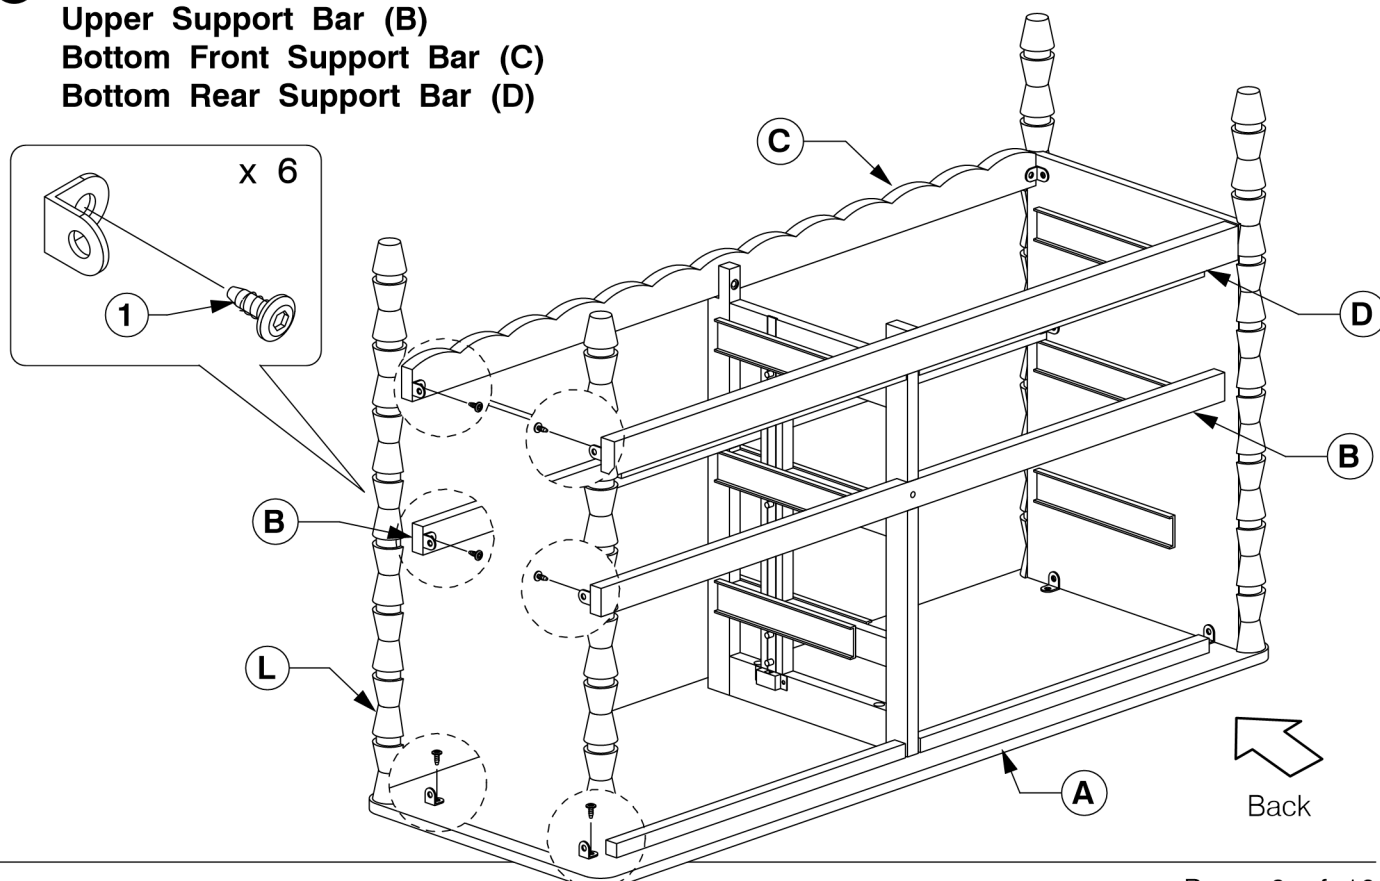


9021 6 Drawer Dresser


Assembly Instructions

WI-0126

- 8** Attached the Back Panel- Wider (E) to the back of the frame.

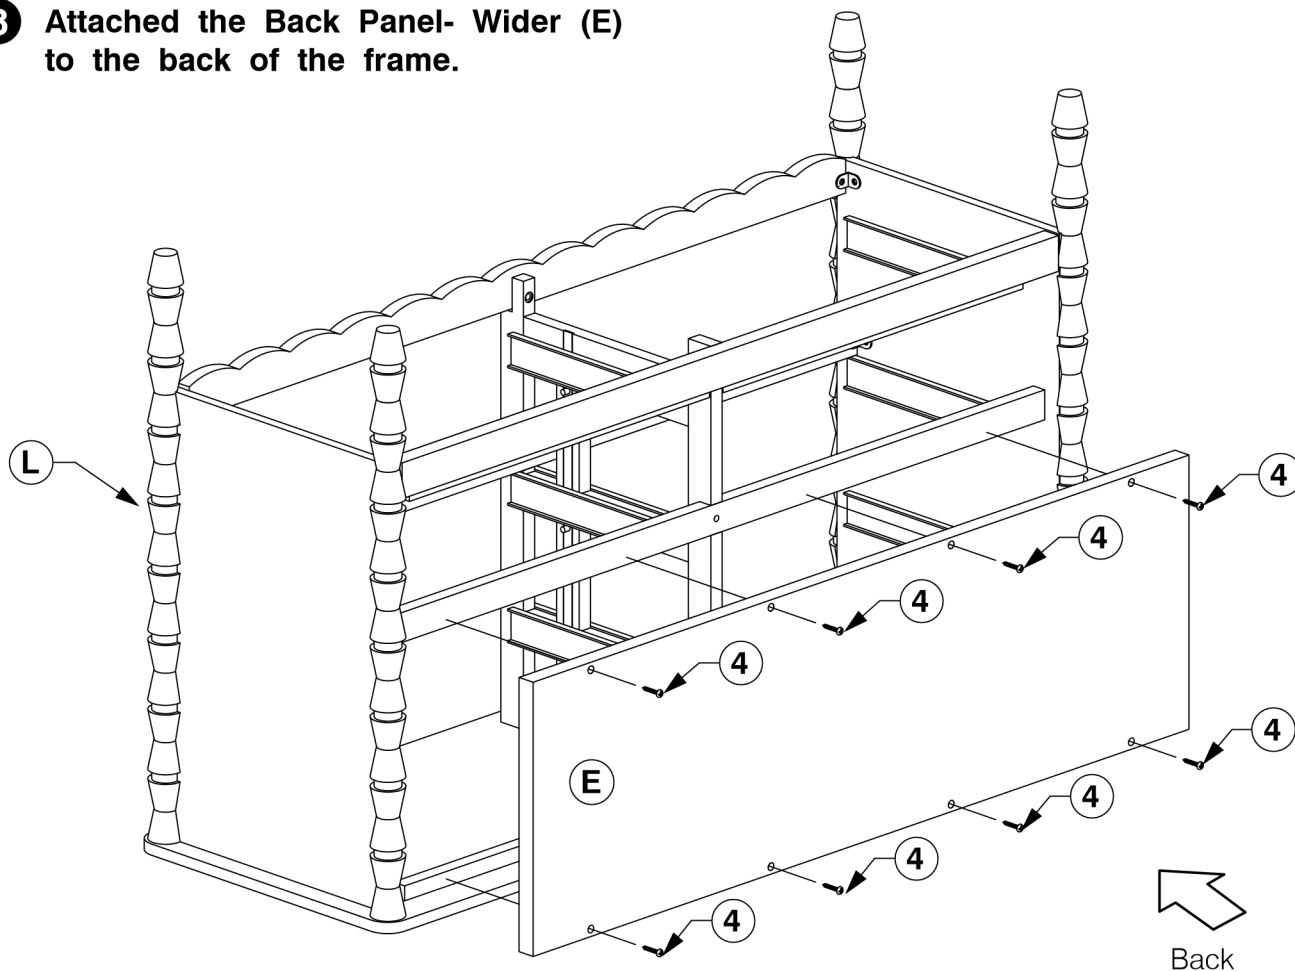

- 9** Attached the Back Panel- Narrow (F) to the back of the frame.

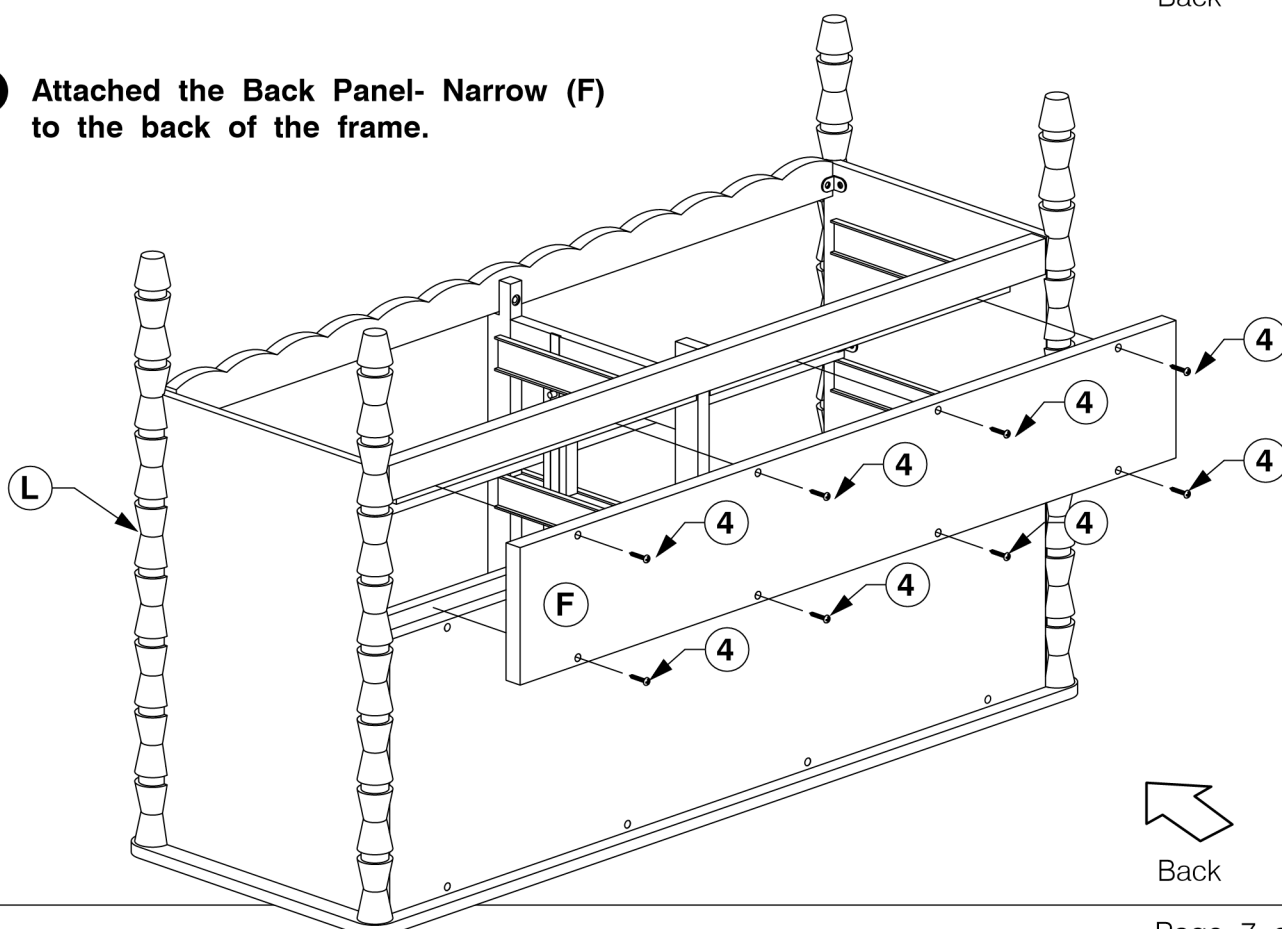


9021 6 Drawer Dresser

Assembly Instructions




WI-0126

10 Install the Drawers.


LEFT

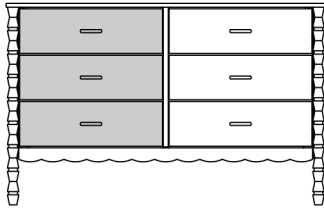




- Push the interlock bar **upwards** before inserting the drawers.

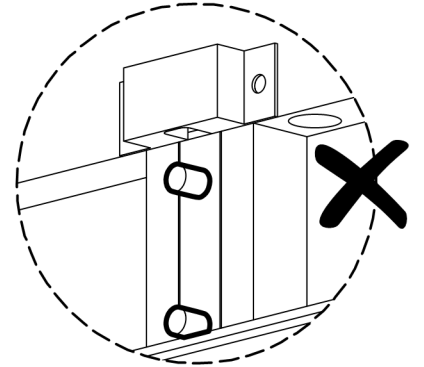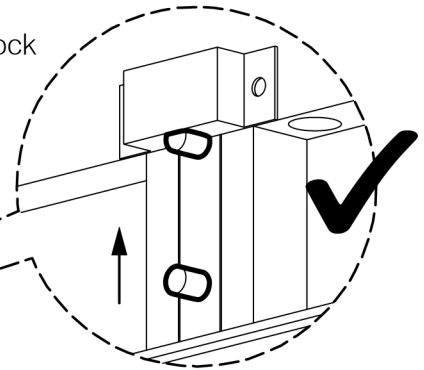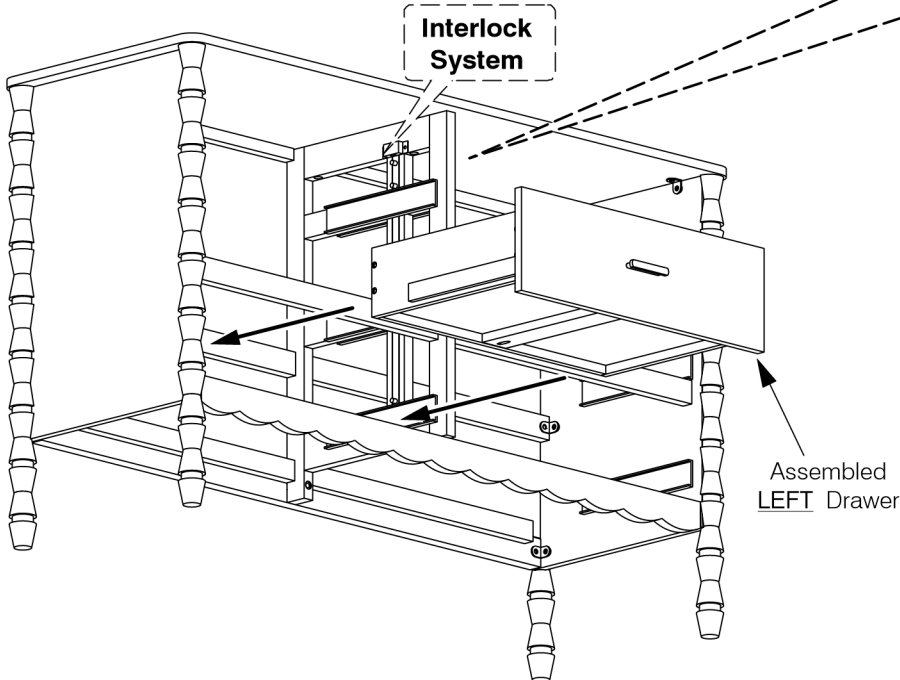

RIGHT

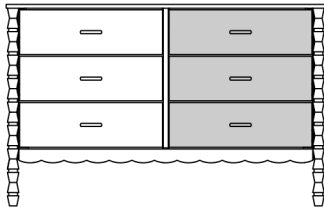

- Push the interlock bar **upwards** before inserting the drawers.

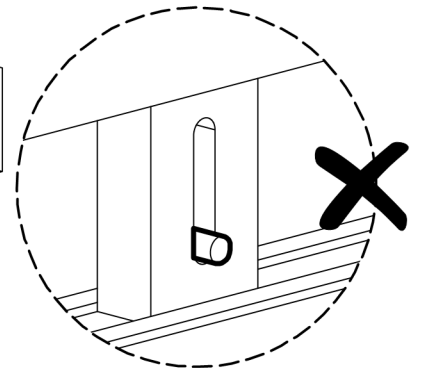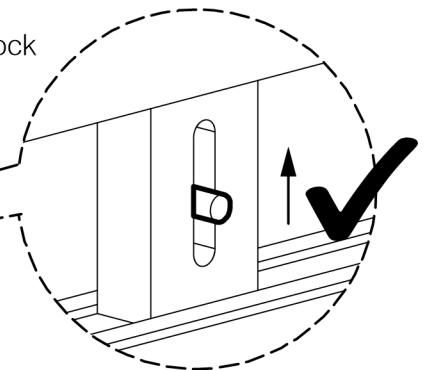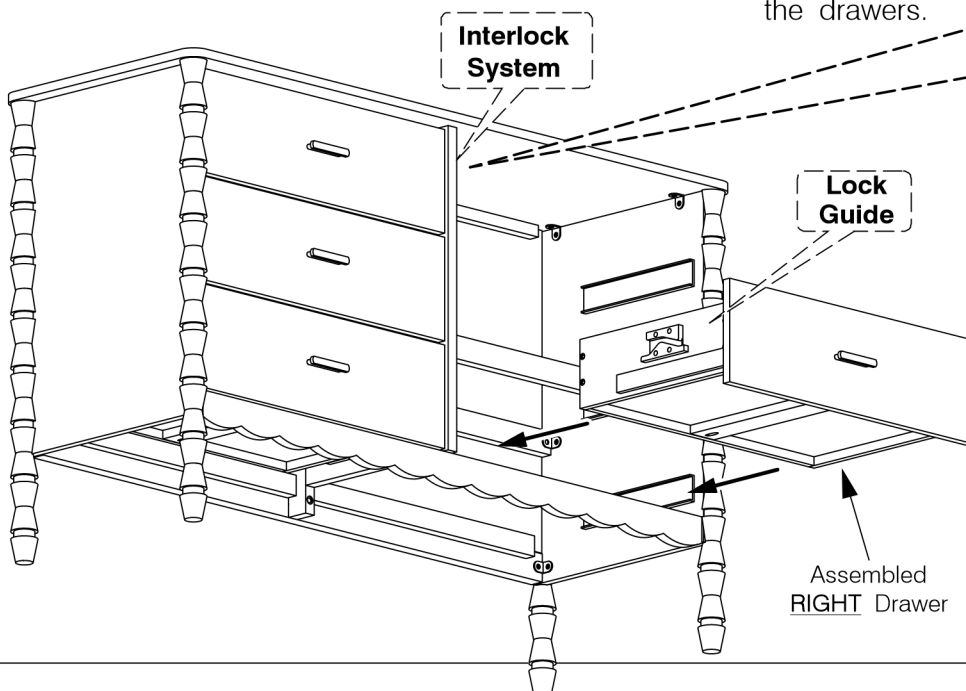


9021 6 Drawer Dresser

Assembly Instructions


WI-0126

11 Adjust the Drawer Face (G).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.


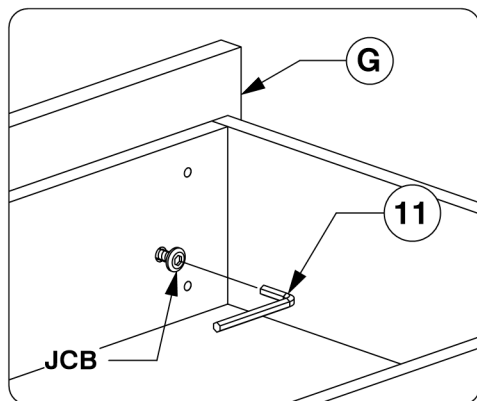


* NOTE: Only one drawer
can be open at a time.

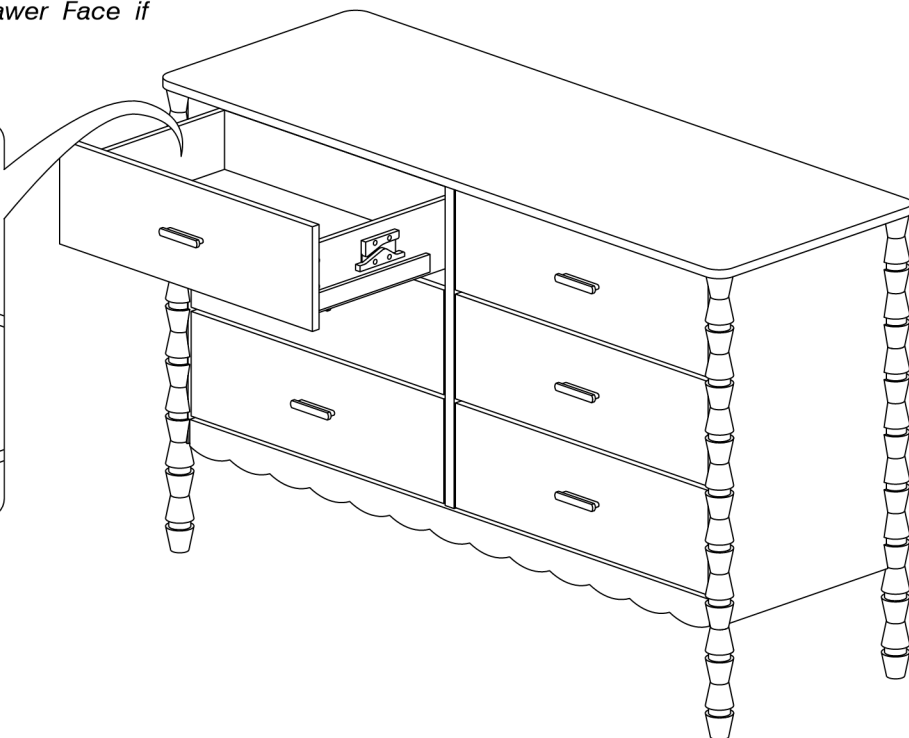

12 After the Drawer Faces (G) are aligned, secure with wood screws.

* NOTE: Only one drawer
can be open at a time.

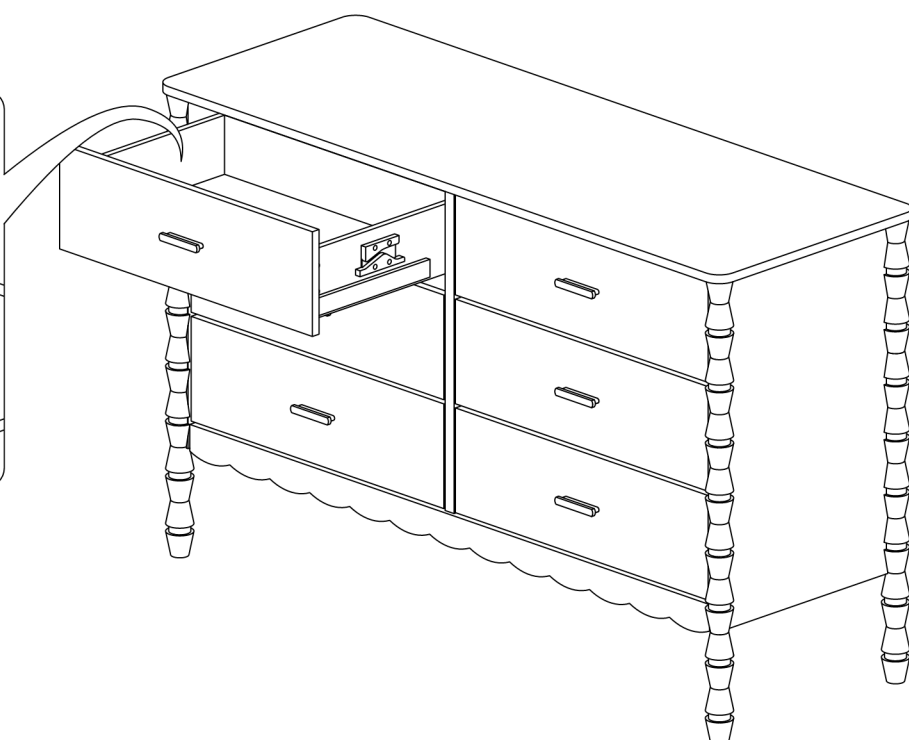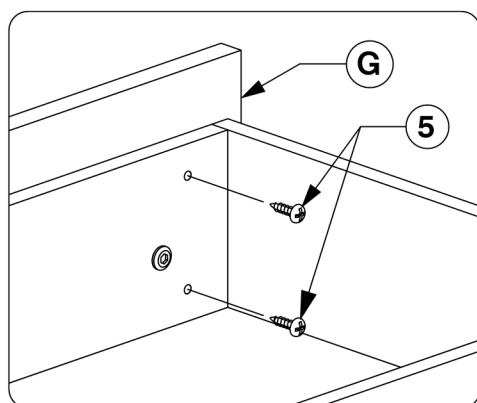




9021 6 Drawer Dresser

Assembly Instructions


WI-0126

13 Remove the Drawers.


- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

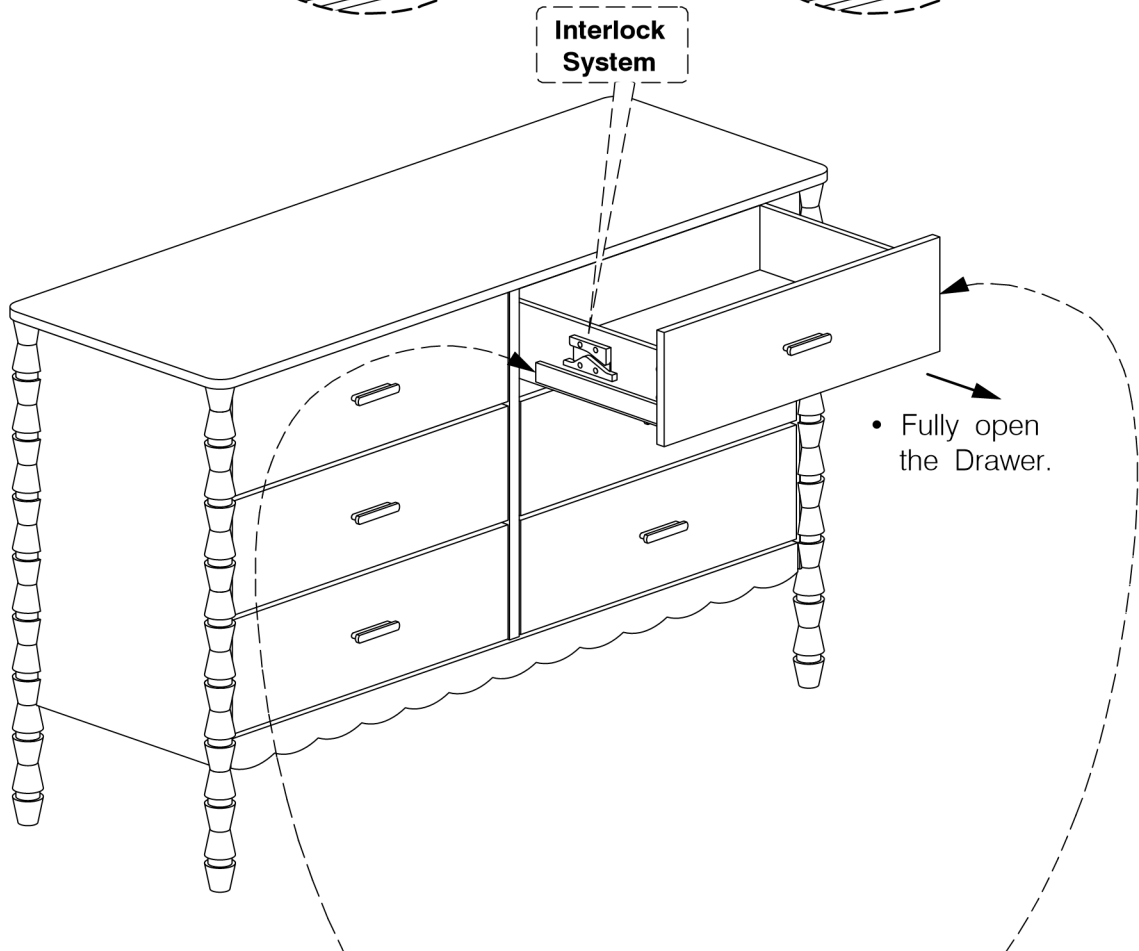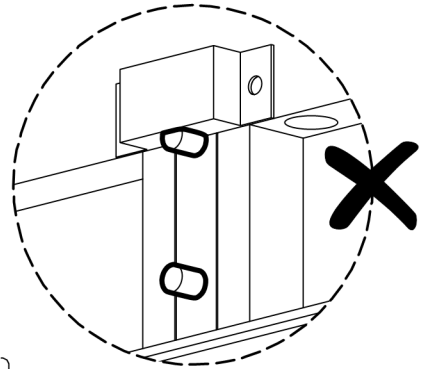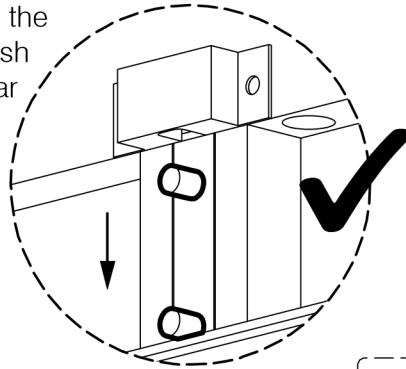

- Fully open the Drawer.

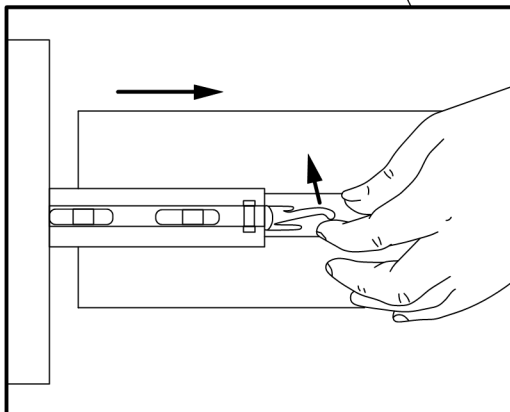

- Lift the **LEFT** side clip up.

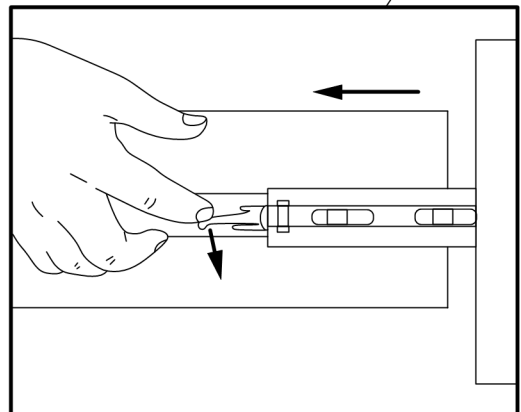

- Push **RIGHT** side clip down.