
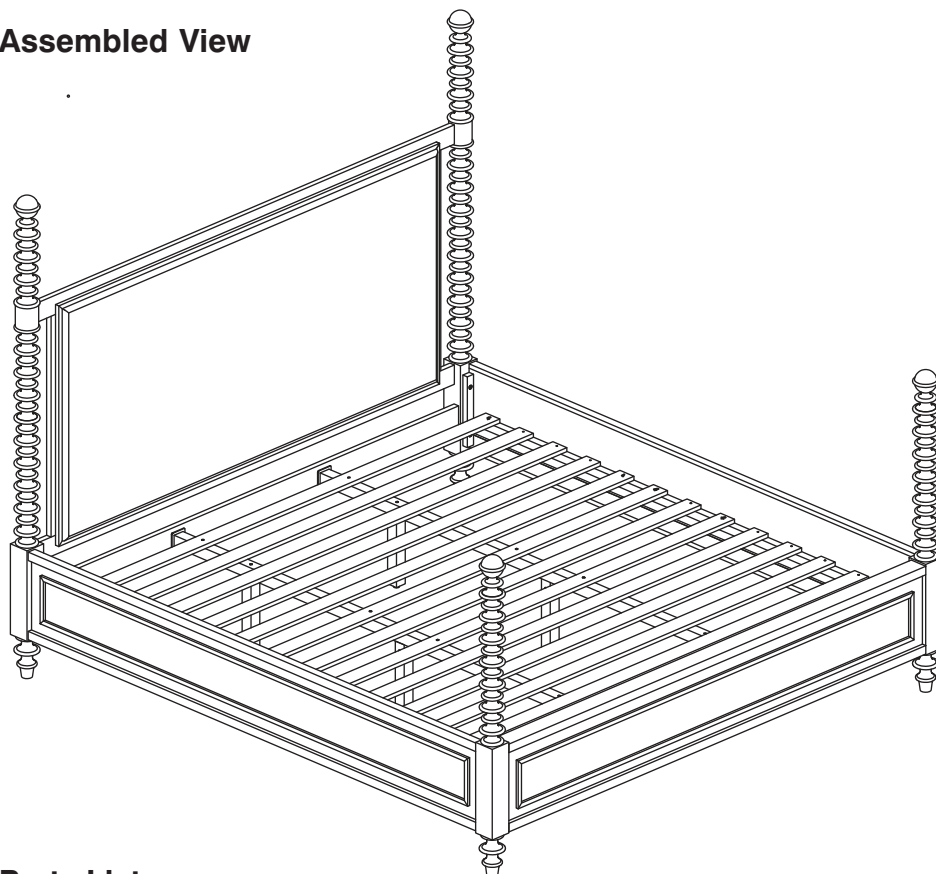


0267 King Bed

Assembly Instructions

WI-0326


1 Assembled View

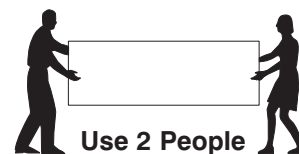

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

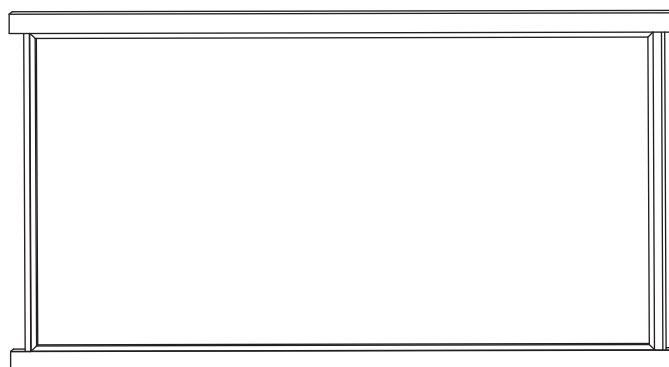

A Headboard Panel x 1



B Headboard Support x 1


0267 King Bed

Assembly Instructions


WI-0326

3 Parts List

Parts in Box B:

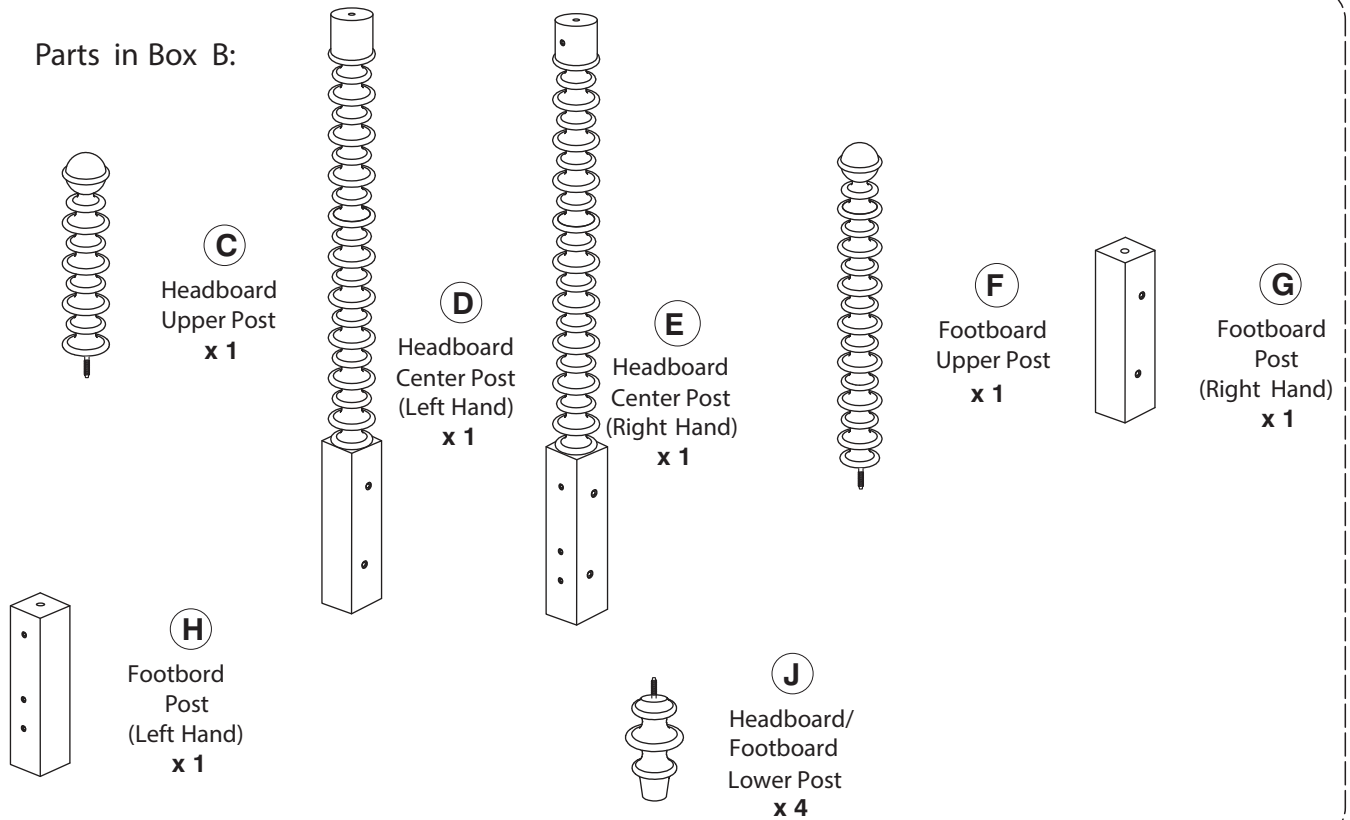

Parts in Box C:








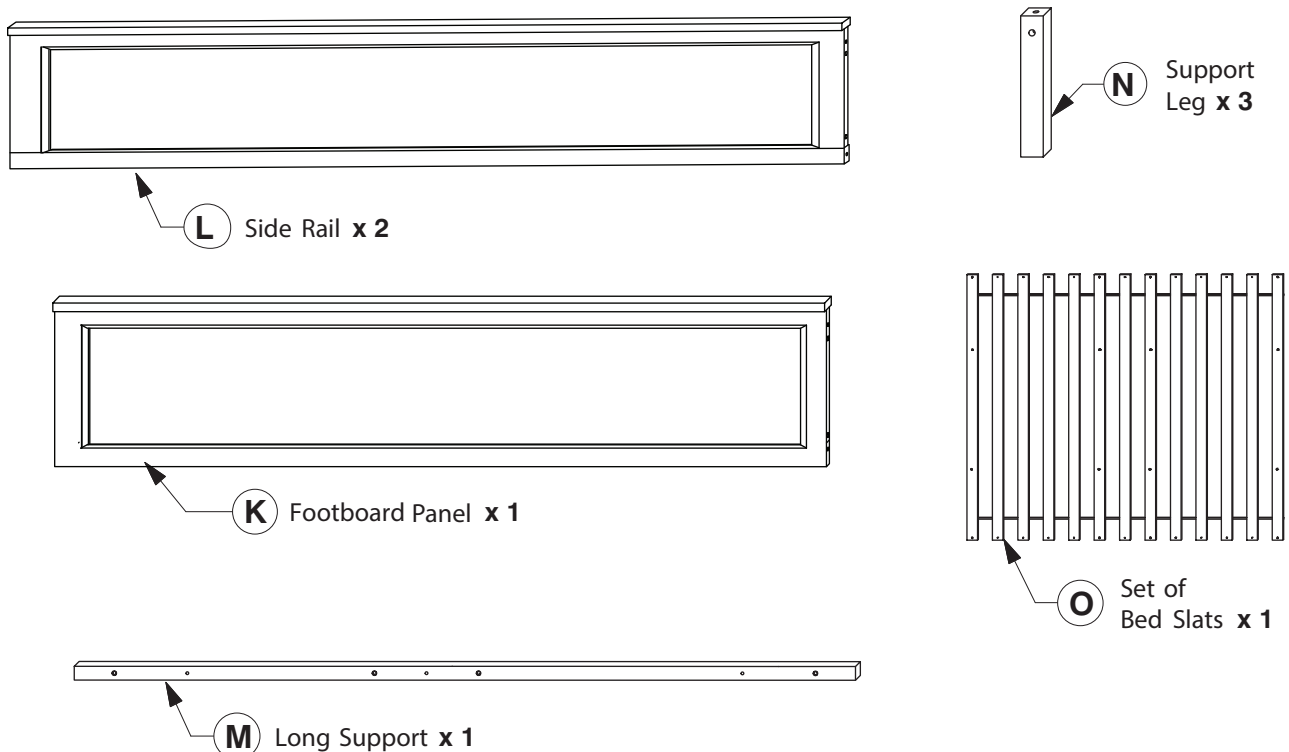


0267 King Bed

Assembly Instructions


WI-0326

4 Hardware List

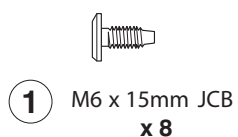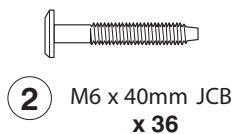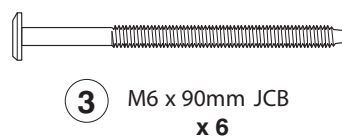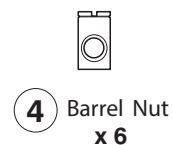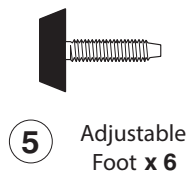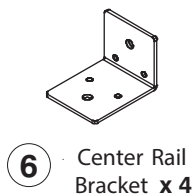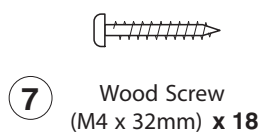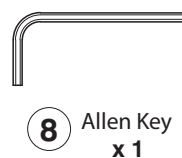

5 Assemble the Support Leg (J) to the Long Support (M).

x2

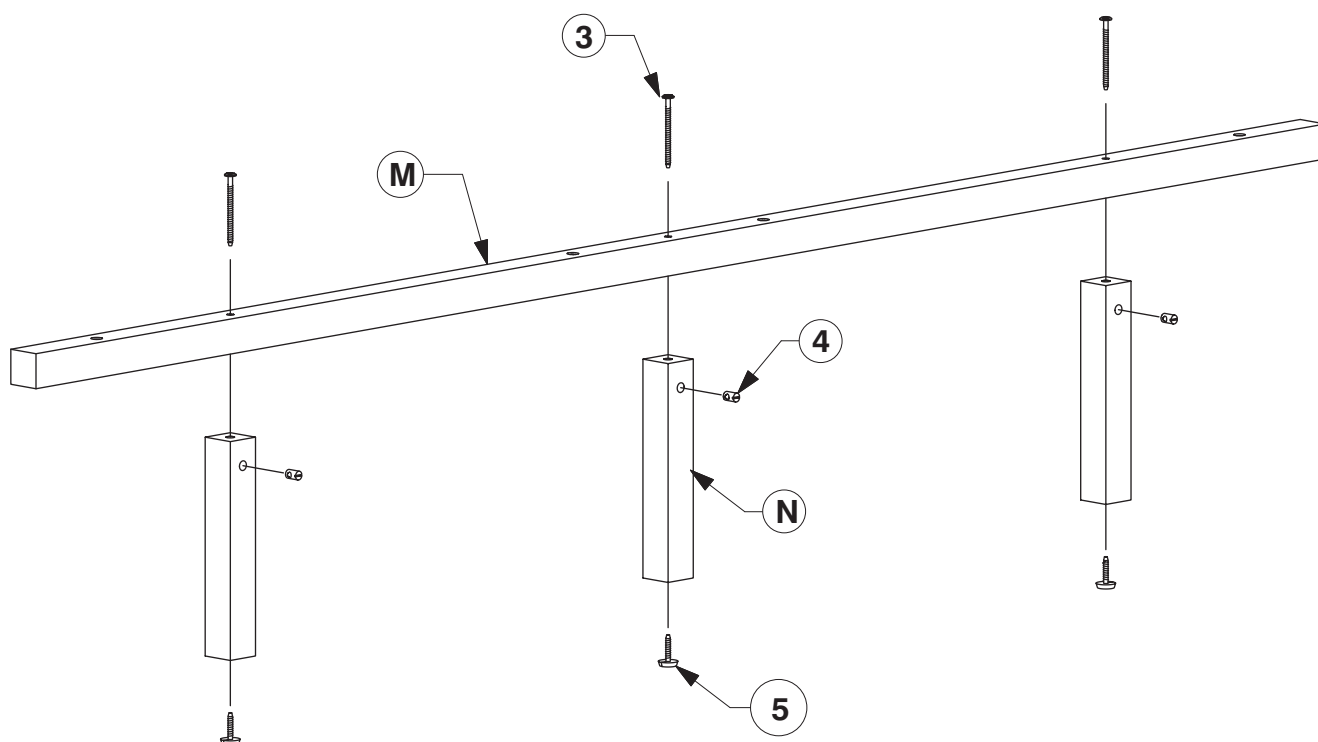


0267 King Bed


Assembly Instructions

WI-0326

- 6** Assemble Headboard Upper Post (G) and HB/FB Lower Lower Post (C) to the Headboard Center Post (E).

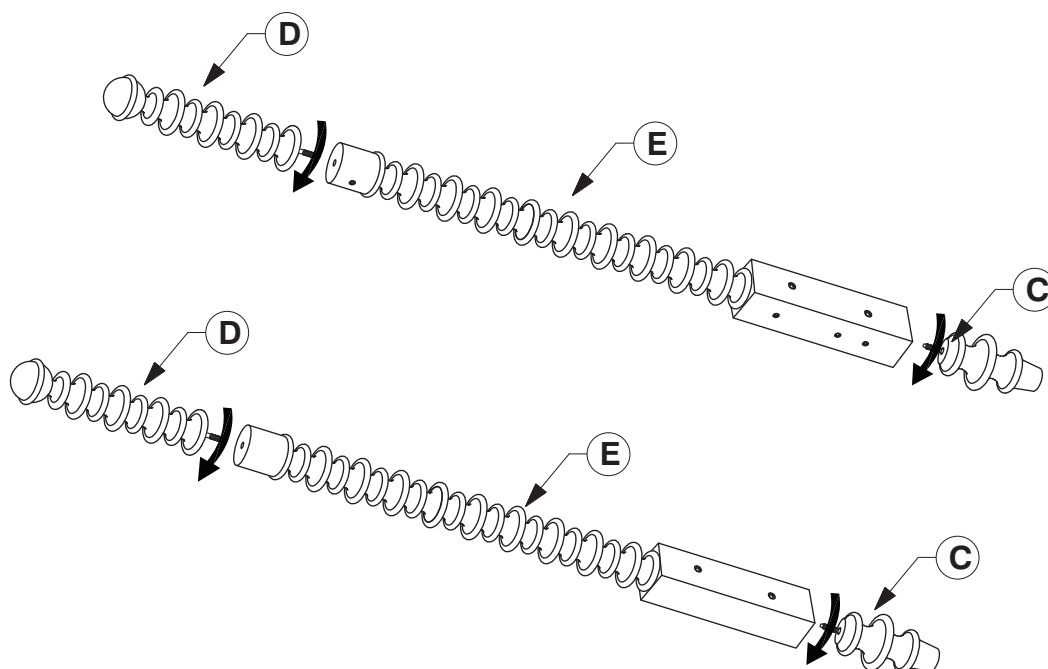

- 7** Assemble Headboard Lower Post (G) to the Headboard Center Post (E).

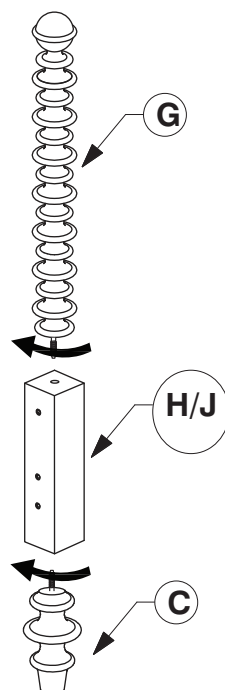


0267 King Bed


Assembly Instructions

WI-0326

- 7** Attach the Headboard Post (D) to the Headboard Panel (A) and Headboard Support (B).

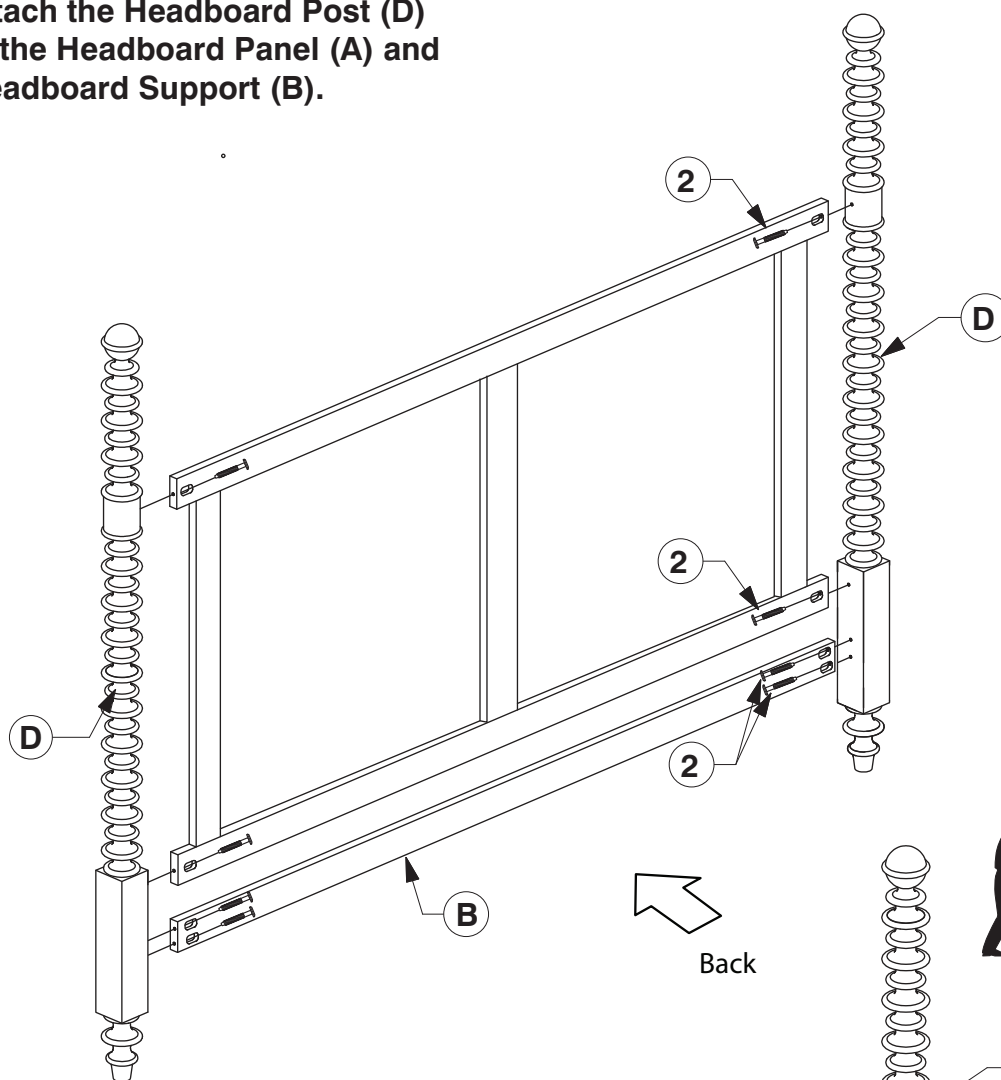

- 8** Attach the Footboard Post (F) to the Footboard Panel (K).

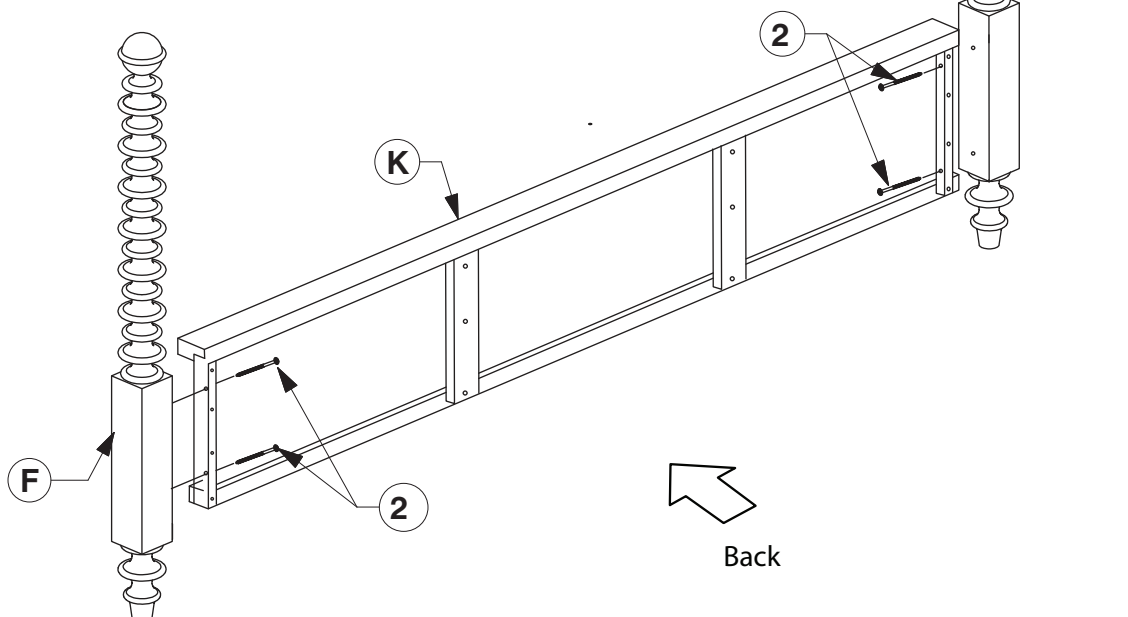


0267 King Bed



Assembly Instructions

WI-0326

- 9** Fit the Center Rail Bracket (6) to the Headboard Support (B).

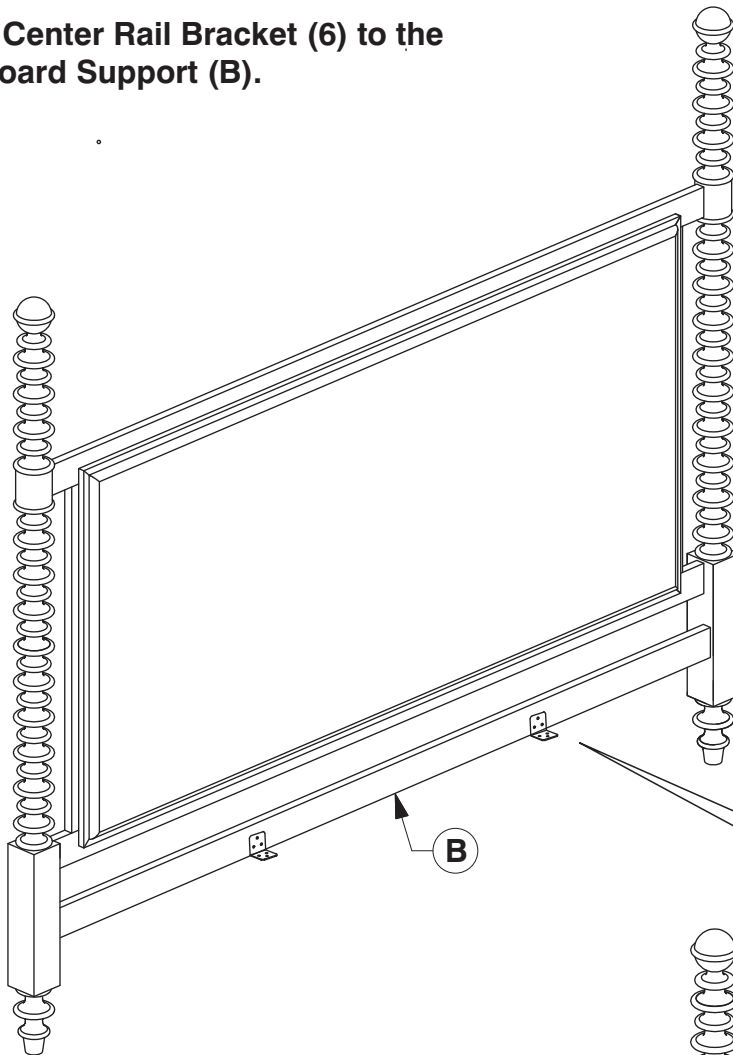

- 10** Fit the Center Rail Bracket (6) to the Footboard Panel (K).

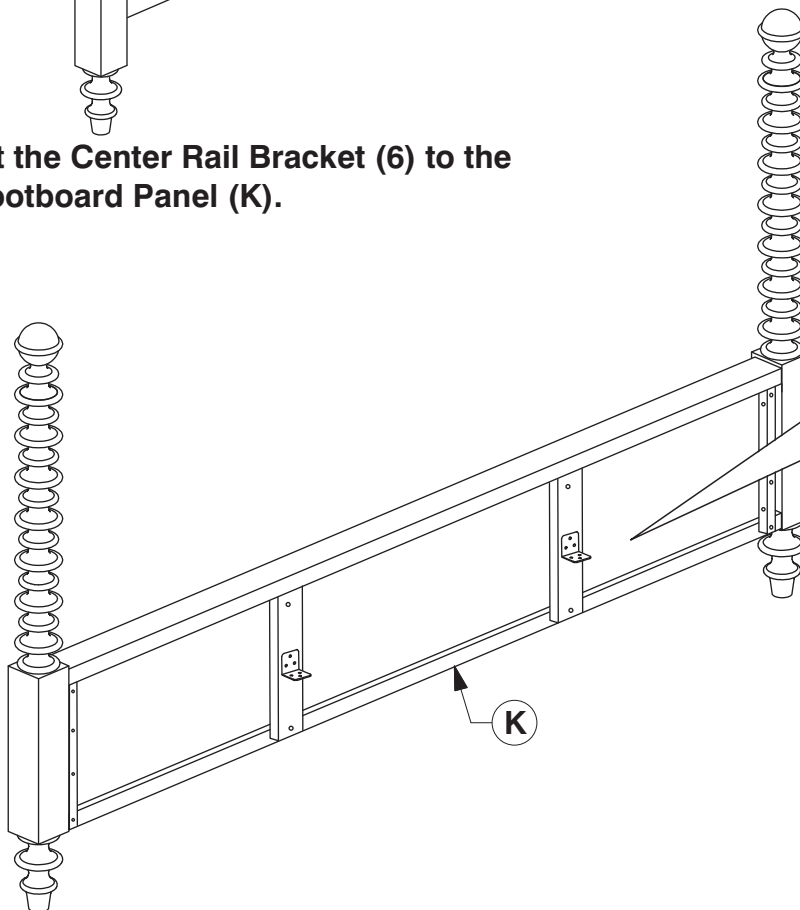
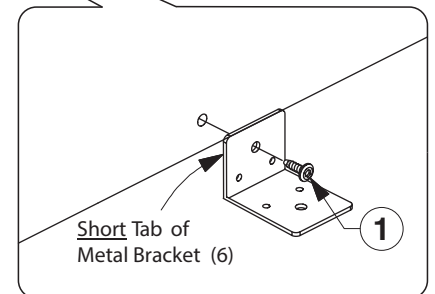


0267 King Bed

Assembly Instructions

WI-0326

- 11** Assemble the Side Rail (L) to the Head / Footboard.

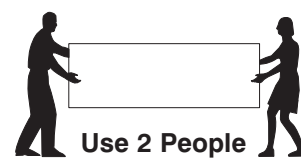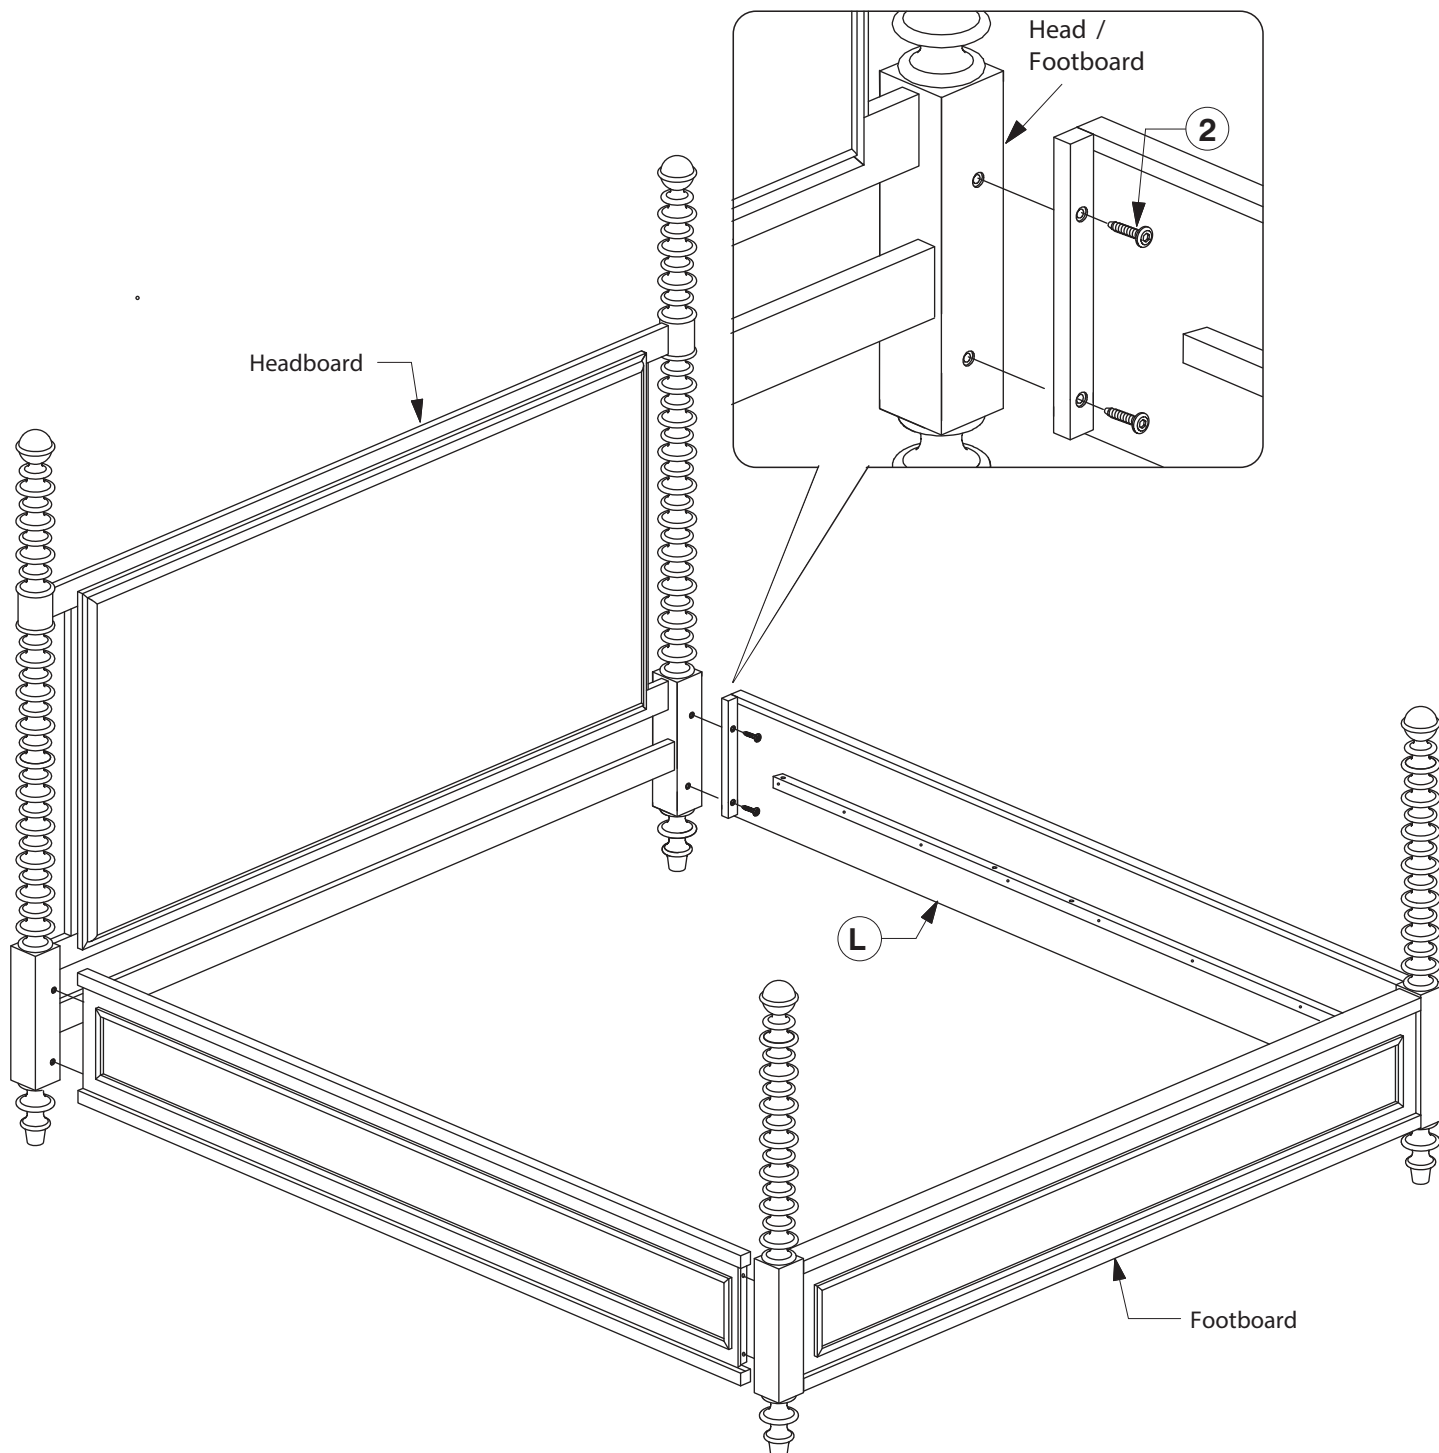


0267 King Bed

Assembly Instructions

WI-0326

- 12** Bolt the Long Support (M) to the Center Rail Brackets on the Headboard/Footboard.

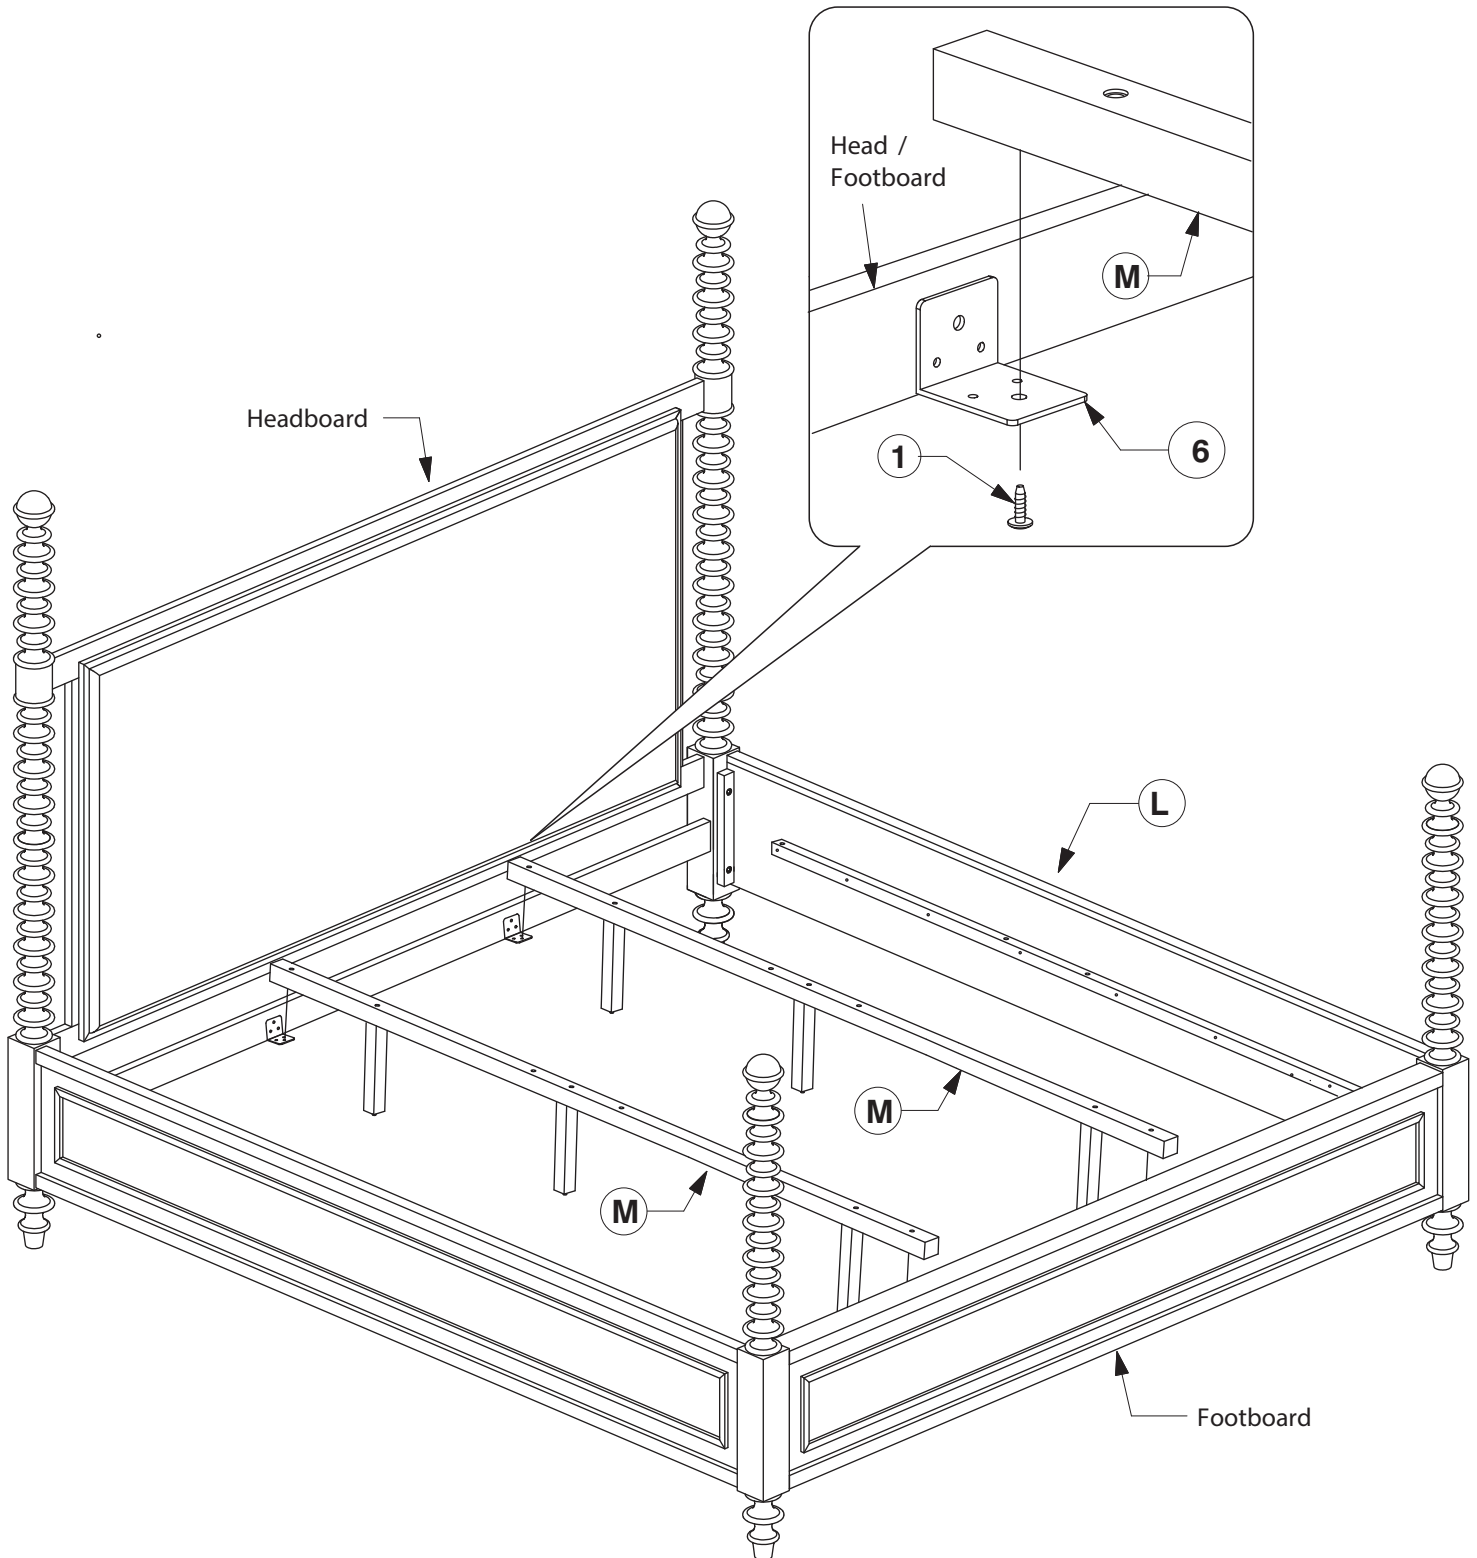


0267 King Bed

Assembly Instructions

WI-0326


- 13** Bolt & Screw the Bed Slats (O) to the Side Rail (L).

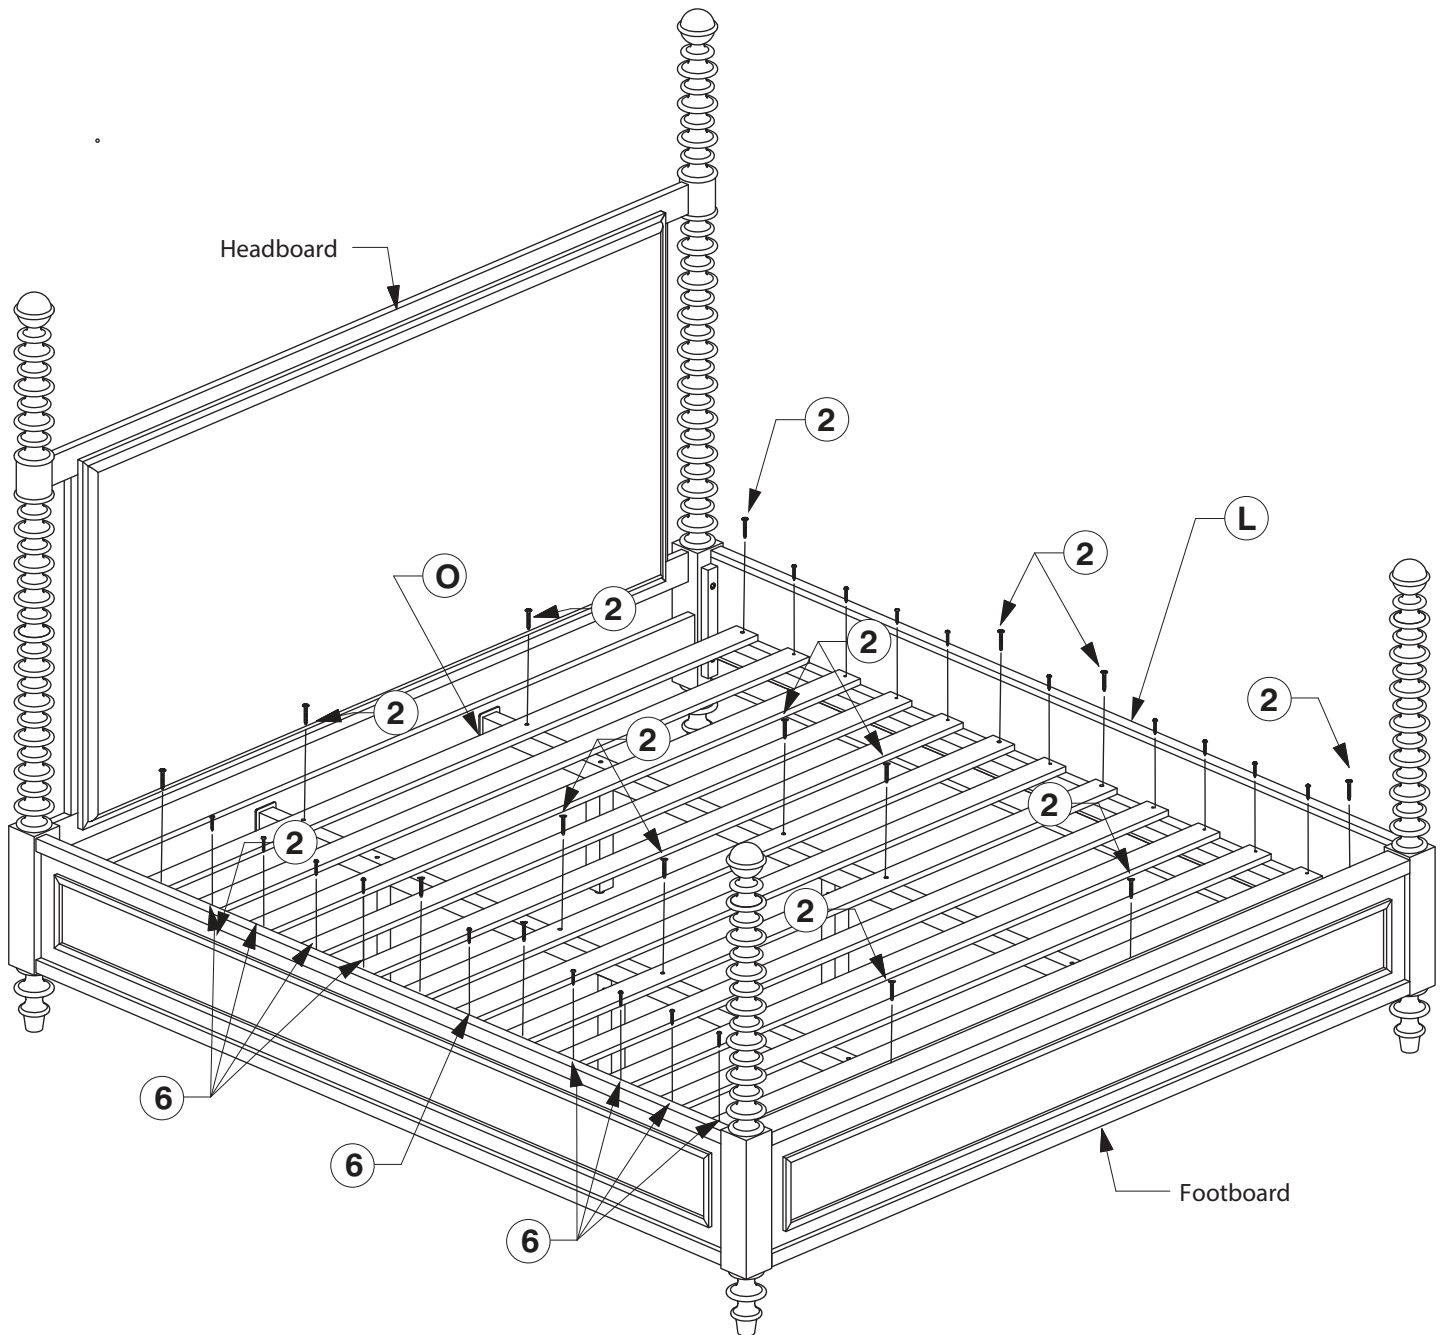

9029 7 Drawer Dresser

Assembly Instructions


WI-0426

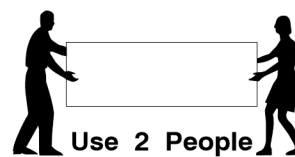

Note: Do not assemble
using power tools.
This can cause the bolts
to be overtightened

1 Parts List

Parts in Box A:



A Top Panel x 1




B Front Upper Support Bar x 1



C Front Bottom Support Bar x 1



D Front Upper Drawer Support Bar x 1



E Front Bottom Drawer Support Bar x 1



F Rear Upper Support Bar x 2



G Rear Bottom Support Bar x 2




H Center Post x 1



J Back Panel x 3

Lower Drawers



N Drawer Face x 4



O Drawer Back x 4




P Drawer Bottom x 4




Q Drawer Rail x 4

Upper Drawers



K Drawer Face x 3



L Drawer Back x 3



M Drawer Bottom x 3


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

1 Parts List


Parts in Box B:

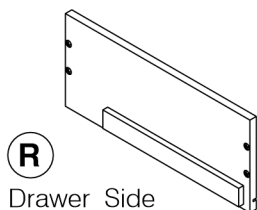


R
Drawer Side
(Left Hand) x 7

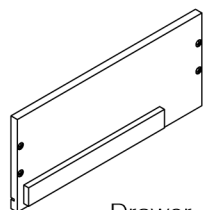


S
Drawer Side
(Right Hand) x 7

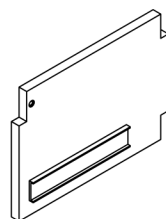


V
Center Panel
(Upper) x 2

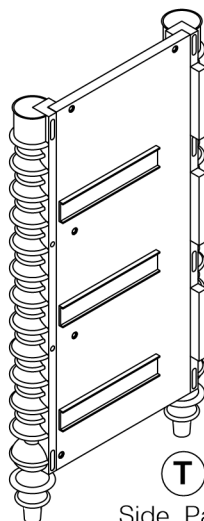

T
Side Panel
(Left Hand) x 1

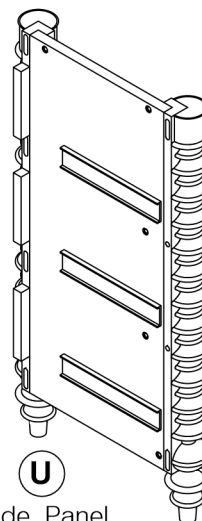

U
Side Panel
(Right Hand) x 1

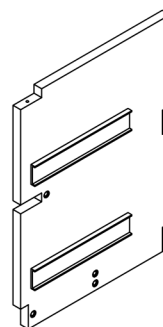

W
Center Panel
(Lower) x 1


2 Hardware List



1 M6 x
15mm JCB x 28




2 M6 x
40mm JCB x 12



3 M6 x
50mm JCB x 2



4 M6 JNC
Nut x 4




5 Adjustable
Foot x 1




6 'L' Bracket
(5005-3) x 16



7 Wood Screw
(M4 x 20mm) x 28



8 Wood Screw
(M4 x 25mm) x 64



9 M4 x 32mm
Wood Screw x 30



10 CSK Cap Wood Screw
(M6 x 60mm) x 9




11 Handle
(9029) x 7



12 M4 x 22mm
Wood Screw
x 7



13 M6 x 25mm
Wood Dowel x 16



14 M8 x 30mm
Wood Dowel x 4



15 Long Allen Key x 1


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

③ Assemble the Upper Drawers.


STEP 3.1

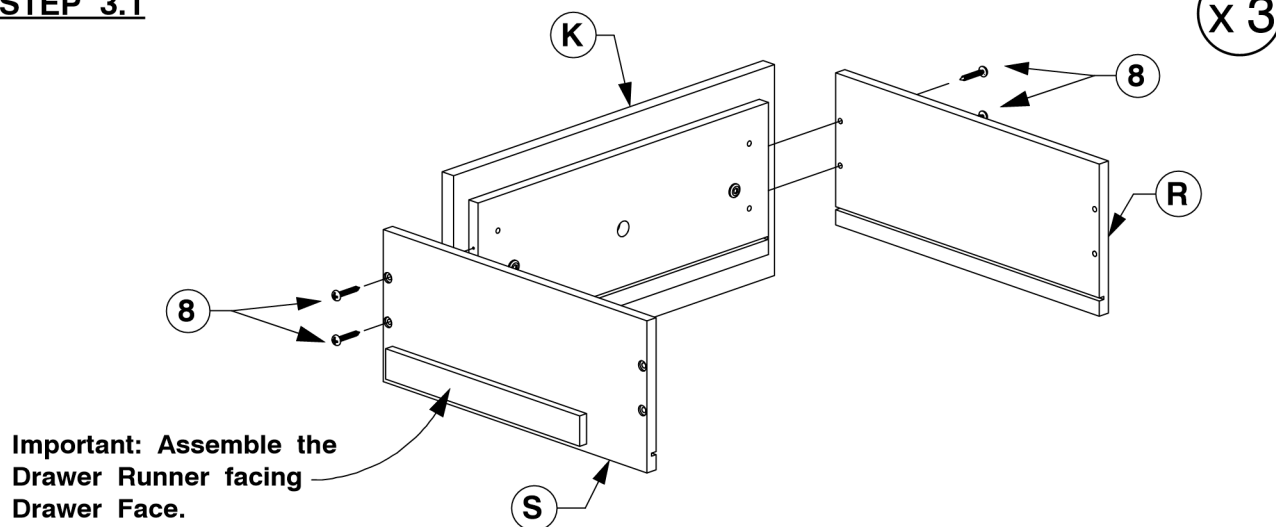

STEP 3.2

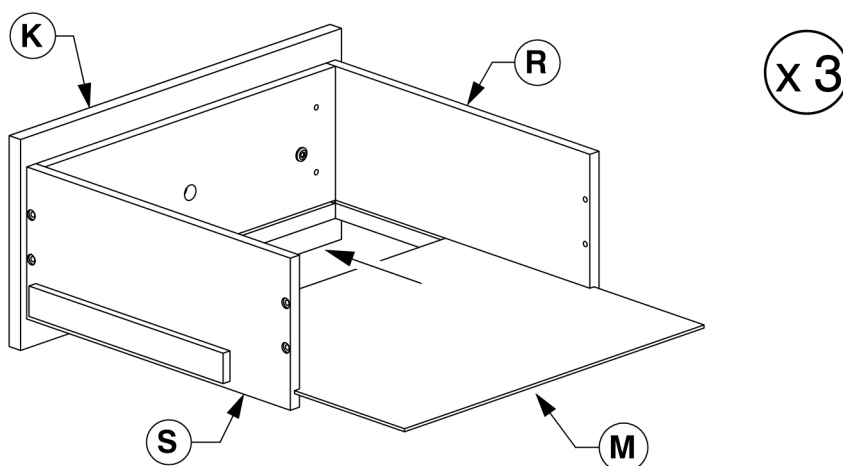


STEP 3.3

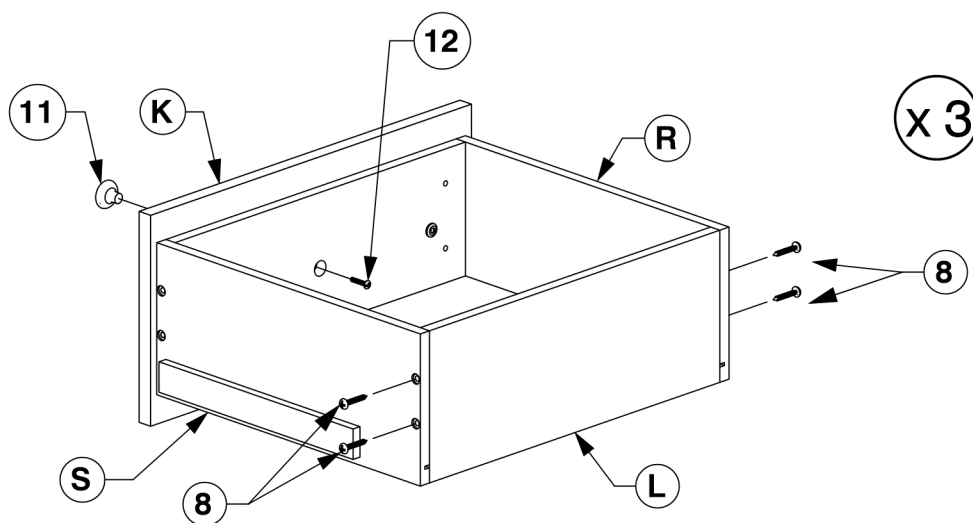


Assembly Instructions

WI-0426


STEP 3.4

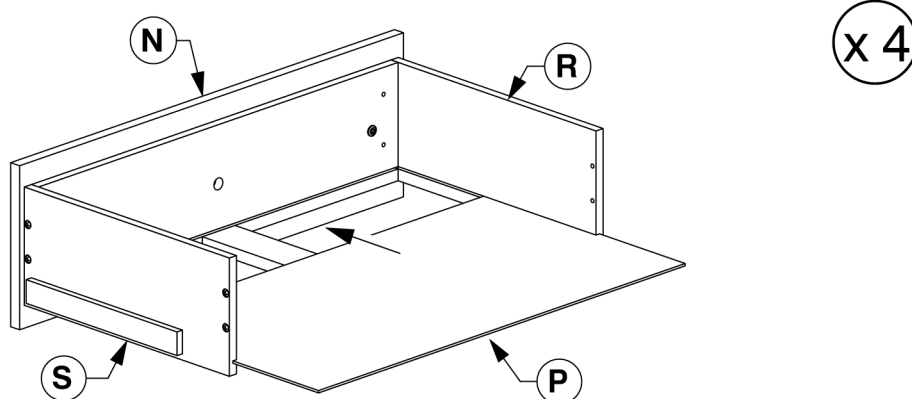

STEP 3.6

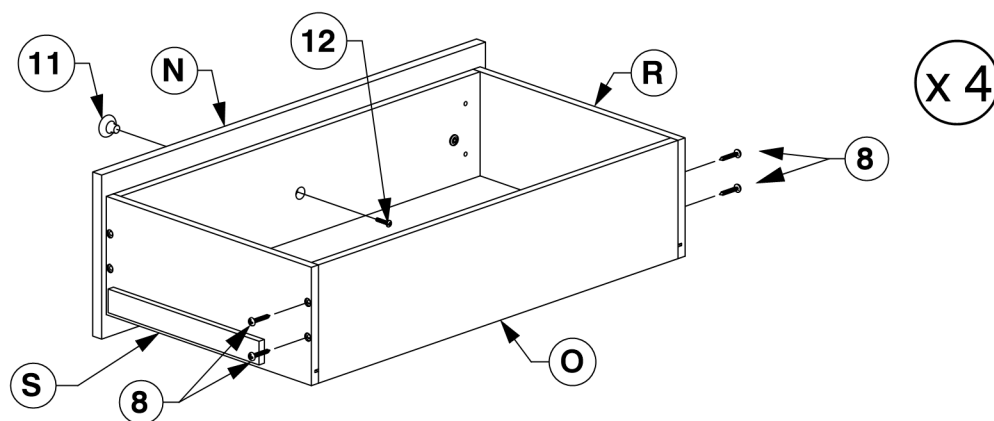

STEP 3.7

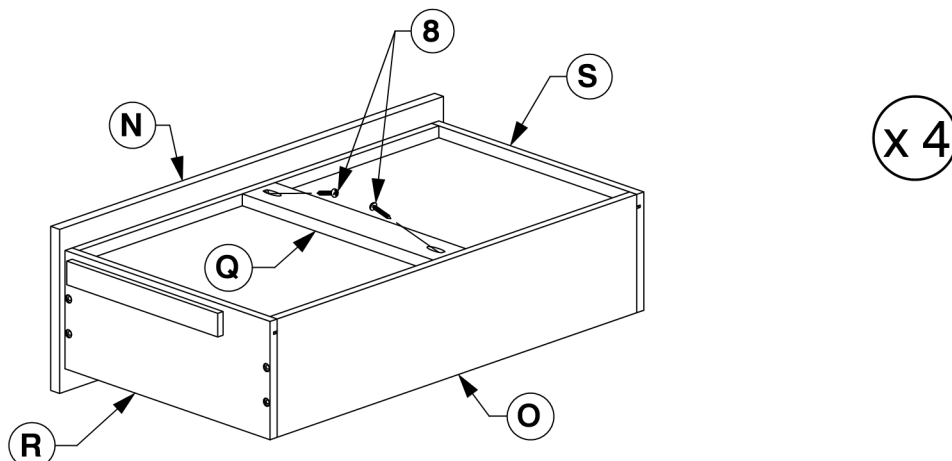


9029 7 Drawer Dresser


Assembly Instructions

WI-0426


4 Fit the 'L' Bracket to the Top Panel (A).

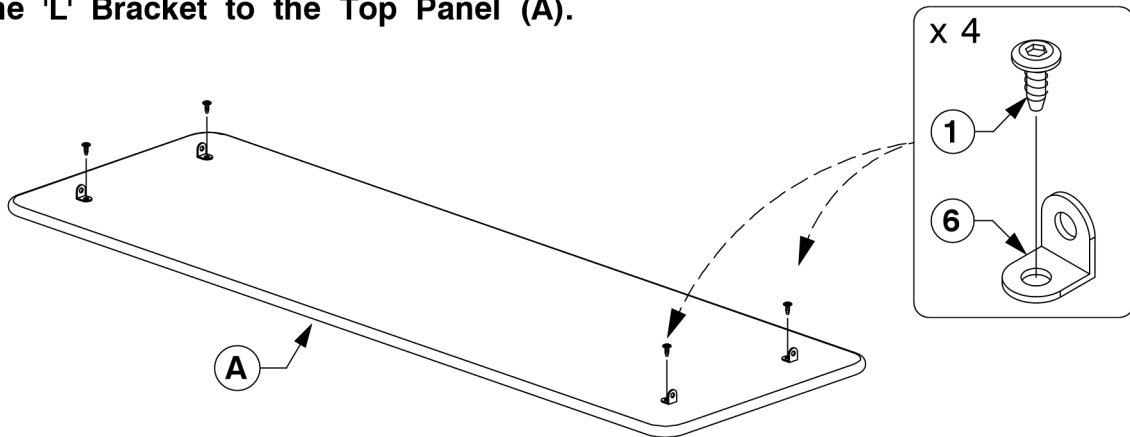

5 Attach 'L' Bracket (6) to the Upper and Lower Center Panels (V & W) using JNC (4) and Bolts (1).

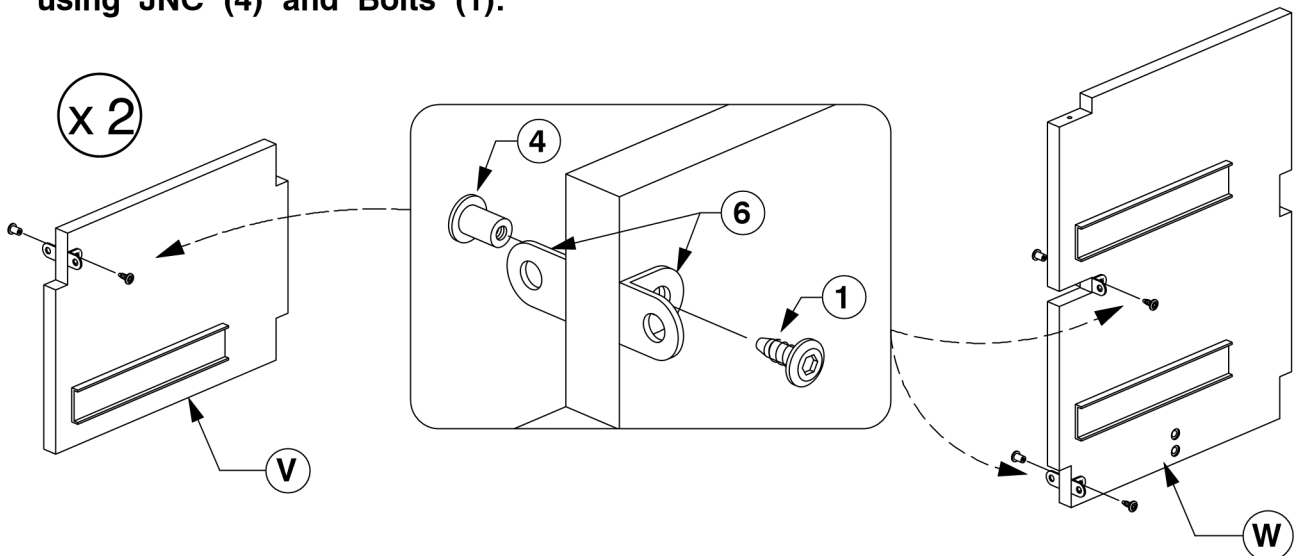

6 Insert Dowels (14) into the ends of Support Bars (D & E). Then attach Brackets (6) to the Support Bars using Bolts (1).


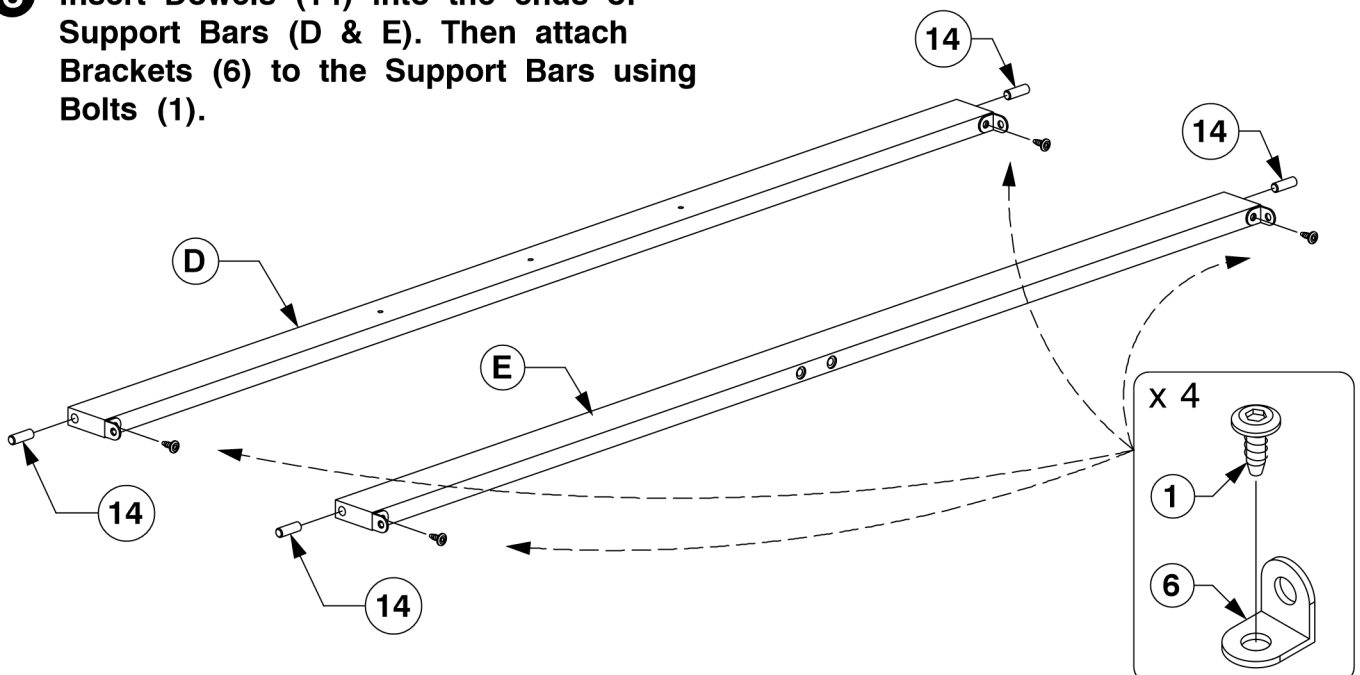


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 7** Fit the Right Side Panel (U) to the Top Panel (A).

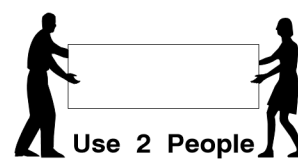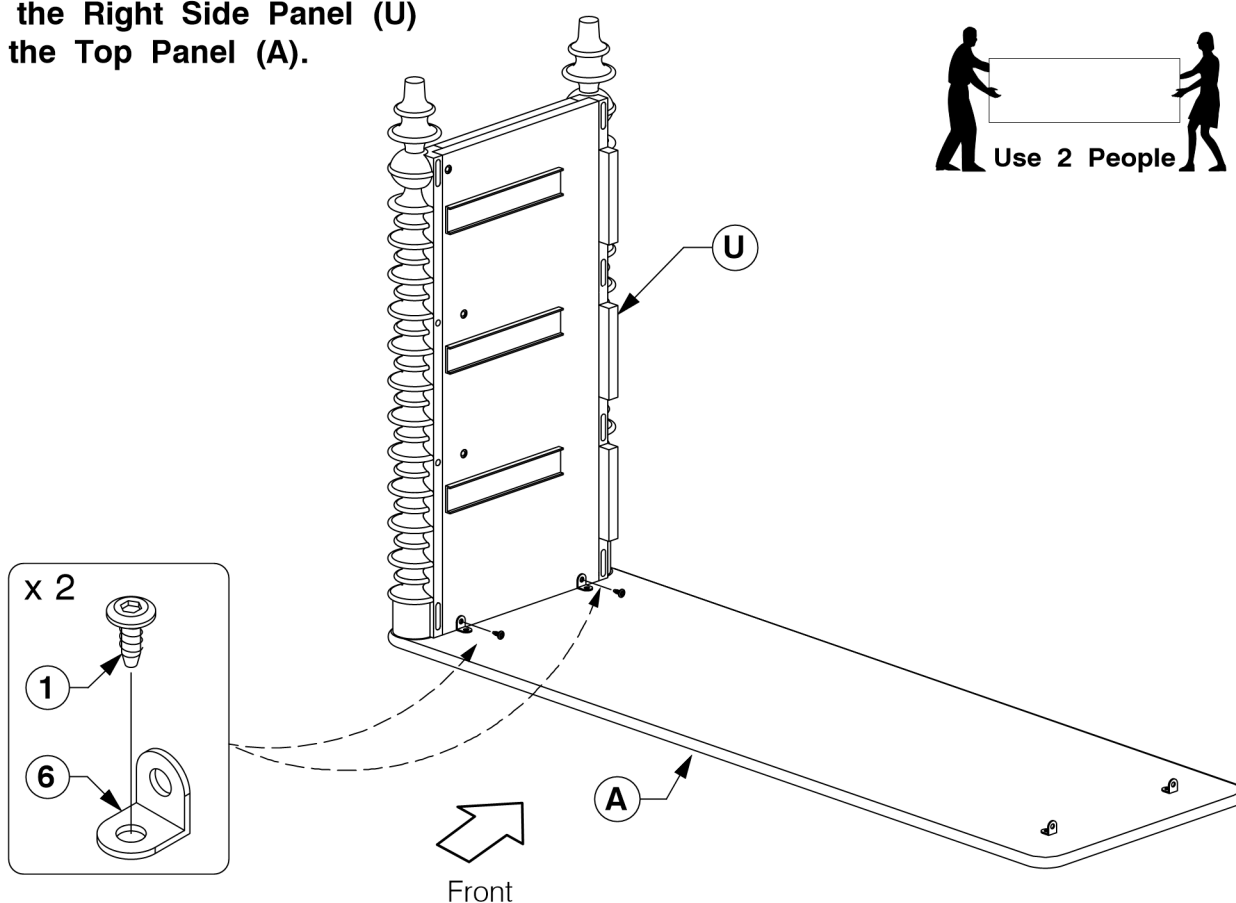


- 8** Assemble the Support Bar (B & F) to the Right Side Panel (U).

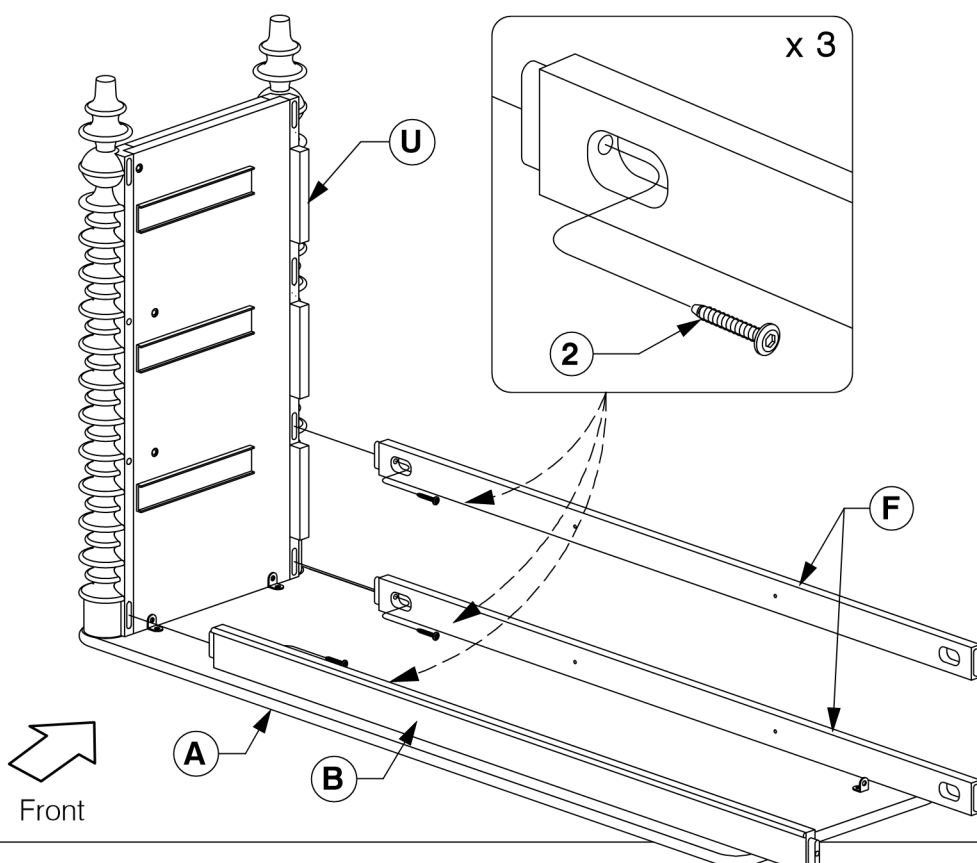


Step 1

Use the ball end of Allen key to start the bolt.

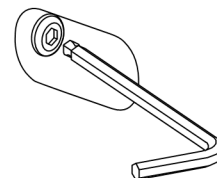

Step 2

Tighten fully with the straight end.

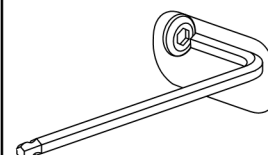


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 9** Assemble the Center Panel (V) to Support Bar (B & F).

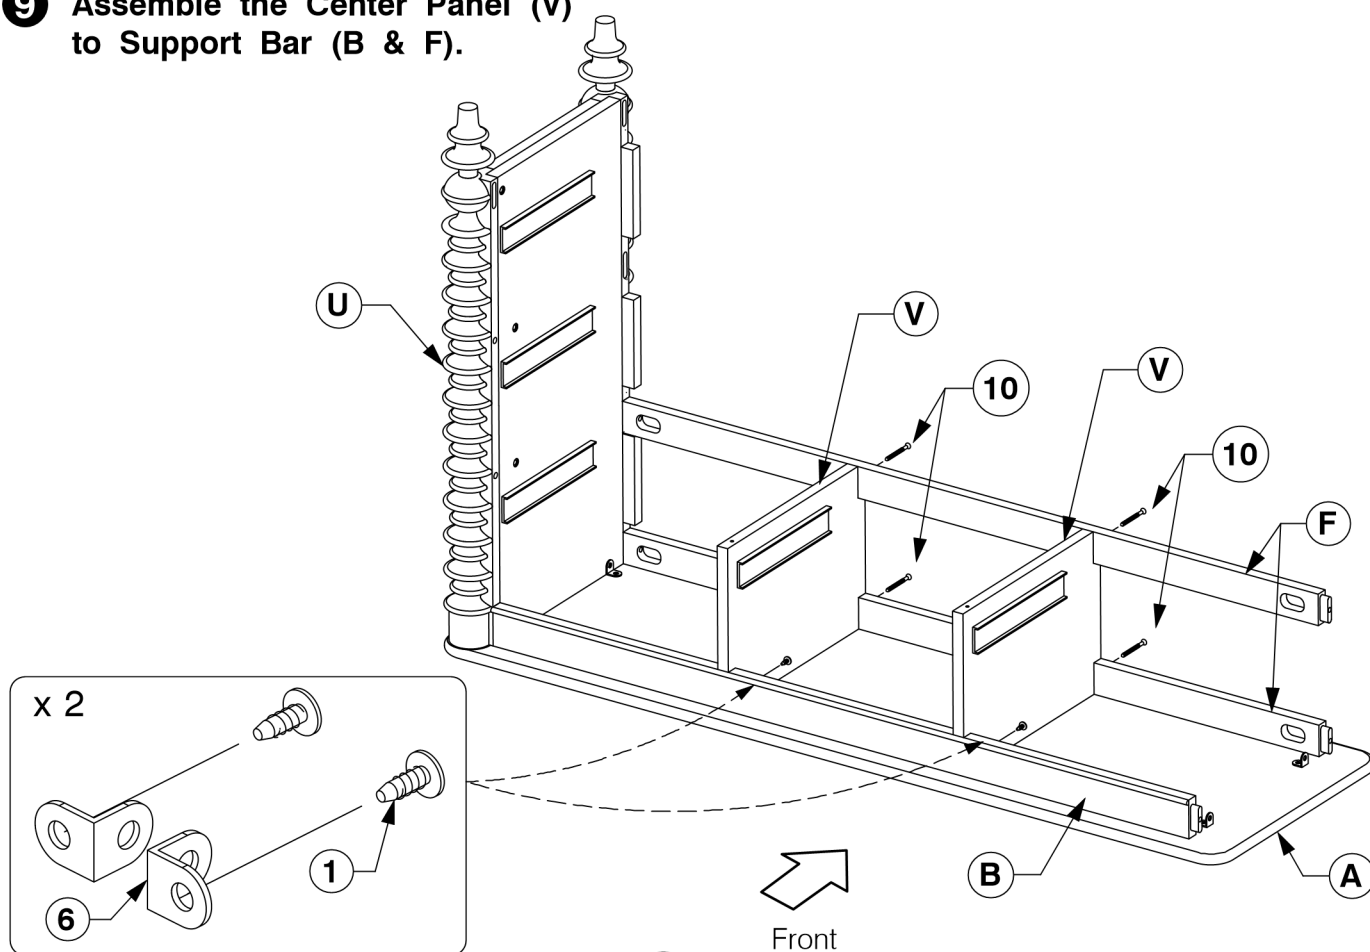

- 10** Attach Support Bars (D & E) to the Right Side Panel (U). Then tighten using Bolts.

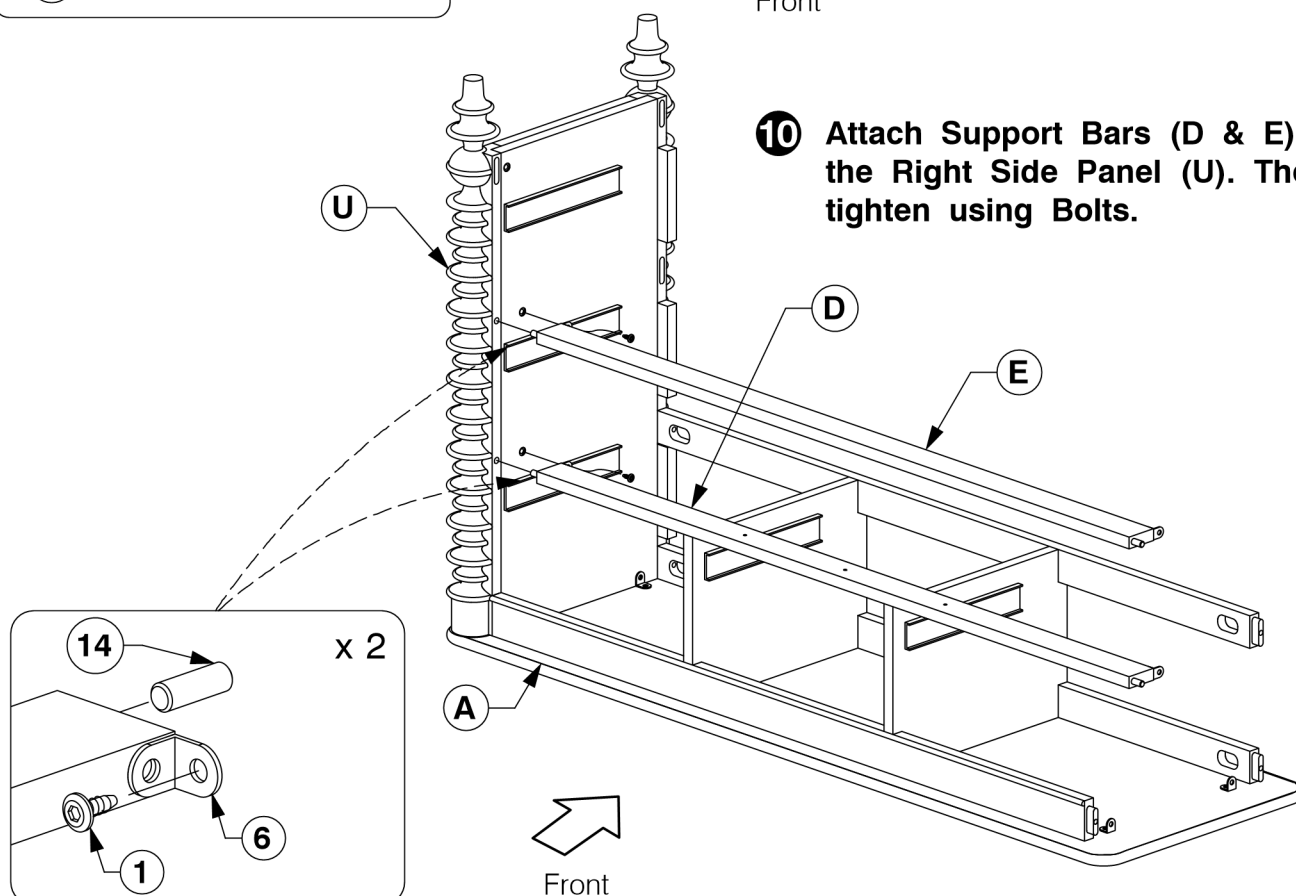


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 11** Assemble the Center Panel (W) to Support Bar (D, E, & F).

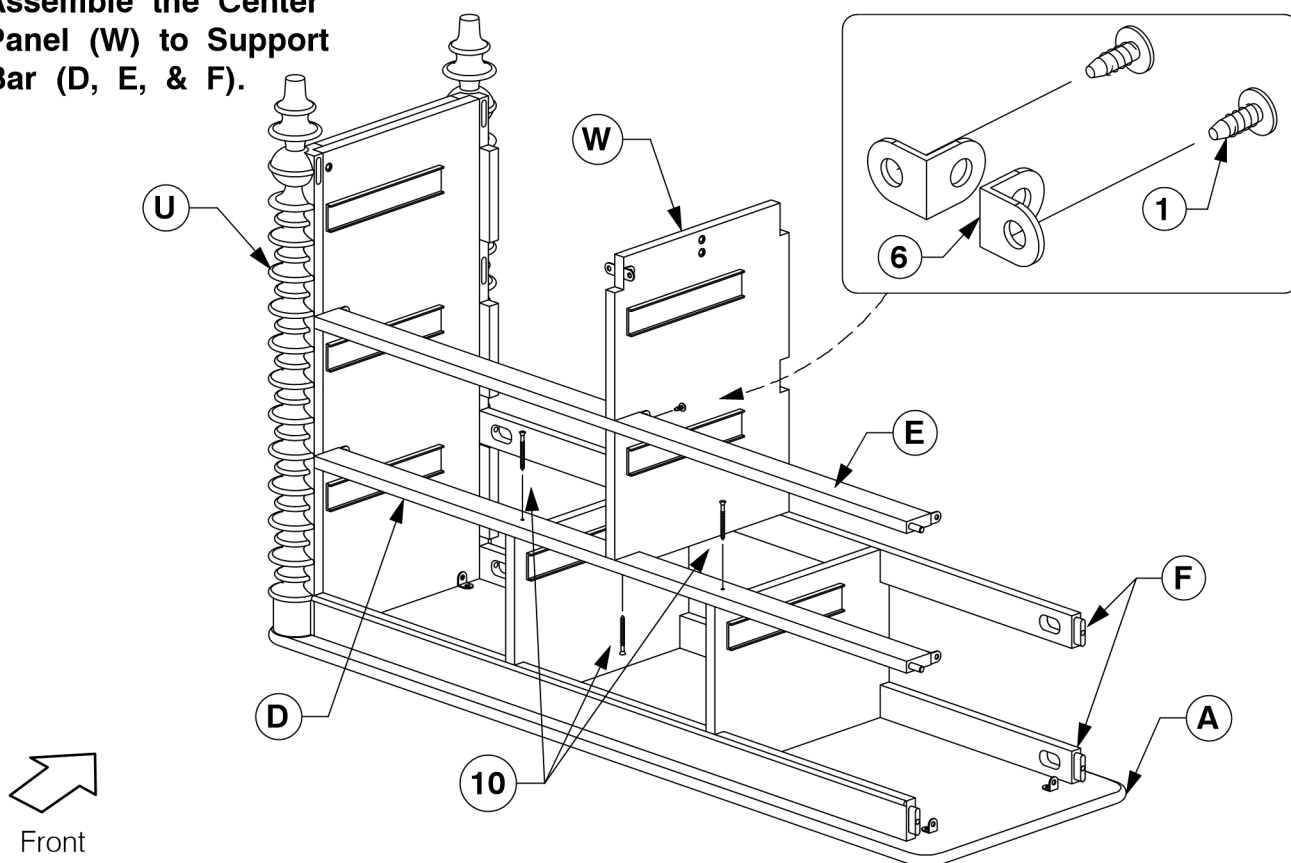


- 12** Fit the Support Bars (G) to the Center Panel (W).

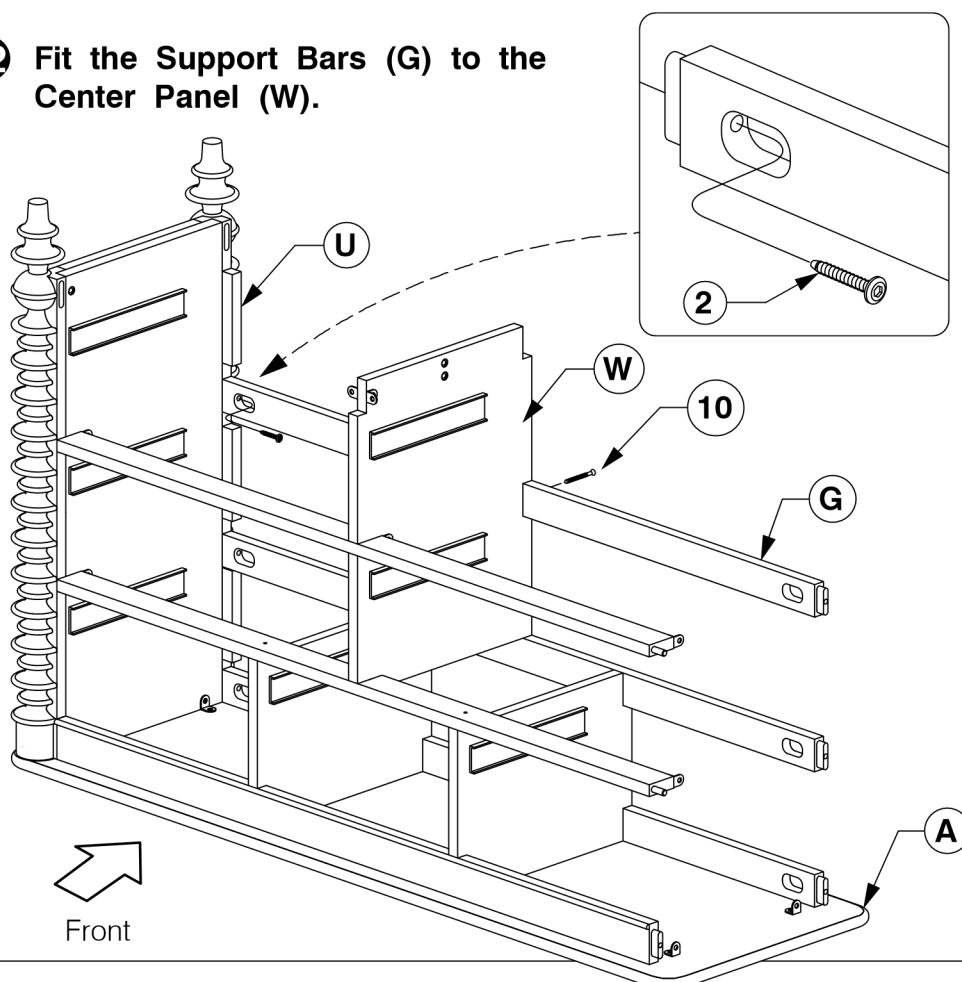


Step 1

Use the ball end of Allen key to start the bolt.

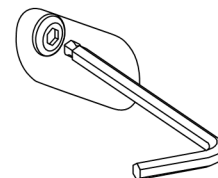

Step 2

Tighten fully with the straight end.

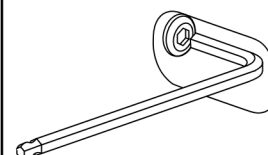


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 13** Attach the Support Bar (C & G) to the Right Side Panel (U) & Center Panel (W).

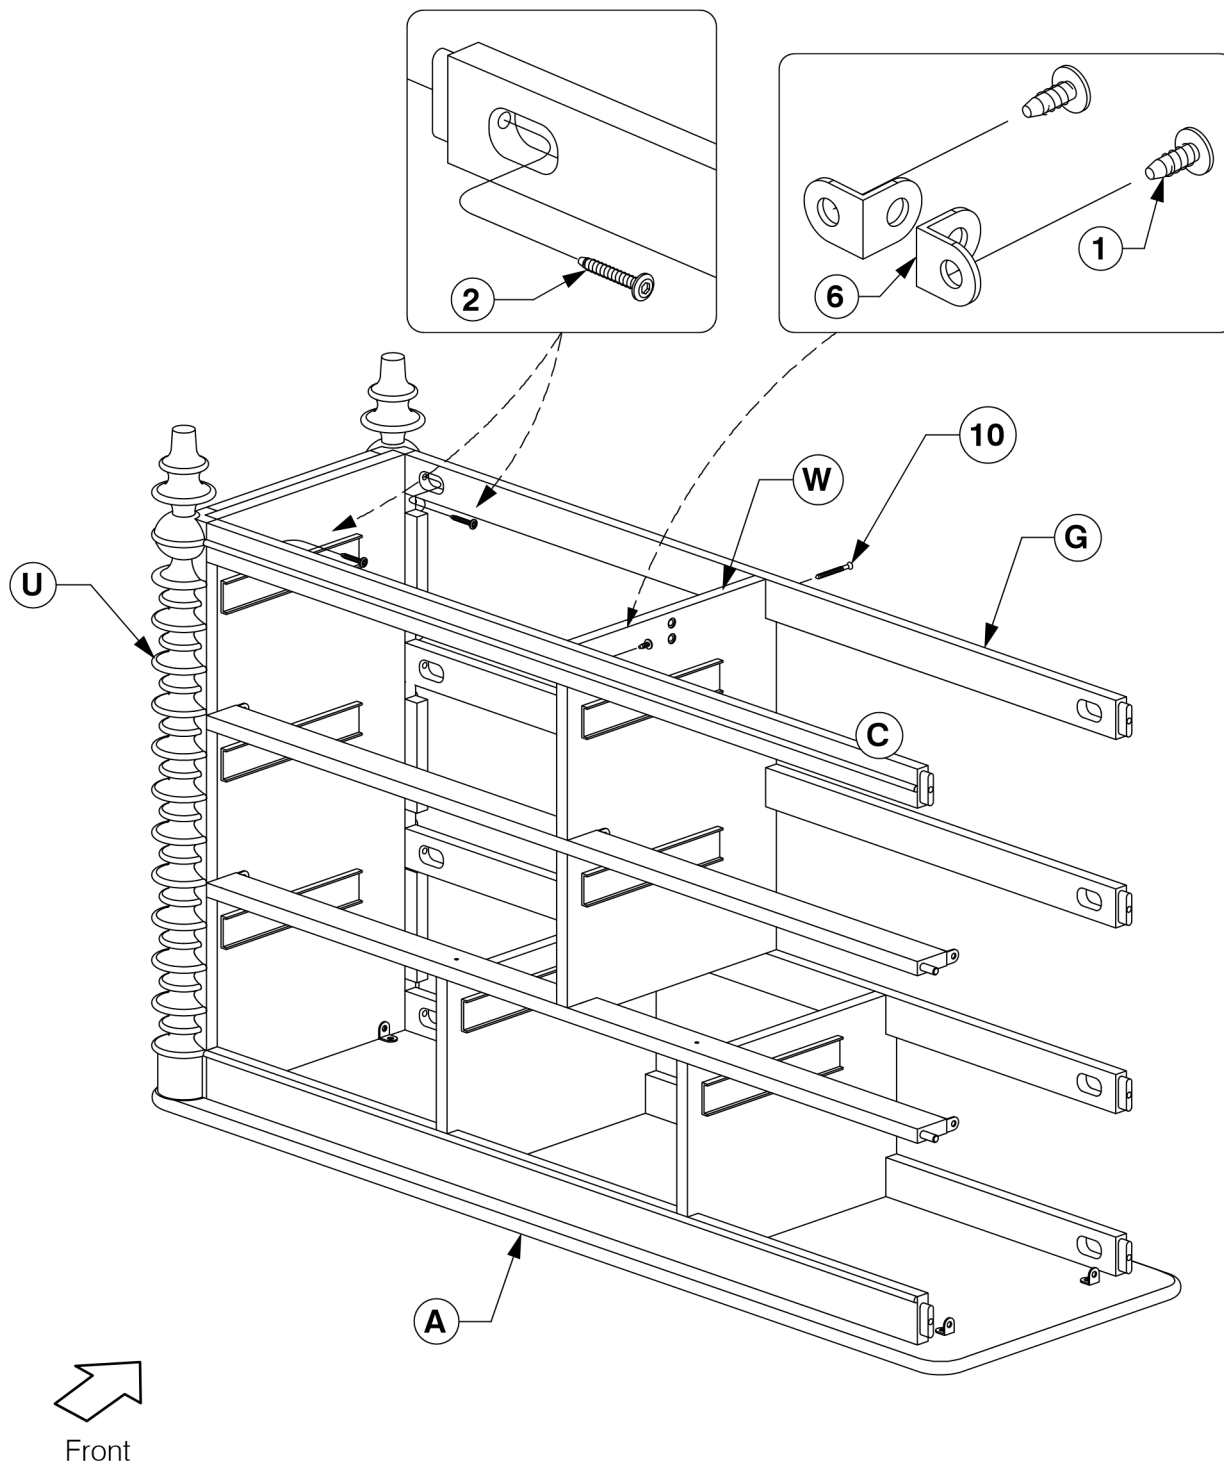


Step 1

Use the **ball end** of Allen key to start the bolt.

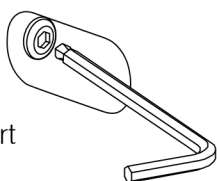

Step 2

Tighten fully with the **straight end**.


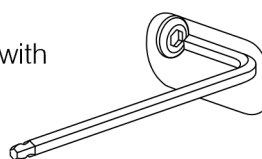


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 14** Assemble the Left Side Panel (T) to the Support Bars (B, C, D, E, F & G).

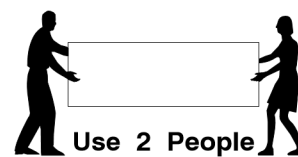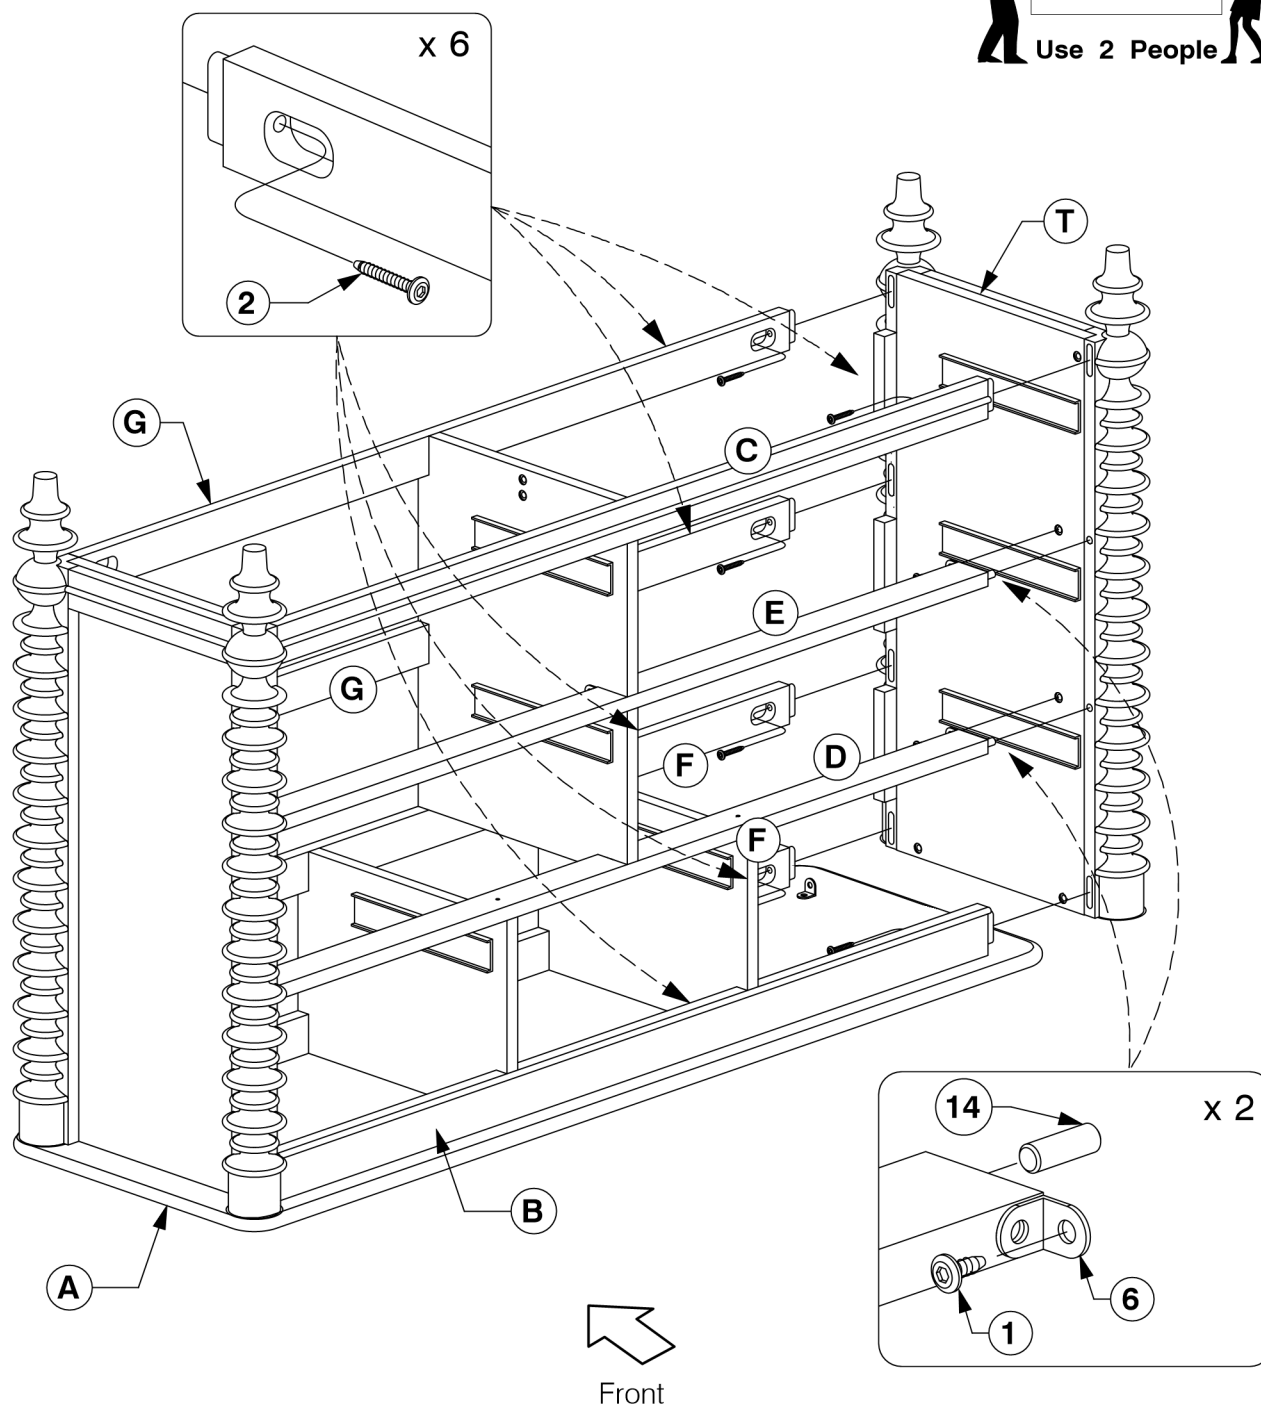


Step 1

Use the ***ball end*** of Allen key to start the bolt.

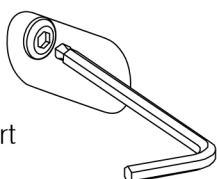

Step 2

Tighten fully with the ***straight end***.

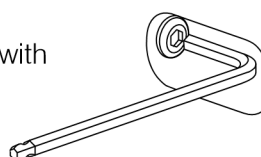


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 15** Tighten the bolts as shown.

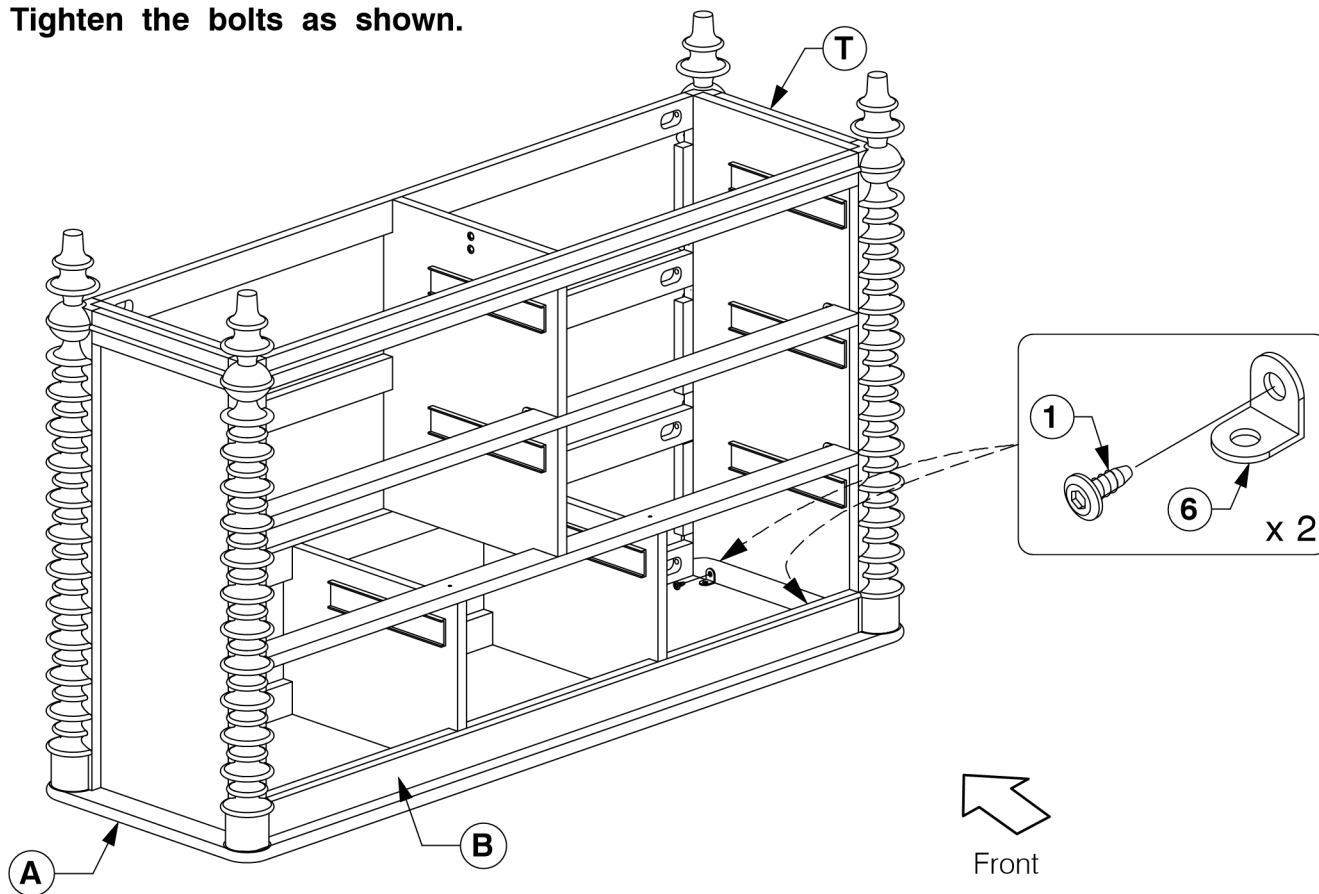

- 16** Fix the Adjustable foot to the bottom of the Center Post (H).
Fit the Center Post (H) to the Center Panel (W).

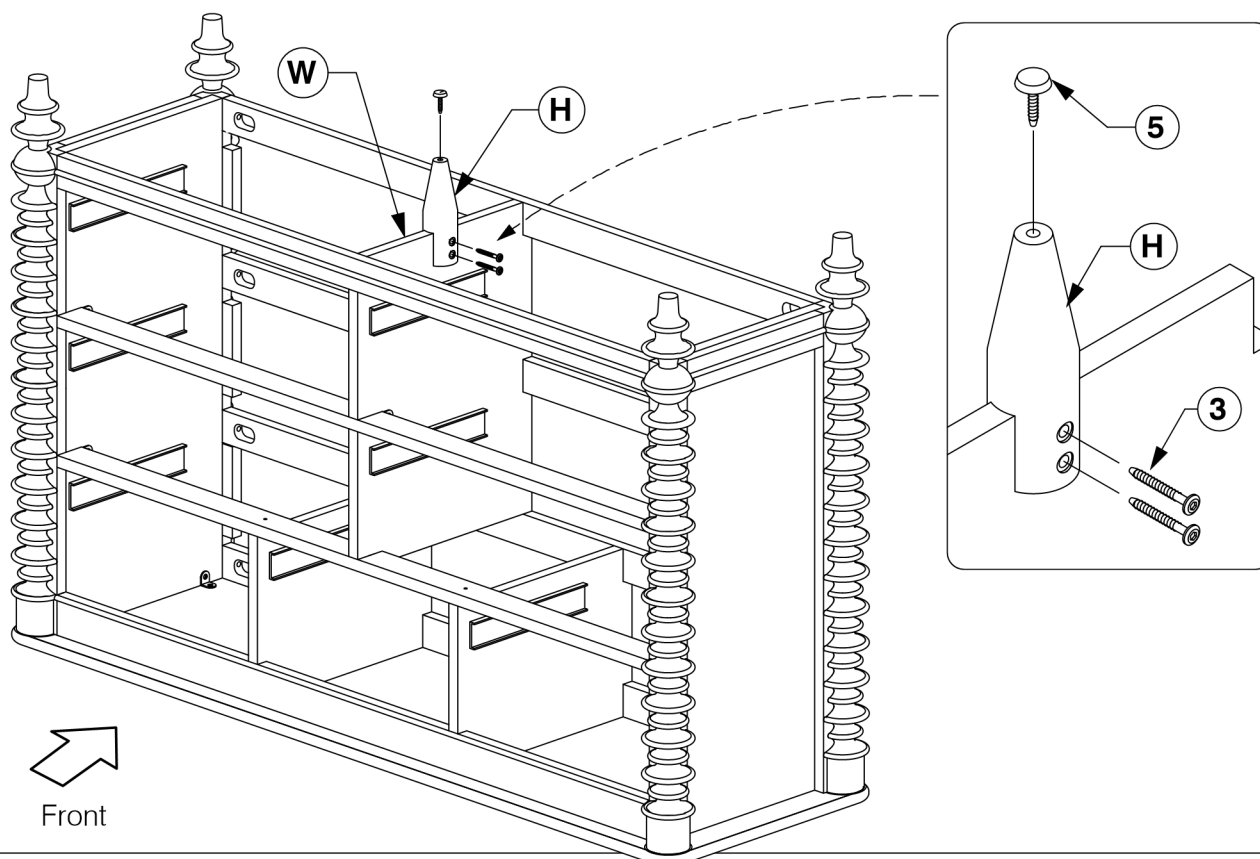


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 17** Attached the Back Panel (J) to the back of the frame.

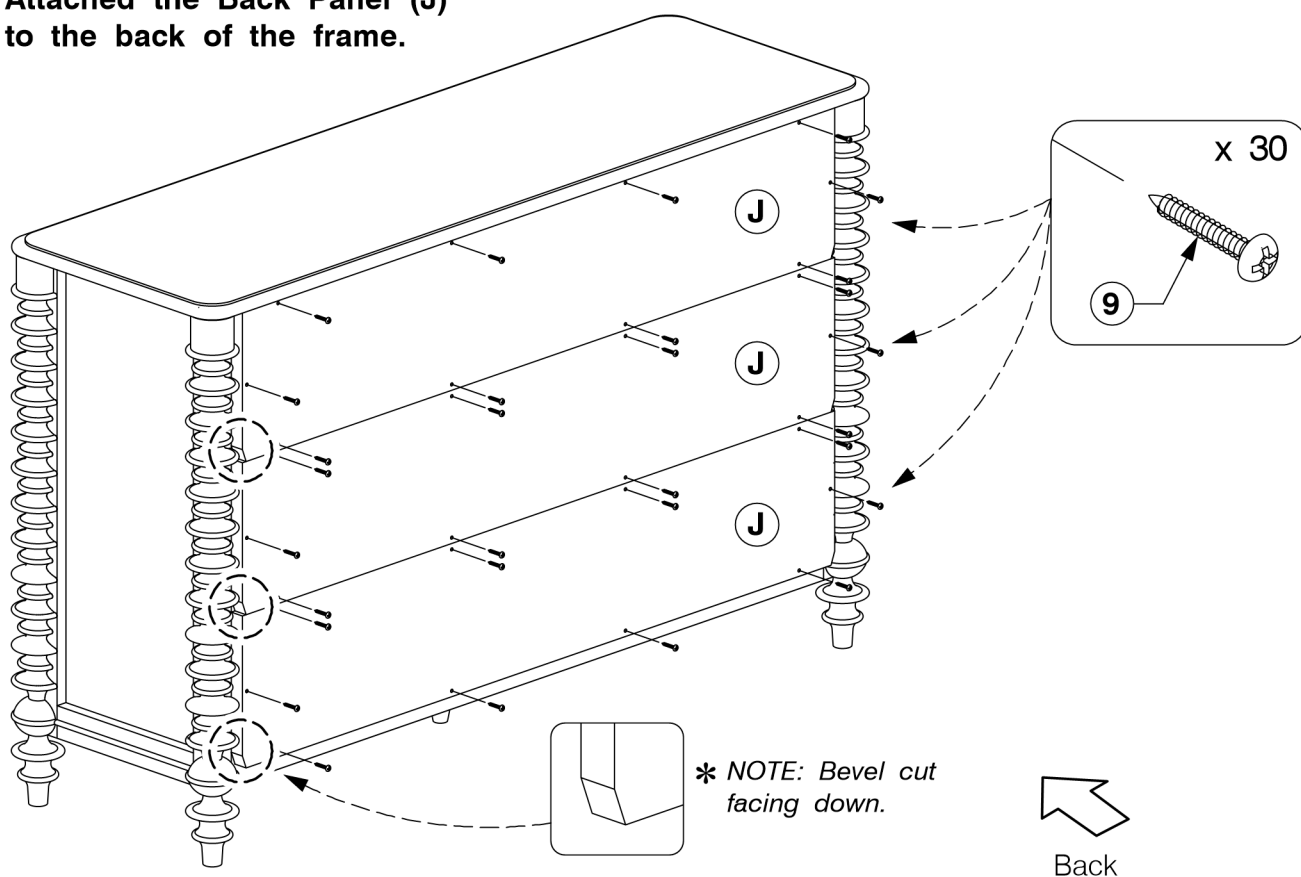

- 18** Fit the Drawer Box (K & N) to the casegood body.

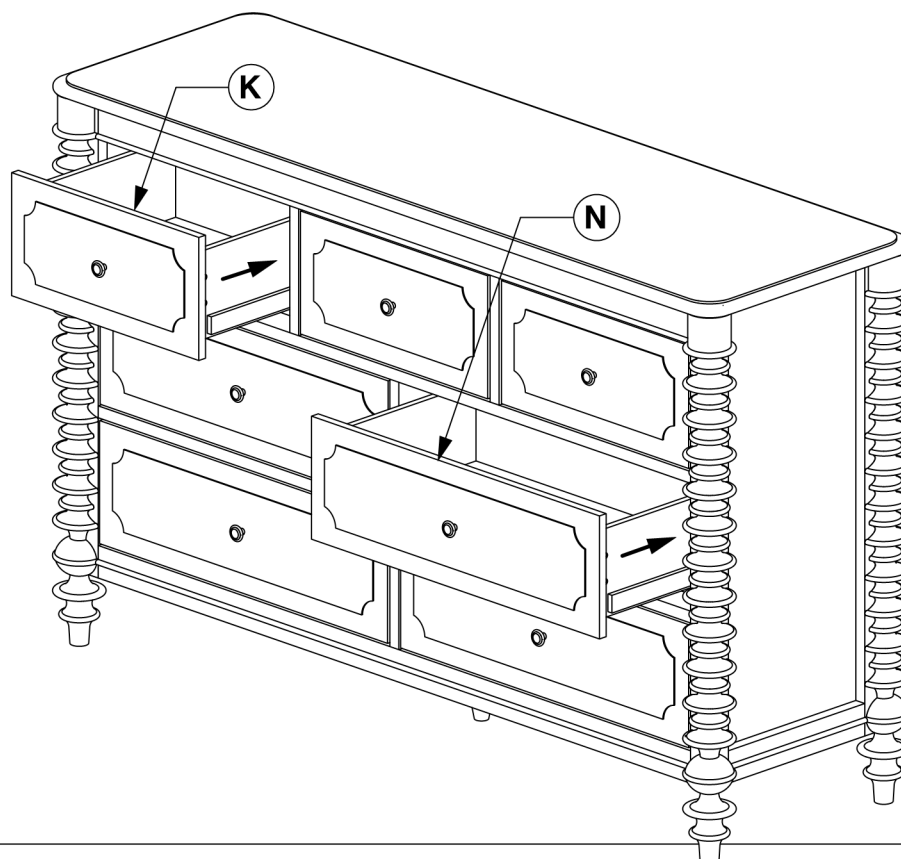


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

19 Adjust the Drawer Face (K & N).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

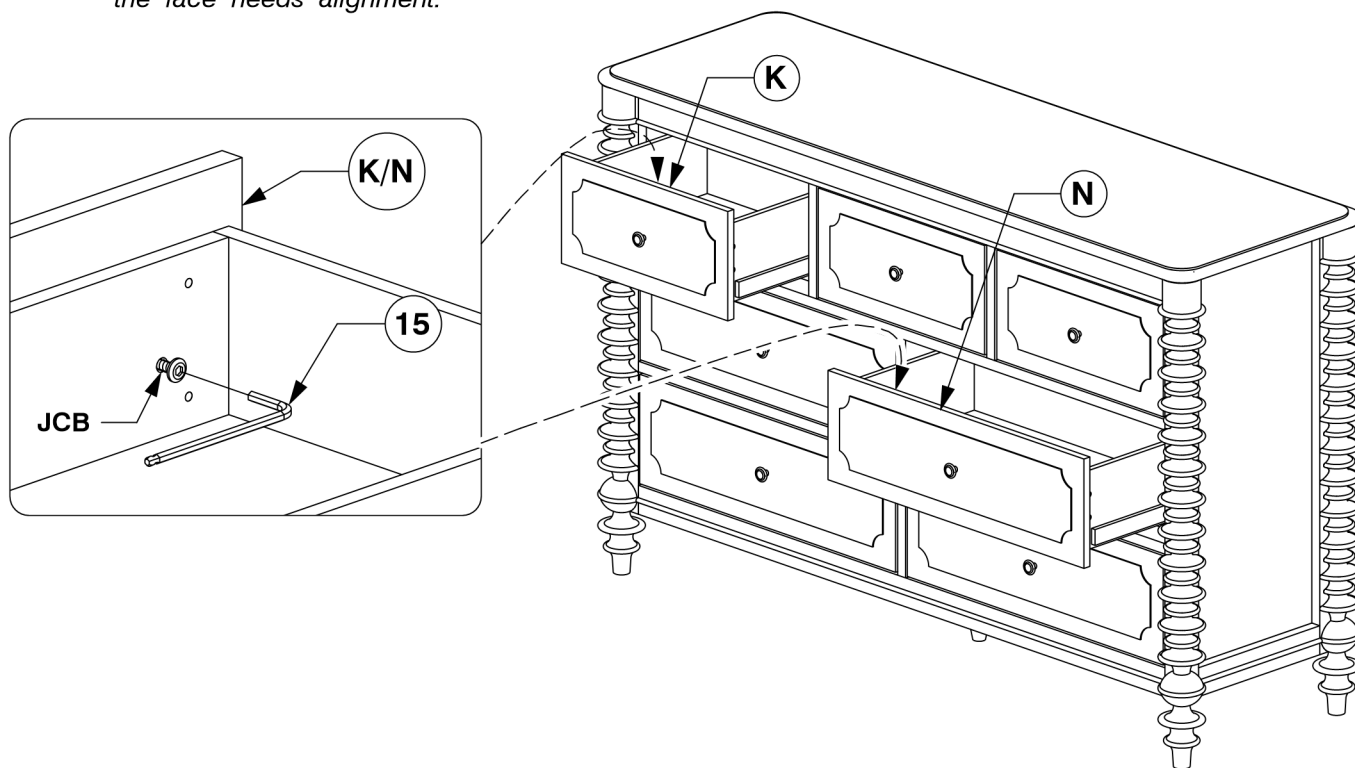




20 After the Drawer Faces (K & N) are aligned, secure with wood screws.

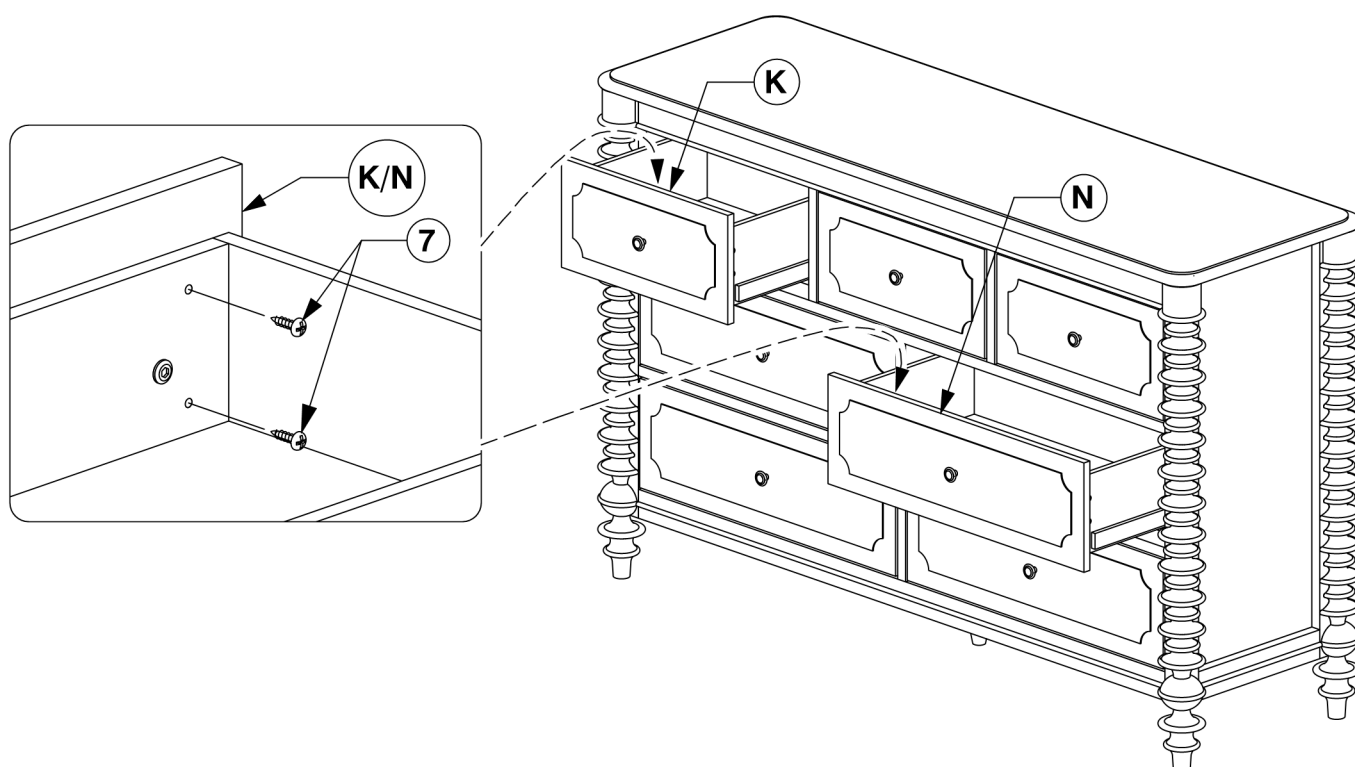

9029 1D Night Stand



Assembly Instructions

WI-0326

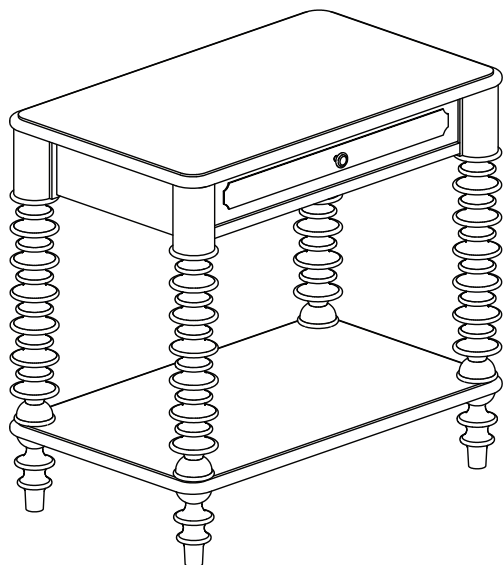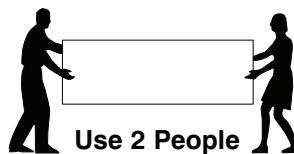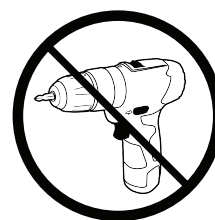

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

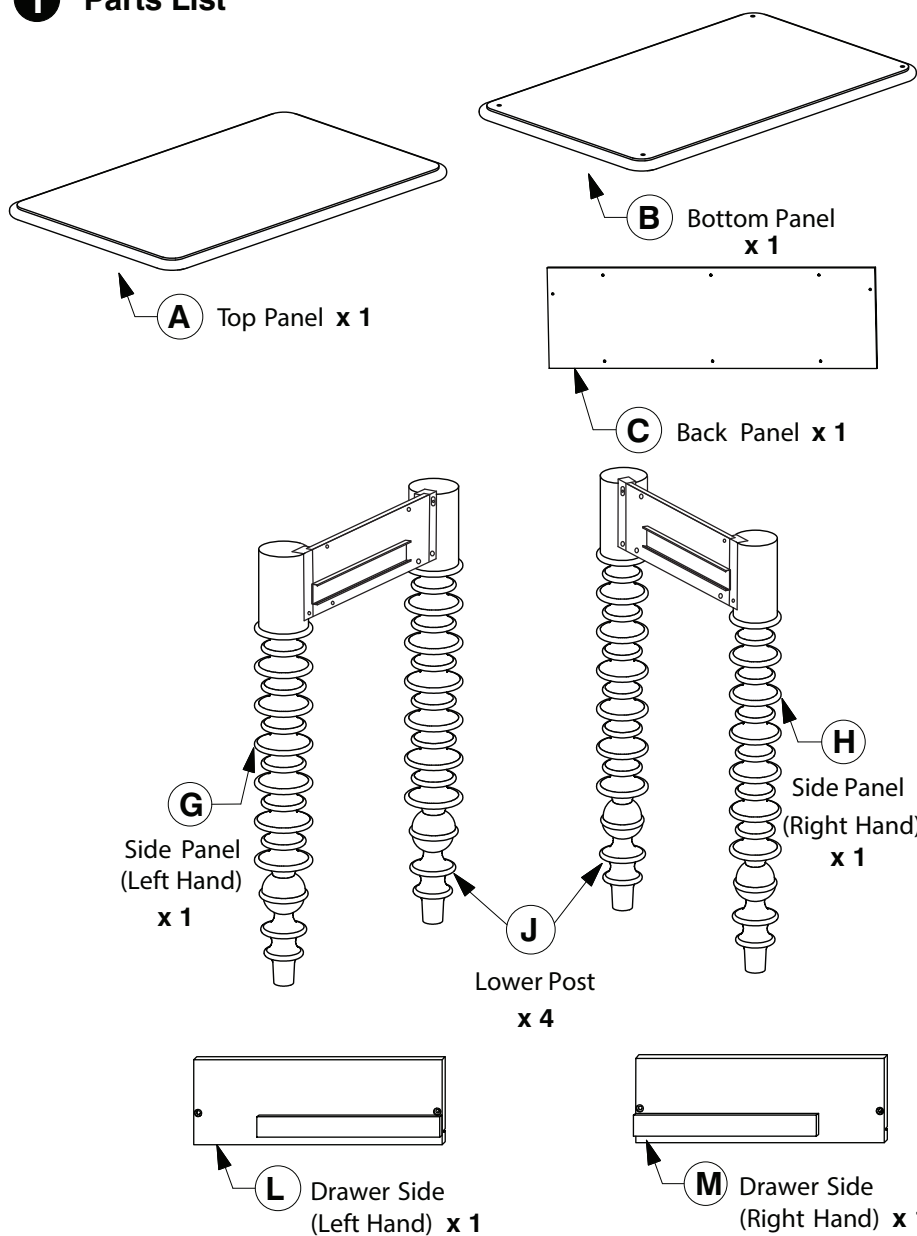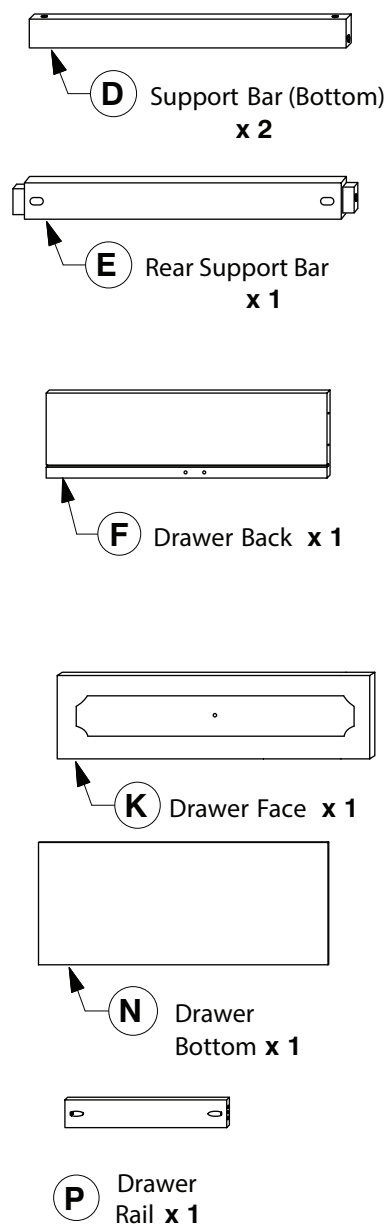


9029 1D Night Stand


Assembly Instructions

WI-0326


2 Hardware List

- | | | | | | |
|---|---|---|--|---|---|
|  |  |  |  |  |  |
| 1 M6 x 15mm JCB x 16 | 2 M6 x 40mm JCB x 2 | 3 Wood Dowel (M8 x 30mm) x 4 | 4 M6 x 25mm Wood Dowel x 4 | 5 'L' Bracket (5005-3) x 8 | 6 M4 x 16mm Wood Screw x 8 |
|  |  |  |  |  | |
| 7 M4 x 20mm Wood Screw x 4 | 8 M4 x 25mm Wood Screw x 6 | 9 Handle (9029) x 1 | 10 M4 x 22mm Wood Screw x 1 | 11 Allen Key x 1 | |

3 Assemble the Drawer Sides (L & M) & Drawer Rail (P) to the Drawer Face (K).

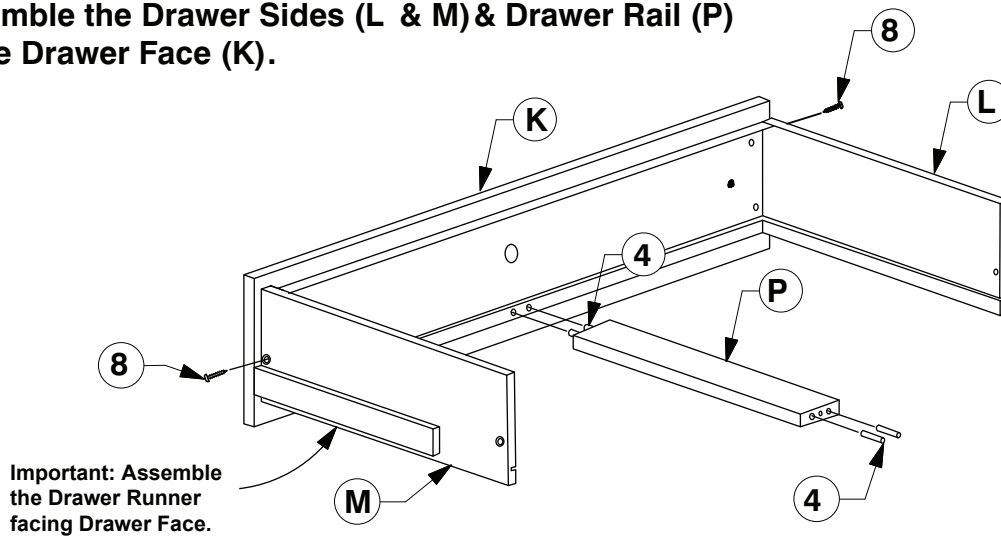


4 Slide the Drawer Bottom (N) into the groove on the Drawer Sides (L & M).

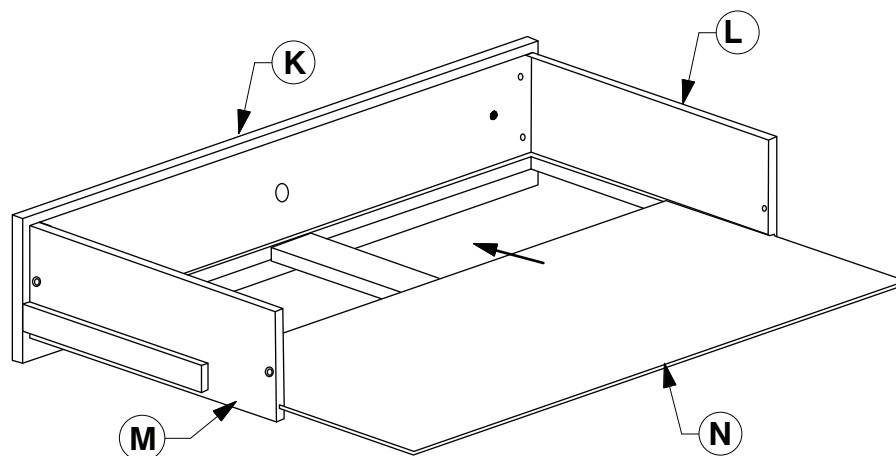

WI-0324

-

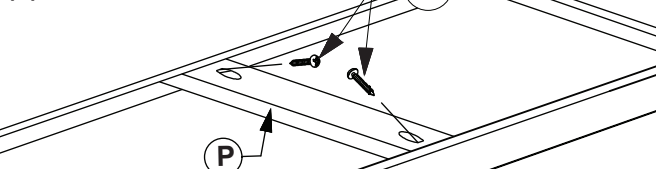- screws (8)**
- 
- The diagram shows a perspective view of the drawer unit. The top panel is labeled 'P'. Two screws, labeled '8', are being driven into the top panel. The screws are shown in the process of being inserted into pre-drilled holes. The front panel of the drawer unit is also visible, showing a handle cutout and a screw labeled 'K'.


- Bracket (5) to the Side Panel (G & H).
- the Lower Post (J) from the Side Panel (G & H).
-
- The diagram illustrates the installation of a bracket (5) to the side panel (G & H) and the lower post (J) from the side panel (G & H). The diagram includes a callout for 'x 4' and a detail view of the bracket (5) and screw (1).

9029 1D Night Stand


Assembly Instructions

WI-0326

- 8** Fit the "L" Braket (5) and Wood Dowel (3) to the Support Bar Bottom (D).

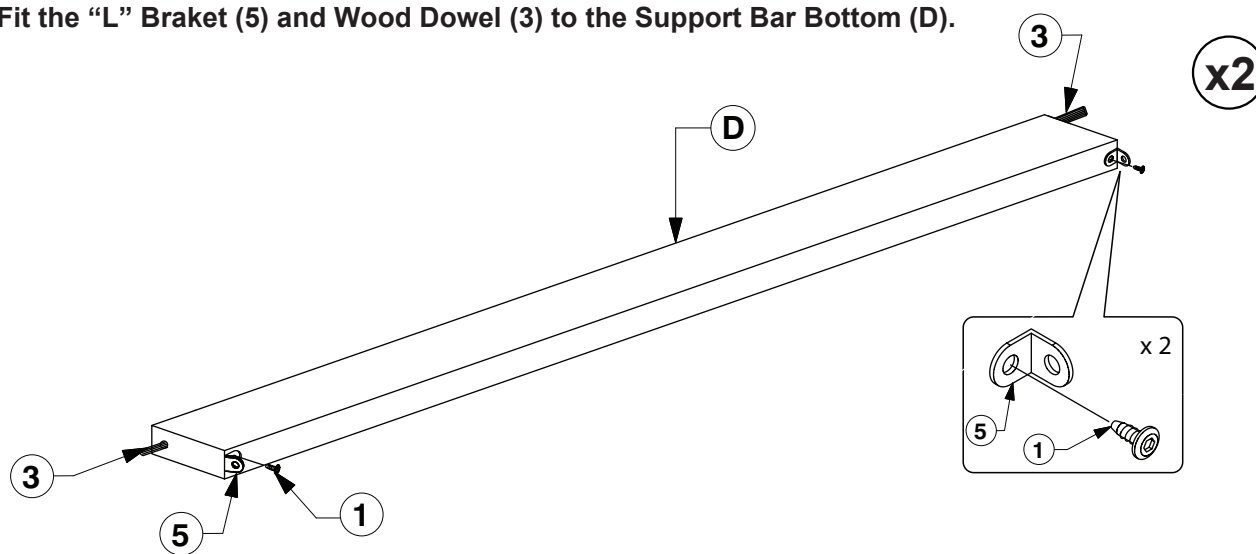

- 9** Assemble the Support Bar (Rear & Bottom) (D & E) to the Side Panel (G).

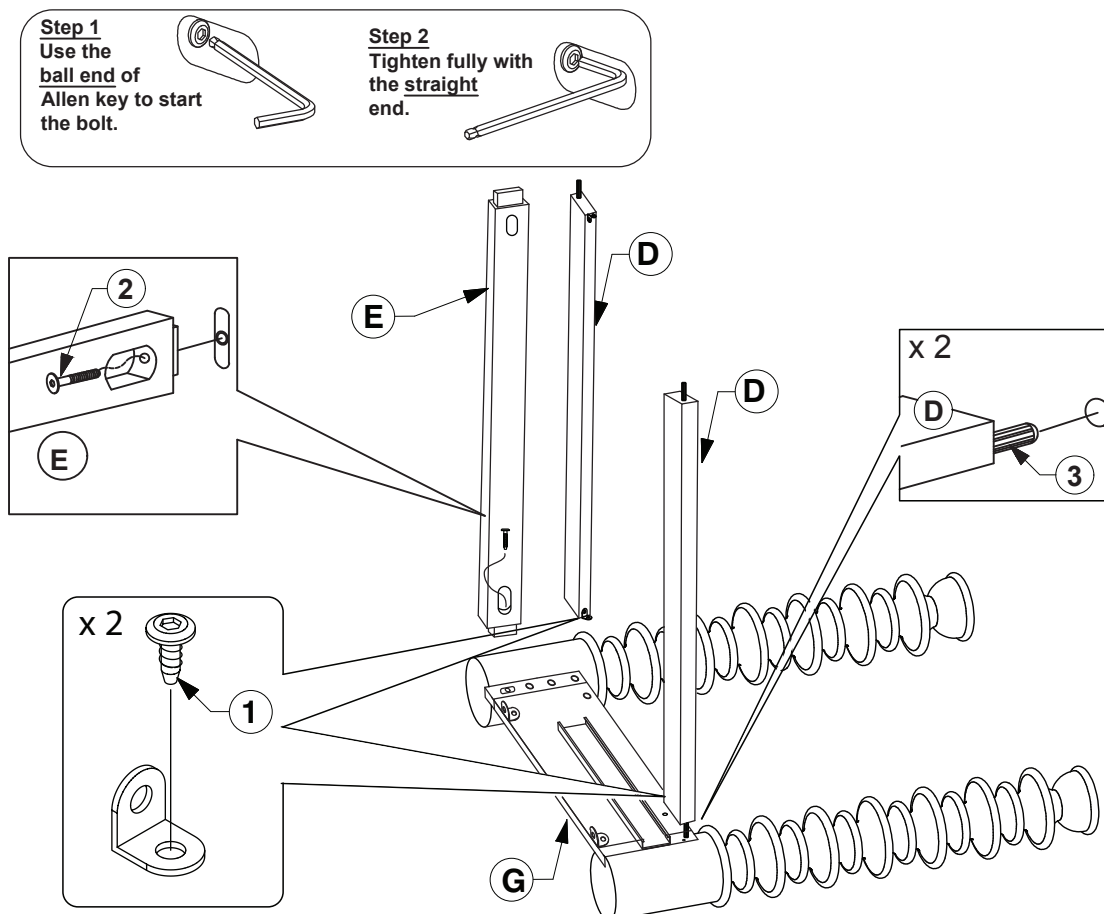


9029 1D Night Stand


Assembly Instructions

WI-0326


- 10** Fit the Support Bar Rear & Bottom (D & E) to the Side Panel (H).

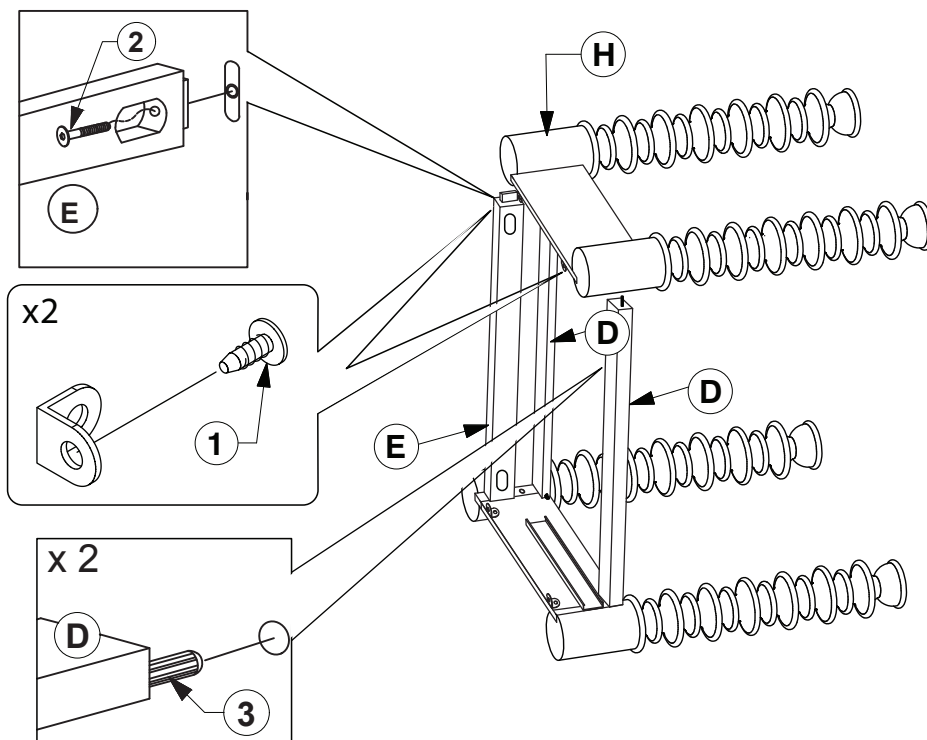


Step 1
Use the ball end of Allen key to start the bolt.

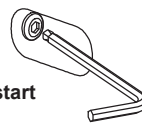

Step 2
Tighten fully with the straight end.



- 11** Assemble the Side Panel (G & H) to the Top Panel (A).

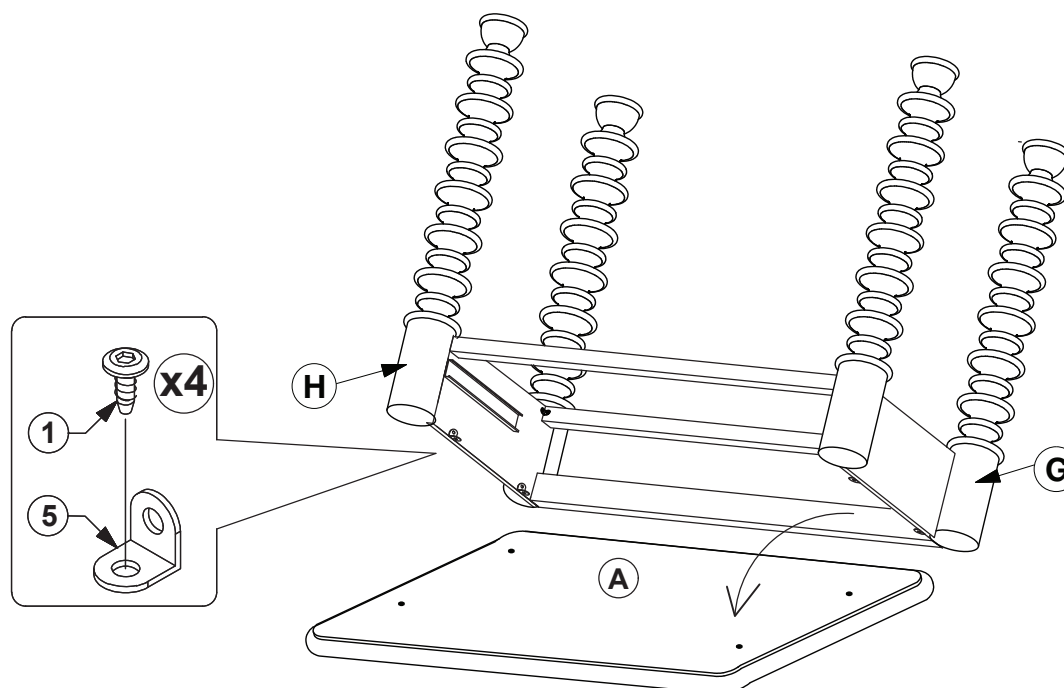


9029 1D Night Stand


Assembly Instructions

WI-0326

- 12** Use Screw to tighten the Back Panel (C) to the back of frame.

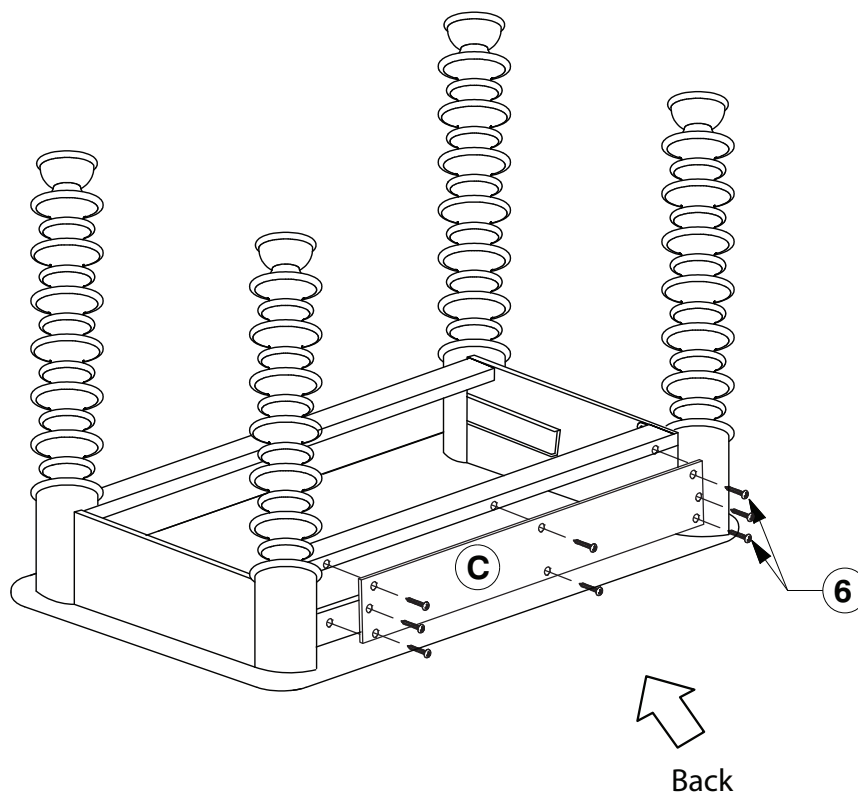

- 13** Fit the Bottom Panel (B) and Lower Post (J) to the Bottom Side Panel (G & H).

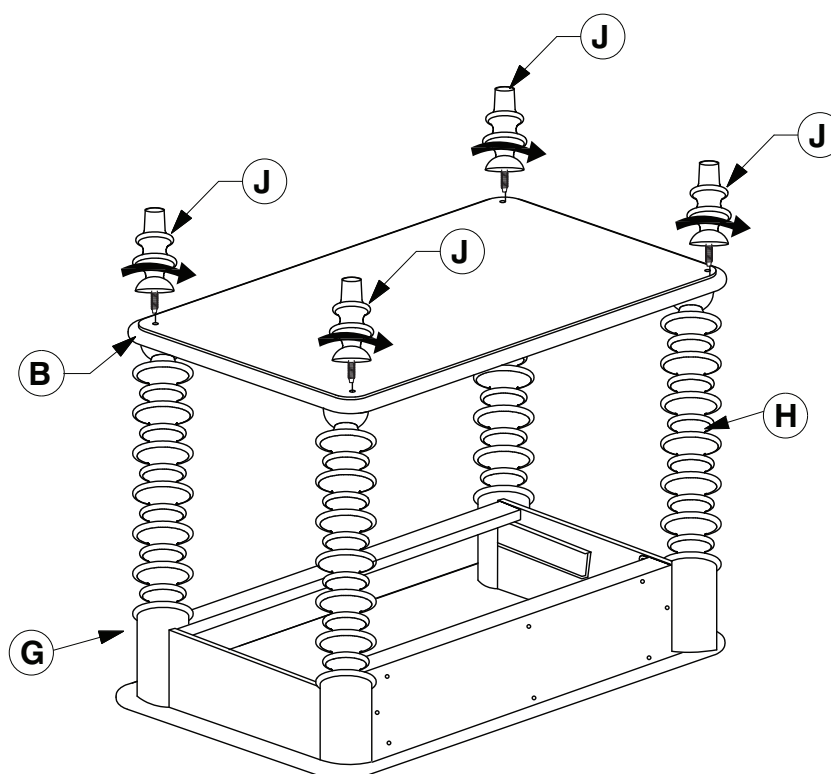


9029 1D Night Stand

Assembly Instructions


WI-0326

14 Fit the Drawer to the Casegood Body.

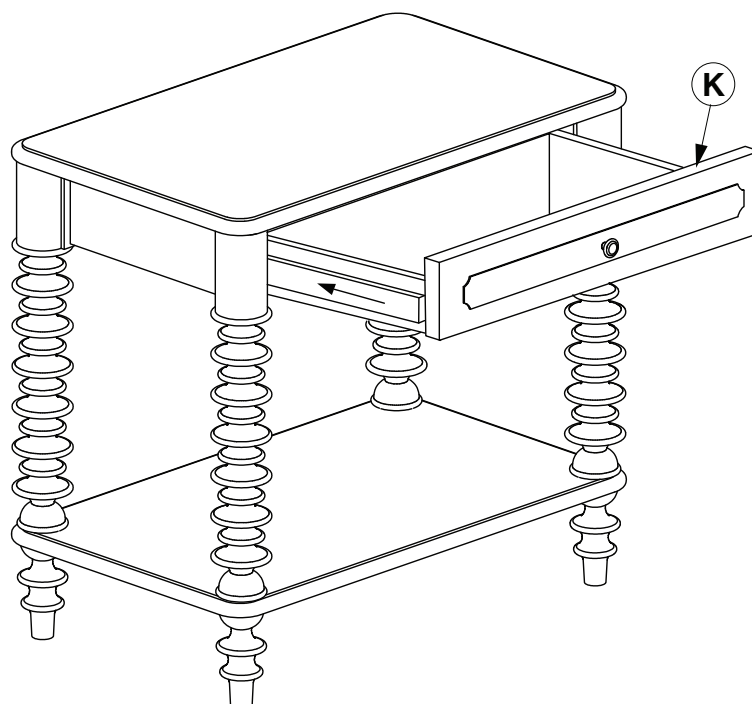

15 Fit and adjust the Drawer Face (K).

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

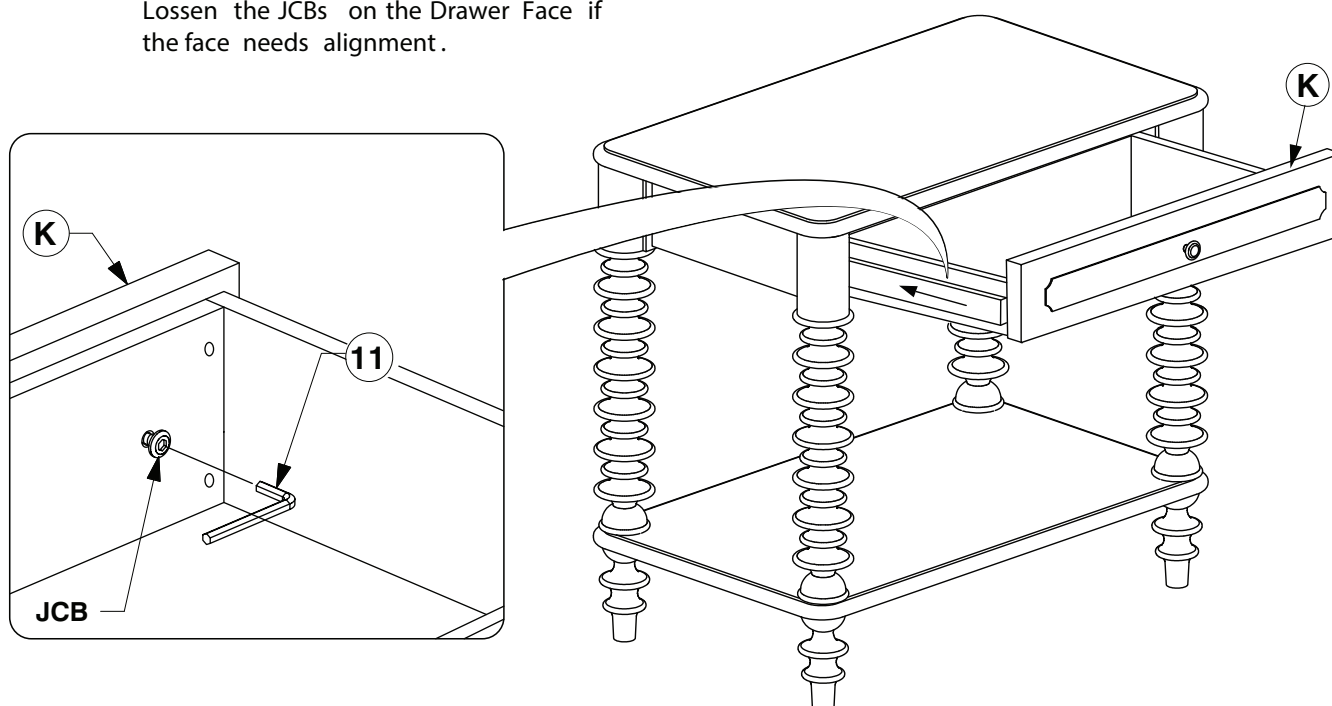

9029 1D Night Stand

Assembly Instructions

WI-0326

- 16** After the Drawer Face (K) are aligned, secure with wood screw.

