0267 King Bed

Assembly Instructions

WI-0326

1 Assembled View

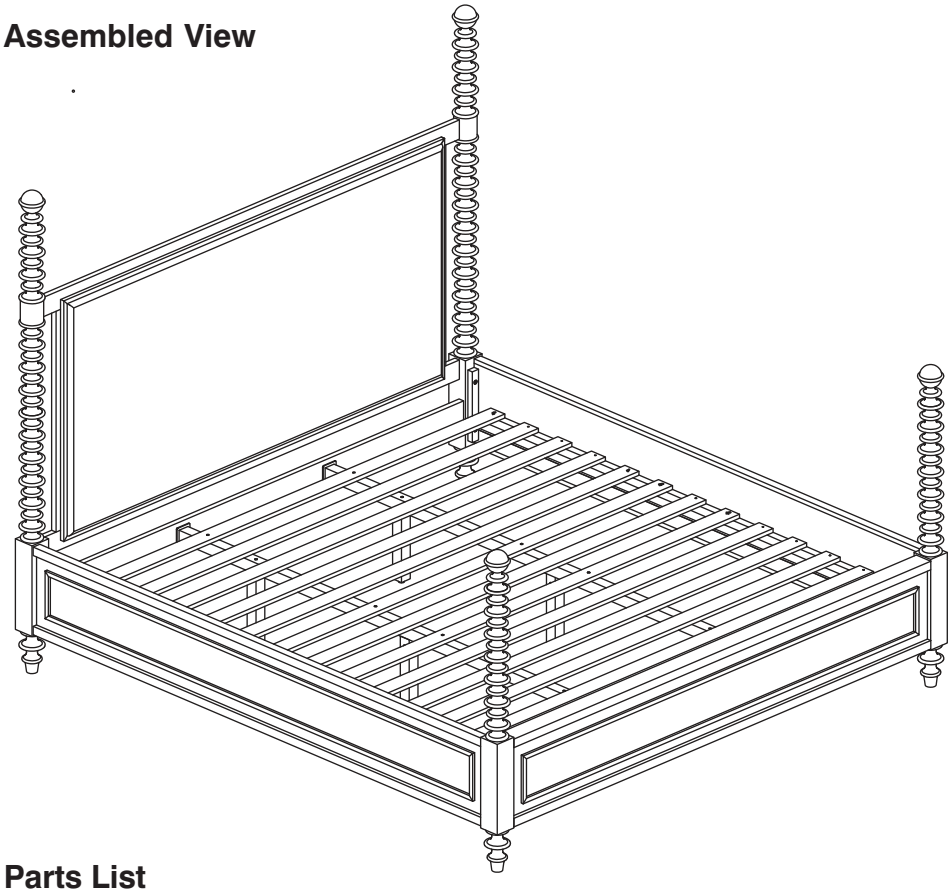

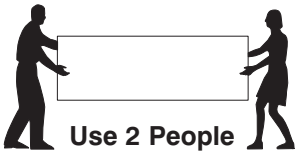

<u>Note:</u> Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

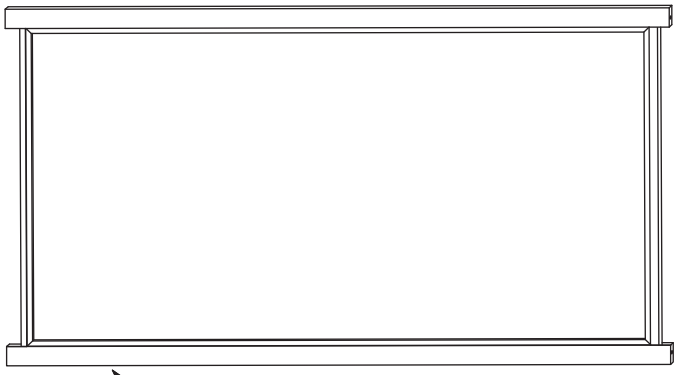

A Headboard Panel **x 1**



B Headboard Support **x 1**

3 Parts List

Parts in Box B:

C Headboard Upper Post **x 1**



D Headboard Center Post (Left Hand) **x 1**



E Headboard Center Post (Right Hand) **x 1**

F Footboard Upper Post **x 1**

G Footboard Post (Right Hand) **x 1**



H Footbord Post (Left Hand) **x 1**

J Headboard/ Footboard Lower Post **x 4**

Parts in Box C:

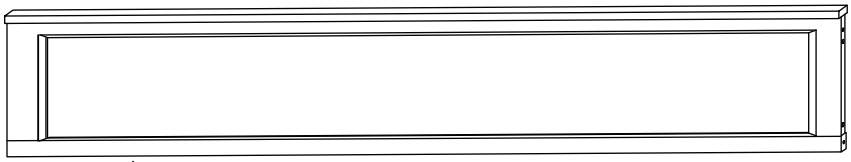

L Side Rail **x 2**

N Support Leg **x 3**

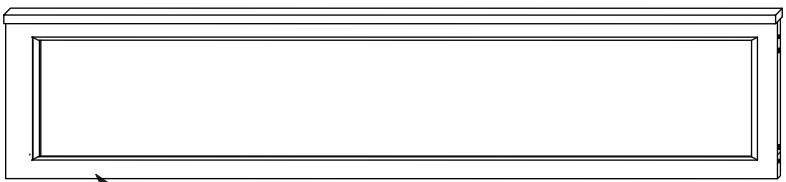

K Footboard Panel **x 1**

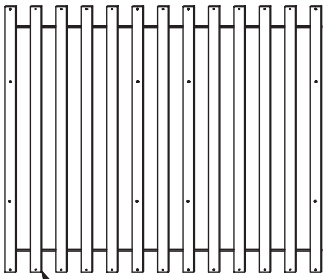

O Set of Bed Slats **x 1**



M Long Support **x 1**

4 Hardware List

1 M6 x 15mm JCB **x 8**

2 M6 x 40mm JCB **x 36**

3 M6 x 90mm JCB **x 6**

4 Barrel Nut **x 6**



5 Adjustable Foot **x 6**

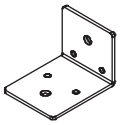

6 Center Rail Bracket **x 4**

7 Wood Screw (M4 x 32mm) **x 18**

8 Allen Key **x 1**

5 Assemble the Support Leg (J) to the Long Support (M).

x2

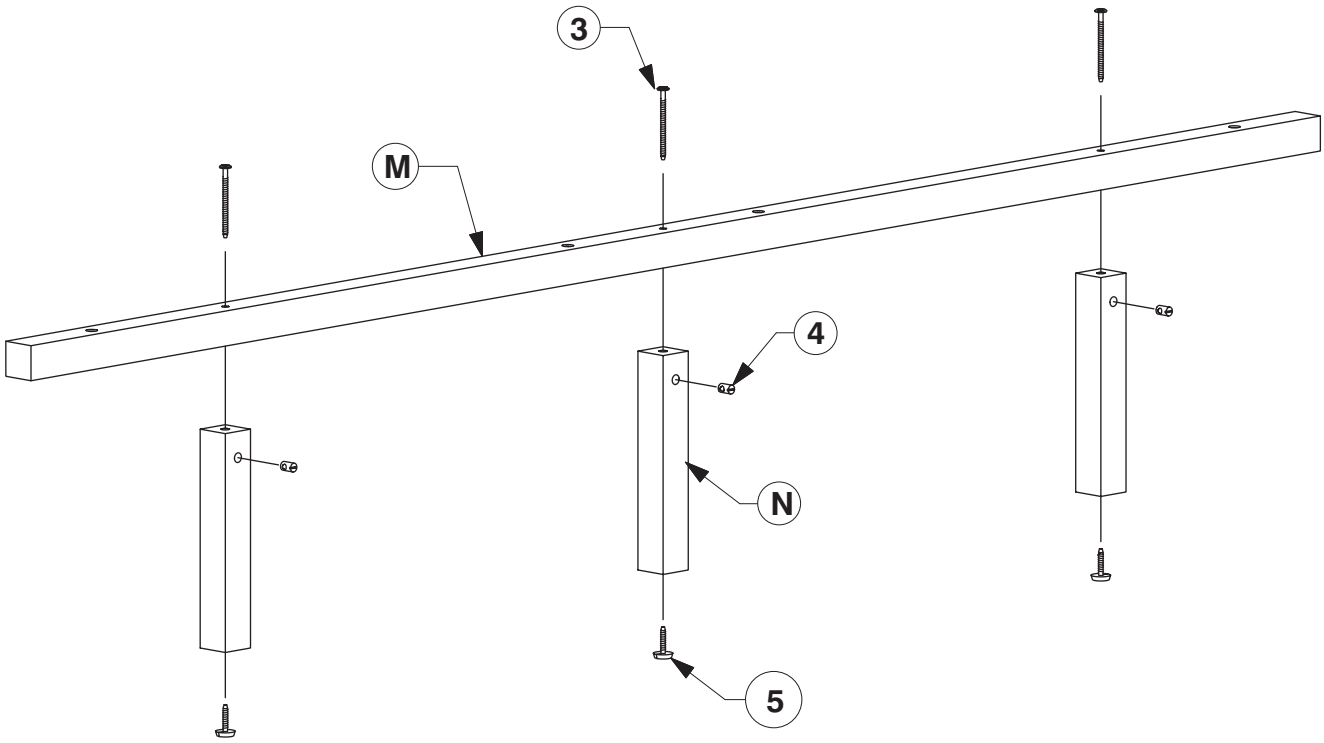

6 **Assemble Headboard Upper Post (G) and HB/FB Lower Lower Post (C) to the Headboard Center Post (E).**

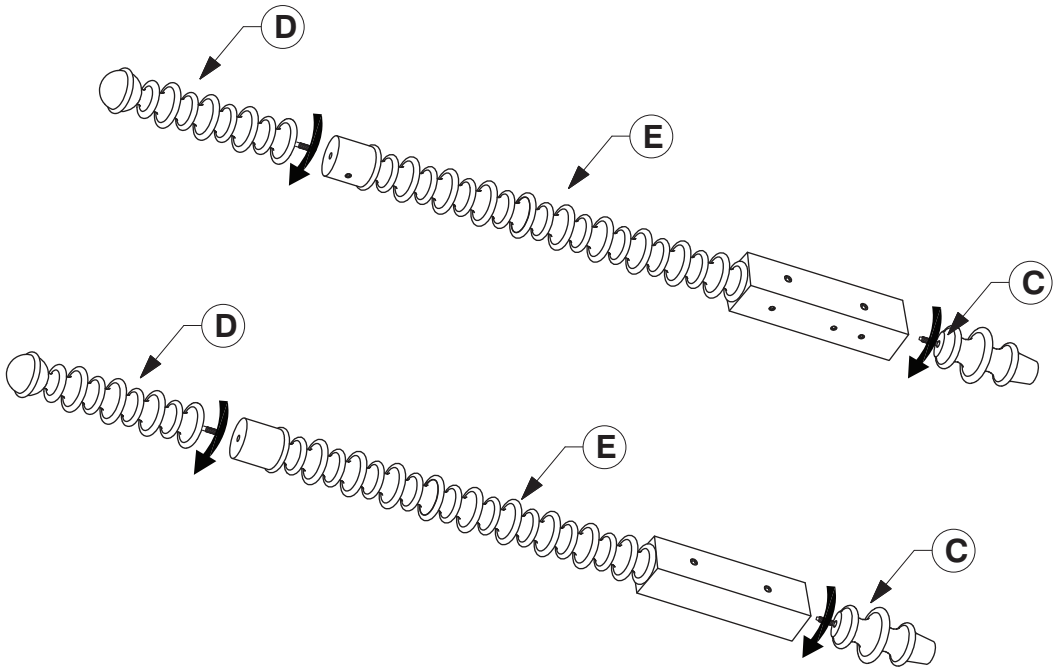

7 **Assemble Headboard Lower Post (G) to the Headboard Center Post (E).**

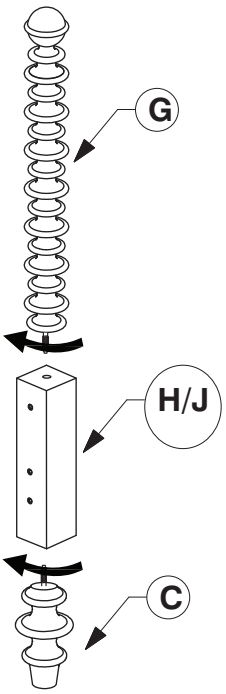

7 **Attach the Headboard Post (D) to the Headboard Panel (A) and Headboard Support (B).**

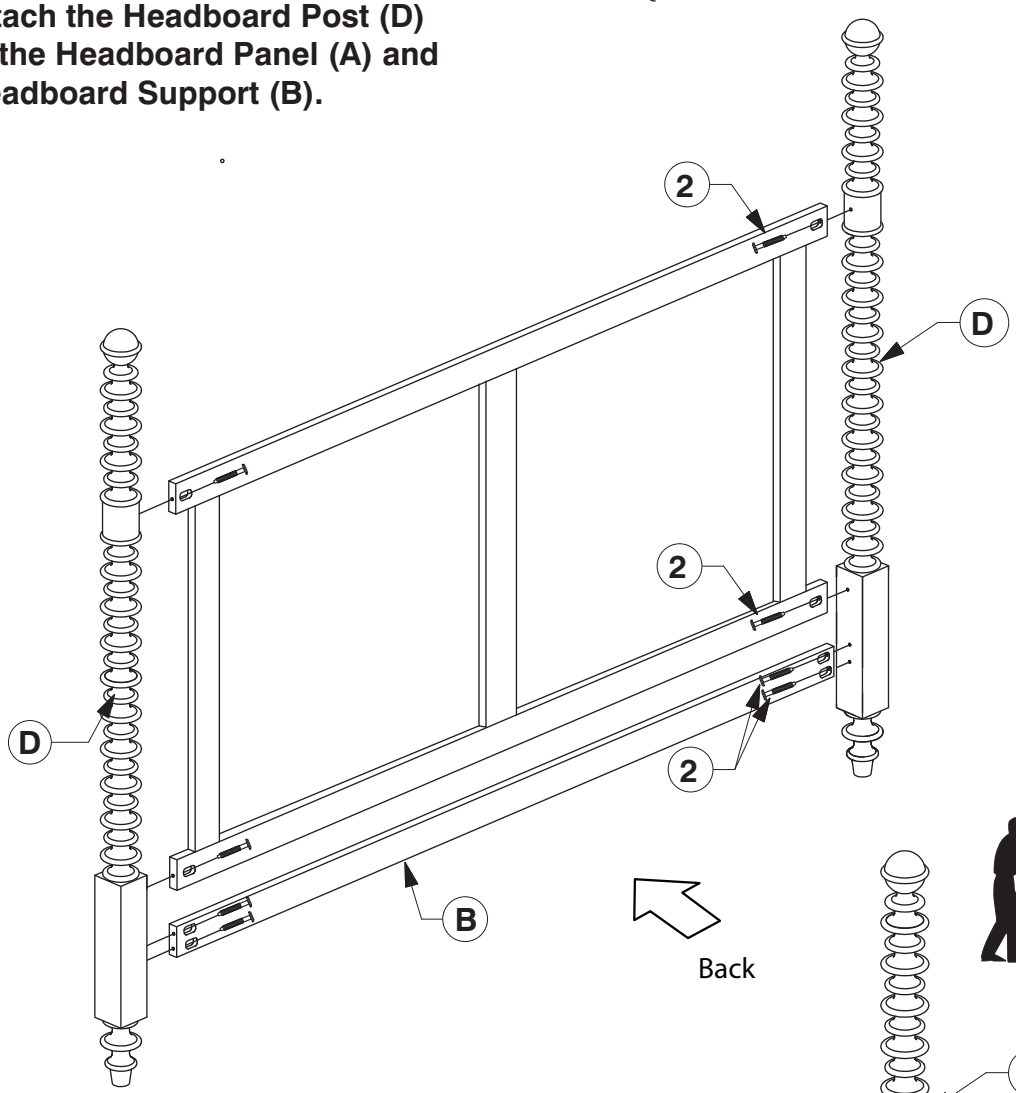

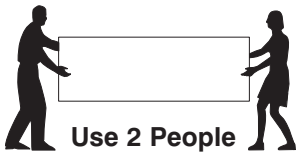

8 **Attach the Footboard Post (F) to the Footboar Panel (K).**

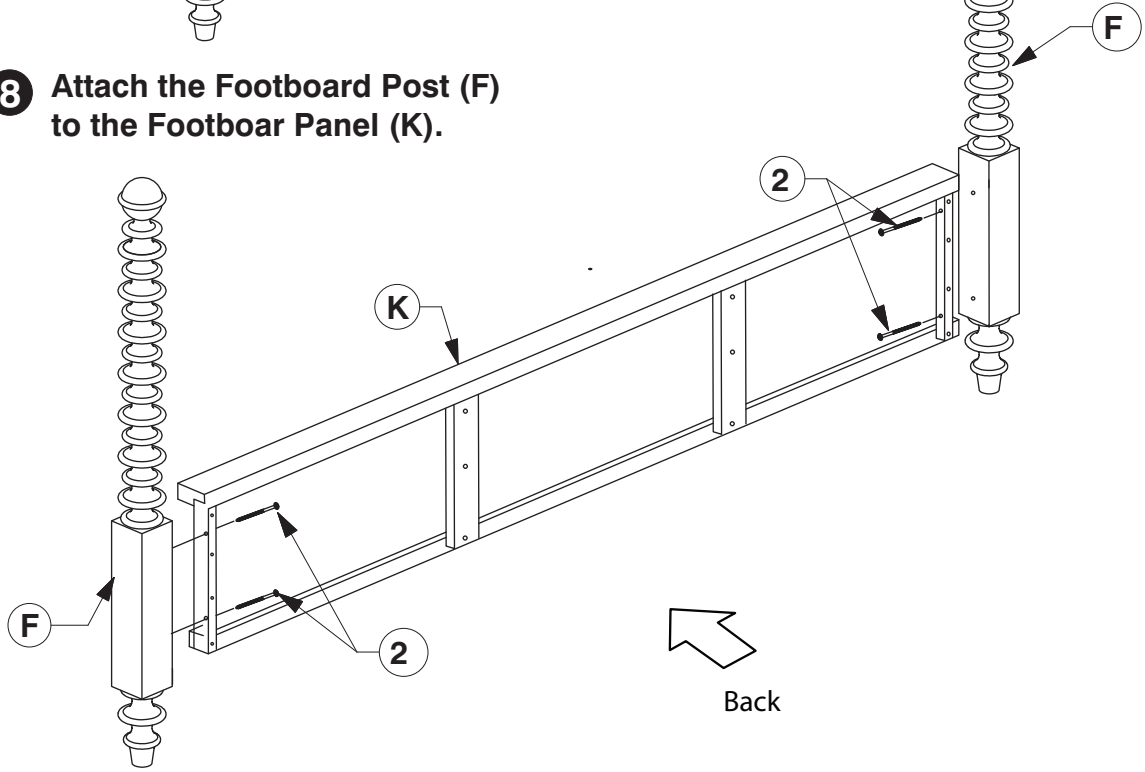

9 **Fit the Center Rail Bracket (6) to the Headboard Support (B).**

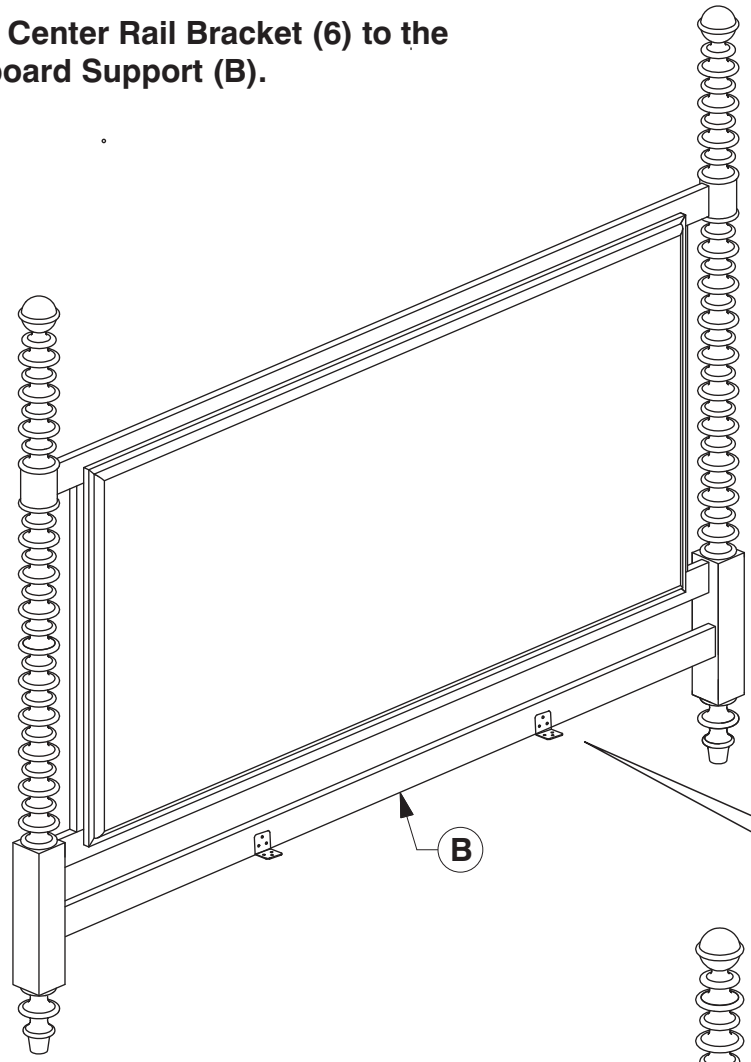

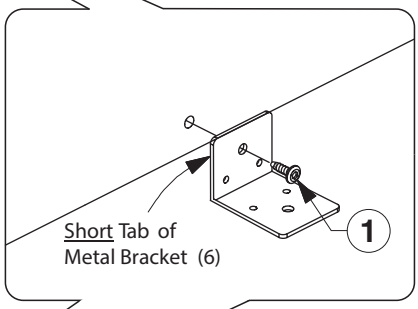

10 **Fit the Center Rail Bracket (6) to the Footboard Panel (K).**

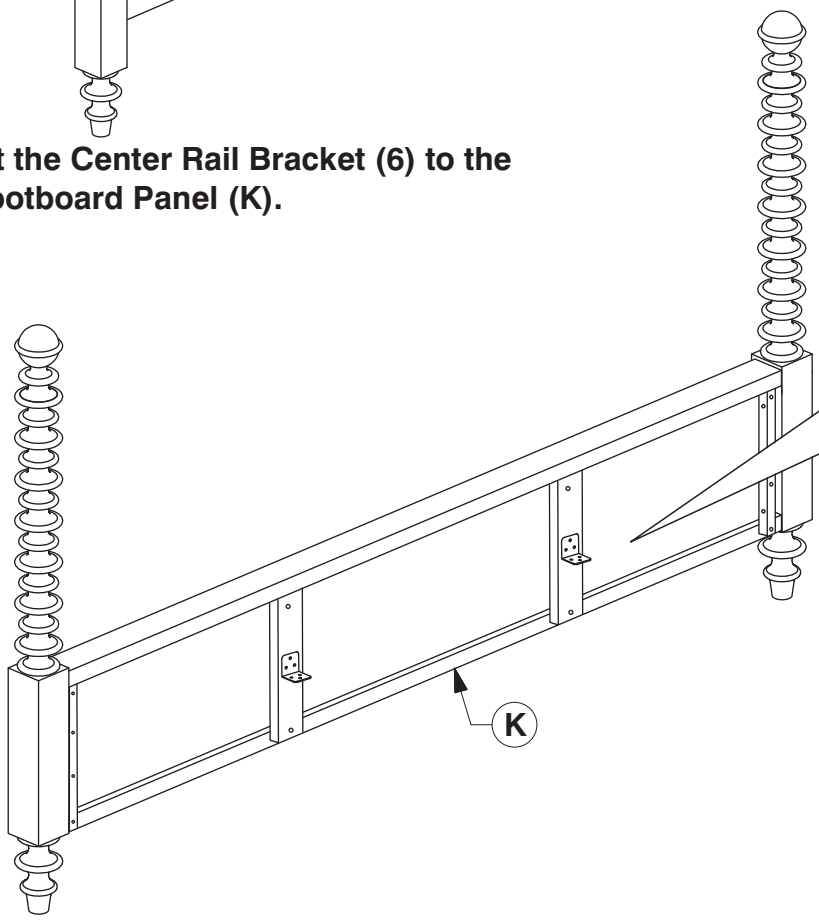

11 Assemble the Side Rail (L) to the Head / Footboard.

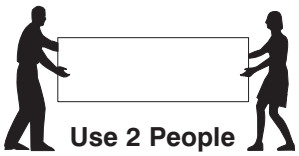

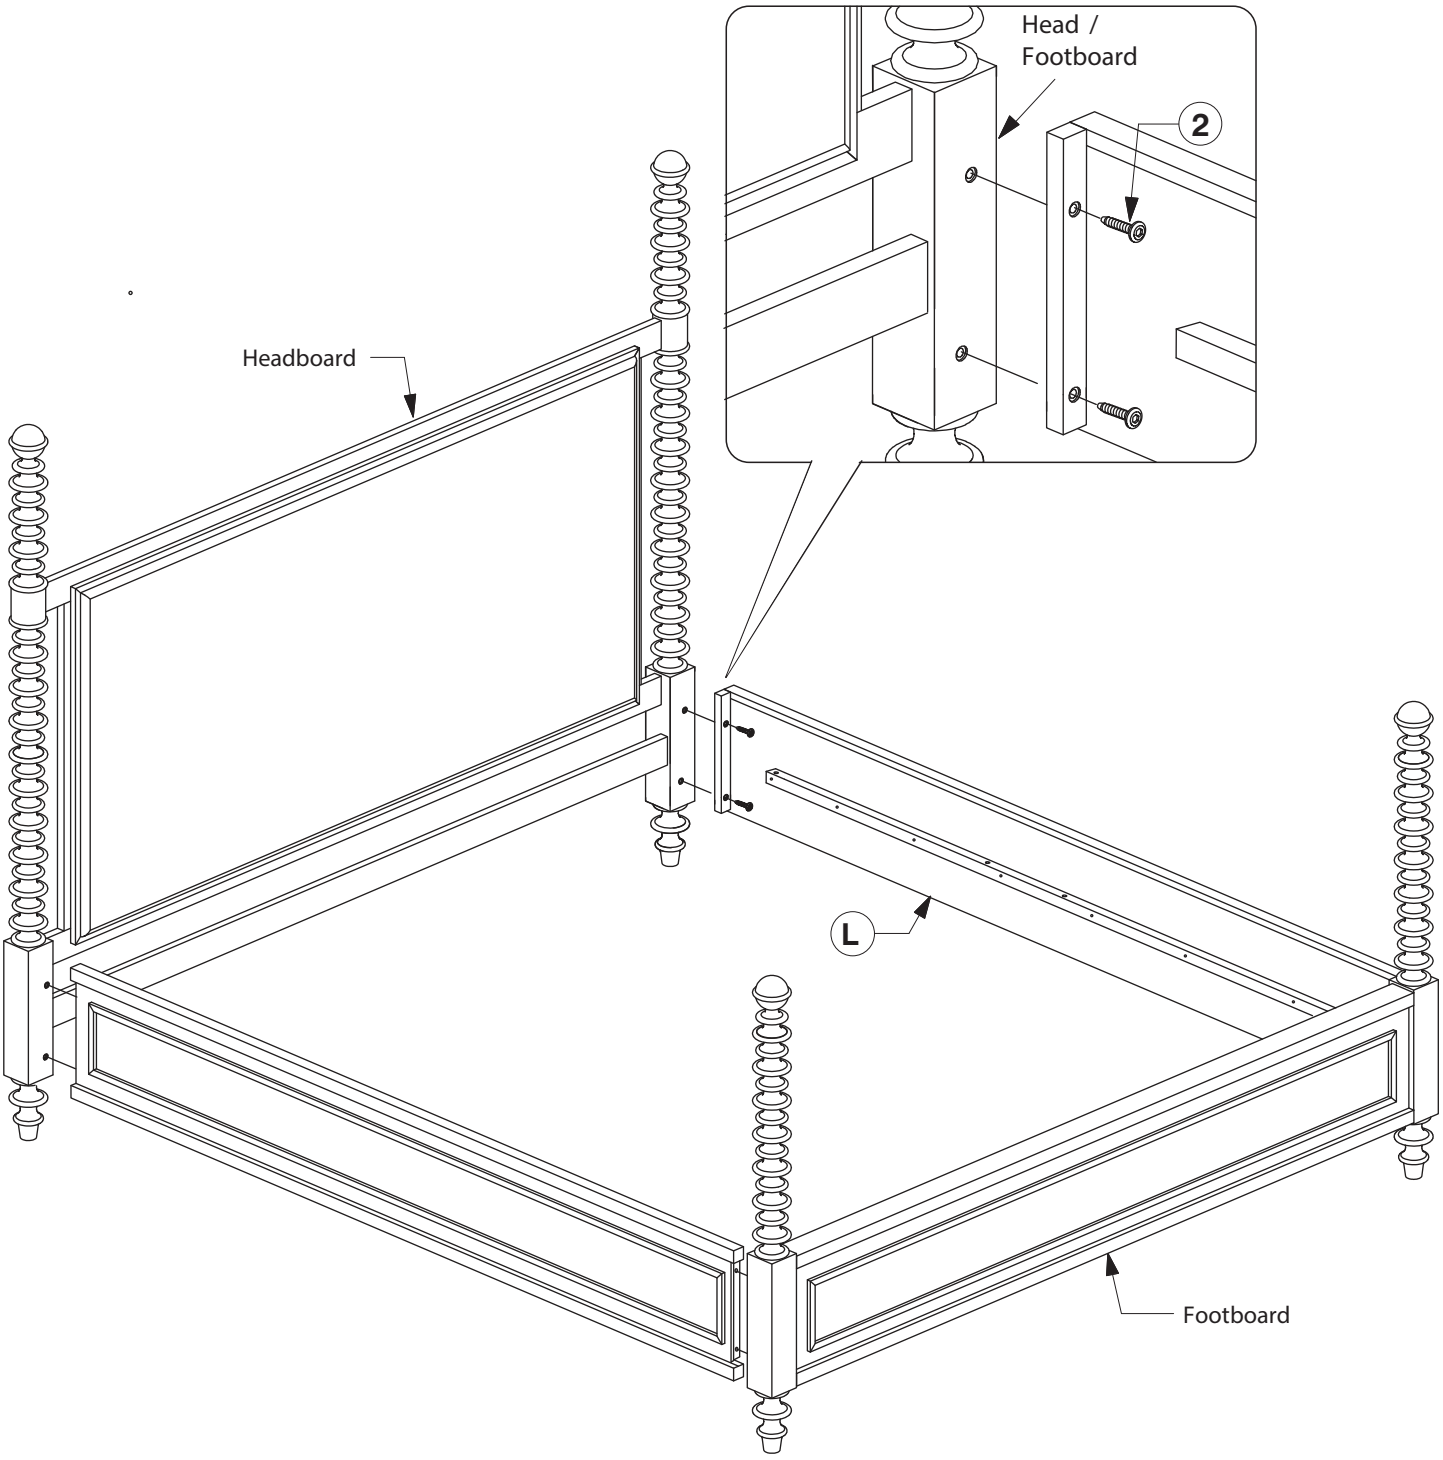

12 Bolt the Long Support (M) to the Center Rail Brackets on the Headboard/Footboard.

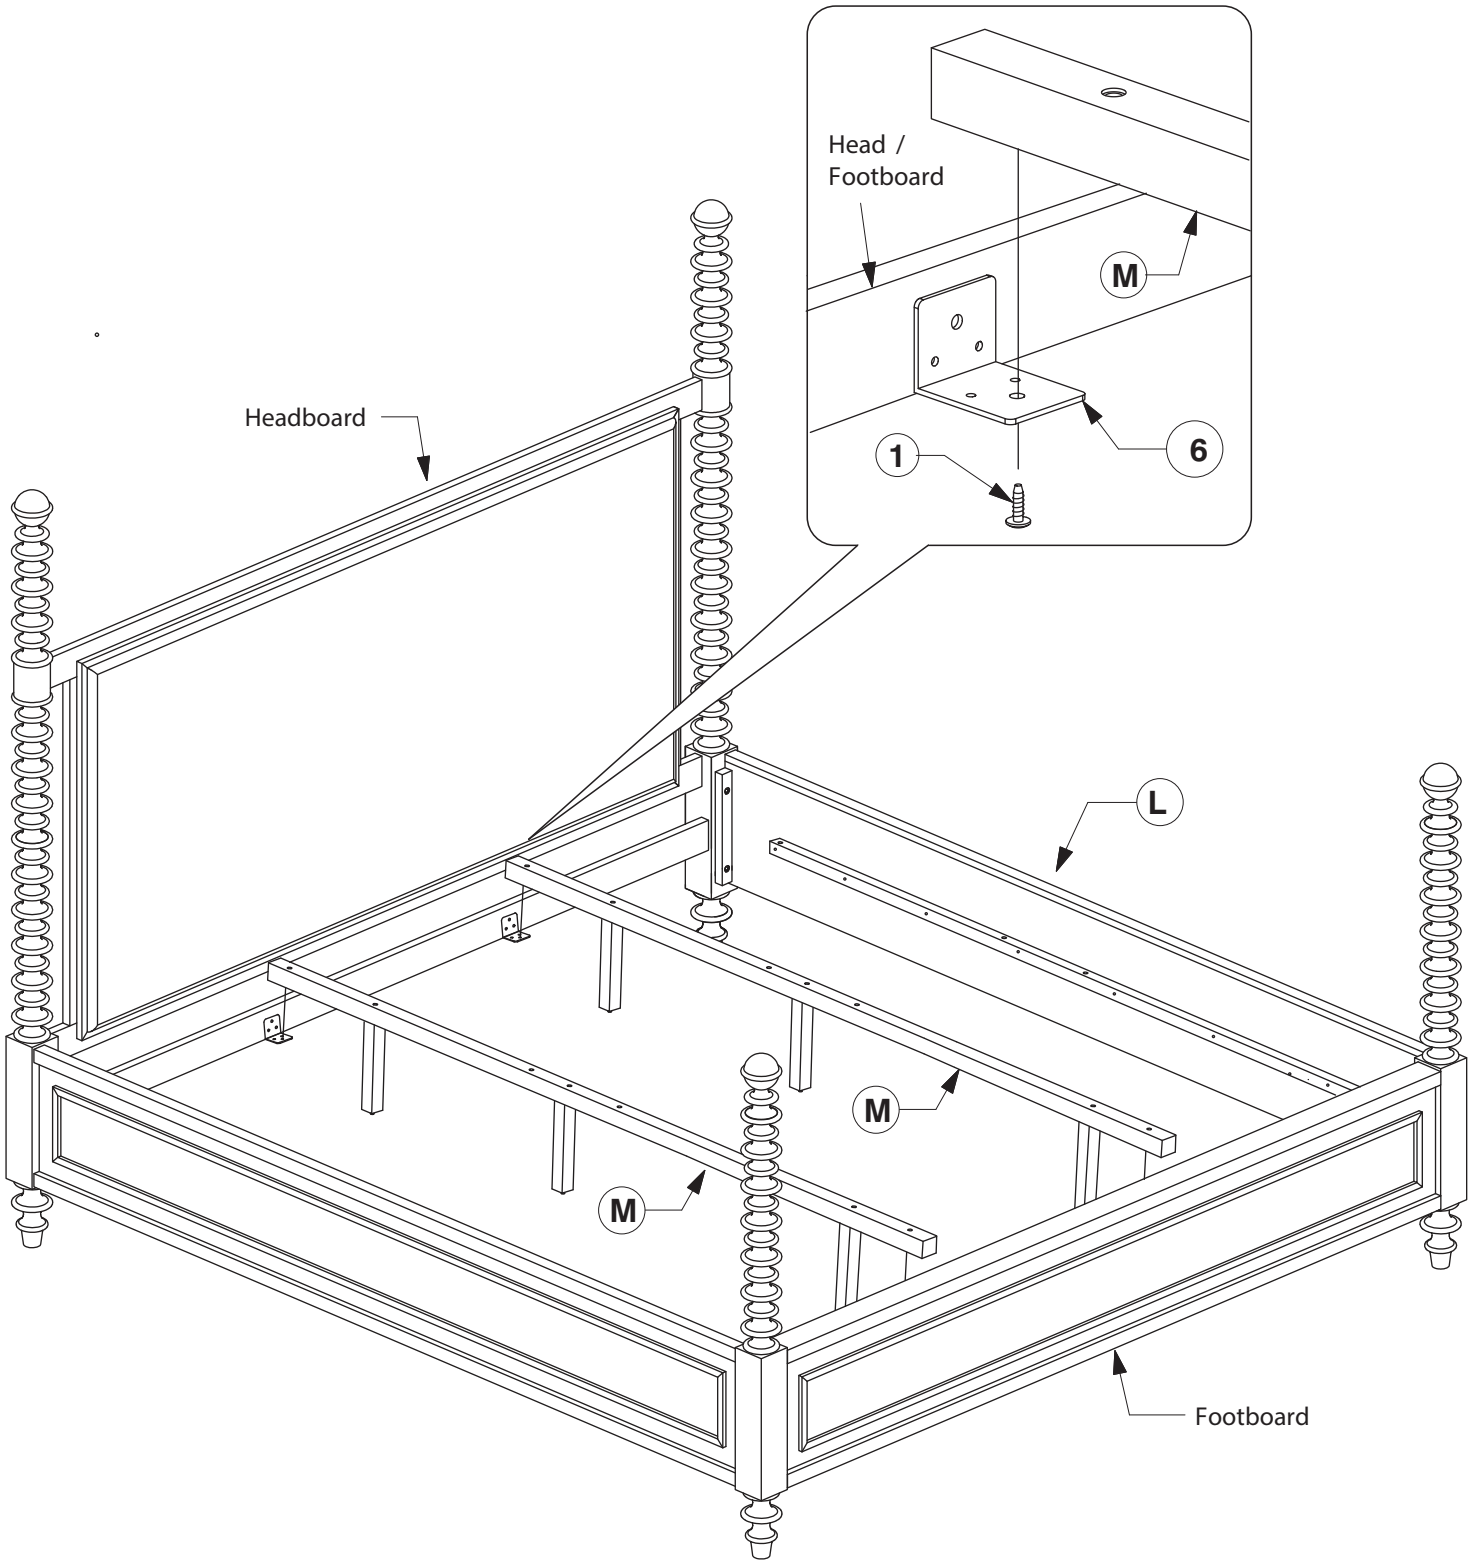

13 Bolt & Screw the Bed Slats (O) to the Side Rail (L).

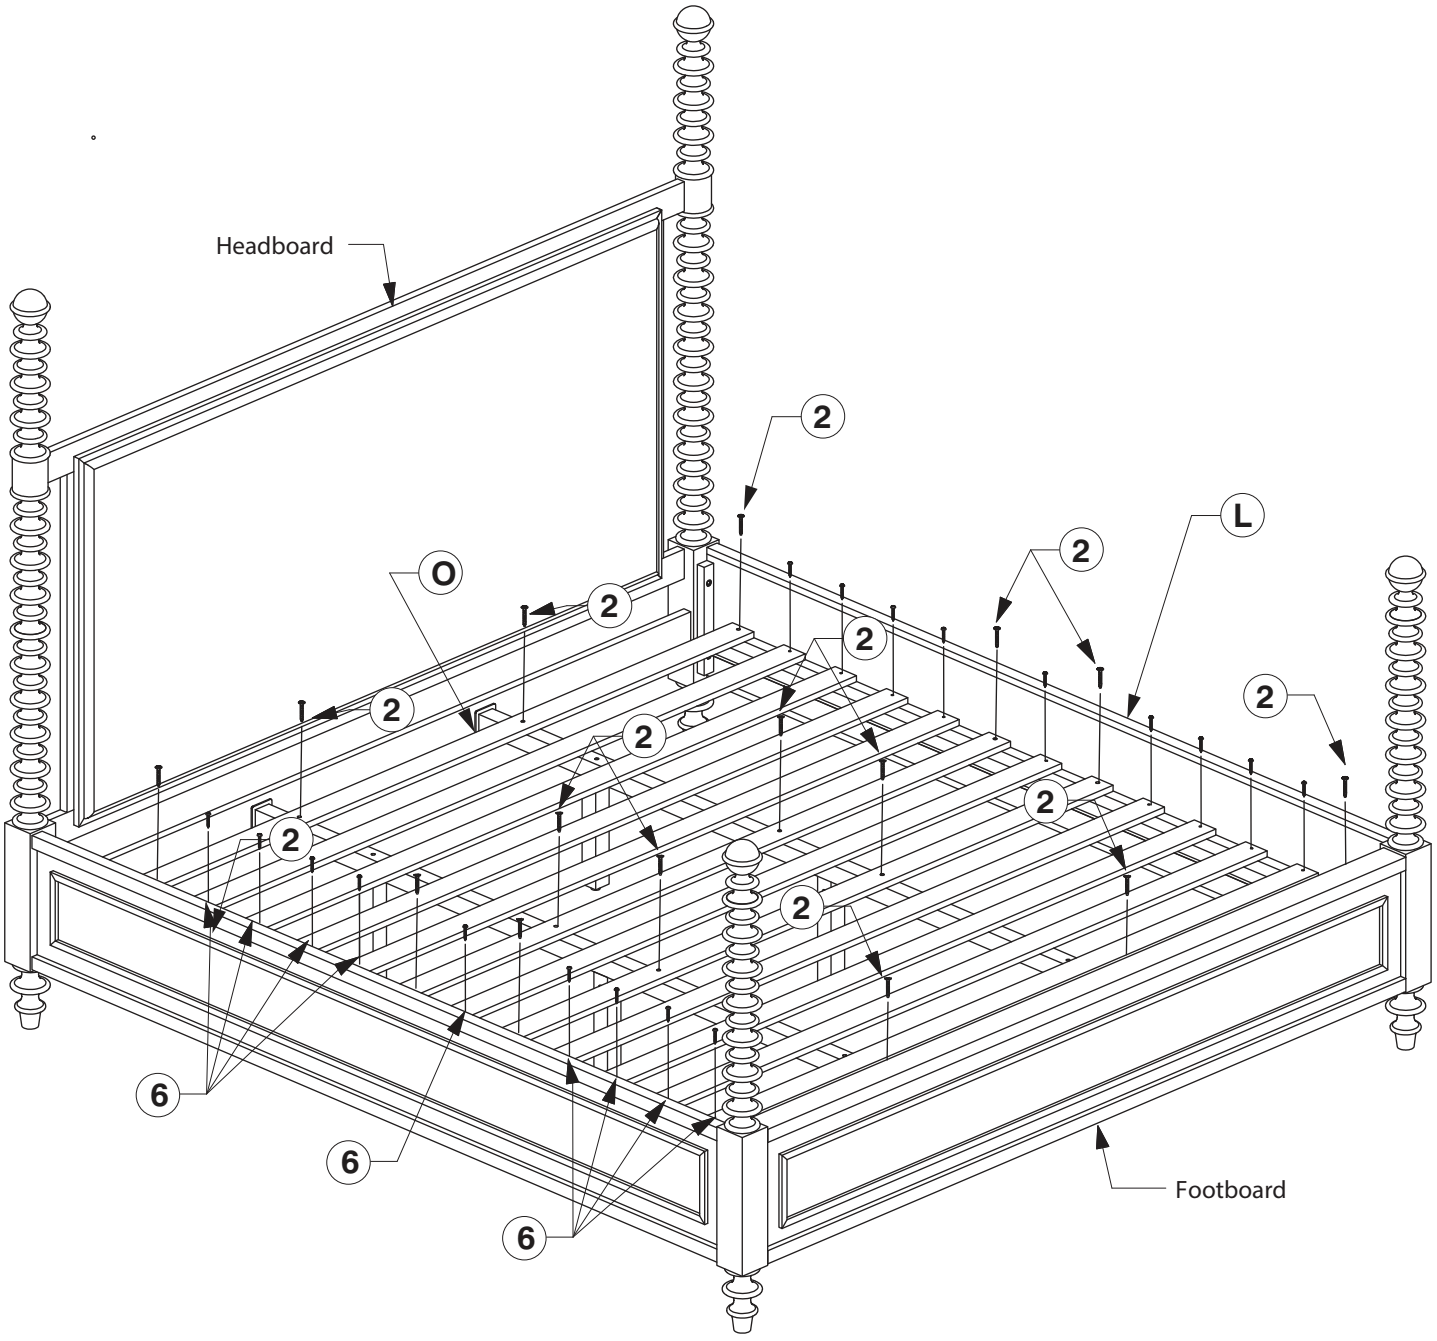

9029 7 Drawer Dresser

Assembly Instructions

WI-0426

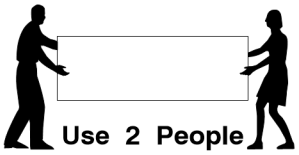

Note: **Do not assemble using power tools. This can cause the bolts to be overtightened**

1 Parts List

Parts in Box A:



A Top Panel **x 1**

B Front Upper Support Bar **x 1**

C Front Bottom Support Bar **x 1**

D Front Upper Drawer Support Bar **x 1**

E Front Bottom Drawer Support Bar **x 1**

F Rear Upper Support Bar **x 2**

G Rear Bottom Support Bar **x 2**

H Center Post **x 1**

J Back Panel **x 3**

Upper Drawers



K Drawer Face **x 3**

L Drawer Back **x 3**

M Drawer Bottom **x 3**

Lower Drawers



N Drawer Face **x 4**



O Drawer Back **x 4**

P Drawer Bottom **x 4**

Q Drawer Rail **x 4**

9029 7 Drawer Dresser

Assembly Instructions

WI-0426

1 Parts List

Parts in Box B:

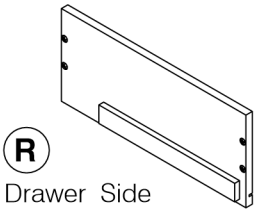

R
Drawer Side
(Left Hand) **x 7**

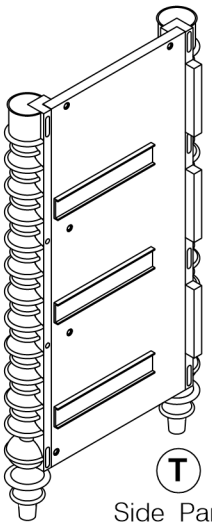

T
Side Panel
(Left Hand) **x 1**

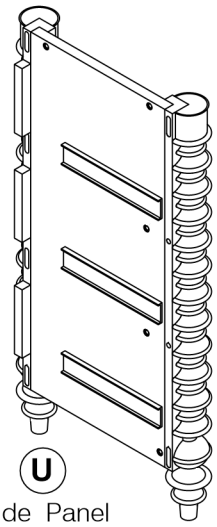

U
Side Panel
(Right Hand) **x 1**

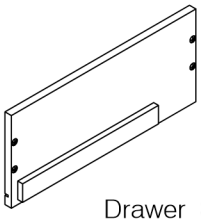

S
Drawer Side
(Right Hand) **x 7**

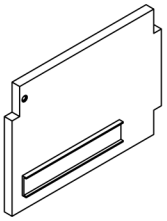

V
Center Panel
(Upper) **x 2**

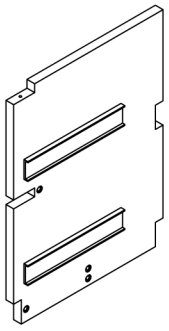

W
Center Panel
(Lower) **x 1**

2 Hardware List

1 M6 x 15mm JCB **x 28**

2 M6 x 40mm JCB **x 12**

3 M6 x 50mm JCB **x 2**

4 M6 JNC Nut **x 4**



5 Adjustable Foot **x 1**

6 'L' Bracket (5005-3) **x 16**

7 Wood Screw (M4 x 20mm) **x 28**



8 Wood Screw (M4 x 25mm) **x 64**

9 M4 x 32mm Wood Screw **x 30**



10 CSK Cap Wood Screw (M6 x 60mm) **x 9**

11 Handle (9029) **x 7**



12 M4 x 22mm Wood Screw **x 7**

13 M6 x 25mm Wood Dowel **x 16**

14 M8 x 30mm Wood Dowel **x 4**

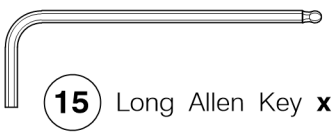

15 Long Allen Key **x 1**

❸ Assemble the Upper Drawers.

STEP 3.1

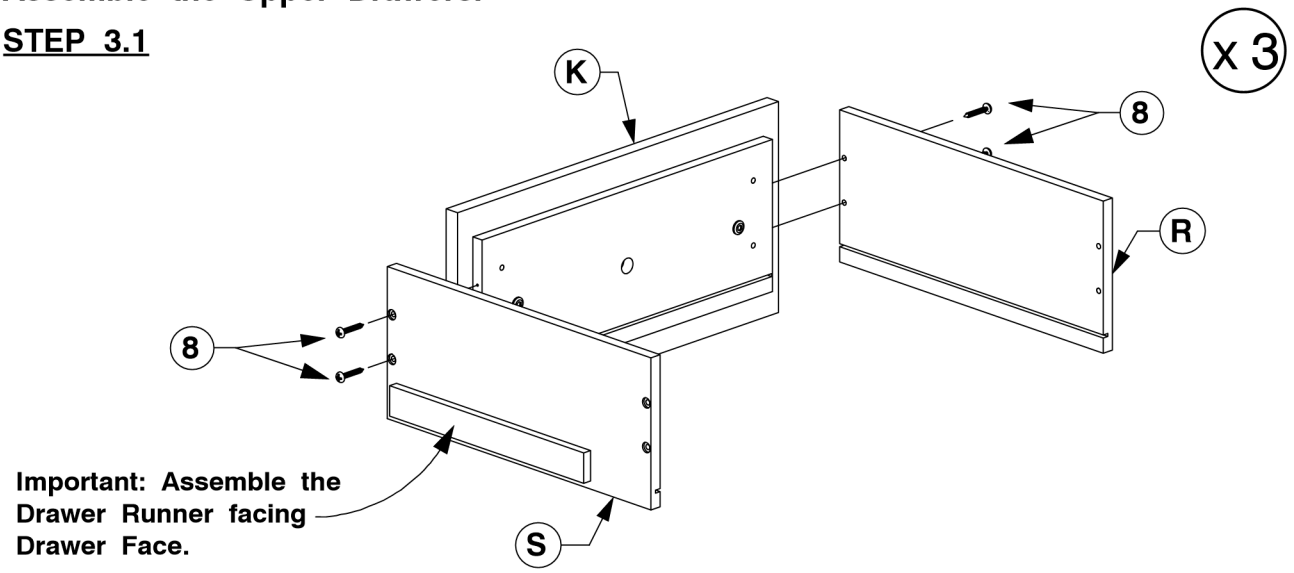

STEP 3.2

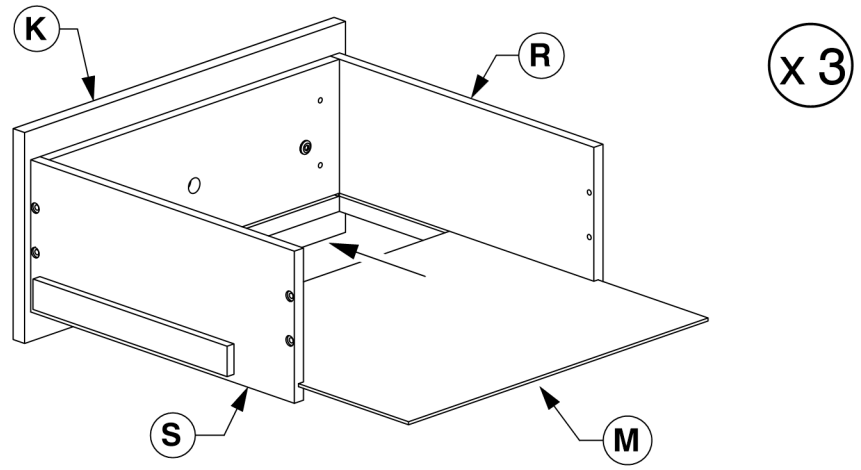

STEP 3.3

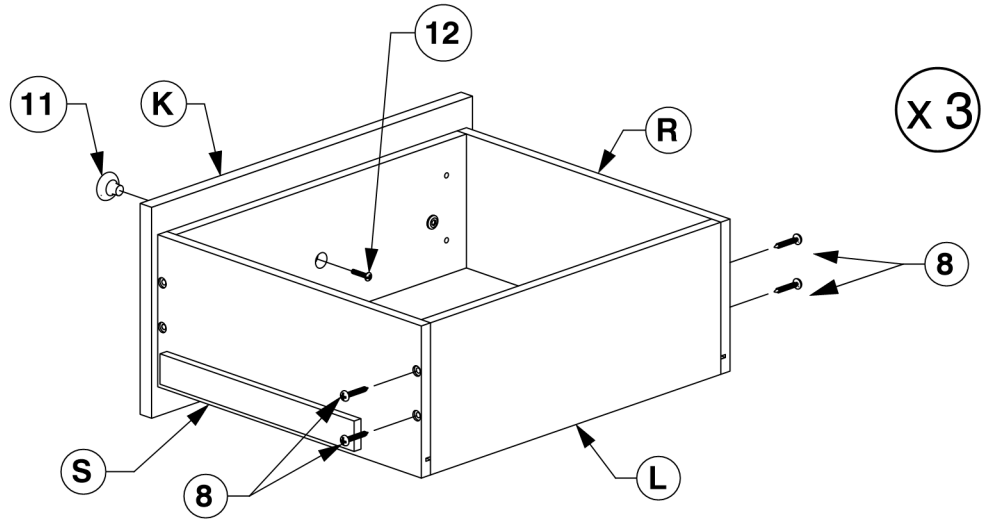

❸ Assemble the Lower Drawers.

STEP 3.4

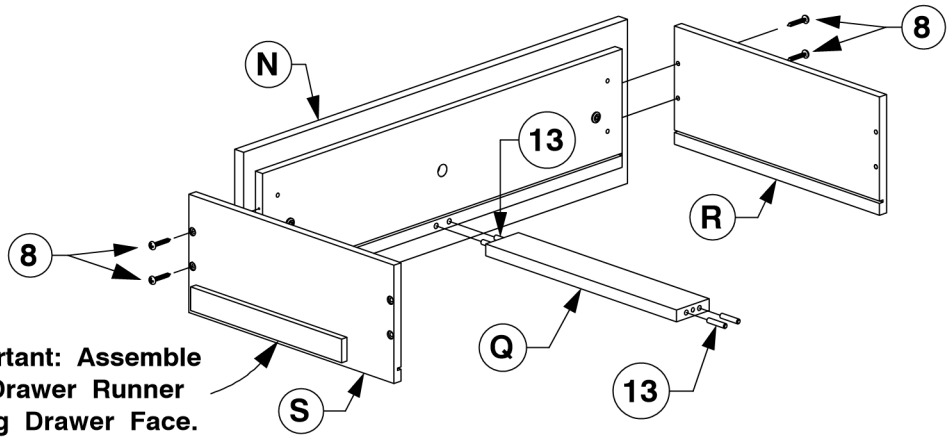

Important: Assemble the Drawer Runner facing Drawer Face.

x 4

STEP 3.5

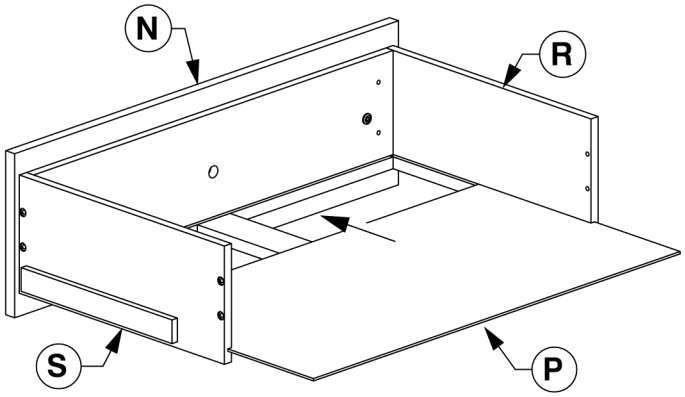

x 4

STEP 3.6

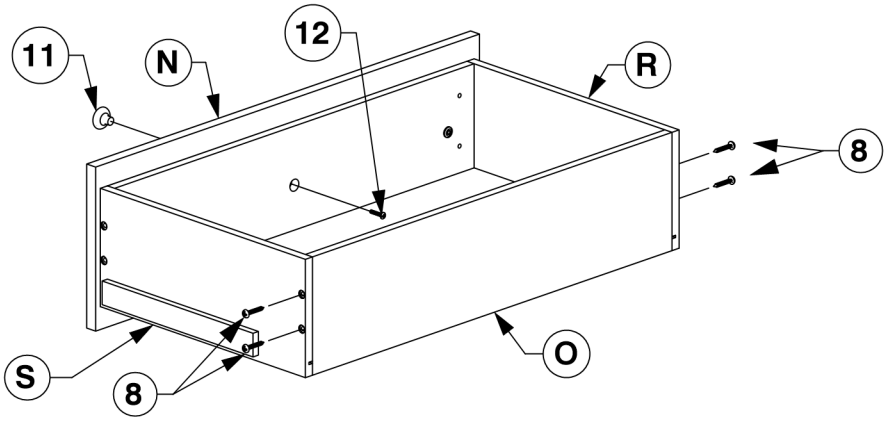

x 4

STEP 3.7

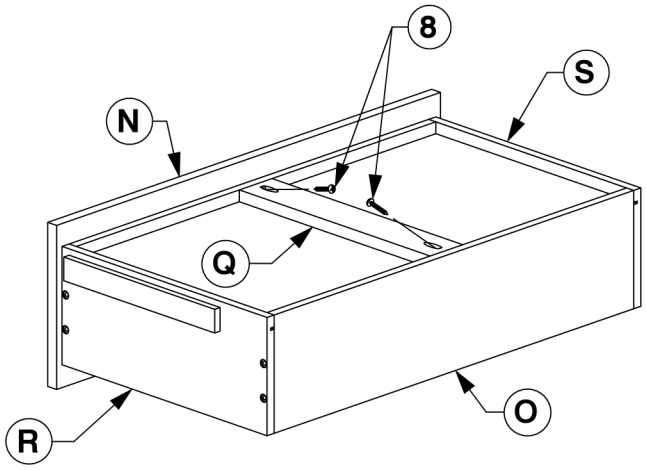

x 4

4 **Fit the 'L' Bracket to the Top Panel (A).**

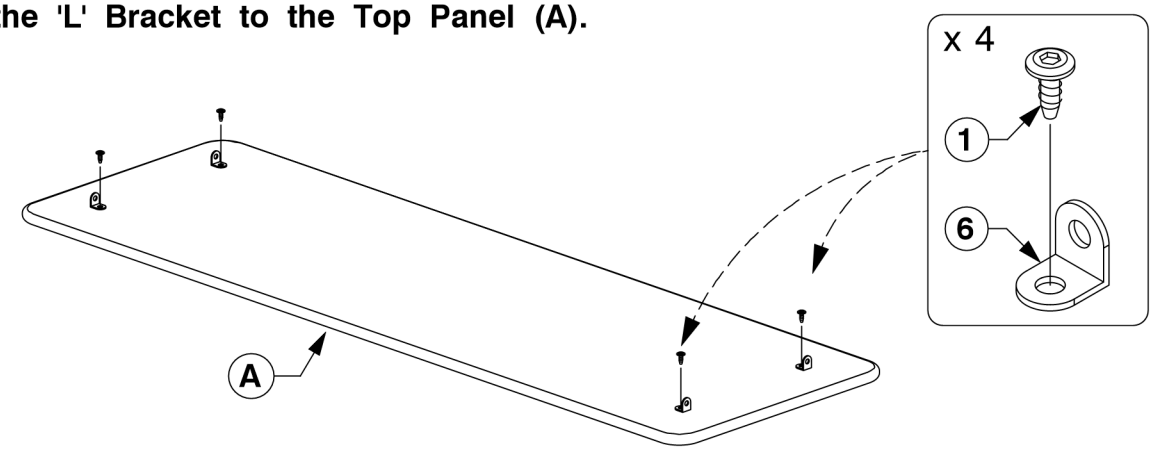

5 **Attach 'L' Bracket (6) to the Upper and Lower Center Panels (V & W) using JNC (4) and Bolts (1).**

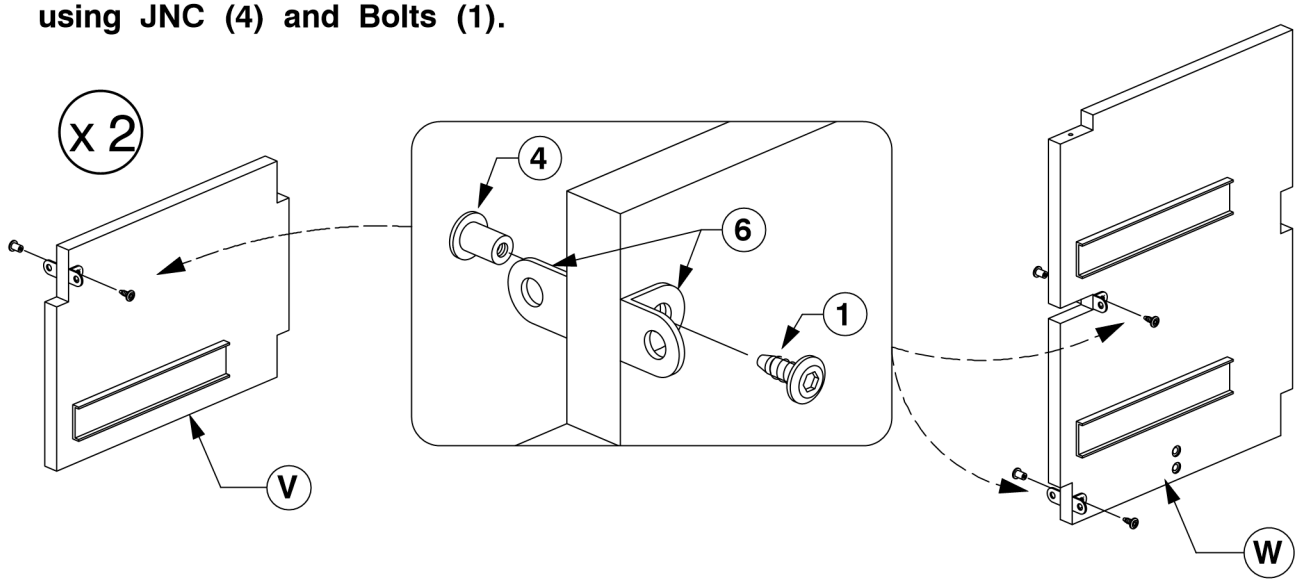

6 **Insert Dowels (14) into the ends of Support Bars (D & E). Then attach Brackets (6) to the Support Bars using Bolts (1).**

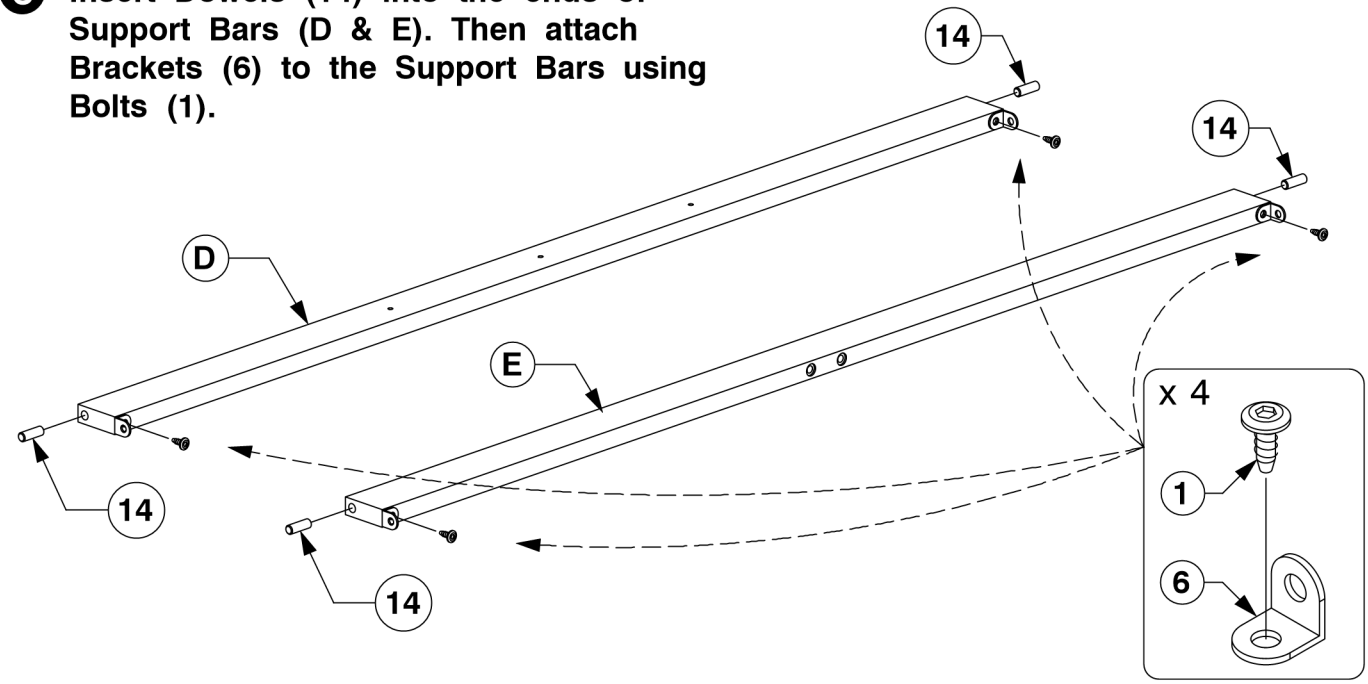

7 **Fit the Right Side Panel (U) to the Top Panel (A).**

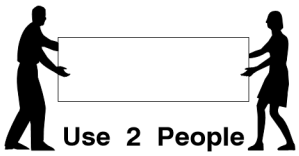

8 **Assemble the Support Bar (B & F) to the Right Side Panel (U).**

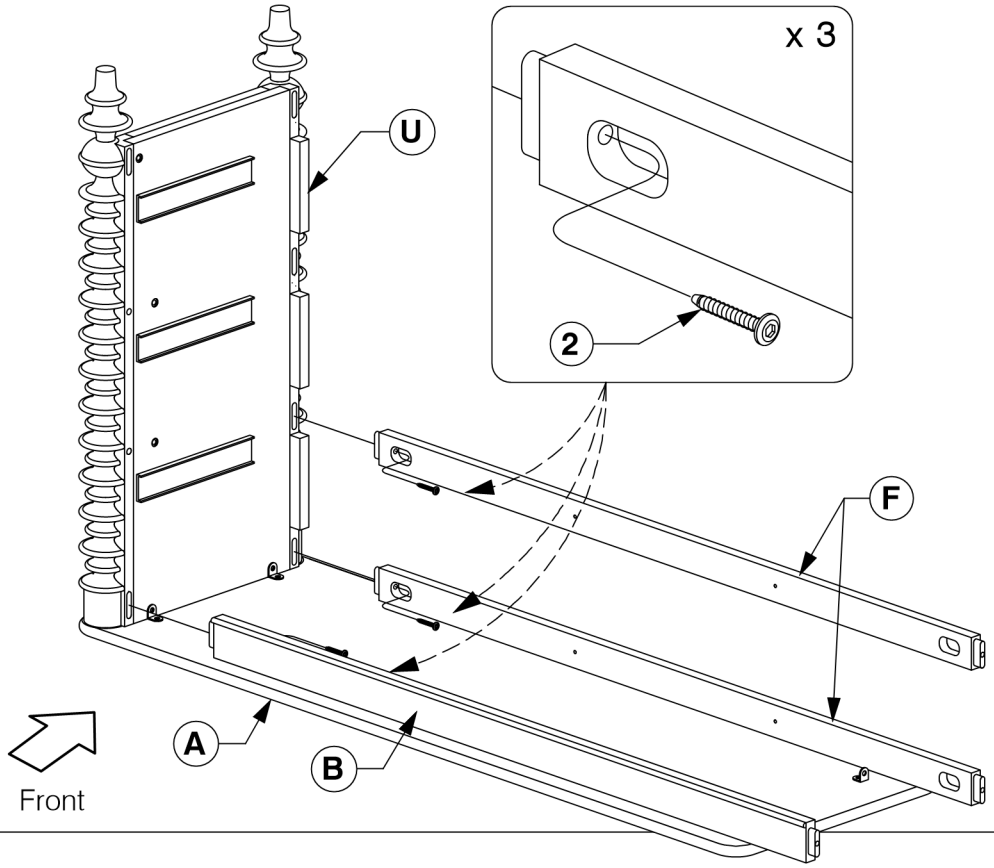

Step 1

Use the ***ball end*** of Allen key to start the bolt.

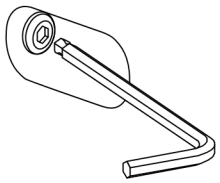

Step 2

Tighten fully with the ***straight end.***

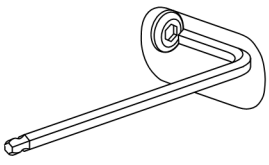

9 **Assemble the Center Panel (V) to Support Bar (B & F).**

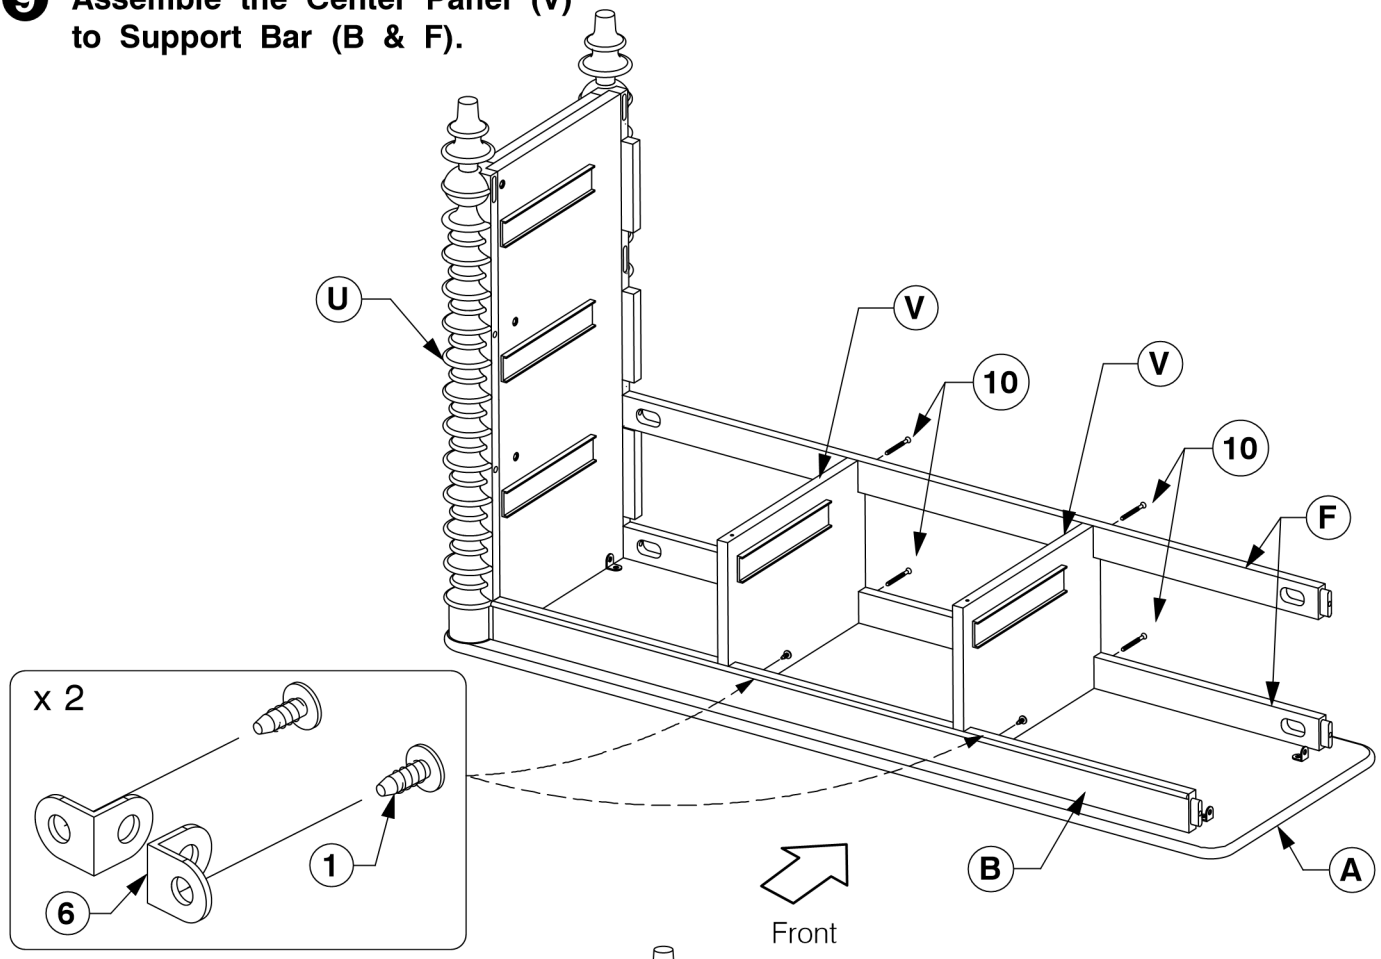

10 **Attach Support Bars (D & E) to the Right Side Panel (U). Then tighten using Bolts.**

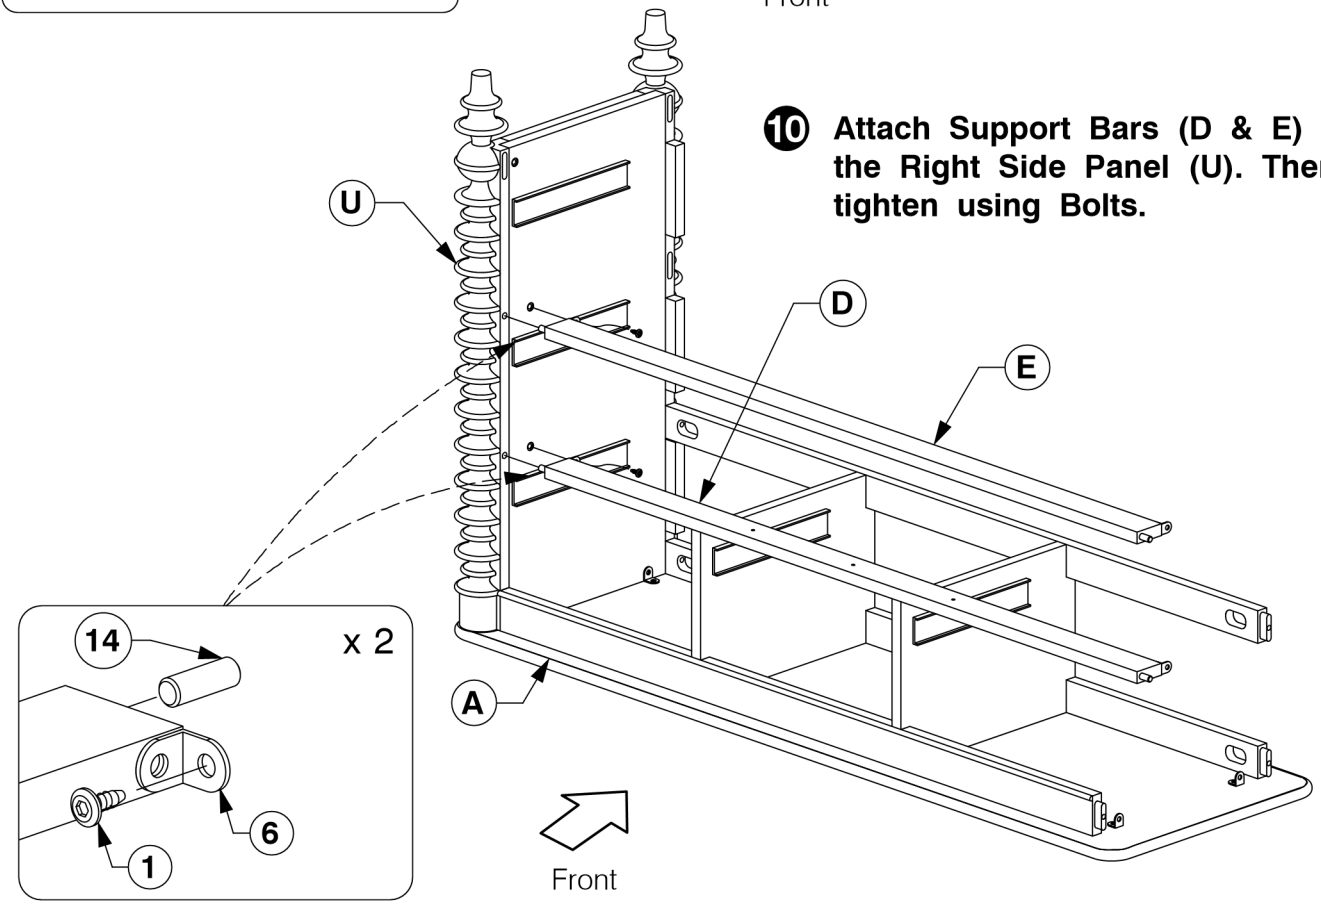

11 **Assemble the Center Panel (W) to Support Bar (D, E, & F).**

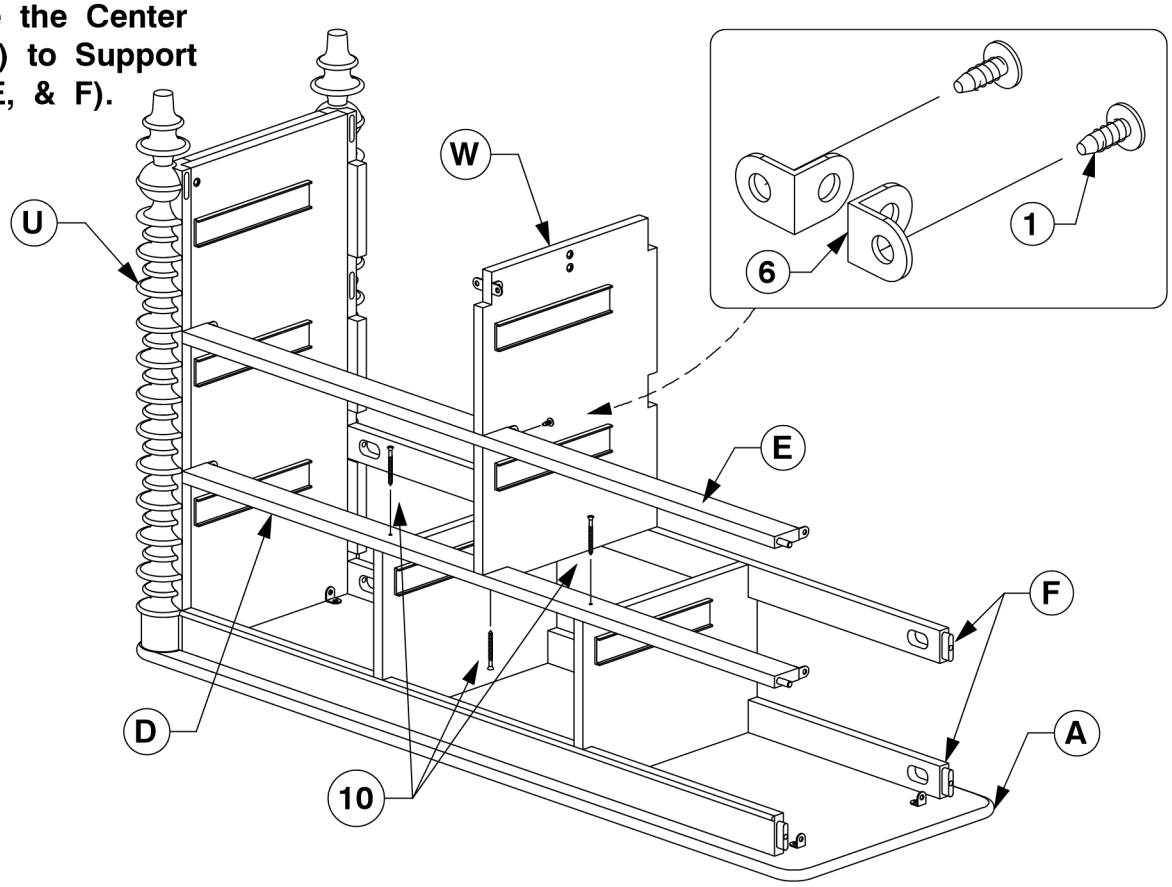

12 **Fit the Support Bars (G) to the Center Panel (W).**

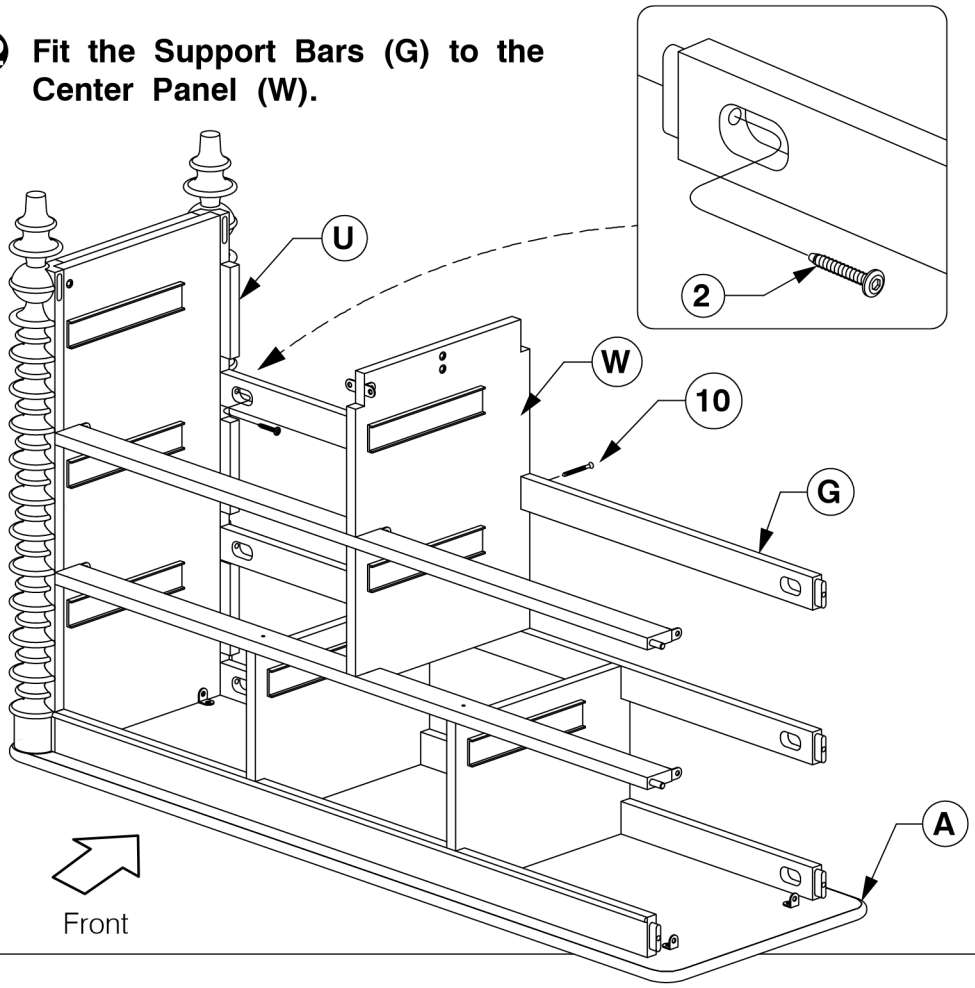

Step 1

Use the ***ball end*** of Allen key to start the bolt.

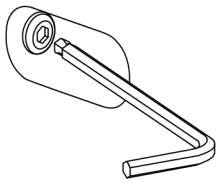

Step 2

Tighten fully with the ***straight end.***

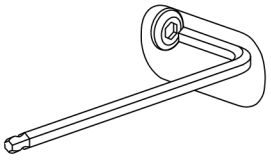

13 **Attach the Support Bar (C & G) to the Right Side Panel (U) & Center Panel (W).**

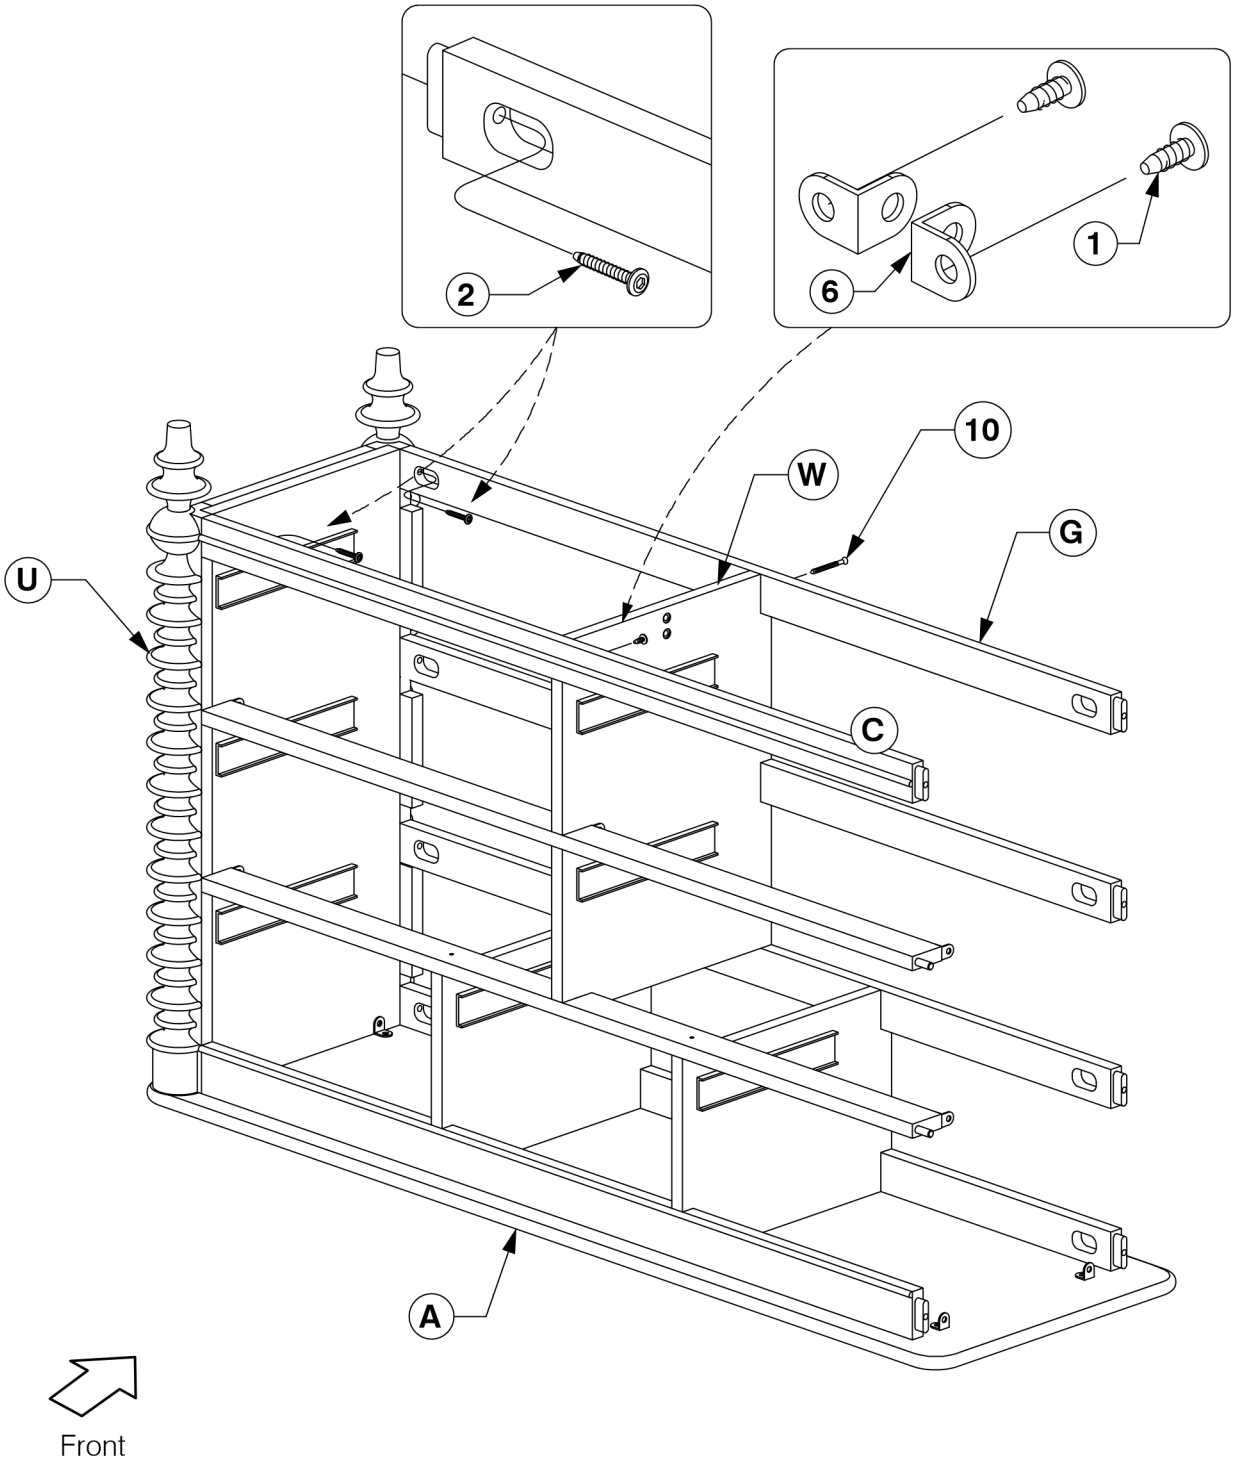

Step 1

Use the ***ball end*** of Allen key to start the bolt.

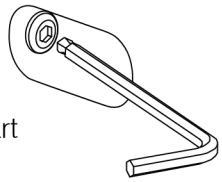

Step 2

Tighten fully with the ***straight end***.

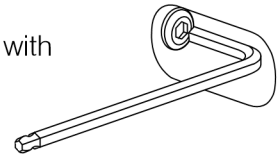

14 Assemble the Left Side Panel (T) to the Support Bars (B, C, D, E, F & G).

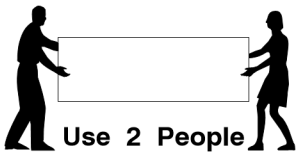

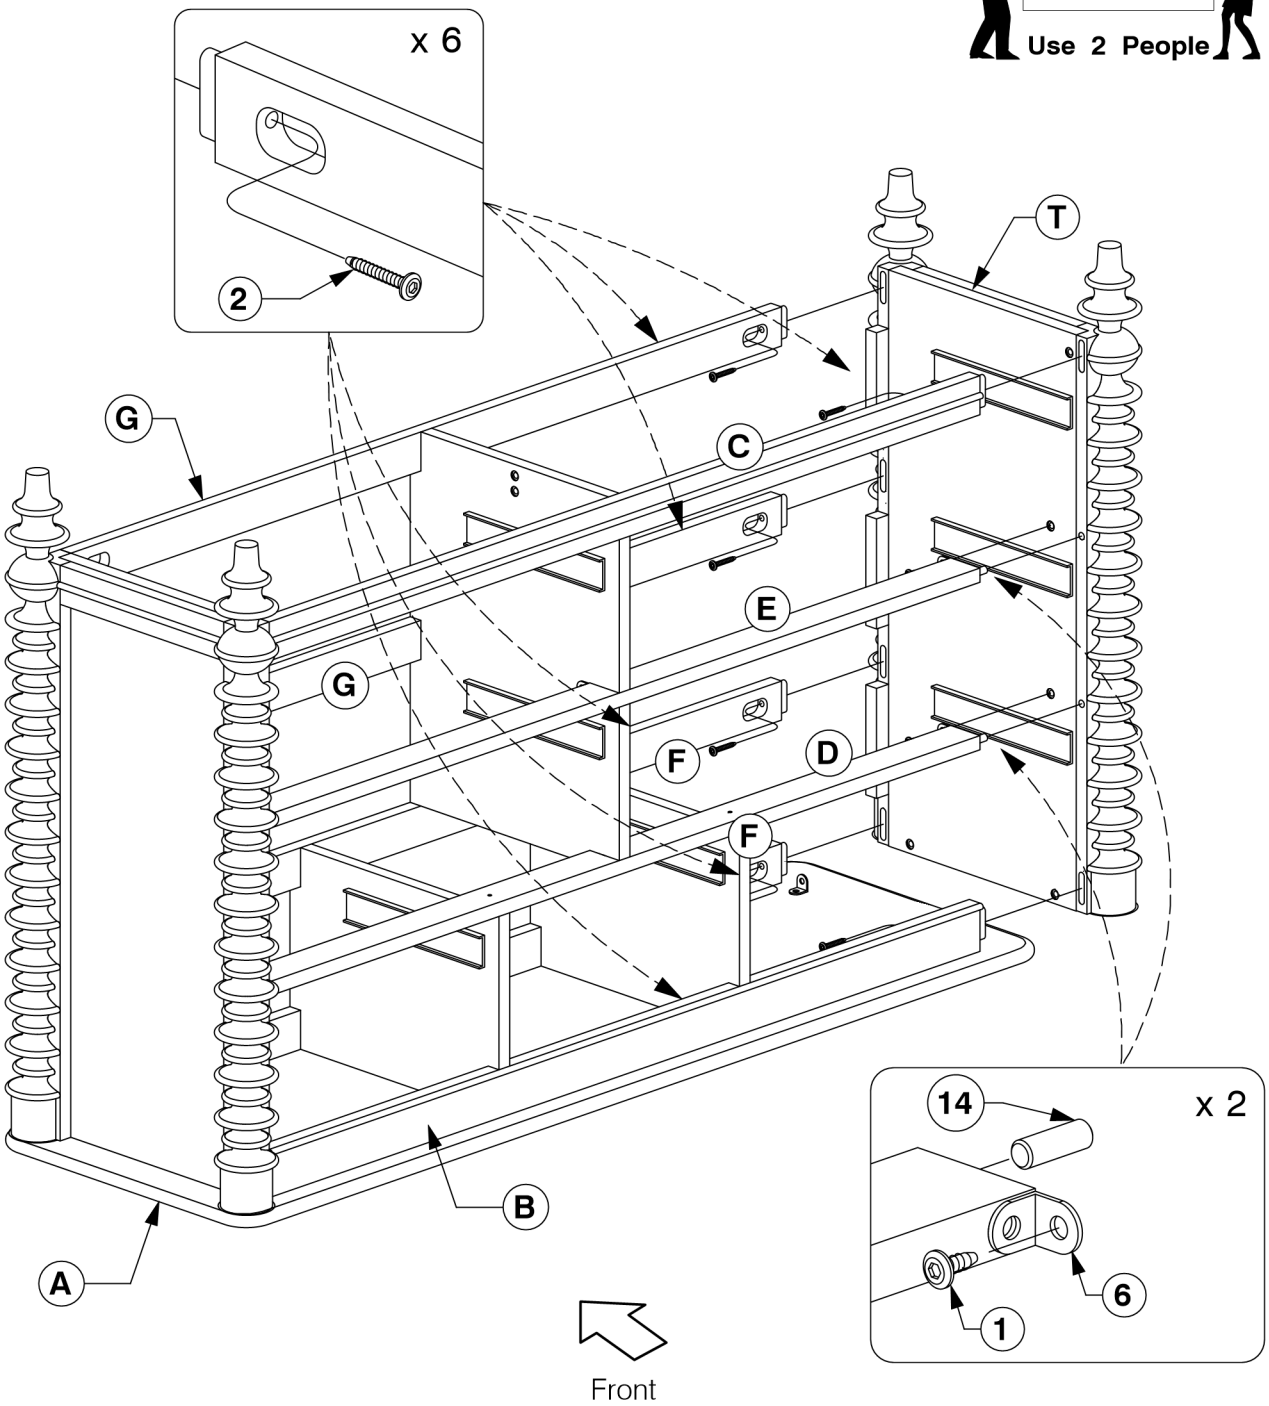

Step 1

Use the ***ball end*** of Allen key to start the bolt.

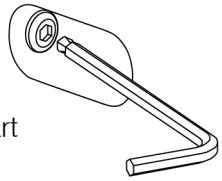

Step 2

Tighten fully with the ***straight end***.

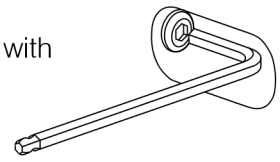

15 **Tighten the bolts as shown.**

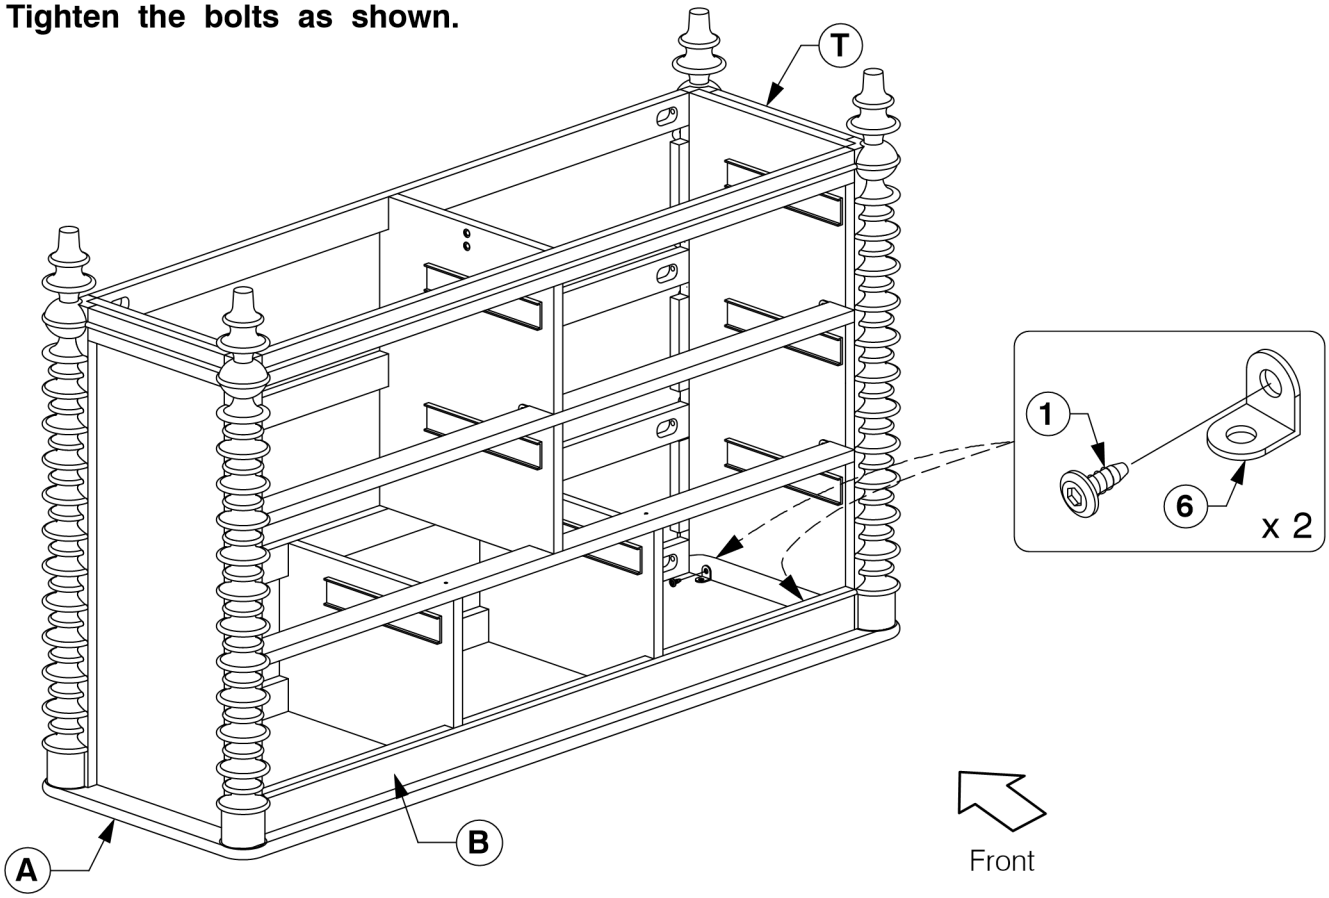

16 **Fix the Adjustable foot to the botom of the Center Post (H). Fit the Center Post (H) to the Center Panel (W).**

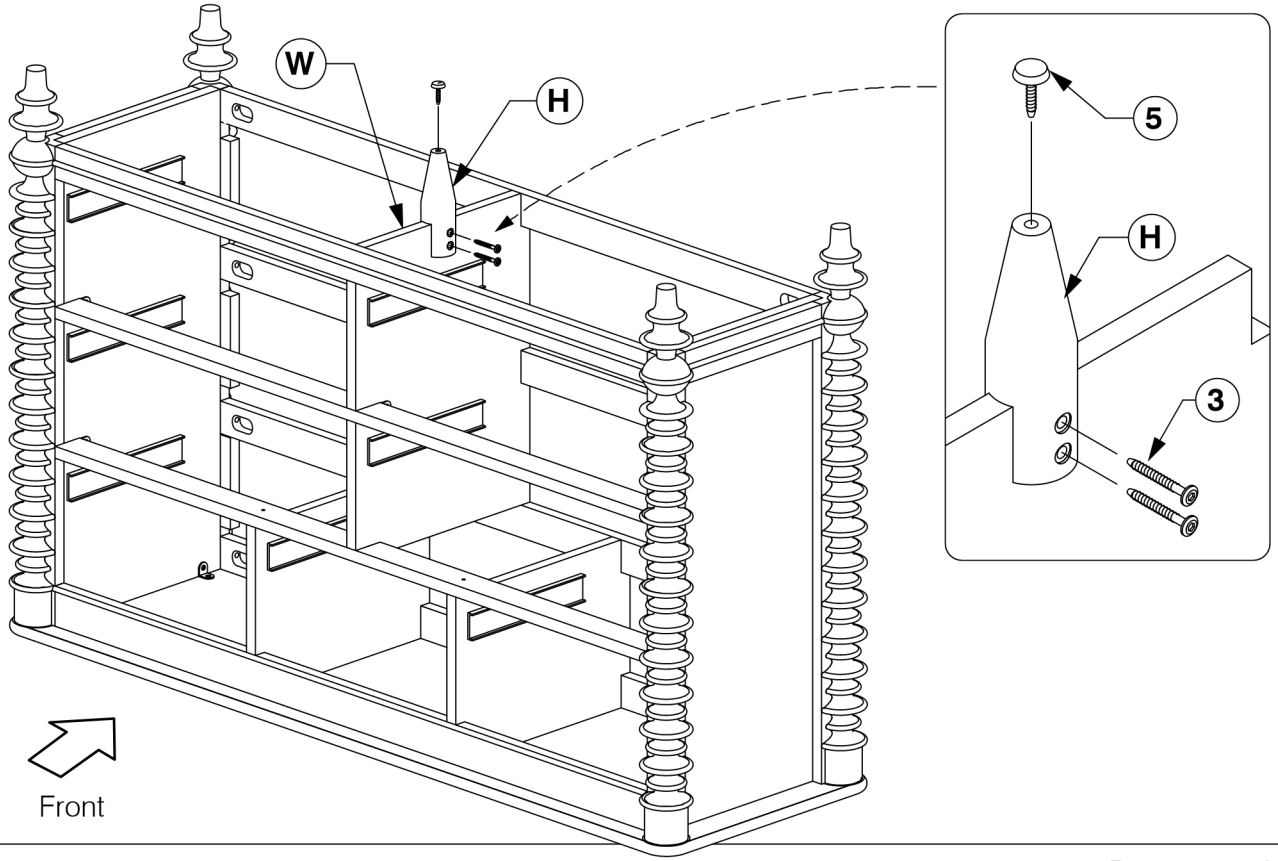

17 **Attached the Back Panel (J) to the back of the frame.**

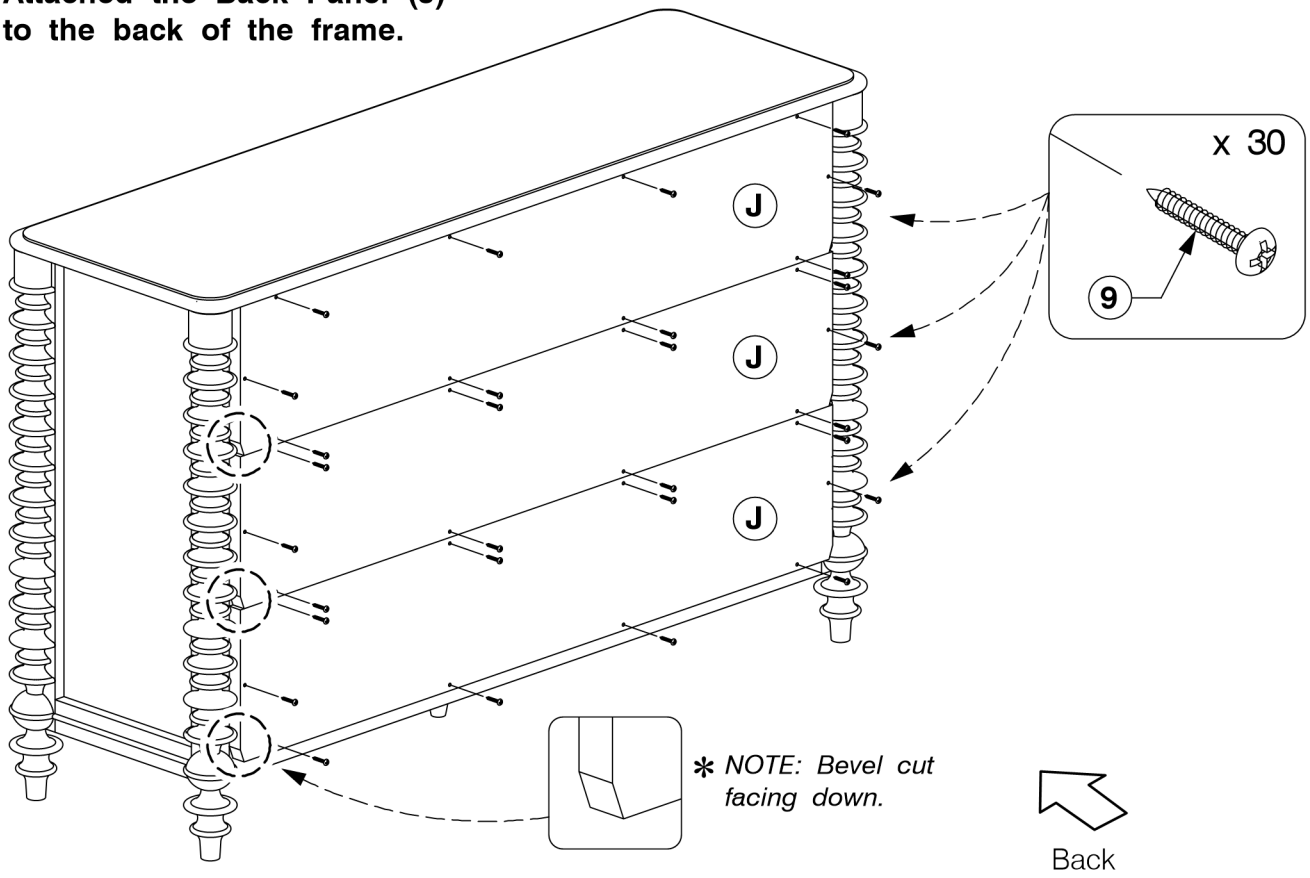

18 **Fit the Drawer Box (K & N) to the casegood body.**

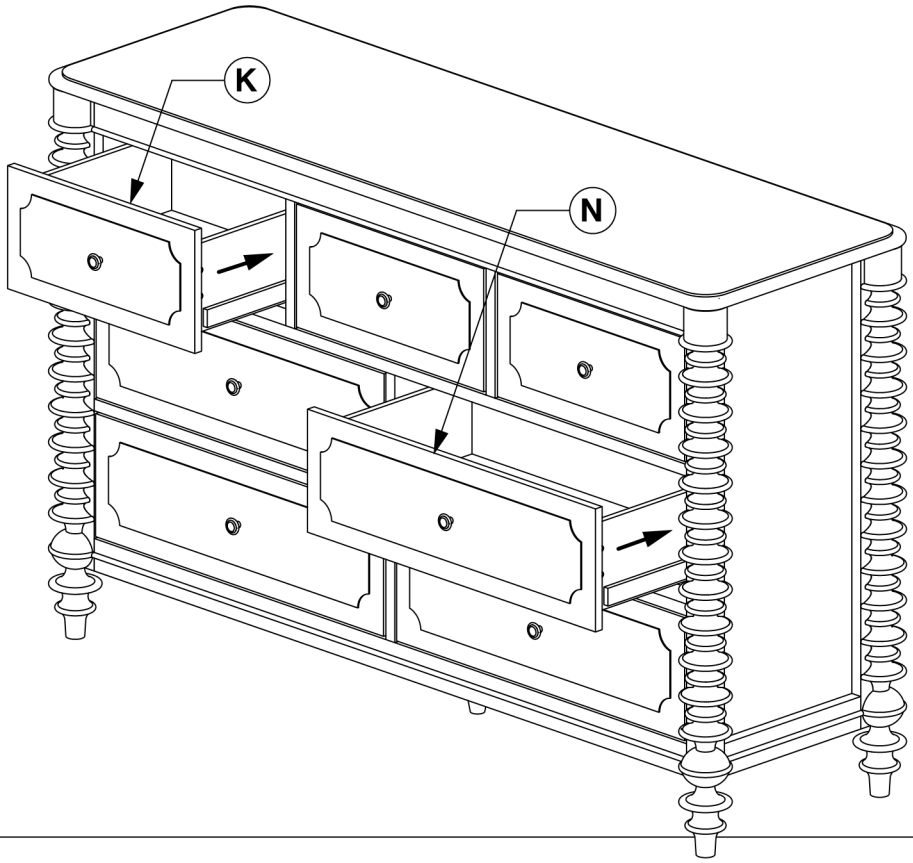

19 Adjust the Drawer Face (K & N).

✻ *NOTE: Before fitting the Wood Screws. Lossen the JCBs on the Drawer Face if the face needs alignment.*

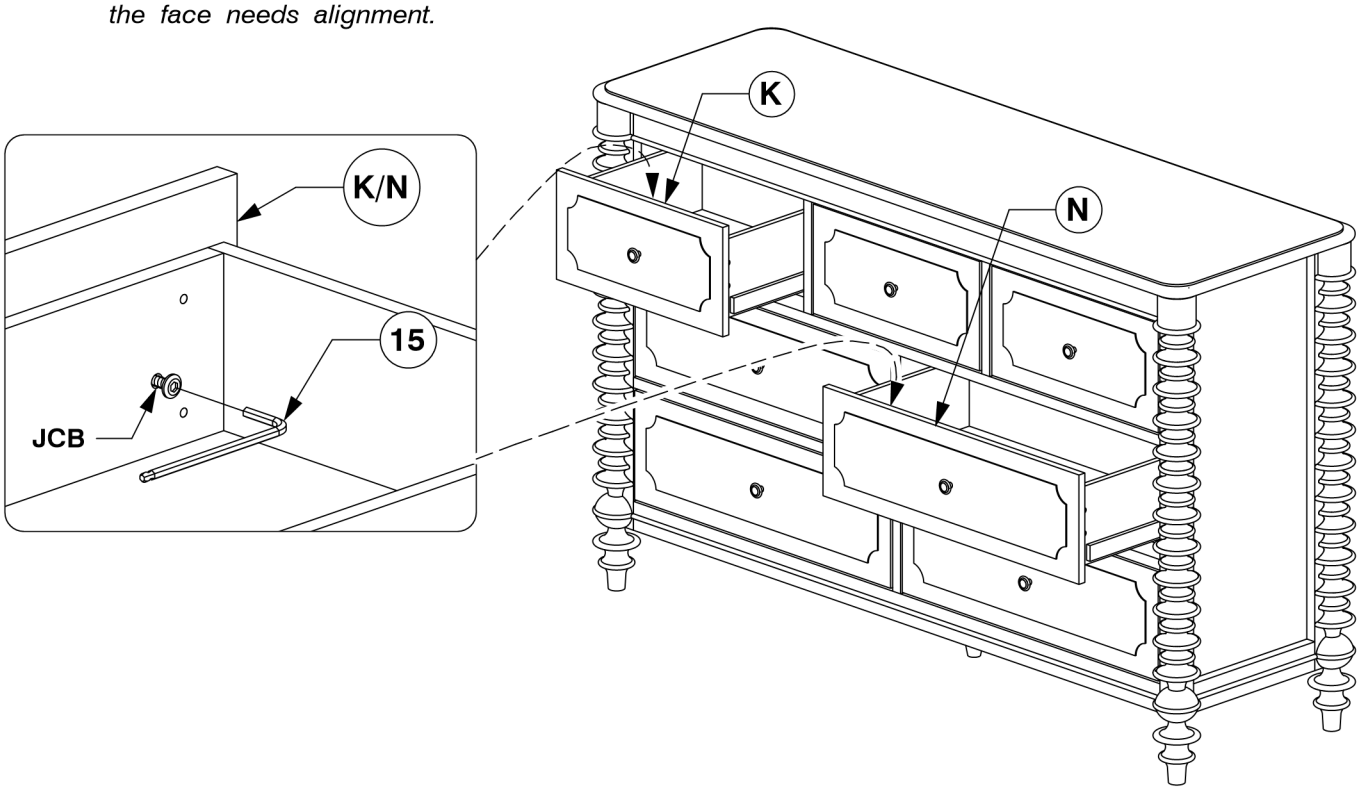

20 After the Drawer Faces (K & N) are aligned, secure with wood screws.

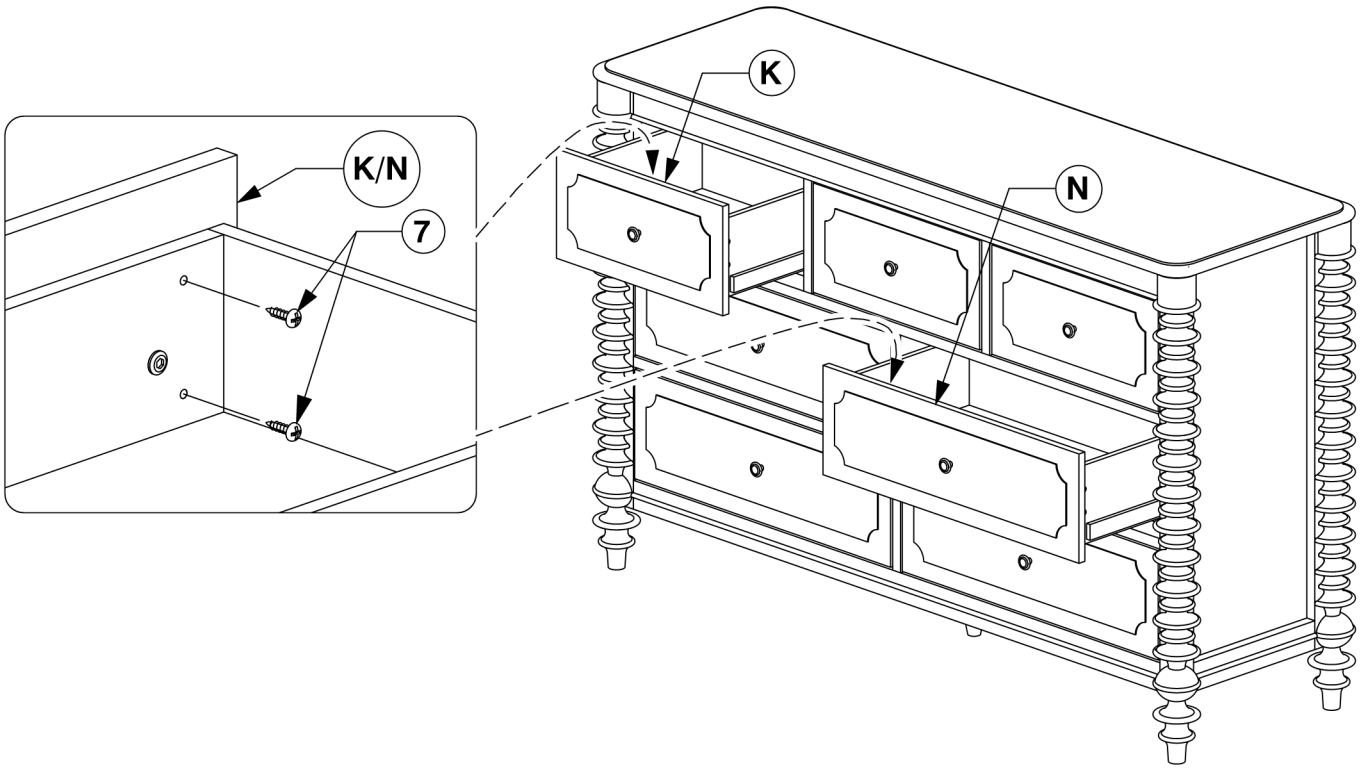

9029 1D Night Stand

Assembly Instructions

WI-0326

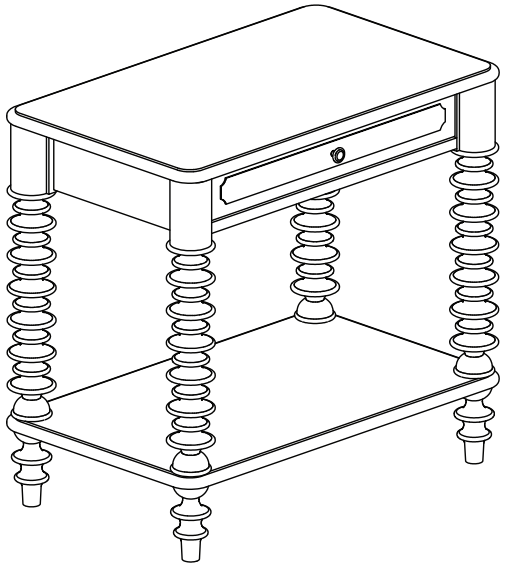

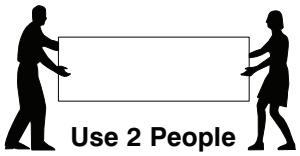

Note: **Do not assemble using power tools. This can cause the bolts to be overtightened**

1 Parts List

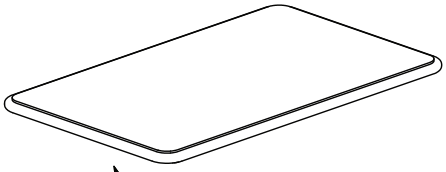

A Top Panel **x 1**

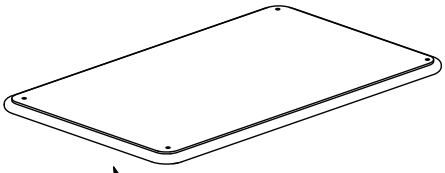

B Bottom Panel **x 1**



C Back Panel **x 1**



D Support Bar (Bottom) **x 2**



E Rear Support Bar **x 1**



F Drawer Back **x 1**

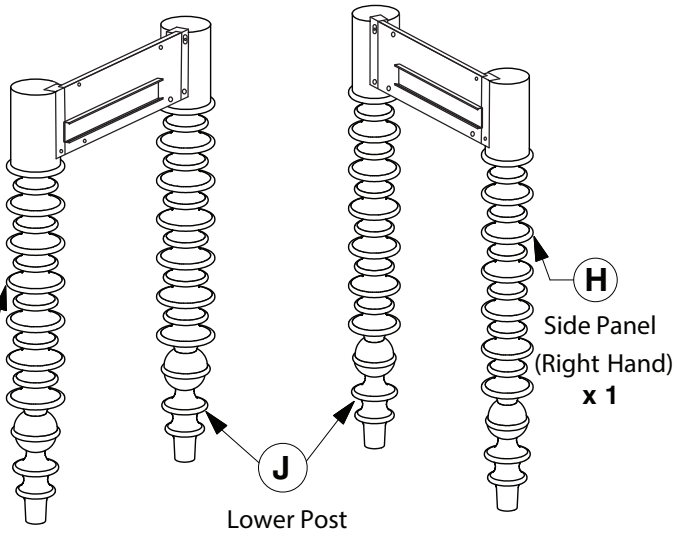

G Side Panel (Left Hand) **x 1**

H Side Panel (Right Hand) **x 1**

J Lower Post **x 4**



K Drawer Face **x 1**

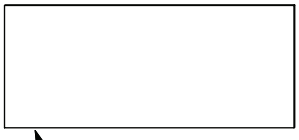

N Drawer Bottom **x 1**



L Drawer Side (Left Hand) **x 1**



M Drawer Side (Right Hand) **x 1**



P Drawer Rail **x 1**

9029 1D Night Stand

Assembly Instructions

WI-0326

2 Hardware List

1 M6 x 15mm JCB **x 16**

2 M6 x 40mm JCB **x 2**

3 Wood Dowel (M8 x 30mm) **x 4**

4 M6 x 25mm Wood Dowel **x 4**

5 'L' Bracket (5005-3) **x 8**

6 M4 x 16mm Wood Screw **x 8**

7 M4 x 20mm Wood Screw **x 4**

8 M4 x 25mm Wood Screw **x 6**

9 Handle (9029) **x 1**



10 M4 x 22mm Wood Screw **x 1**

11 Allen Key **x 1**

3 Assemble the Drawer Sides (L & M) & Drawer Rail (P) to the Drawer Face (K).

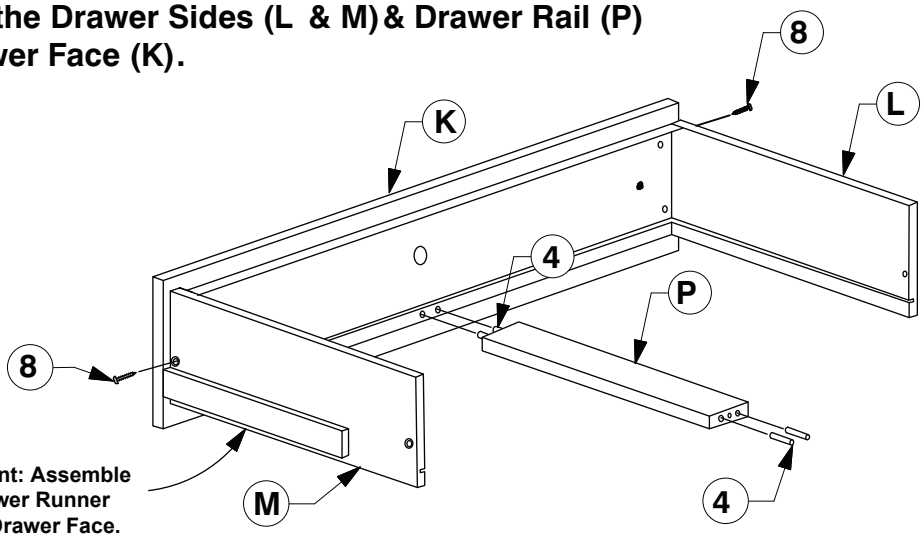

Important: Assemble the Drawer Runner facing Drawer Face.

4 Slide the Drawer Bottom (N) into the groove on the Drawer Sides (L & M).

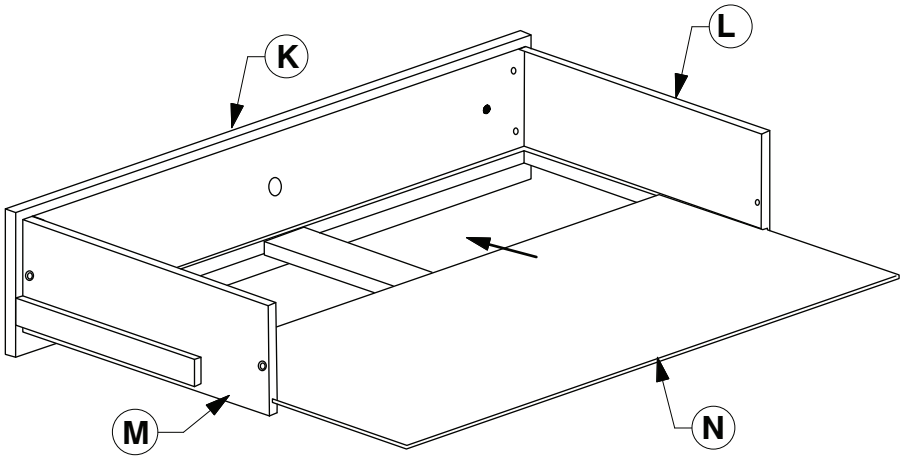

5 **Assemble the Drawer Back (F)
to the Drawer Sides (L & M).
Fit the Handle to the Drawer Face (K).**

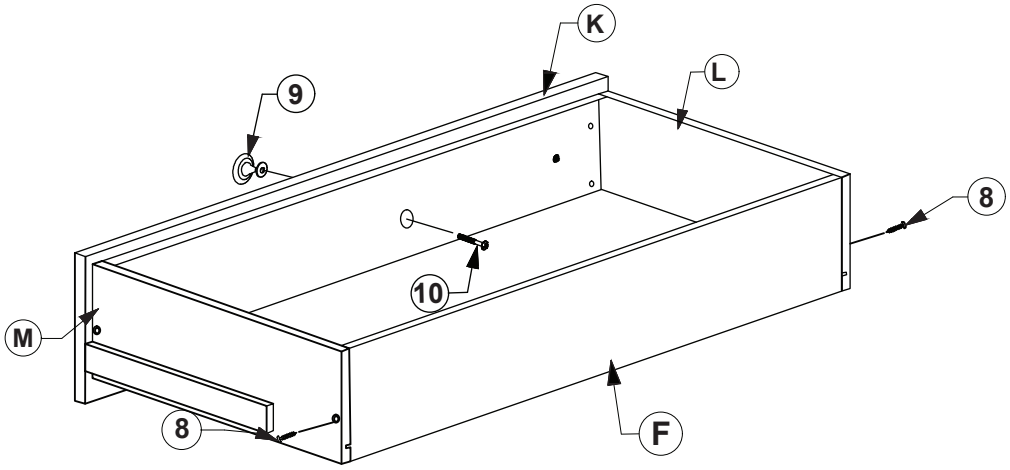

6 **Turn the Drawer over
to fit angled 25mm Wood screws (8)
to the Drawer Rail (P).**

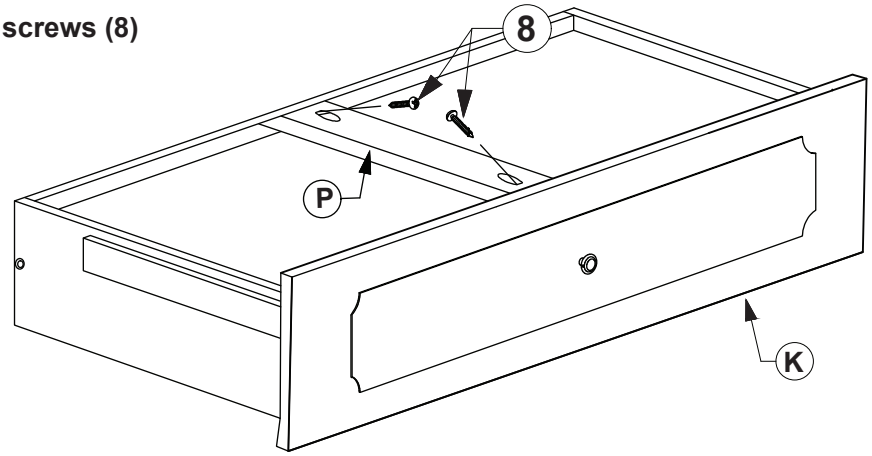

7 **Fit the 'L' Bracket (5) to the Side Panel (G & H).
Remove the Lower Post (J) from the Side Panel (G & H).**

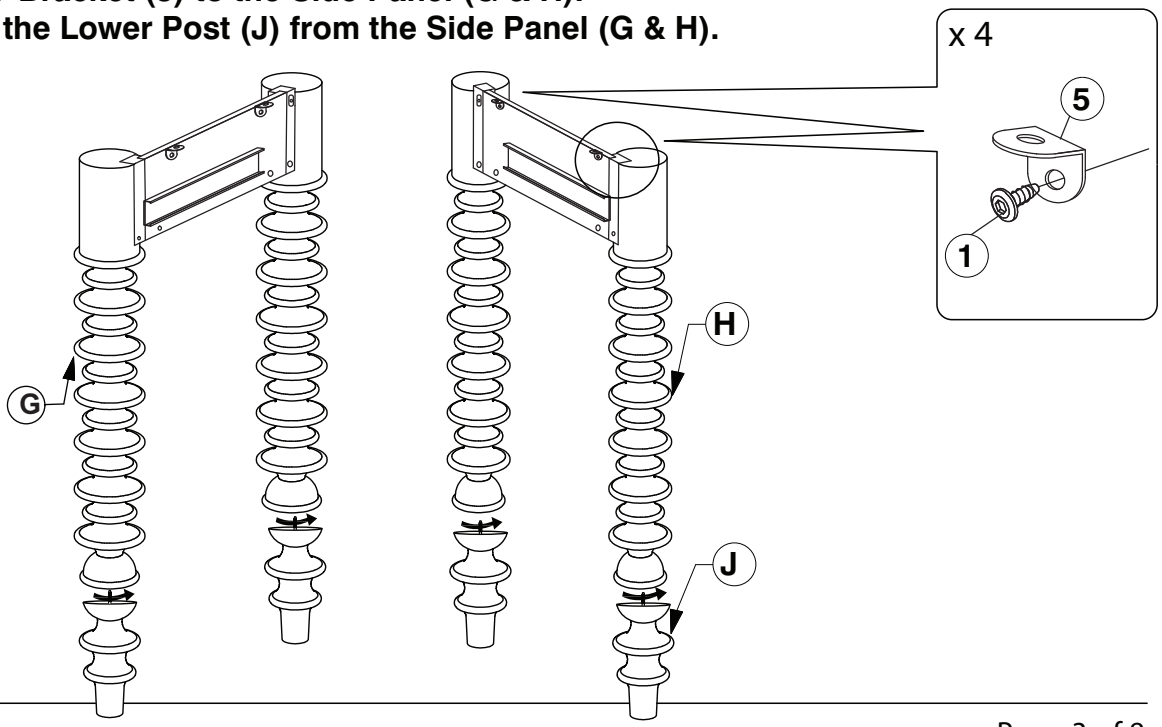

8 **Fit the "L" Braket (5) and Wood Dowel (3) to the Support Bar Bottom (D).**

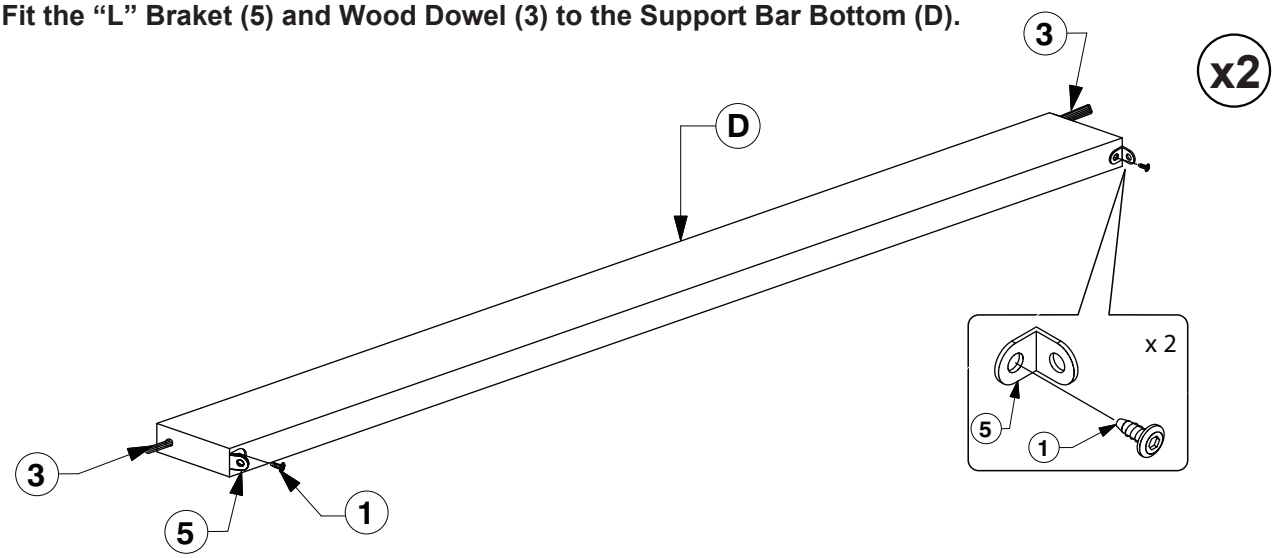

9 **Assemble the Support Bar (Rear & Bottom) (D & E) to the Side Panel (G).**

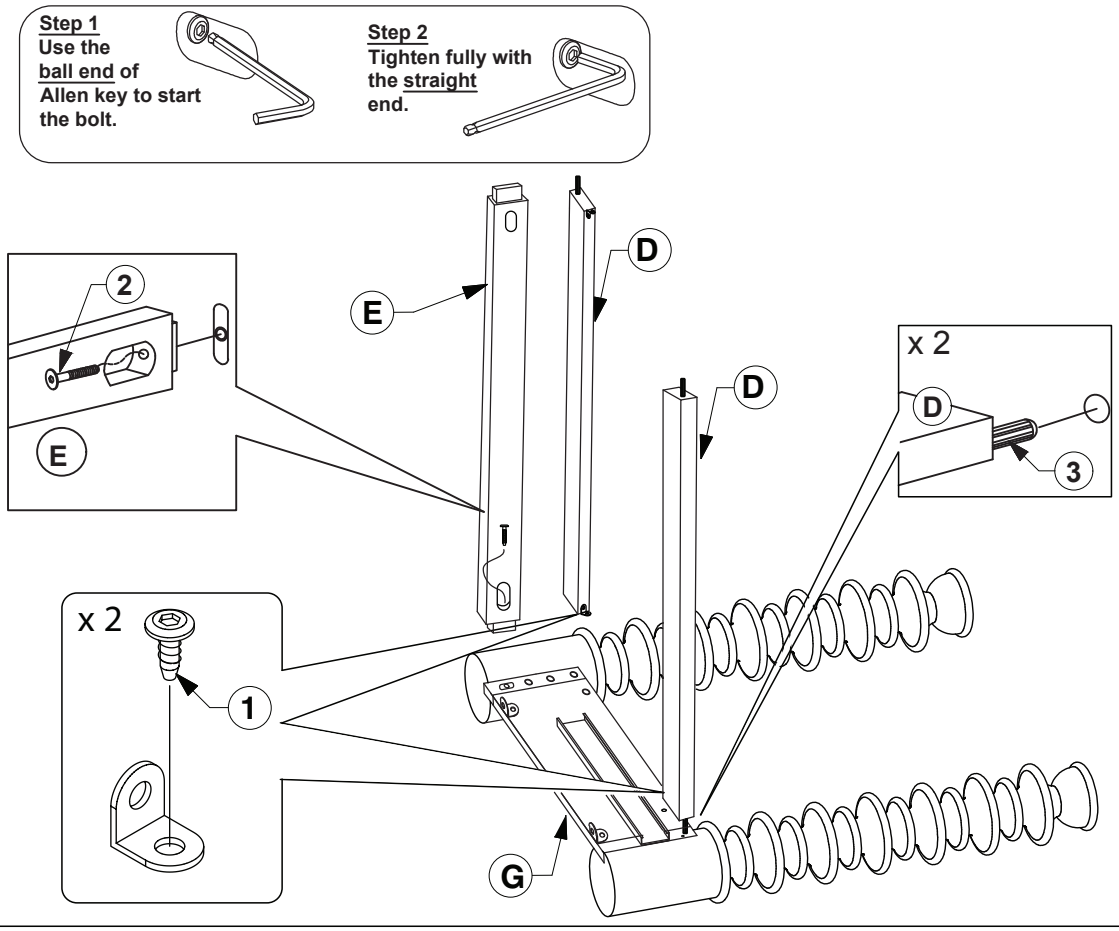

10 Fit the Support Bar Rear & Bottom (D & E) to the Side Panel (H).

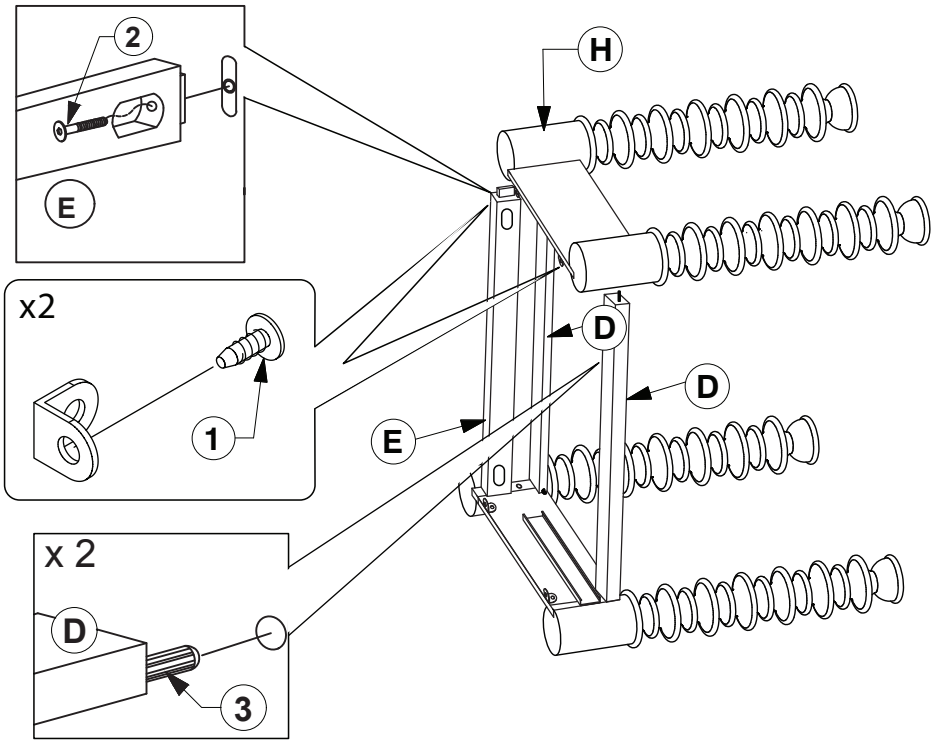

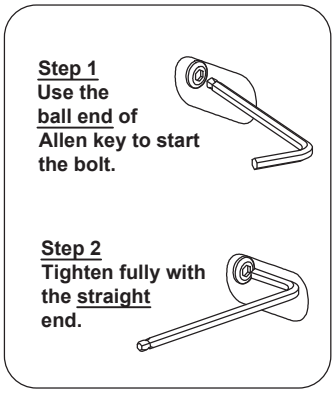

11 Assemble the Side Panel (G & H) to the Top Panel (A).

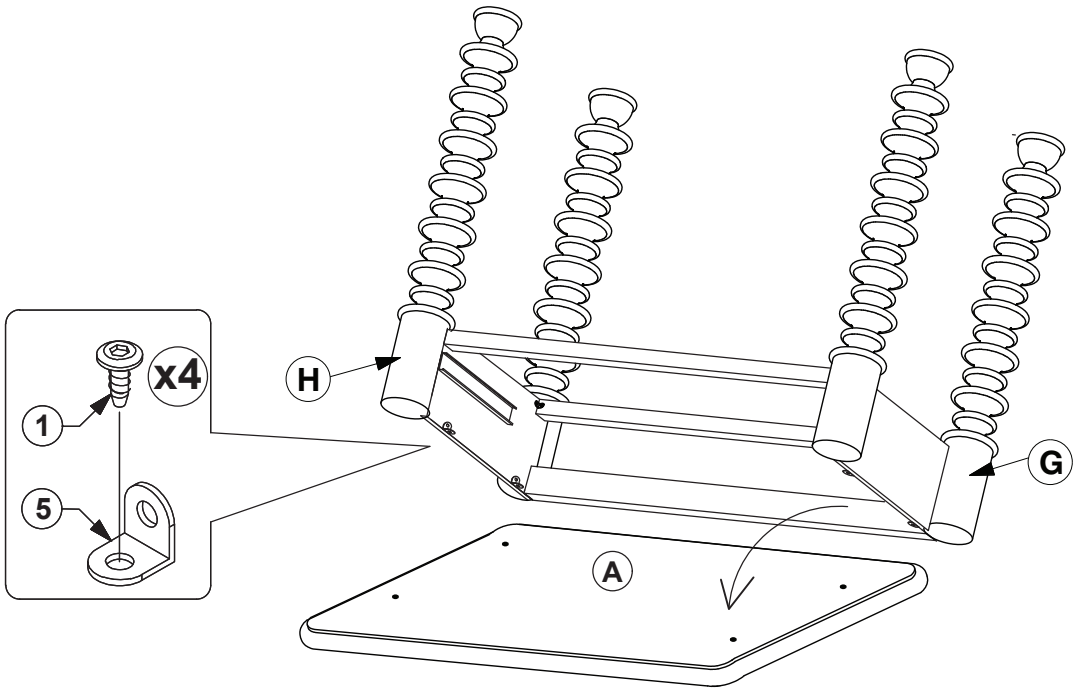

12 **Use Screw to tighten the Back Panel (C) to the back of frame.**

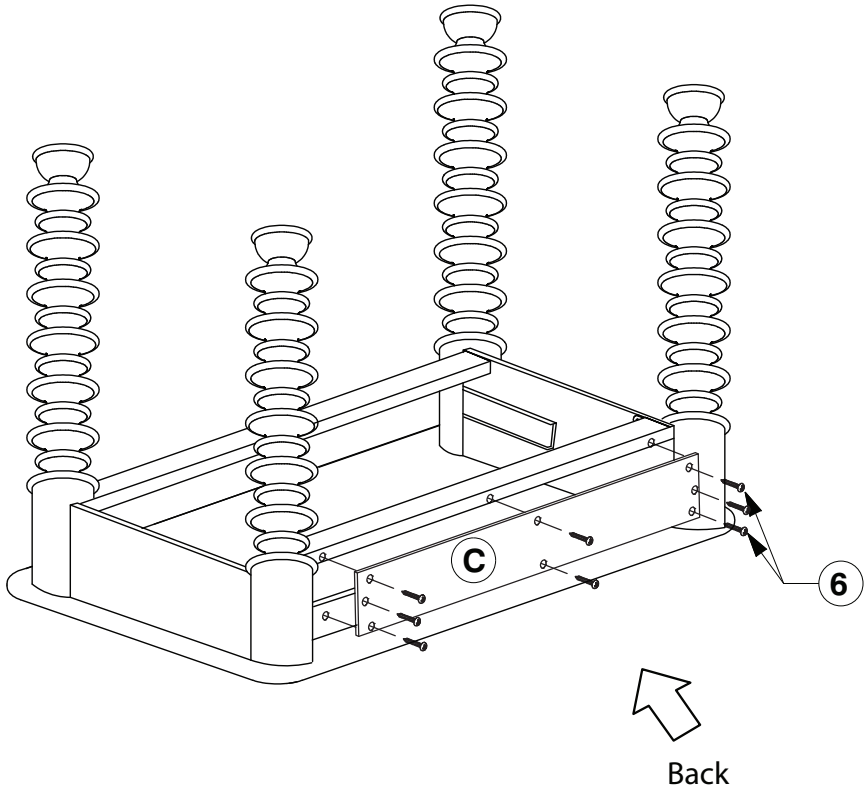

13 **Fit the Bottom Panel (B) and Lower Post (J) to the Bottom Side Panel (G & H).**

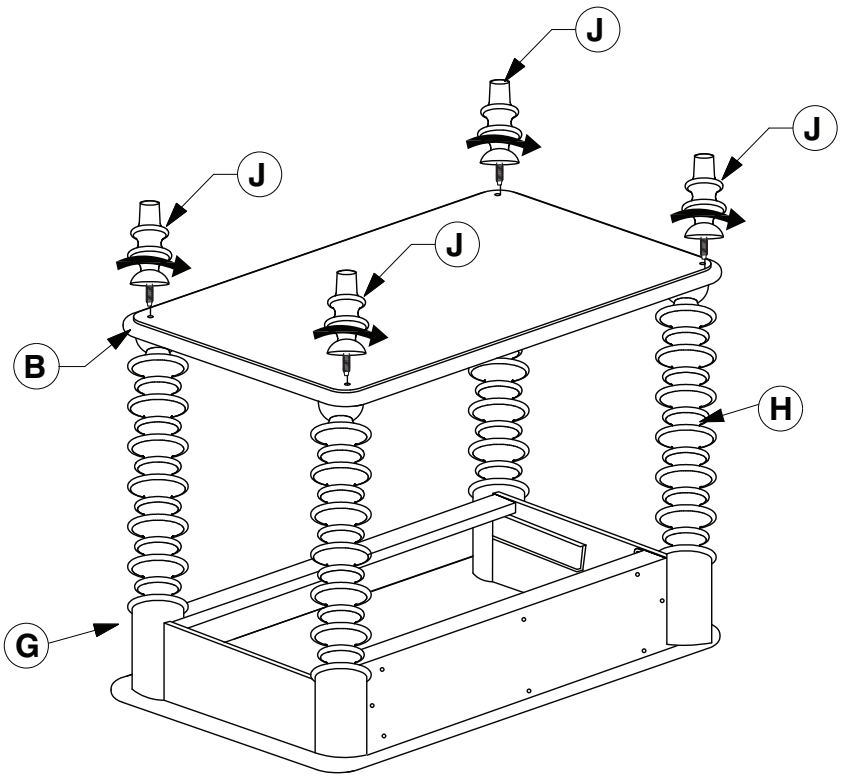

14 Fit the Drawer to the Casegood Body.

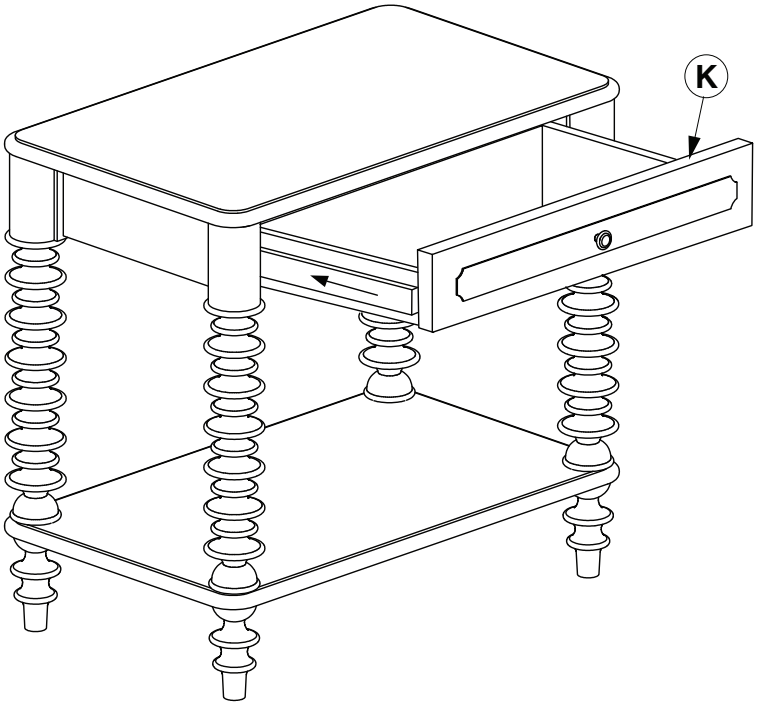

15 Fit and adjust the Drawer Face (K).

* NOTE: Before fitting the Wood Screws . Lossen the JCBs on the Drawer Face if the face needs alignment .

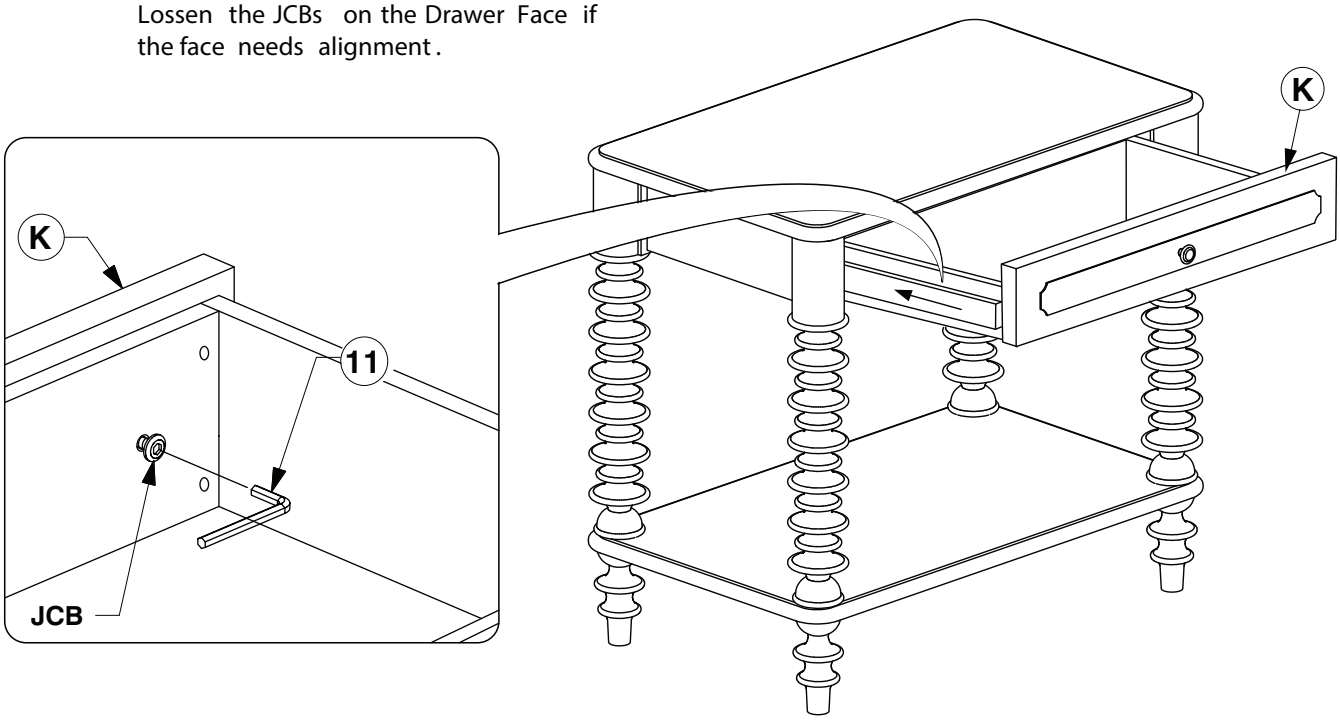

16 **After the Drawer Face (K) are aligned, secure with wood screw.**

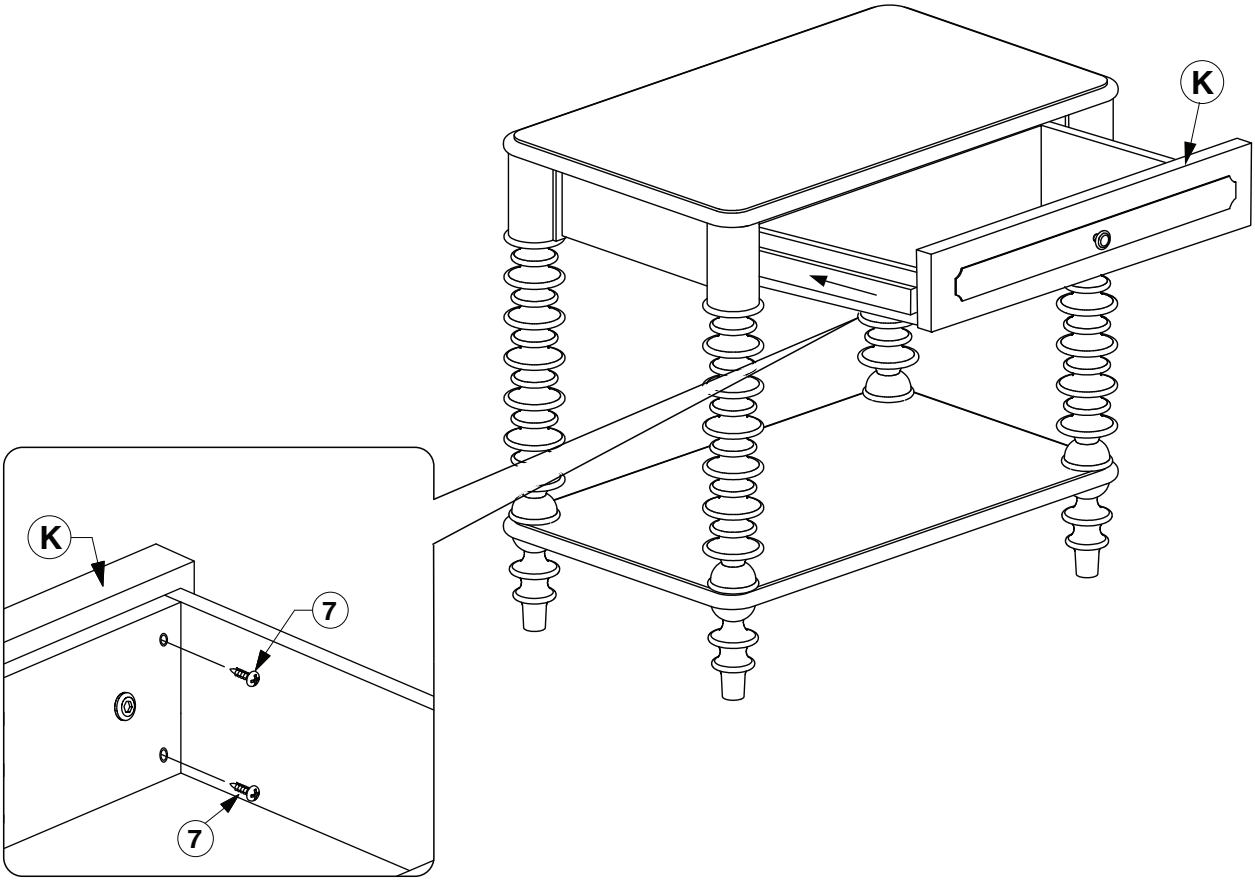

9029 3D Chest

Assembly Instructions

WI-0426

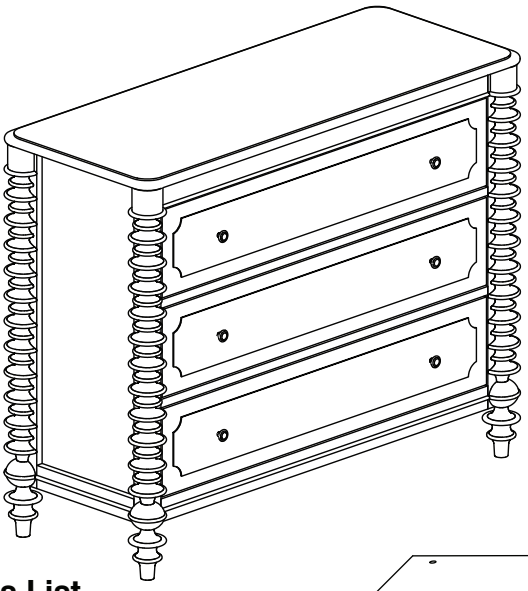

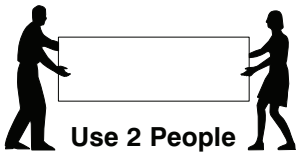

Note: **Do not assemble using power tools. This can cause the bolts to be overtightened**

1 Parts List

Parts in Box A:

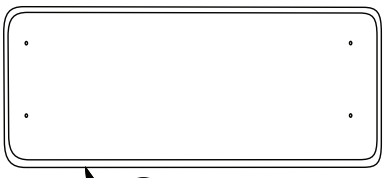

A Top Panel **x 1**

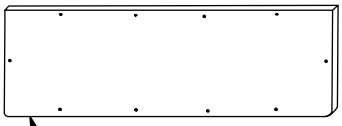

B Back Panel **x 3**



C Bottom Panel **x 1**



D Bottom Support **x 4**

E Front Bottom Support Bar **x 1**

F Front Support Bar **x 2**



G Front Upper Support Bar **x 1**



H Rear Support Bar **x 3**



J Rear Bottom Support Bar **x 1**



K Drawer Back **x 3**

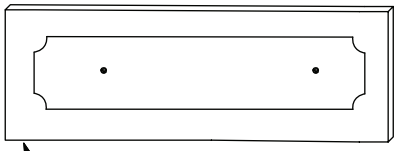

L Drawer Face **x 3**

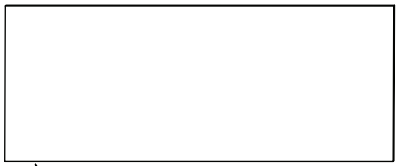

M Drawer Bottom **x 3**



N Drawer Rail **x 6**

Parts in Box B:

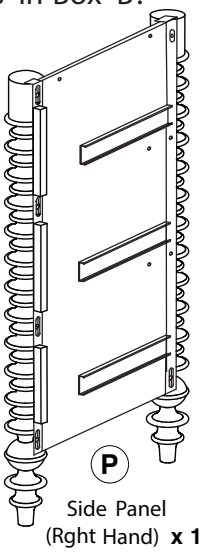

P Side Panel (Rght Hand) **x 1**

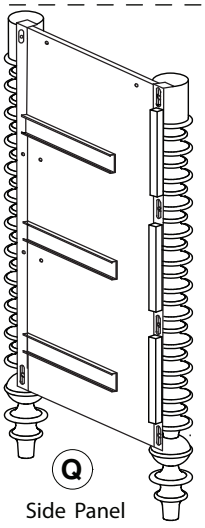

Q Side Panel (Left Hand) **x 1**



R Drawer Side (Left Hand) **x 3**



S Drawer Side (Right Hand) **x 3**

9029 3D Chest

Assembly Instructions

WI-0426

❷ Hardware List

1 M6 x 15mm JCB **x 16**

2 M6 x 40mm JCB **x 16**

3 M6 x60mm JCB **x 8**

4 'L' Bracket (5005-3) **x 8**

5 M8 x 30mm Wood Dowel **x 4**

6 M6 x 25mm Wood Dowel **x 24**

7 M4 x 20mm Wood Screw **x 18**



8 M4 x 25mm Wood Screw **x 36**



9 M4 x 32mm Wood Screw **x 30**

10 Handle (9029) **x 6**



11 M4 x 22mm Wood Screw **x 6**

12 Allen Key **x 1**

❸ Assemble the Drawer Sides (R & S) and Drawer Rail (N) to the Drawer Face (L).

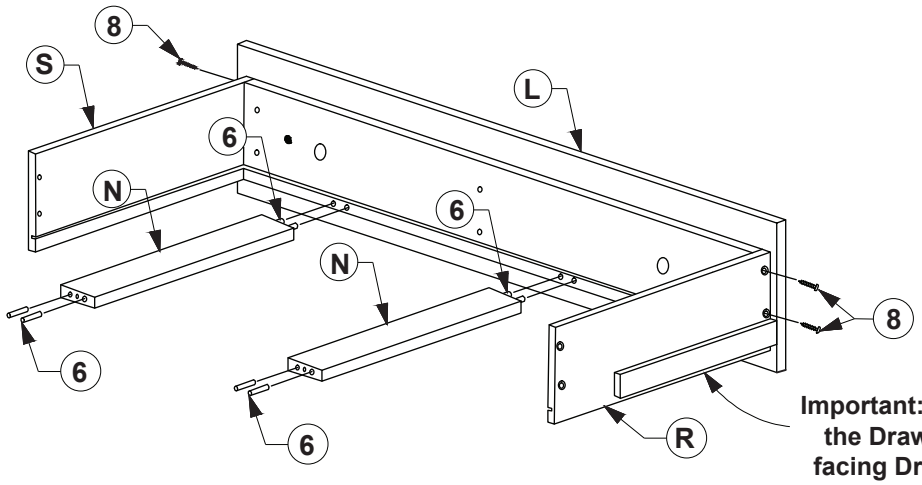

x3

Important: Assemble the Drawer Runner facing Drawer Face.

4 **Slide the Drawer Bottom (M) into the groove on the Drawer Sides (R & S).**

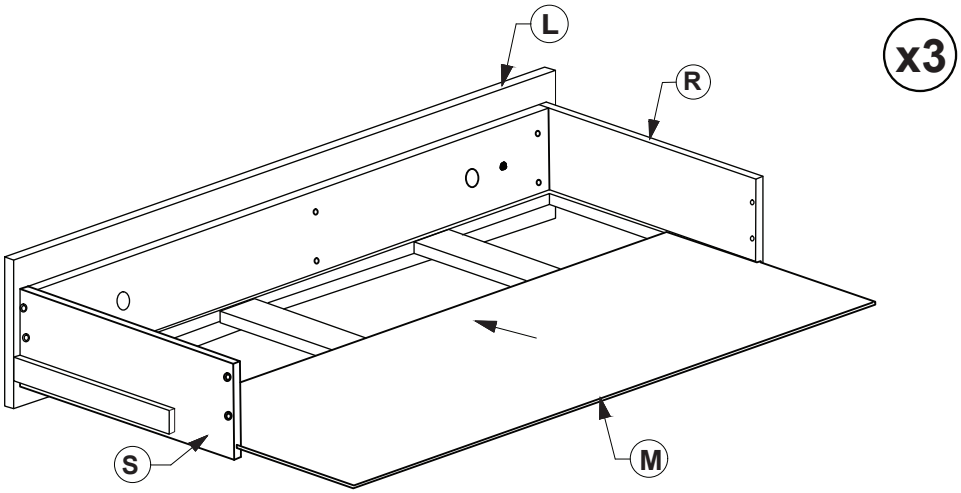

5 **Assemble the Drawer Back (K) to the Drawer Sides (R & S). Fit the Handle to the Drawer Face (L).**

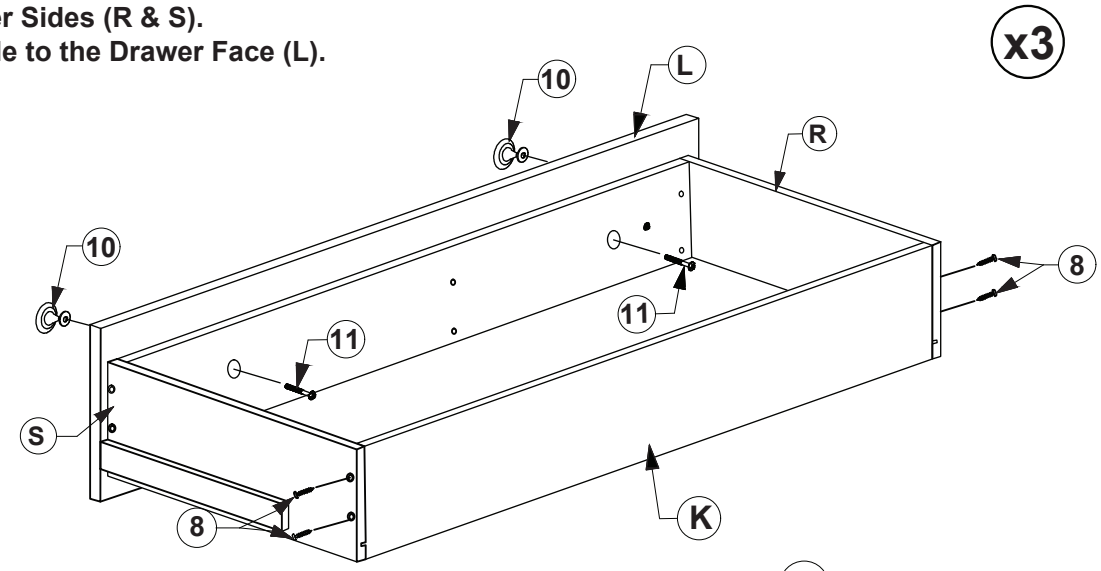

6 **Turn the Drawer over to fit angled 25mm Wood screws (8) to the Drawer Rail (N).**

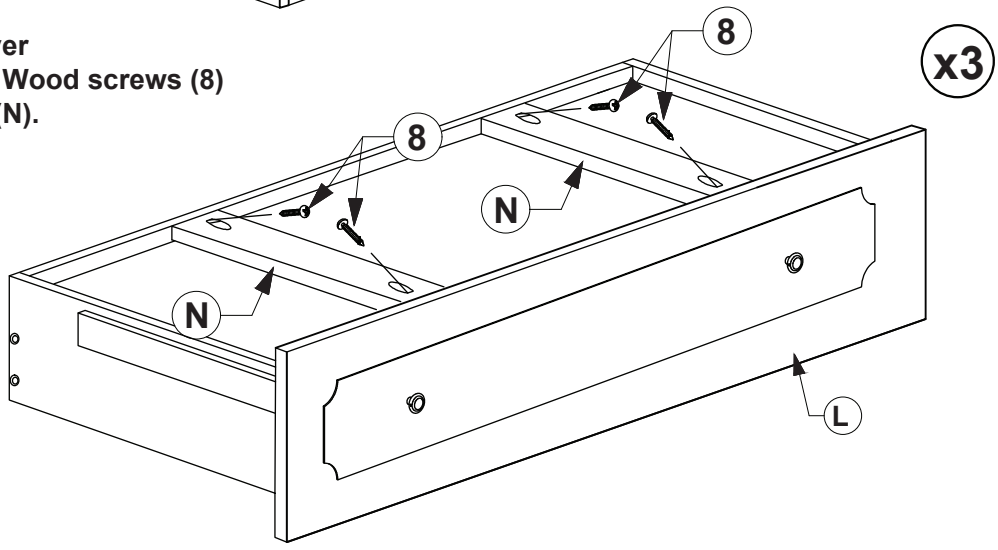

7 **Fit the 'L' Bracket (4) to the Side Panel (P & Q).**

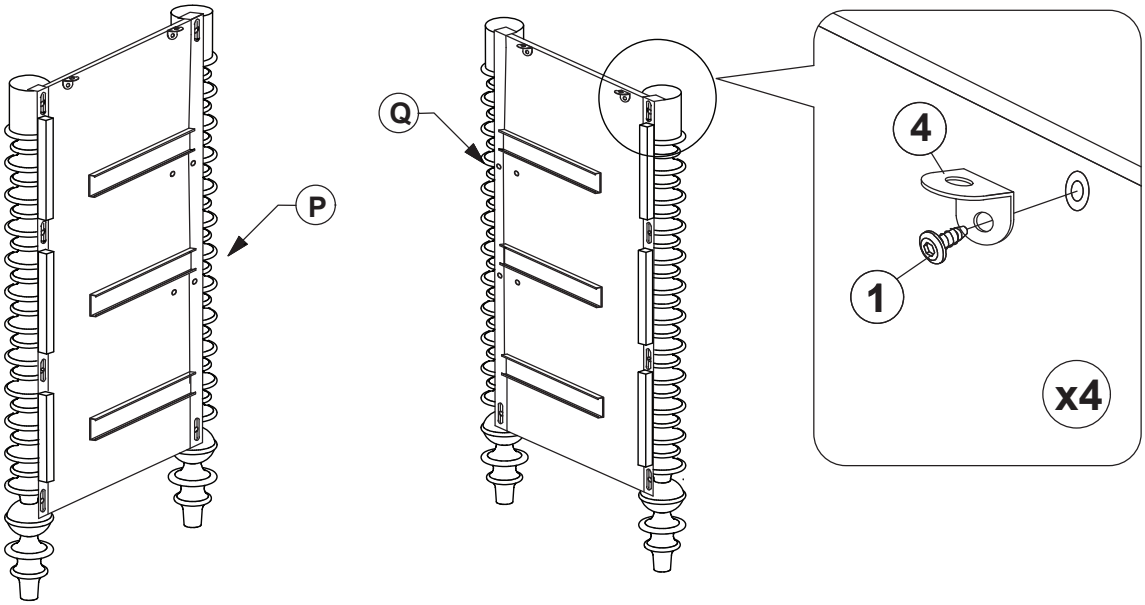

8 **Fit the "L" Braket (4) and Wood Dowel (5) to the Front Support Bar (F).**

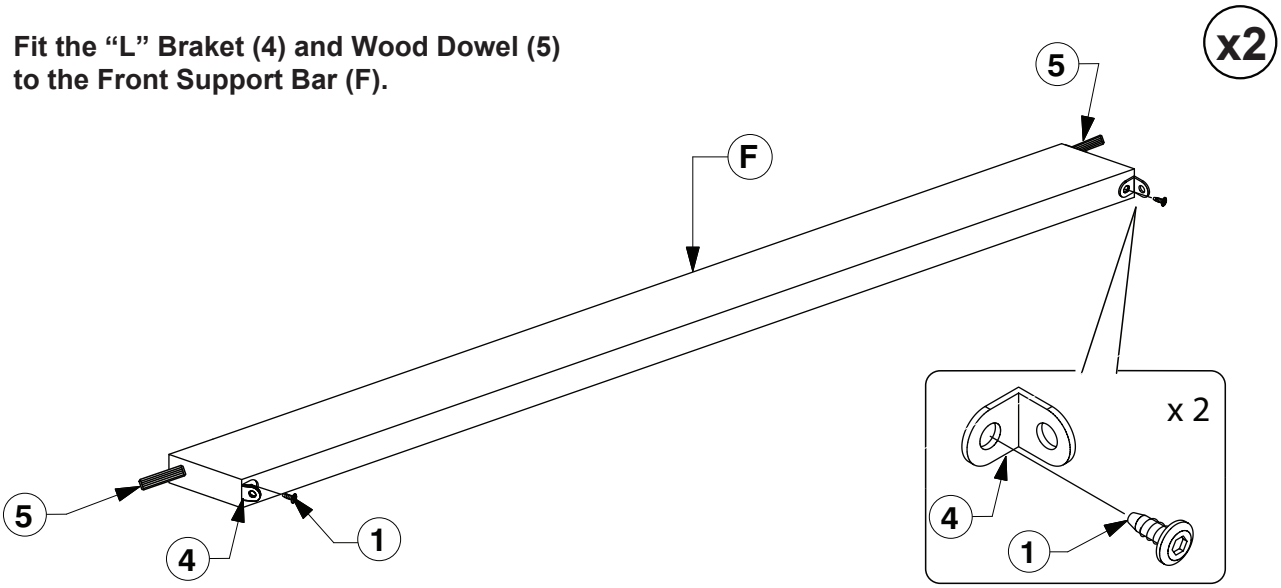

9 Assemble Support Bar (E, F, G, H & J) to the Side Panel (Q).

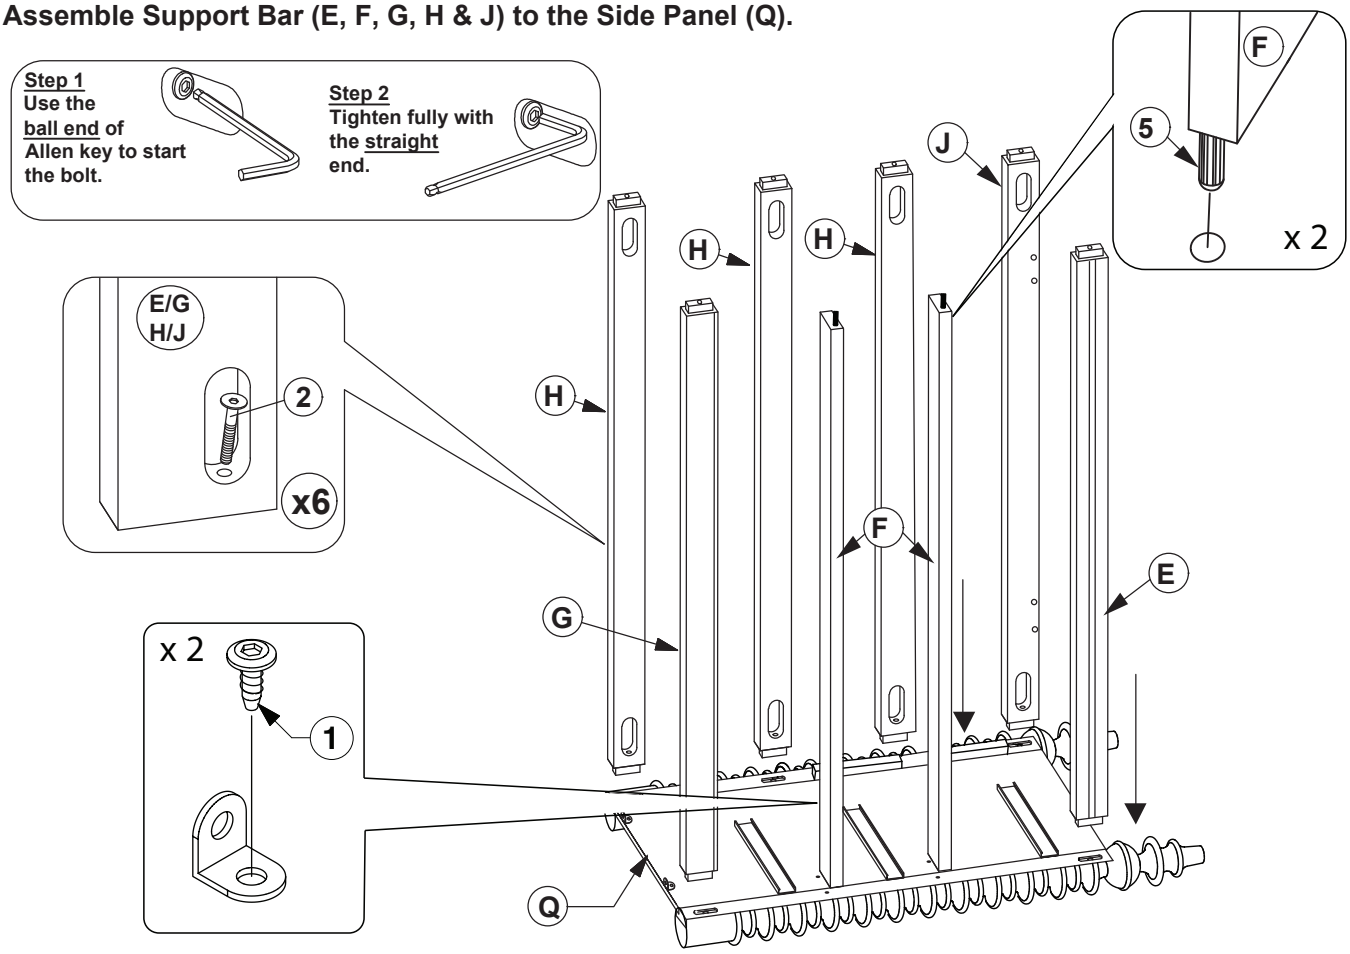

10 Fit the Side Panel (P) to the Support Bar (E, F, G, H & J).

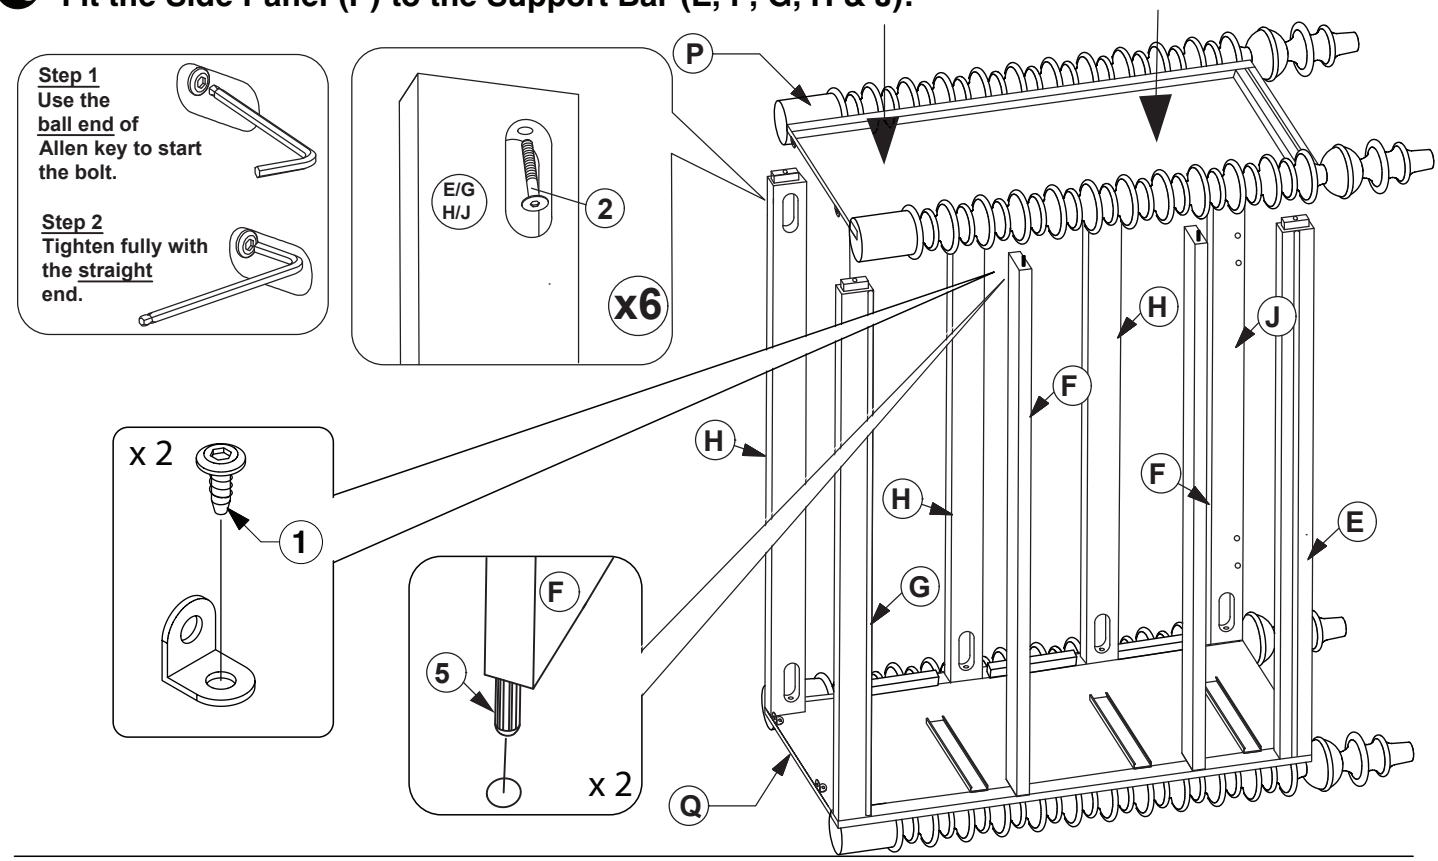

11 **Assemble the Side Panel (P & Q) to the Top Panel (A).**

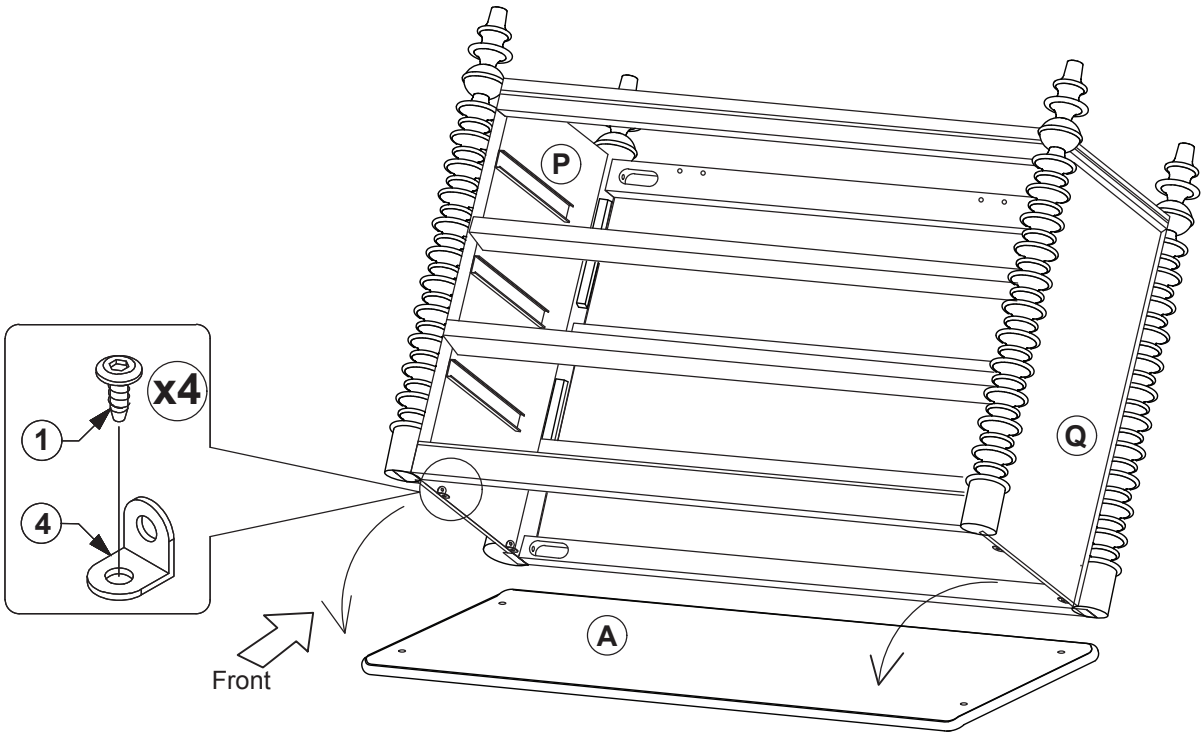

12 **Assembled the Bottom Support (D) to the Bottom Front & Rear Support Bar (E & J) as shown.**

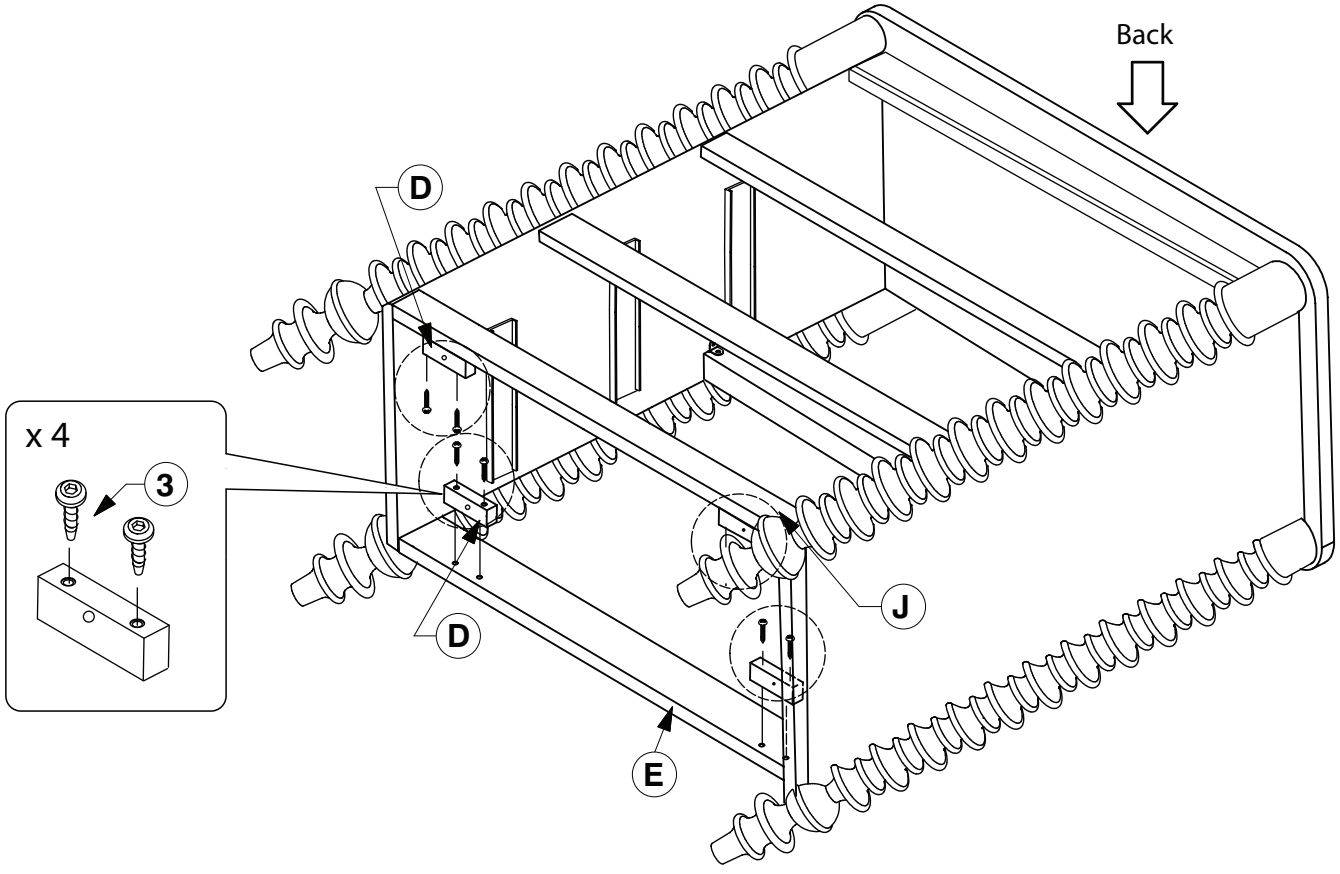

13 **Bolt the Bottom Support (D) to the Bottom Panel (C) as shown.**

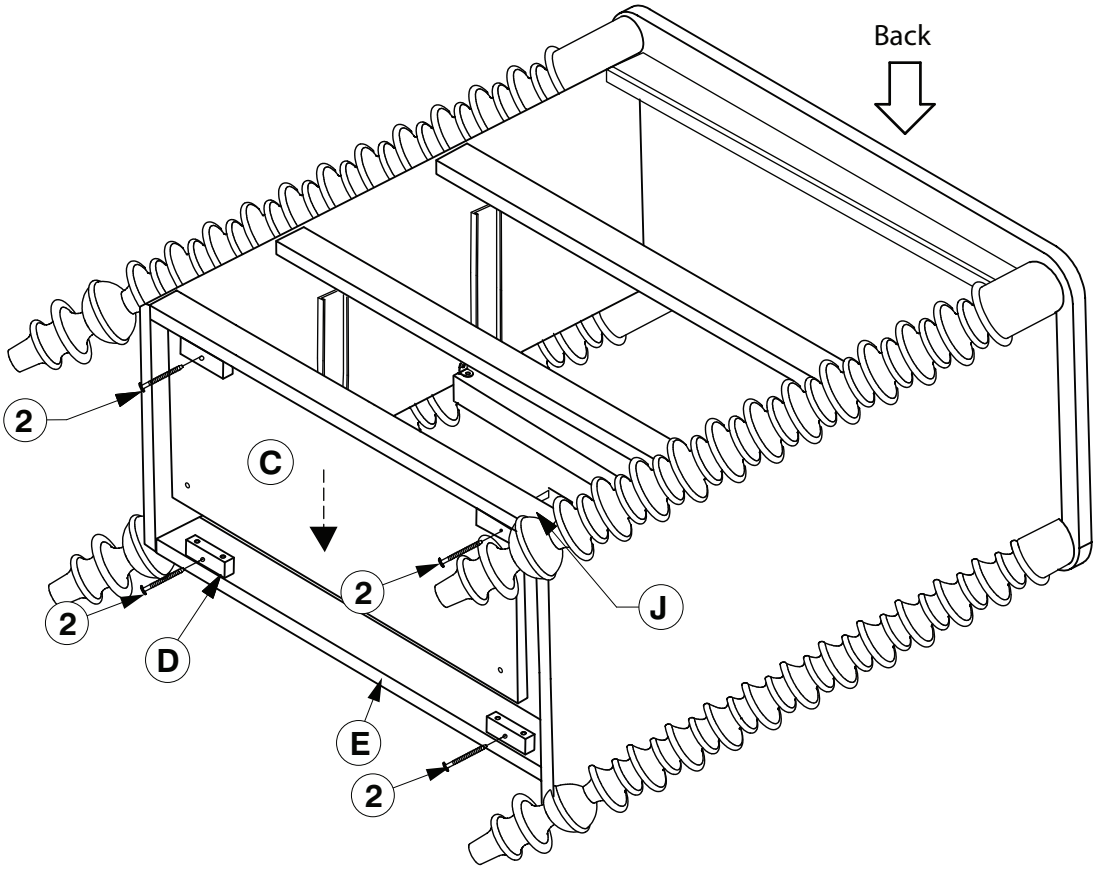

14 **Use screw to tighten the Back Panel (B) to the back of the frame.**

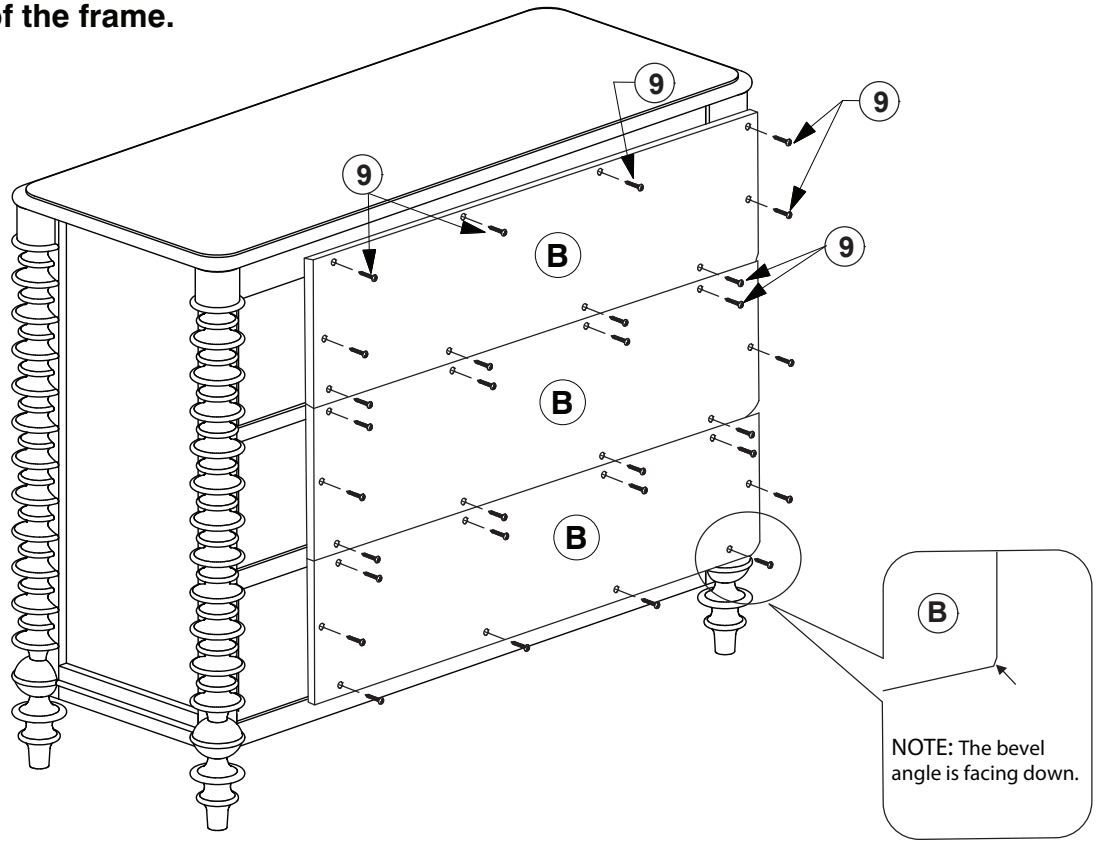

WI-0426

15 Fit the Drawer Face (L) to the casegood body.

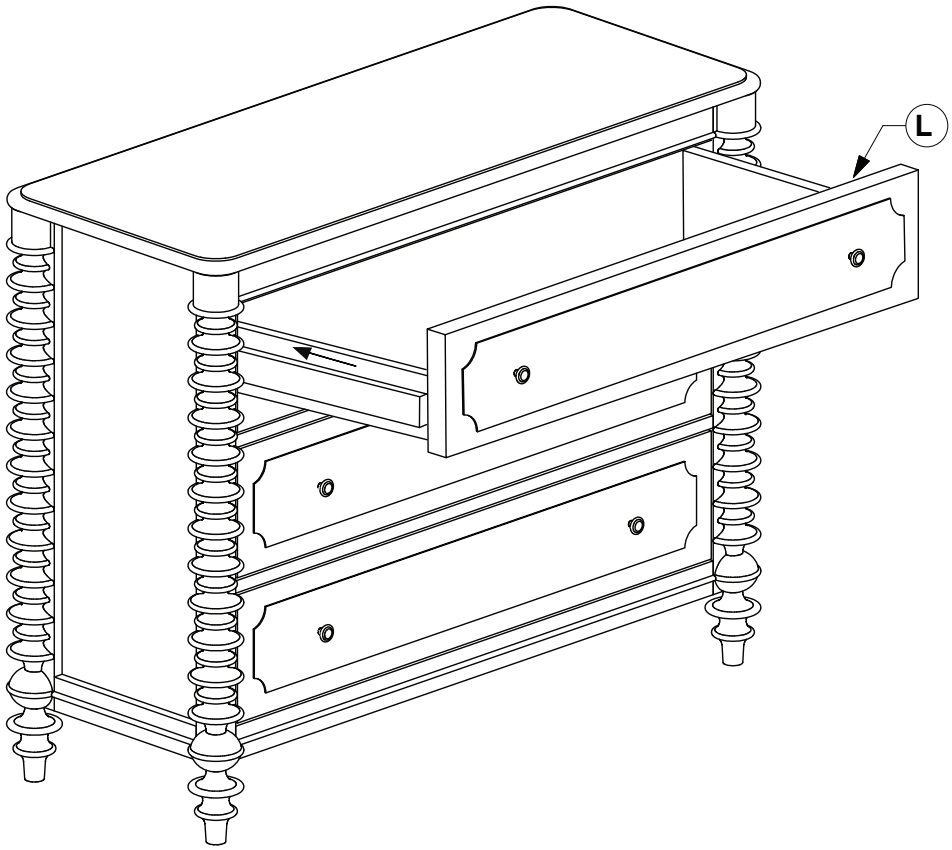

16 Adjust the Drawer Face (L) .

* NOTE: Before fitting the Wood Screws . Lossen the JCBs on the Drawer Face if the face needs alignment .

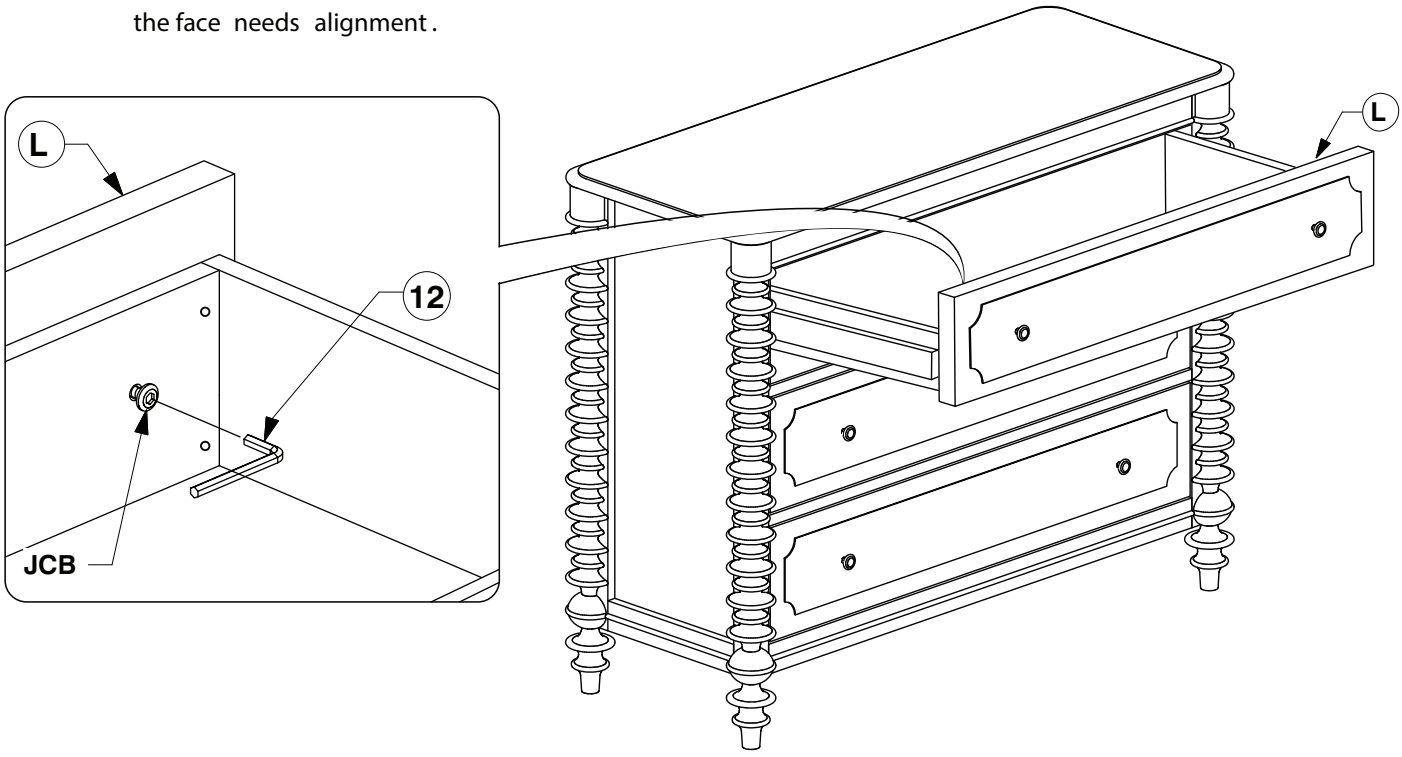

WI-0426
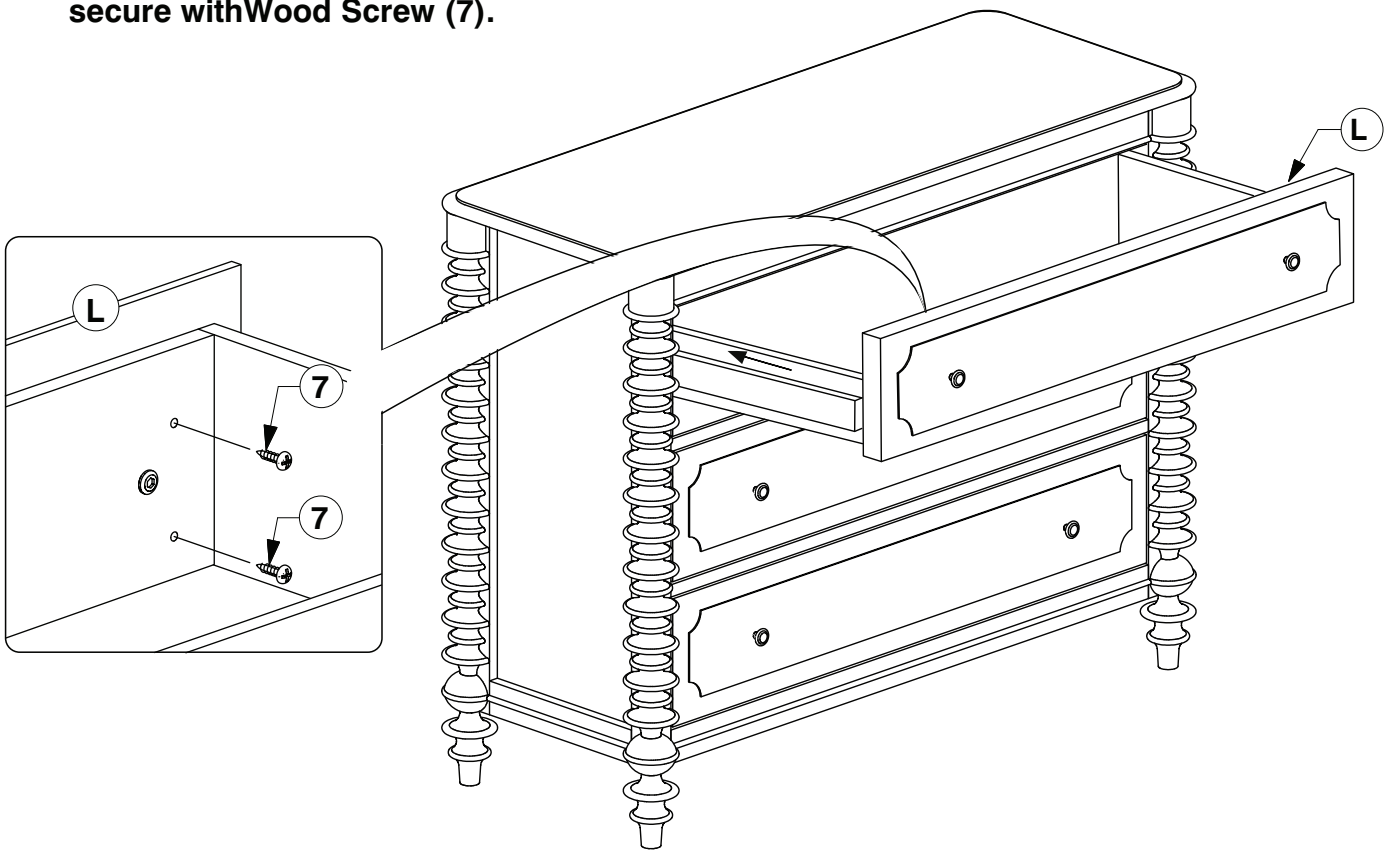
17 **After the Drawer Faces (L) are aligned, secure withWood Screw (7).**