
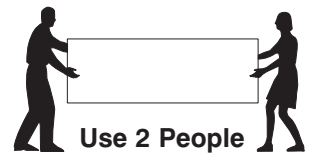


0110-11 Canopy Queen Bed

Assembly Instructions

WI-0226


1 Assembled View

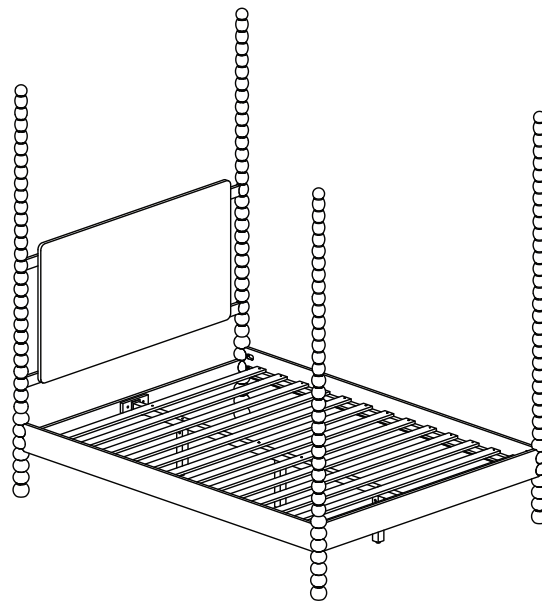


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List


Parts in Box A:

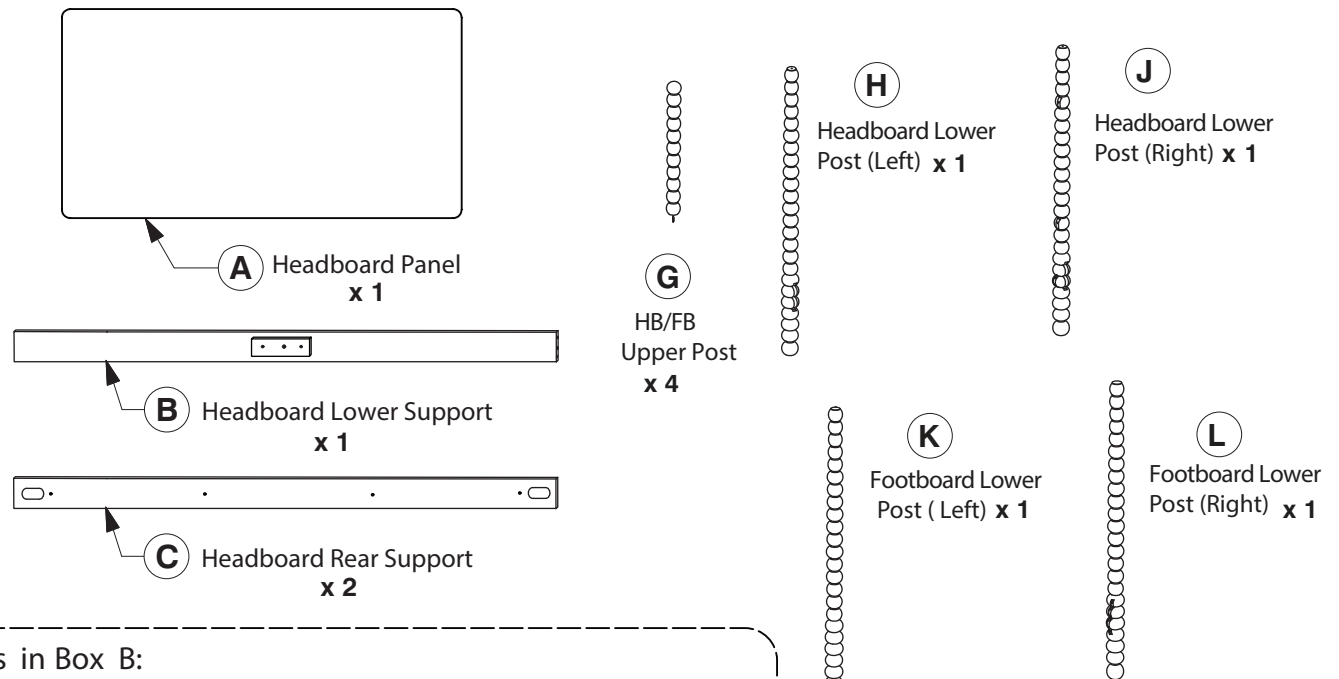

Parts in Box B:

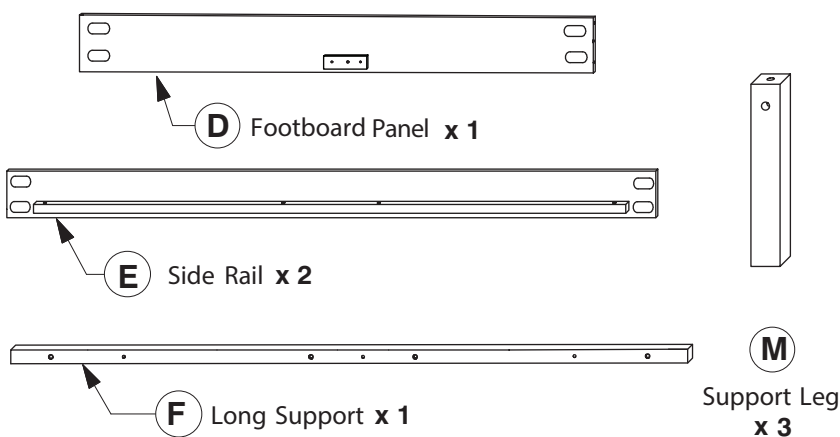

Partsin Box A:

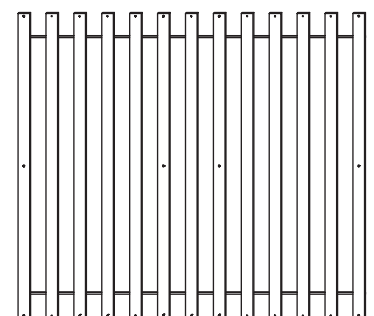





N Set of Bed Slats x 1

0110-11 Canopy Queen Bed


Assembly Instructions

WI-0226


3 Hardware List

- | | | | | |
|---|---|---|---|---|
| 
1 M6 x 15mm JCB x 4 | 
2 M6 x 30mm JCB x 8 | 
3 M6 x 40mm JCB x 32 | 
4 M6 x 90mm JCB x 3 | 
5 Barrel Nut x 3 |
| 
6 Adjustable Foot x 3 | 
7 Center Rail Bracket x 2 | 
8 Wood Screw (M4 x 32mm) x 18 | 
9 Wood Dowel (10 x 40mm) x 6 | 
10 M4 Allen Key x 1 |

4 Assembled the Support Leg (M) to the Long Support (F).

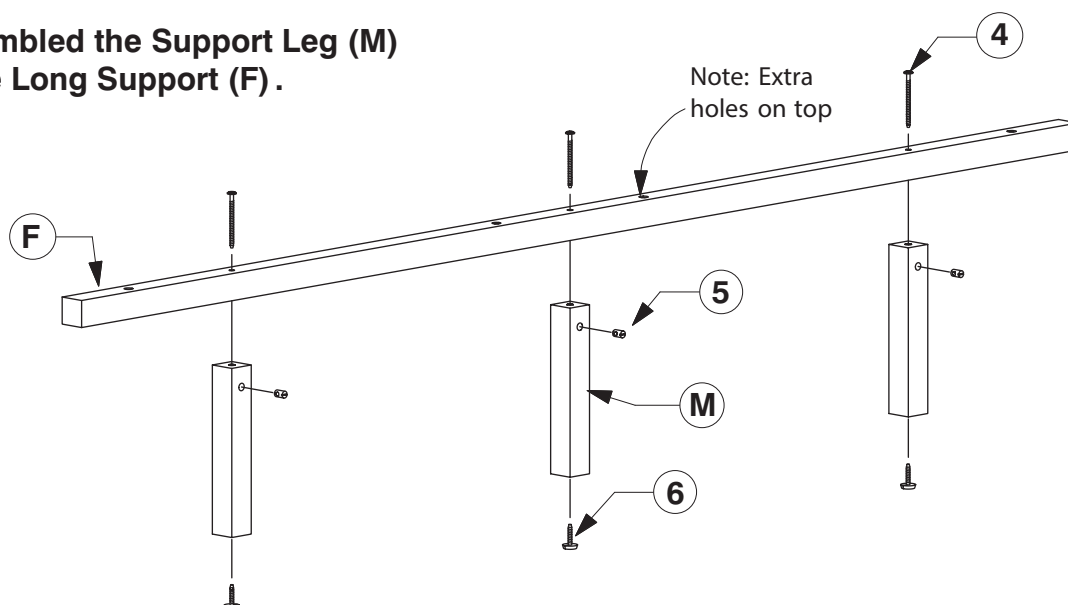

5 Fit the Center Rail Bracket (7) to the Headboard Lower Support (B).

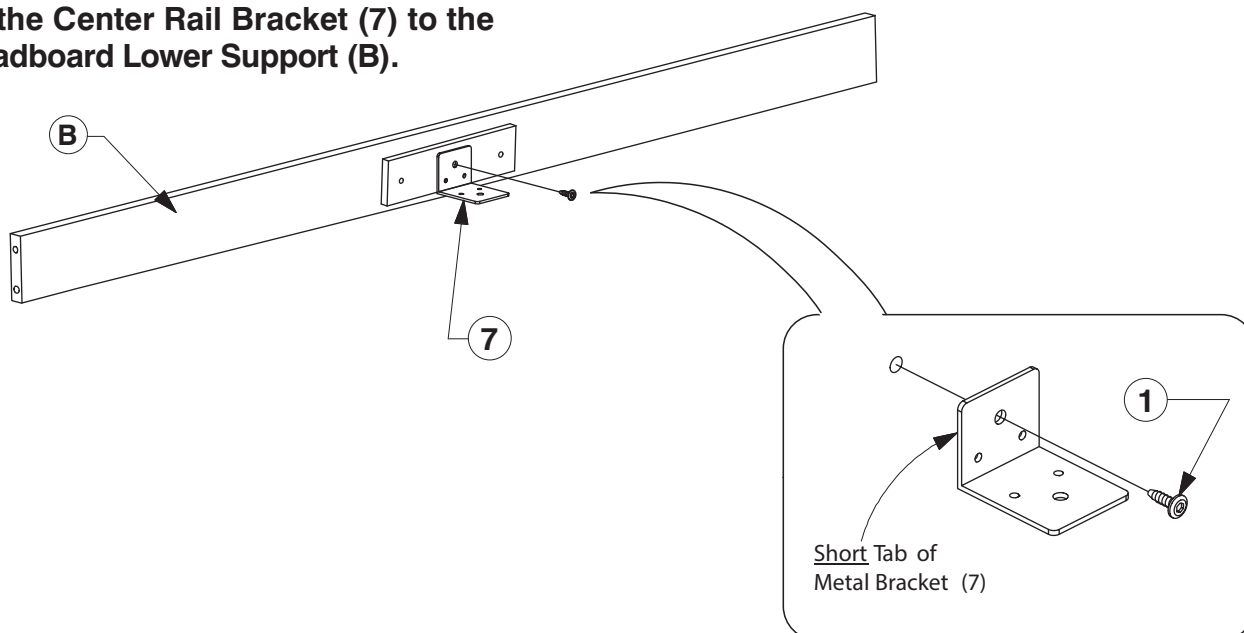


0110-11 Canopy Queen Bed

Assembly Instructions


WI-0226

- 6** Assembled the Headboard Rear Support (C) to the Headboard Panel (A).

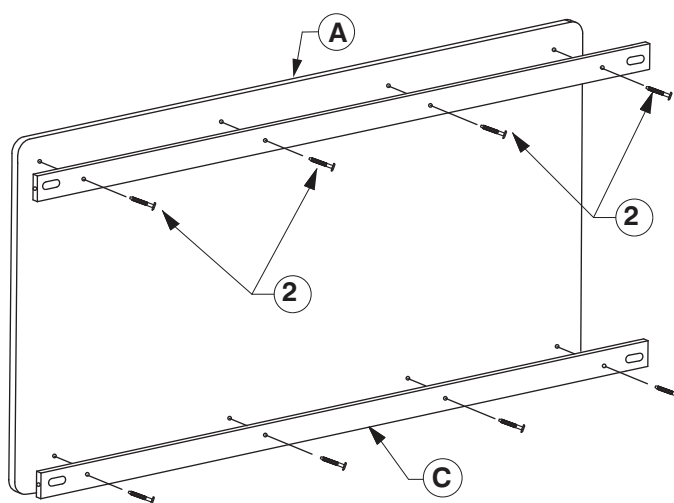

- 7** Fit the HB/FB Upper Post (G) to the HB Lower Post (H & J) and FB Lower Post (K & L)

x4

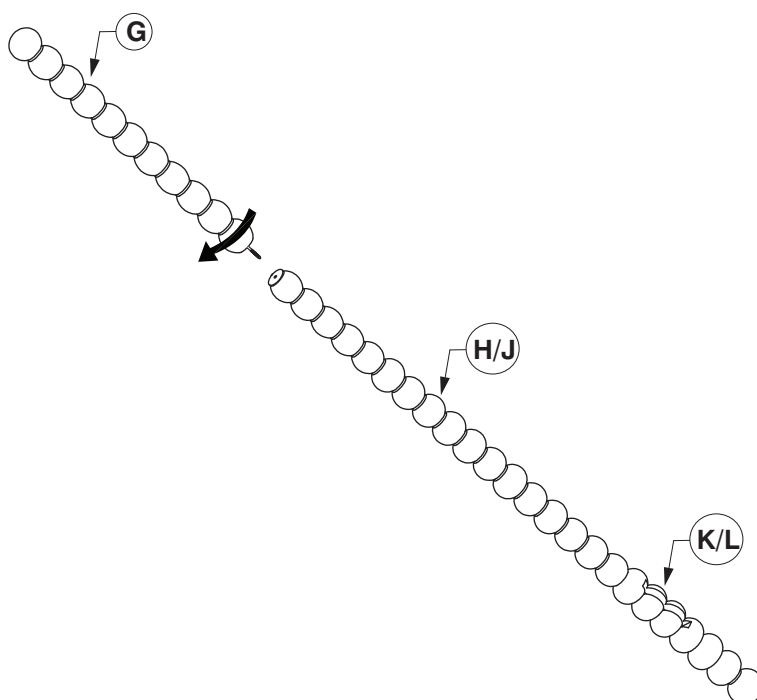


0110-11 Canopy Queen Bed

Assembly Instructions


WI-0226

- 8** Assemble the Headboard Post (H & J) to the Headboard Panel (A) and Headboard Lower Support (B).

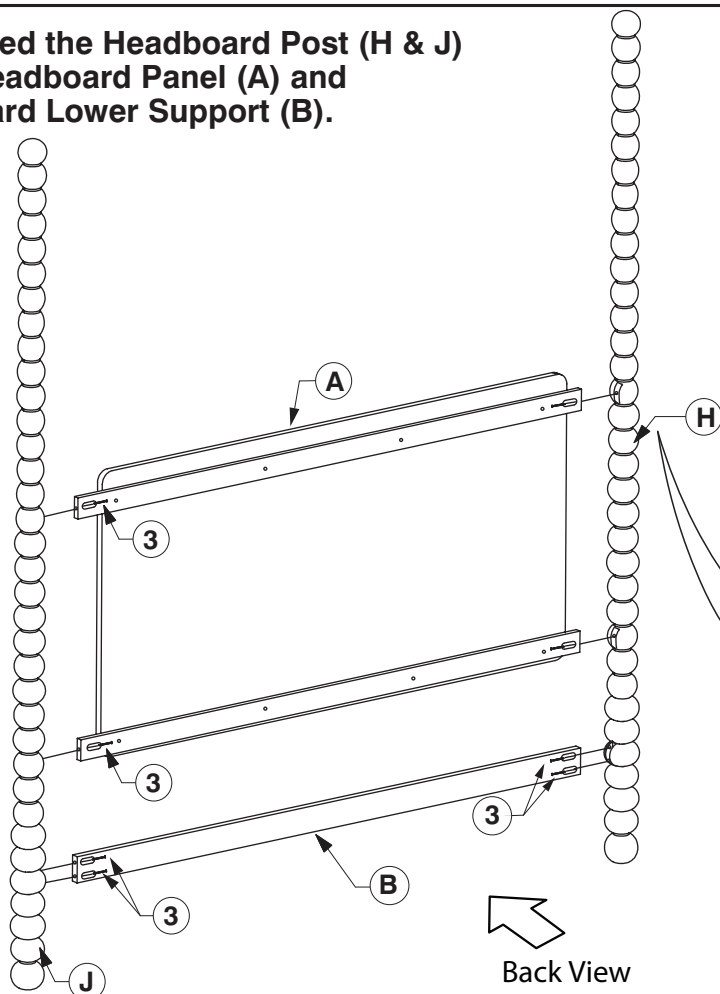



Step 1

Use the **ball end** of Allen key to start the bolt.

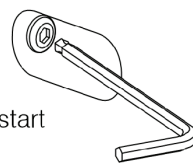


Step 2

Tighten fully with the **straight end**.

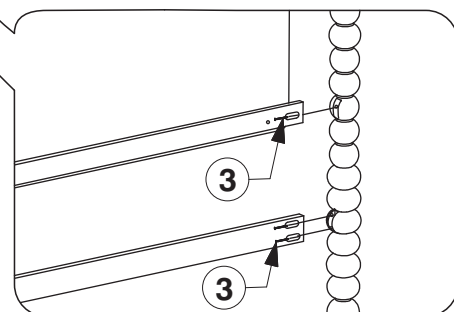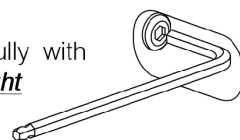


- 9** Assemble the Footboard Post (K & L) to the Footboard Panel (D). Fit the Center Rail Bracket (7) to the Footboard Support (D)

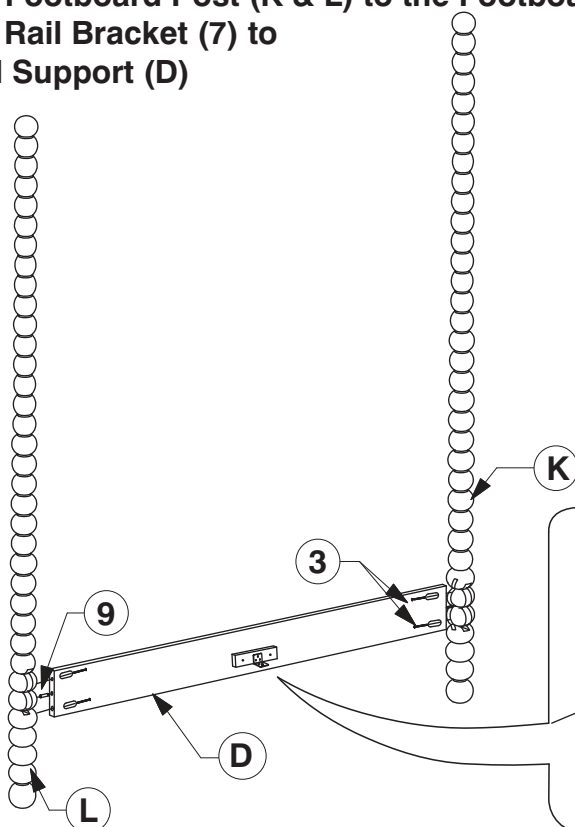



Step 1

Use the **ball end** of Allen key to start the bolt.

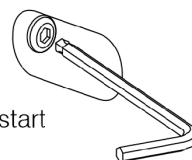

Step 2

Tighten fully with the **straight end**.

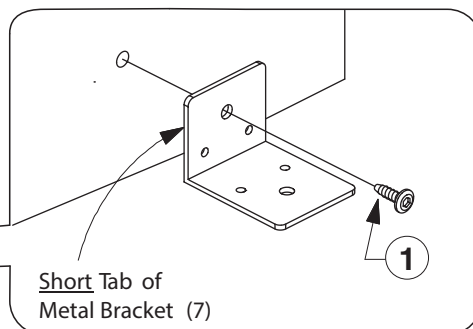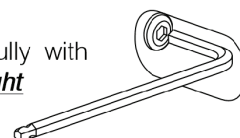


0110-11 Canopy Queen Bed


Assembly Instructions

WI-0226

- 10 Assemble the Side Rail (E) to the Headboard Post (H & J) & Footboard Post (K & L).**

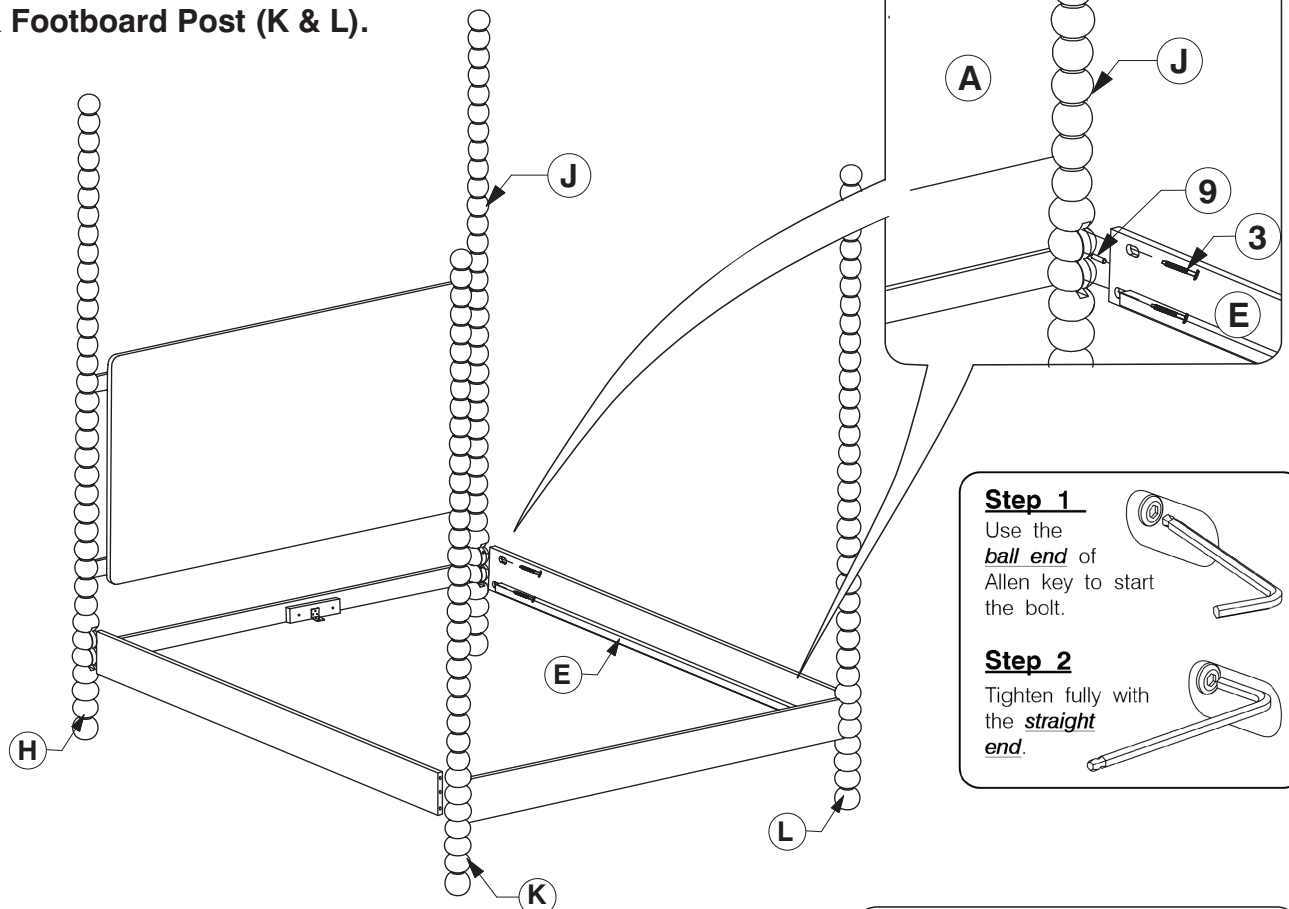

- 11 Bolt the Long Support (F) to the Center Rail Bracket (7) on the Headboard Lower Support (B) & Footboard Panel (D).**

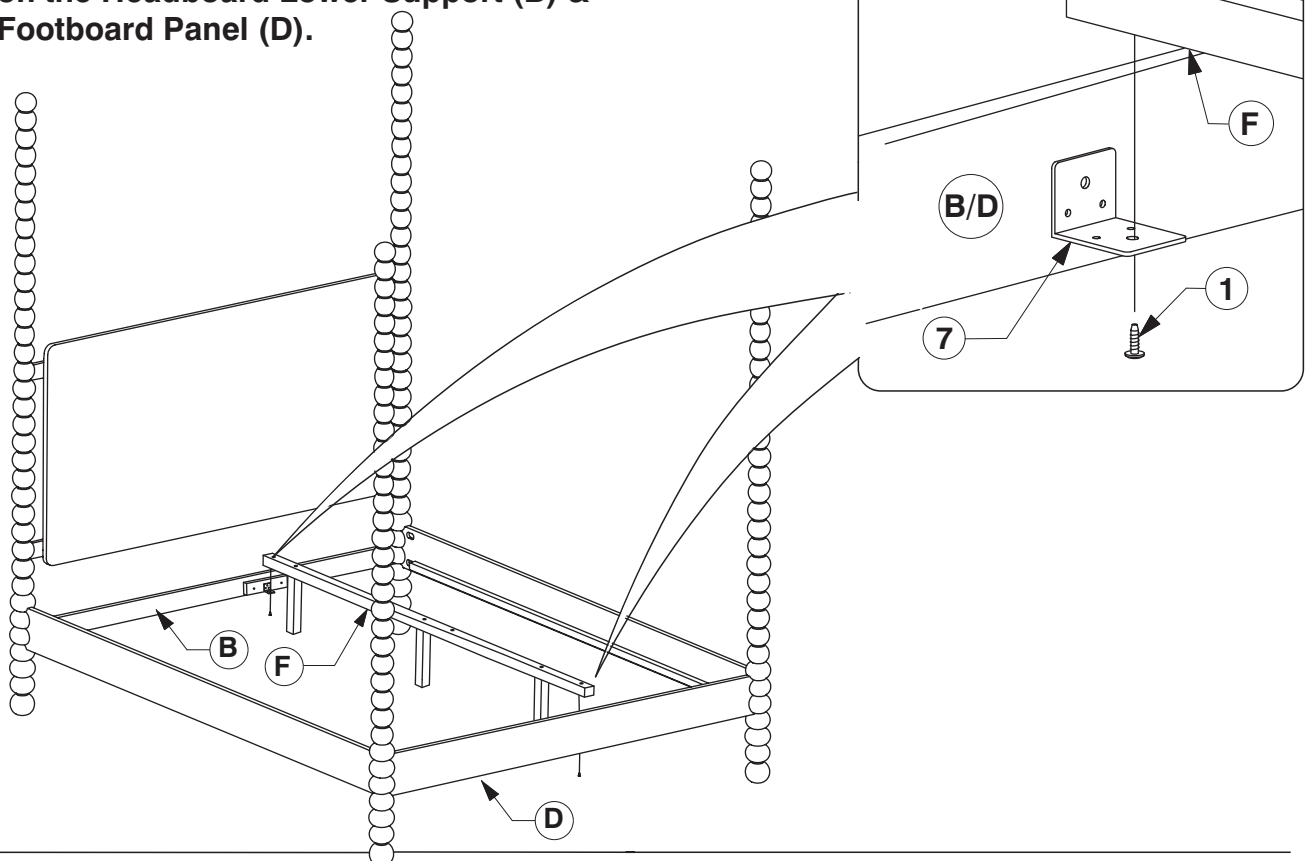


0110-11 Canopy Queen Bed

Assembly Instructions

WI-0226



- 12** Bolt & screw the Bed Slats (N) to the Side Rail (E).

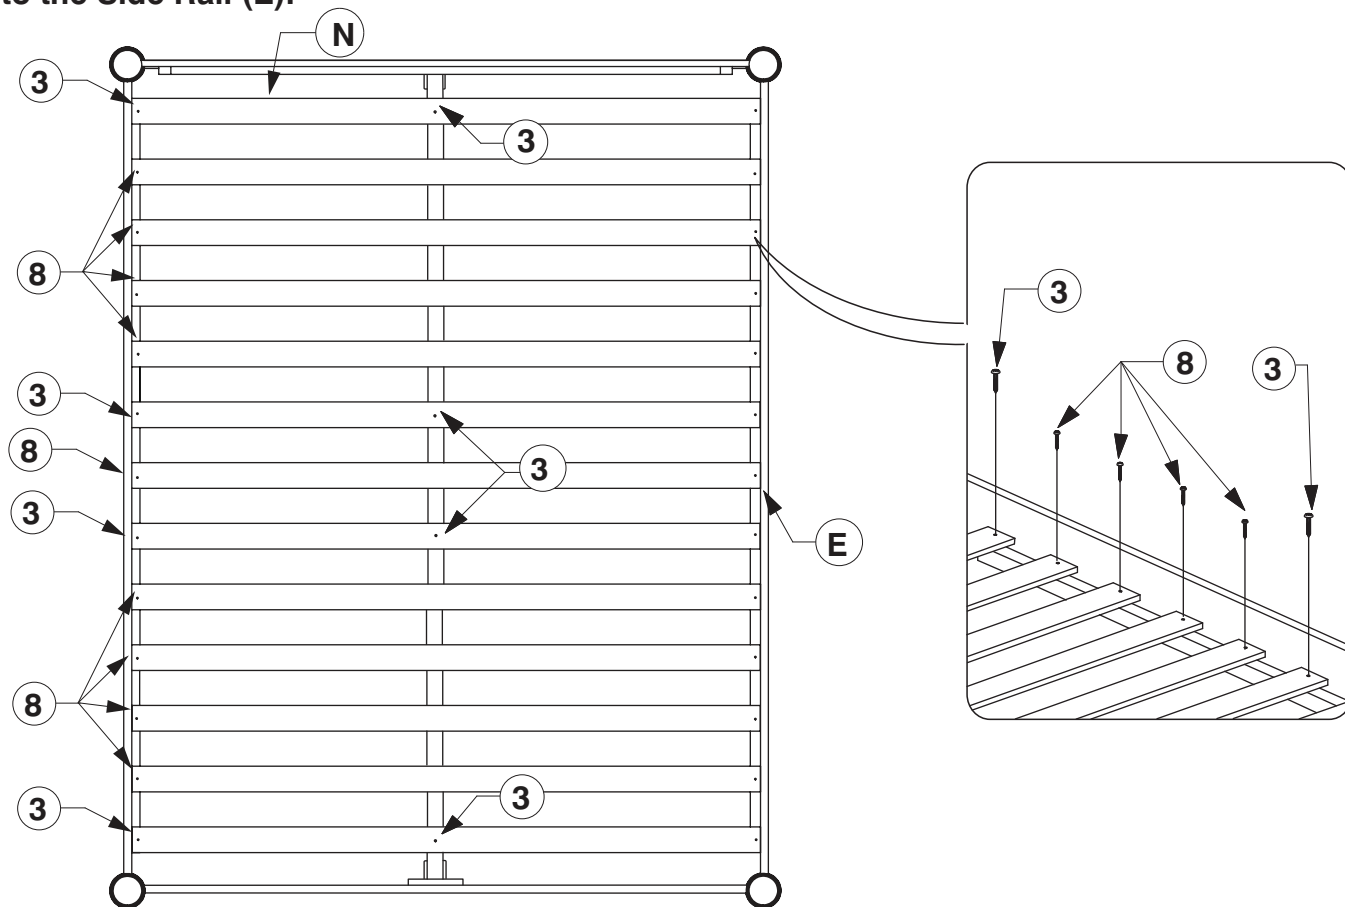

9025 6 Drawer Dresser


Assembly Instructions

WI-1024

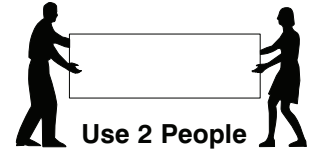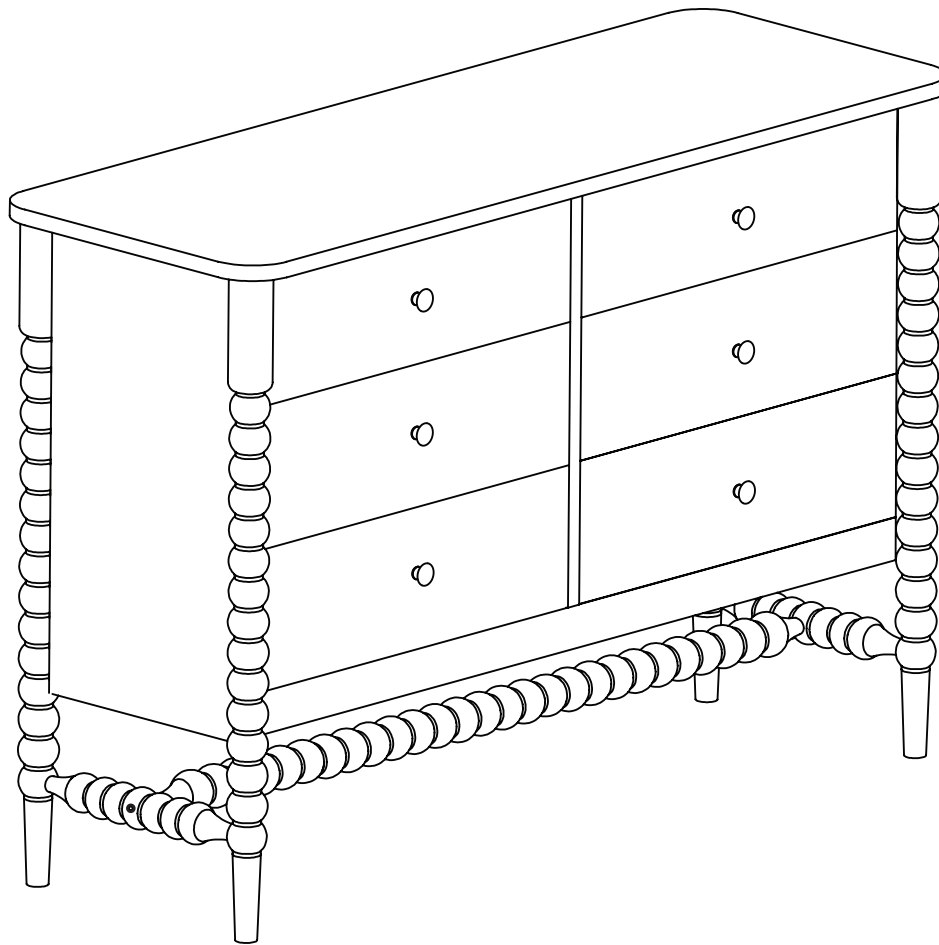

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

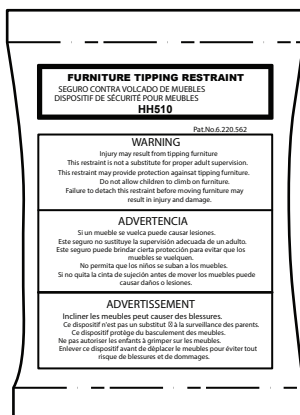

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9025 6 Drawer Dresser

Assembly Instructions


WI-1024

1 Parts List


Parts in Box A:

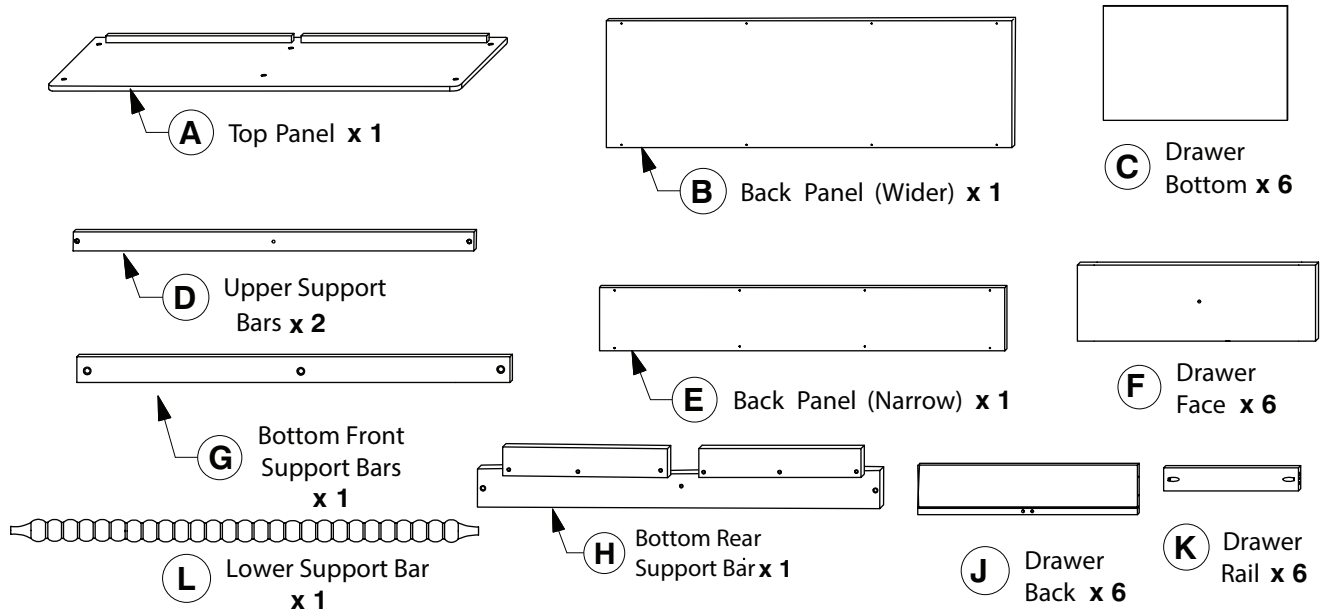


Parts in Box B:

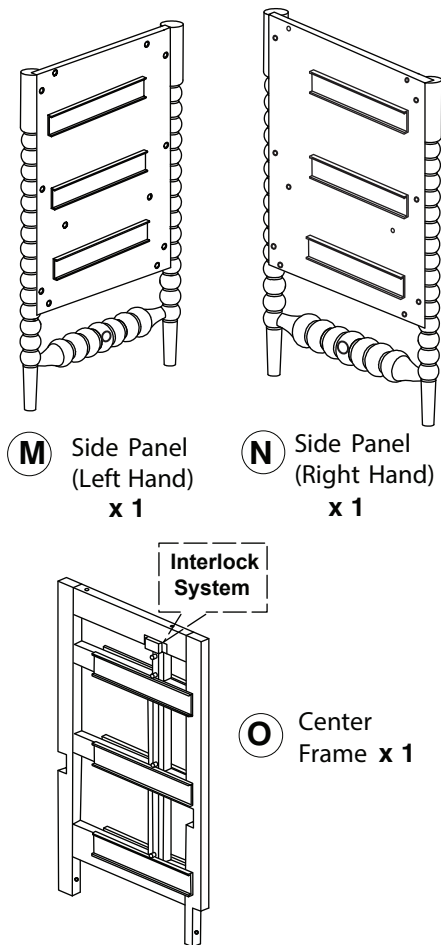

Parts for LEFT Side Drawer

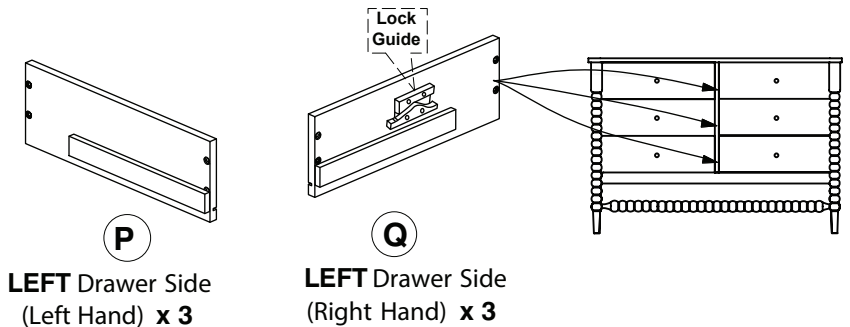

Parts for RIGHT Side Drawer

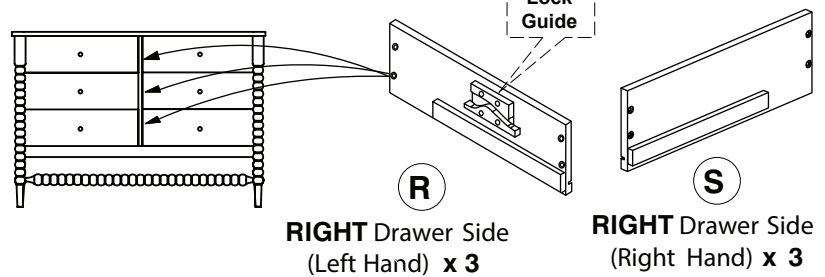


9025 6 Drawer Dresser

Assembly Instructions

WI-1024


2 Hardware List

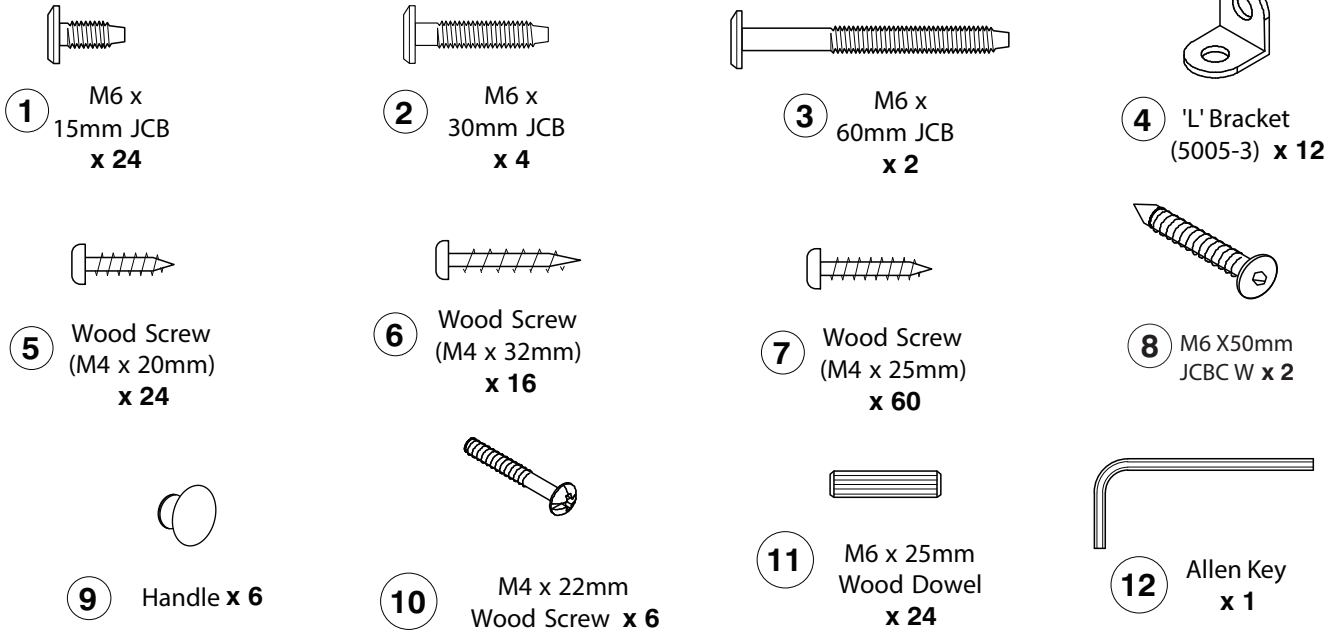

3 Assemble the Drawers.


STEP 3.1

LEFT

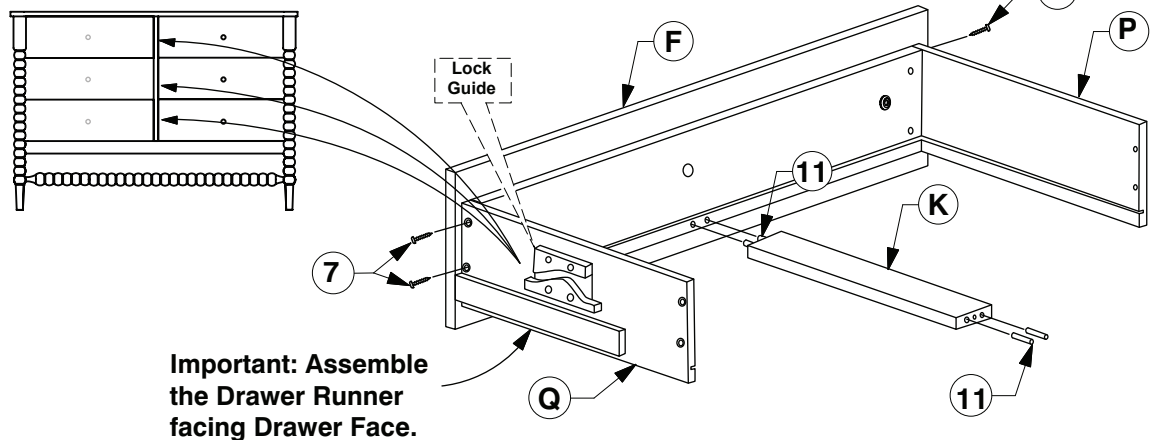

Important: Assemble the Drawer Runner facing Drawer Face .

RIGHT

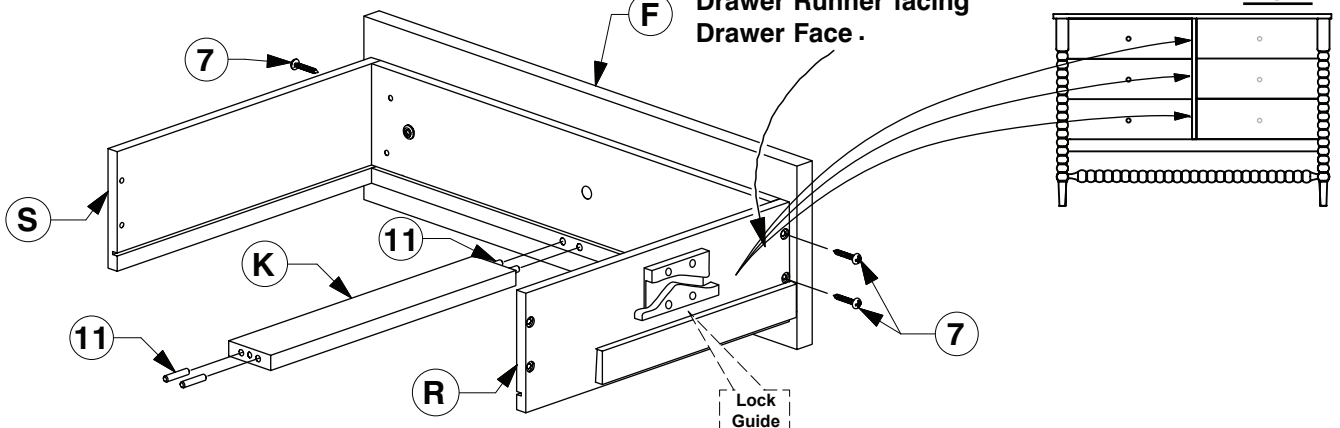

9025 6 Drawer Dresser

Assembly Instructions


WI-1024

3 Assemble the Drawers.

STEP 3.2


* 3 Assemble the left and right drawers as shown below

x6

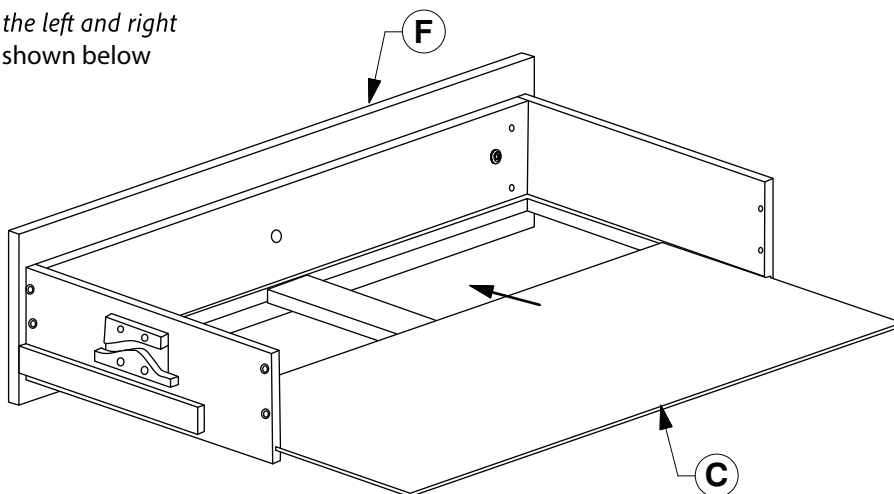


STEP 3.3

x6

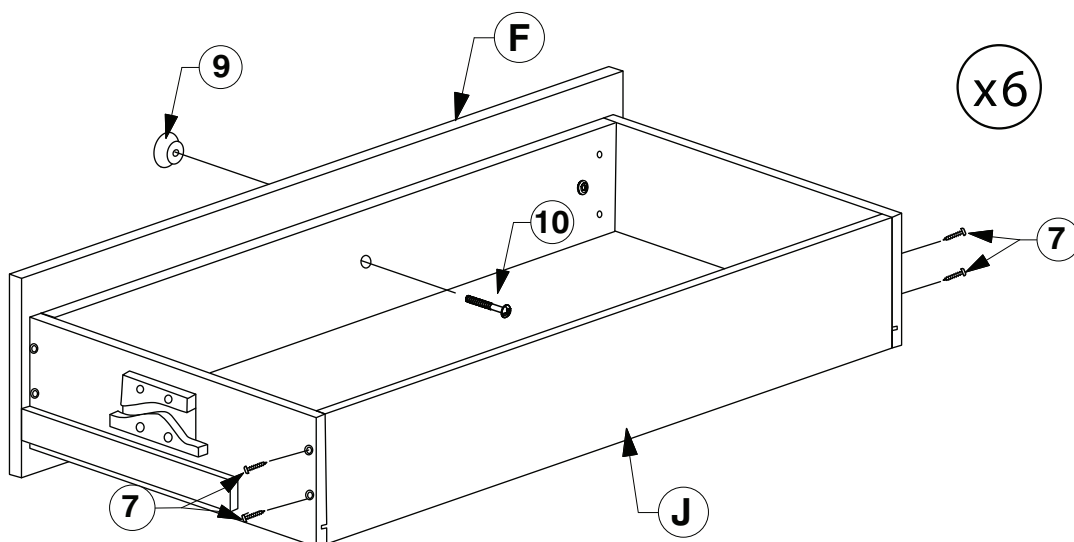

STEP 3.4

x6

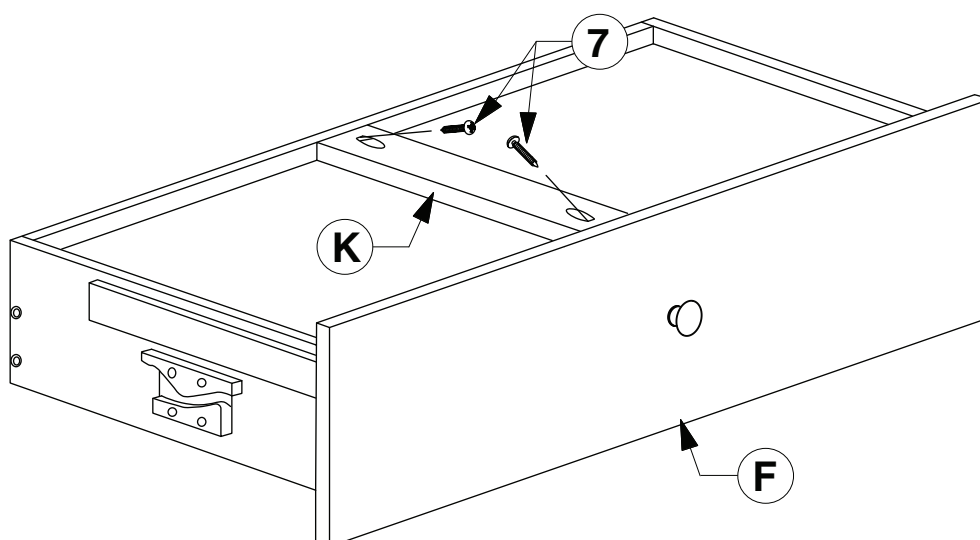


9025 6 Drawer Dresser


Assembly Instructions

WI-1024

4 Fit the 'L' Bracket to the Side Panel (M & N).

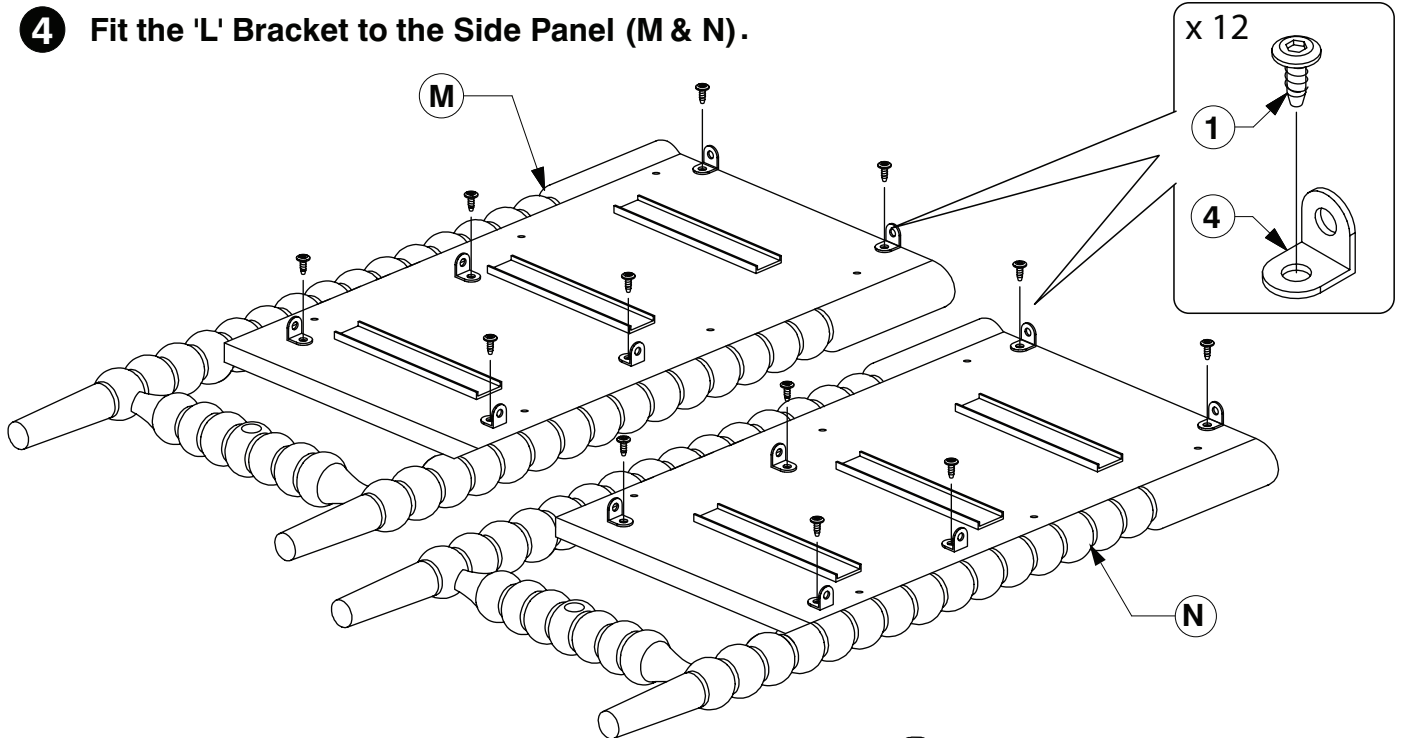

5 Fit the Side Panel- Right Hand (N) & Center Frame (O) to the Top Panel (A).

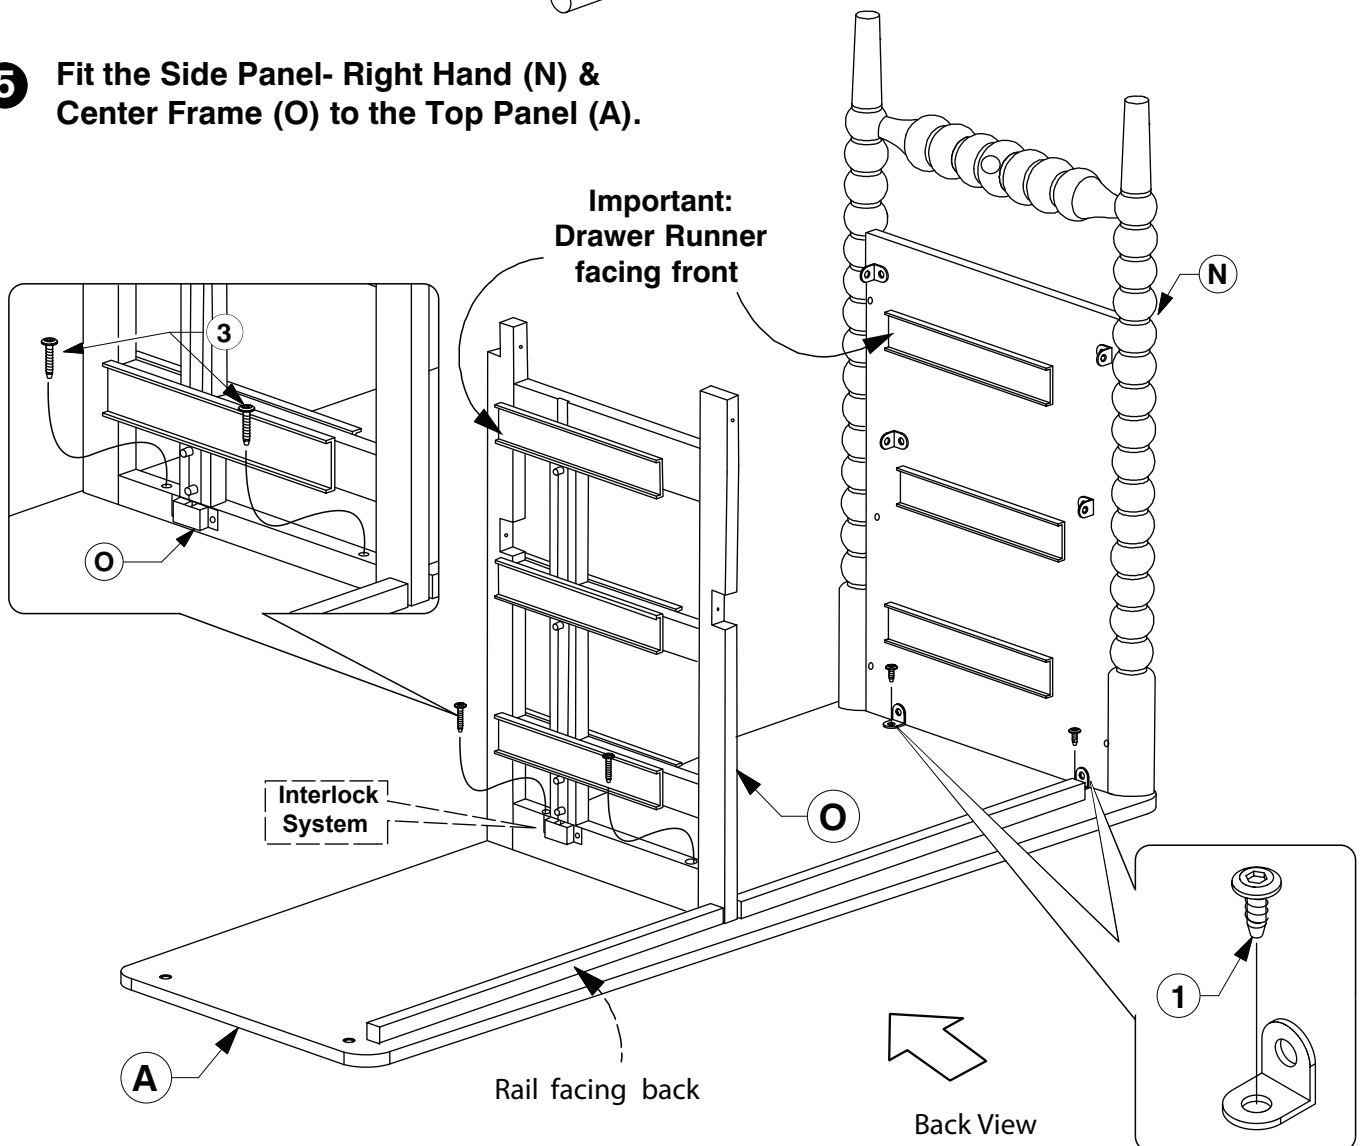


9025 6 Drawer Dresser


Assembly Instructions

WI-1024

- 6** Fit the Upper Support Bar (D) and Bottom Front & Rear Support Bars (G & H) to the Side Panel-Right Hand (N) & Center Frame (O) as shown. Use JCBCW (8) to fit the Lower Support Bar (L) to the Side Panel (N).

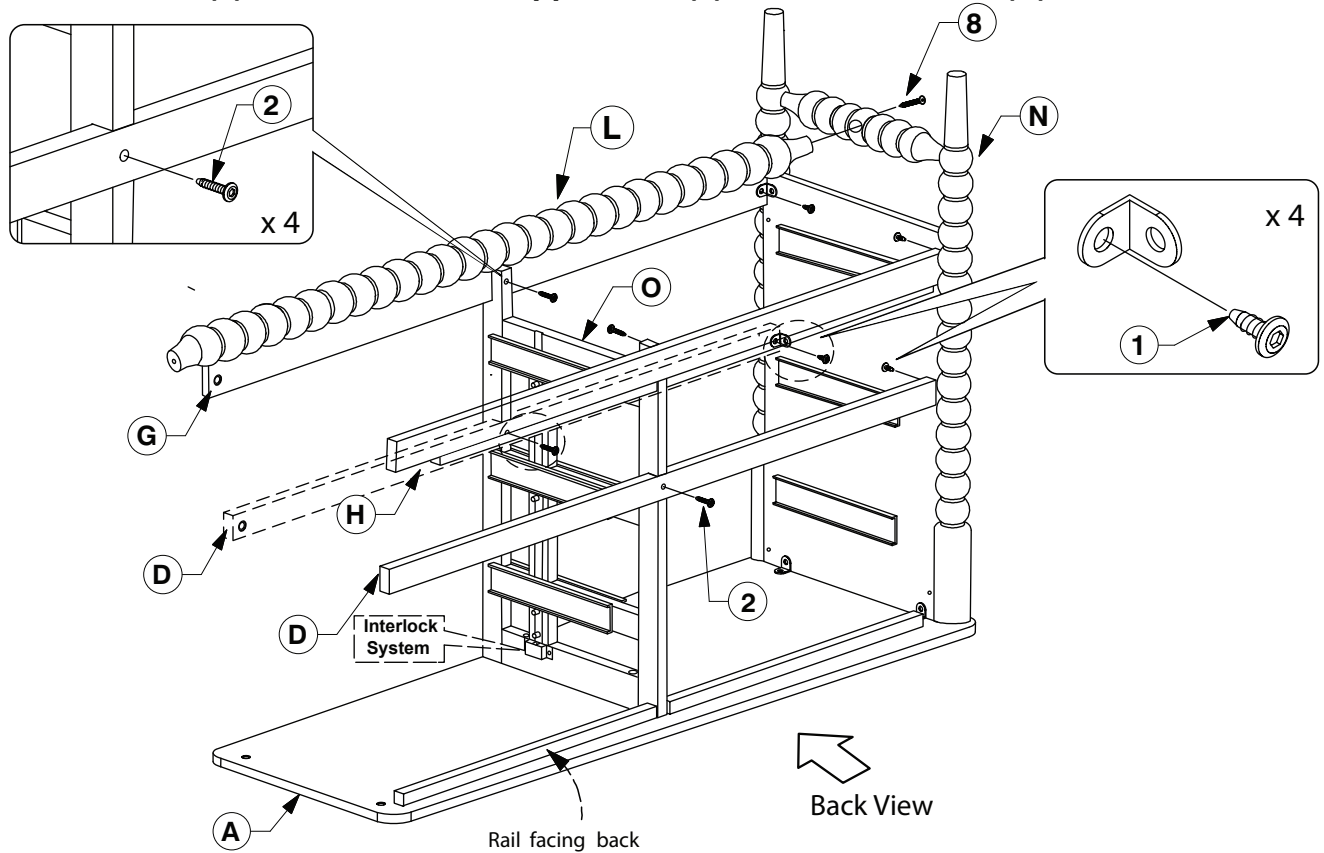

- 7** Fit the other side of Side Panel- Left Hand (M) to the Top Panel (A) & Support Bar Upper & Bottom (D & G & H) and Lower Support Bar (L).

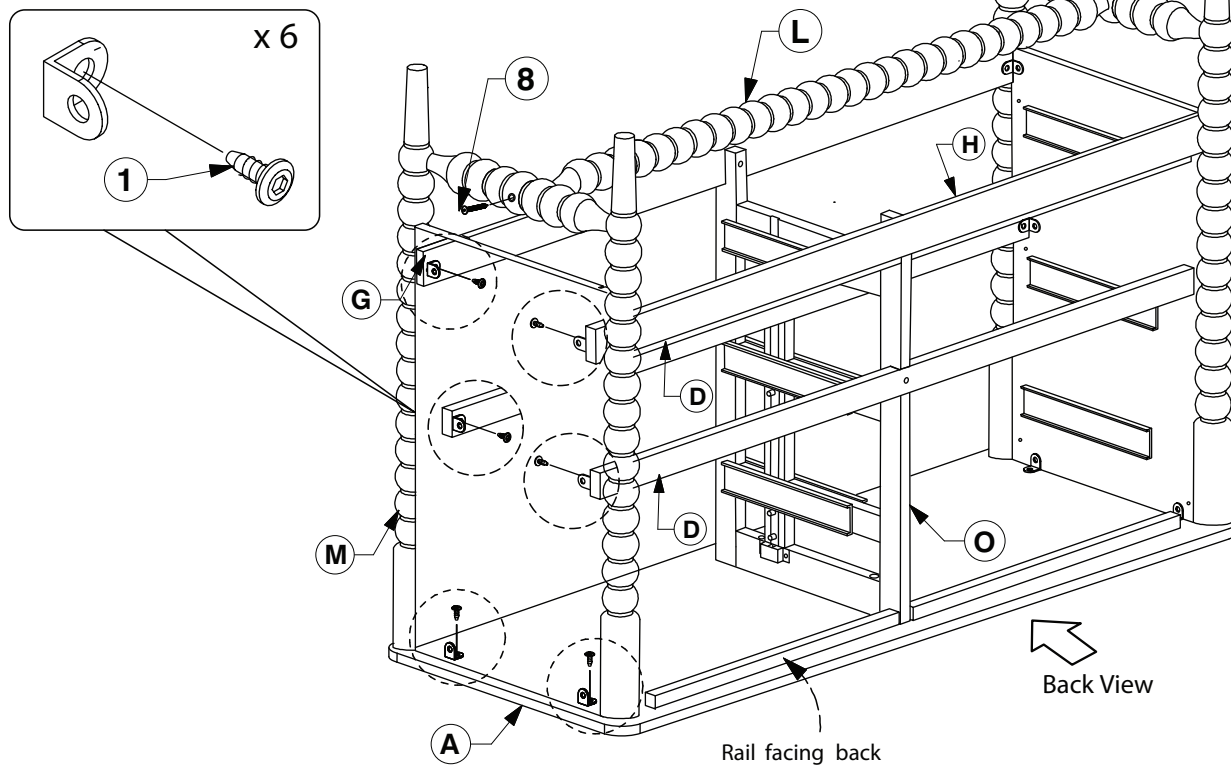


9025 6 Drawer Dresser


Assembly Instructions

WI-1024

- 8** Attached the Back Panel- wider (B) to the back of the Frame.

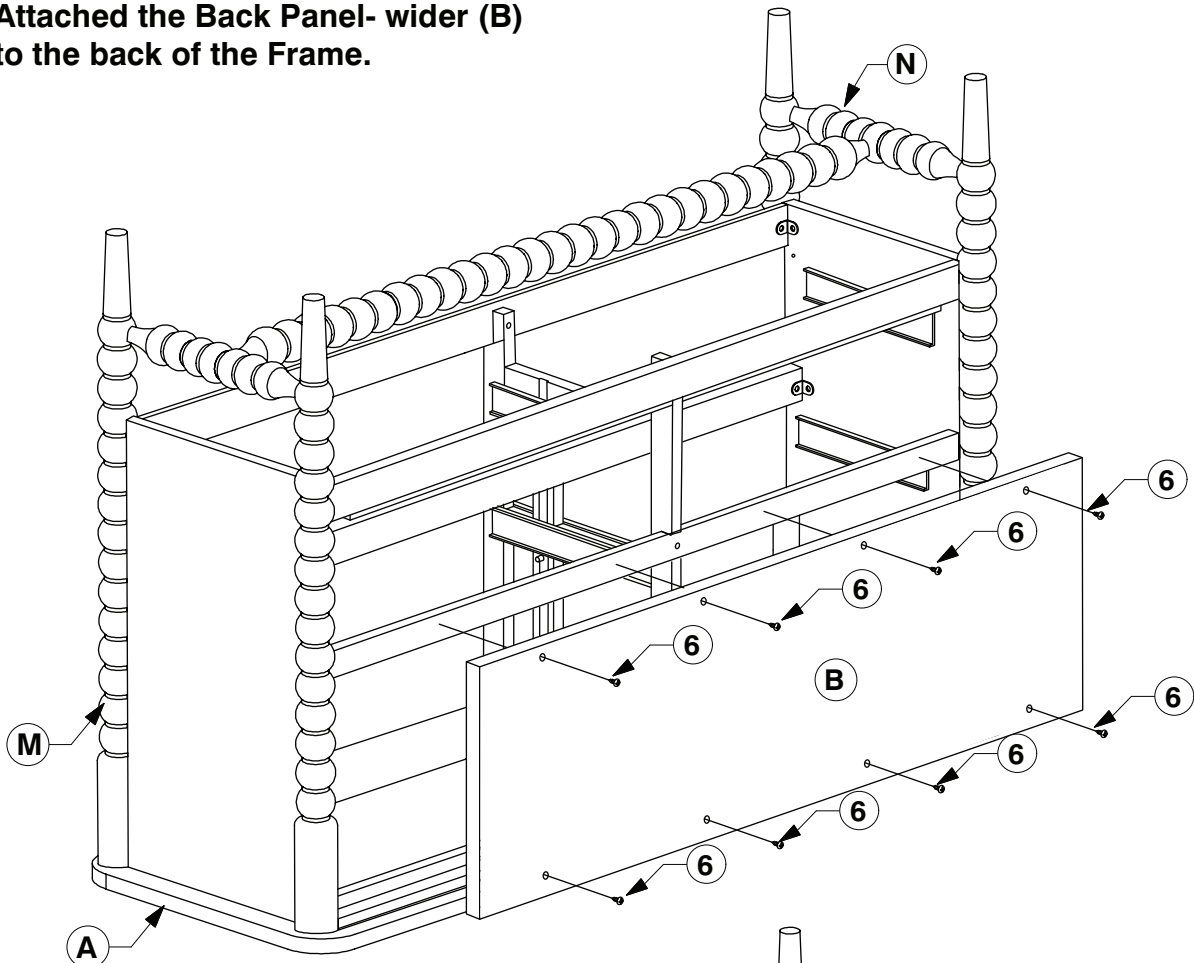

- 9** Attached the Back Panel- narrow (E) to the back of the Frame.

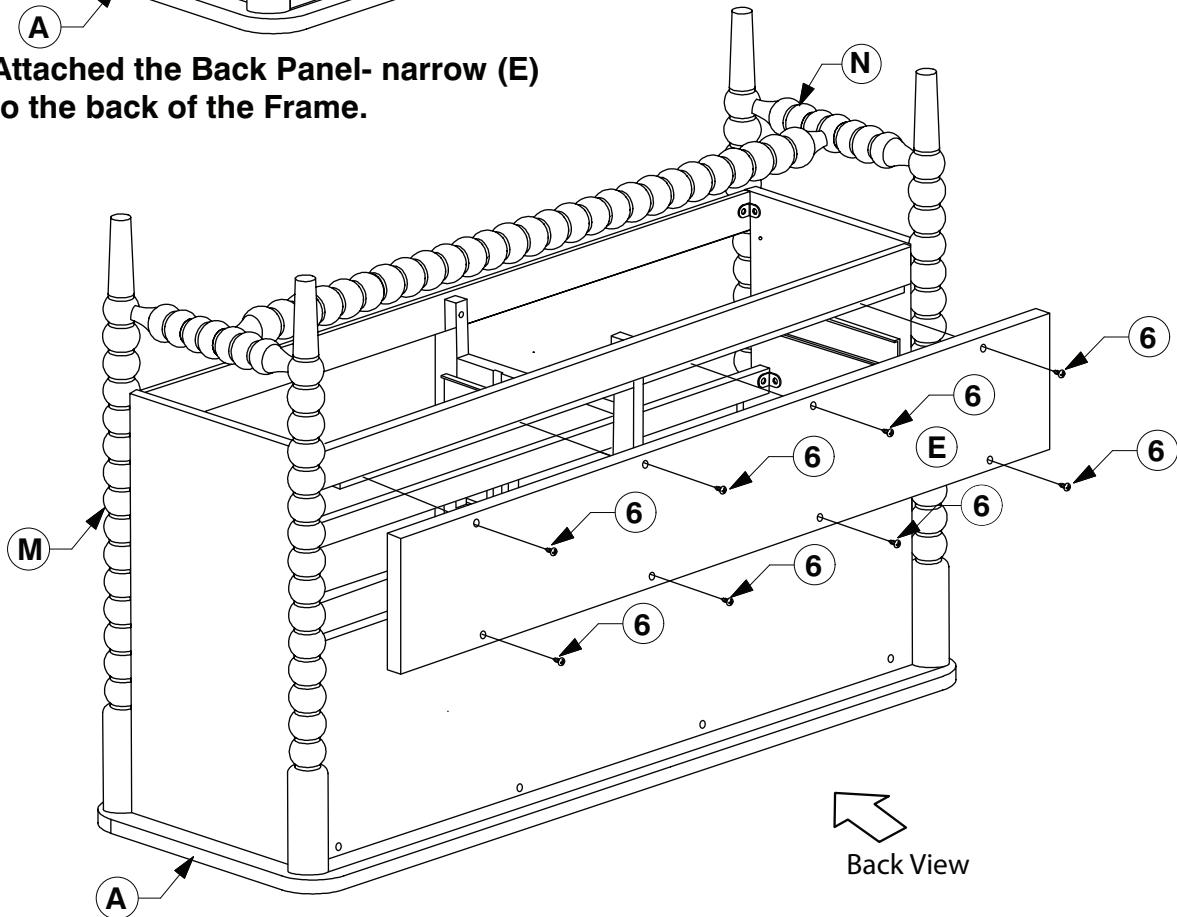

9025 6 Drawer Dresser



Assembly Instructions

WI-1024

10 Install the Drawers.



- Push the Interlock bar **upwards** before inserting the drawers.

LEFT

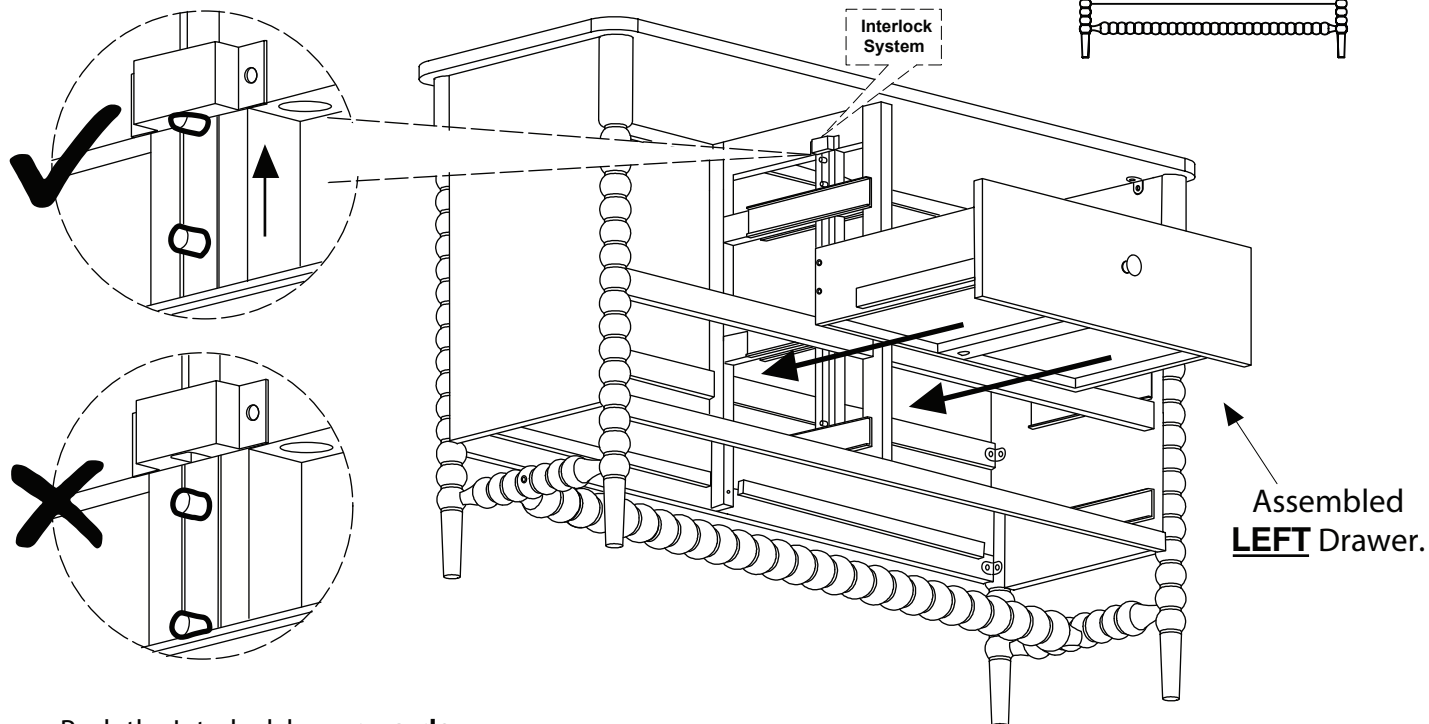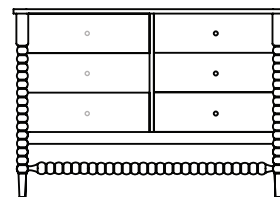

- Push the Interlock bar **upwards** before inserting the drawers.

RIGHT

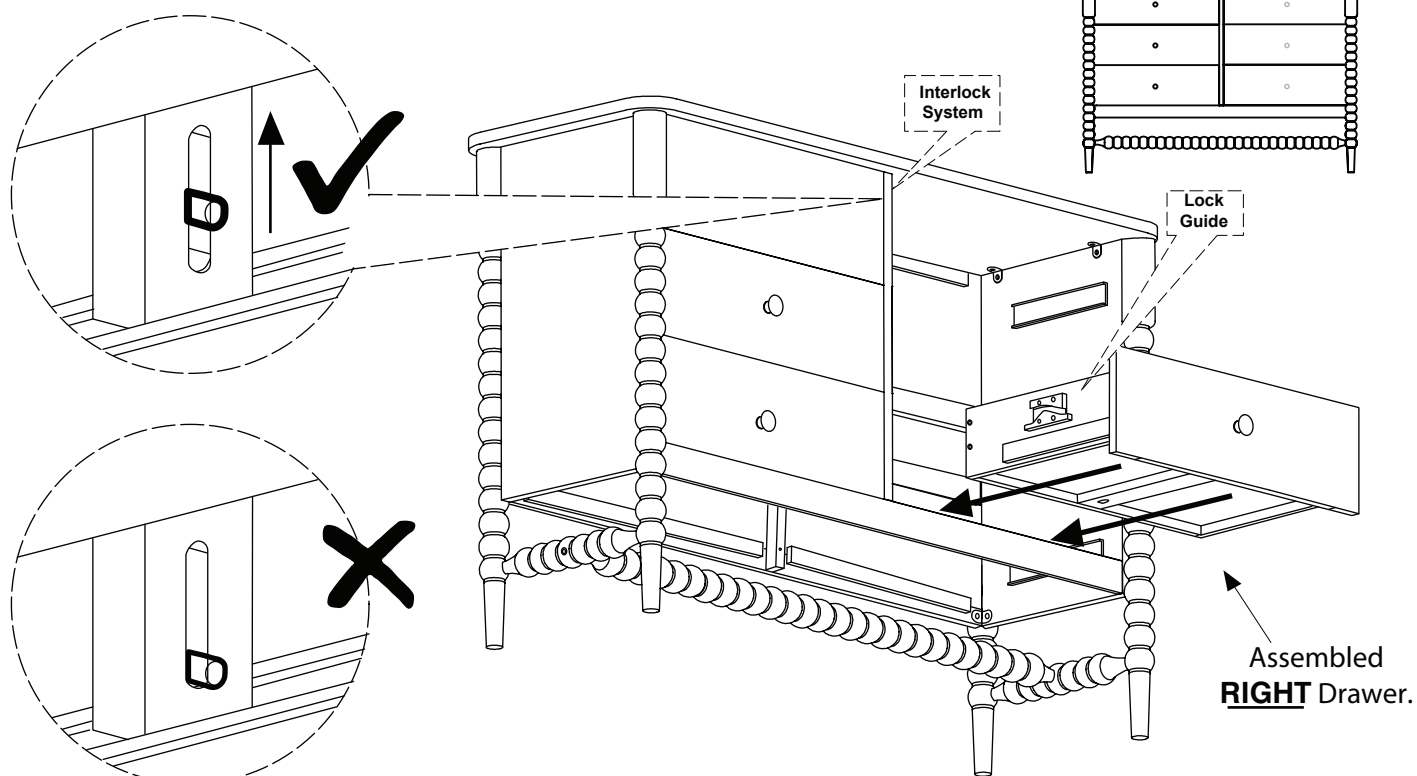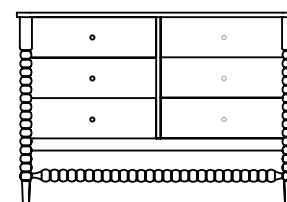


9025 6 Drawer Dresser

Assembly Instructions

WI-1024


11 Adjust the Drawer Face (F).

- * NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment.

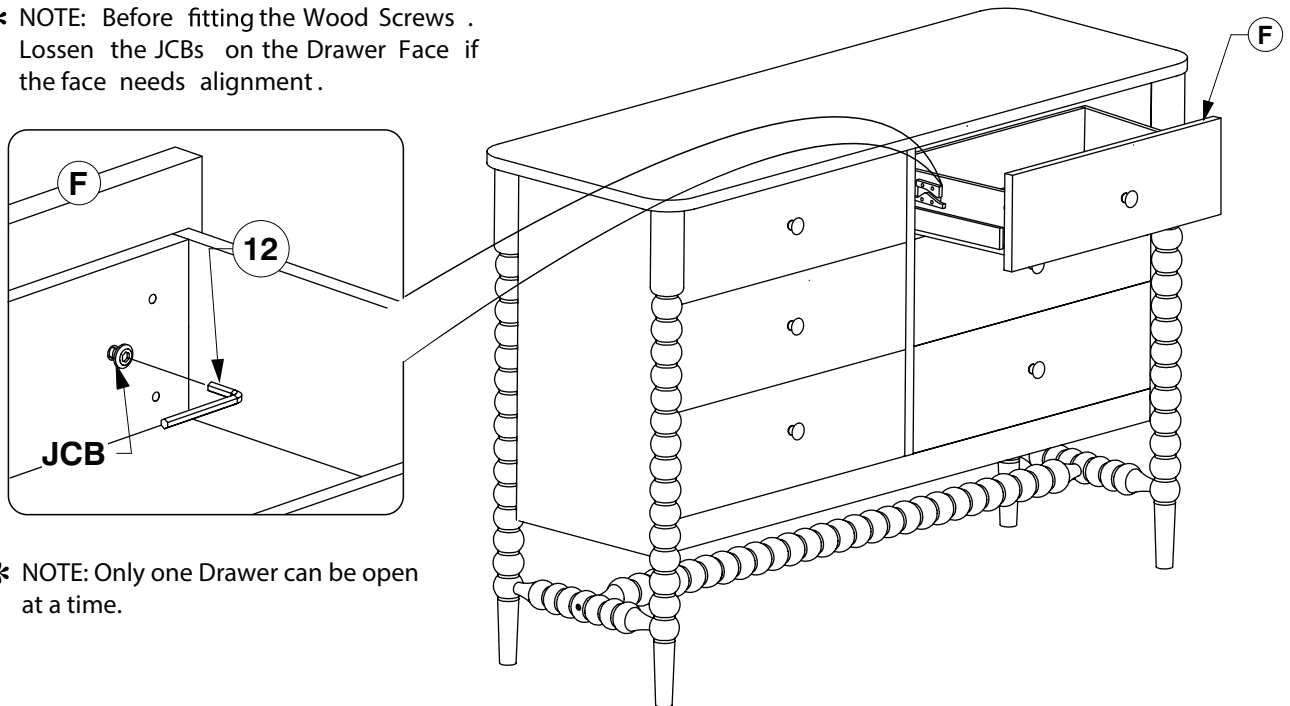

- * NOTE: Only one Drawer can be open
at a time.

12 After the Drawer Faces (F) are aligned, secure with wood screws.

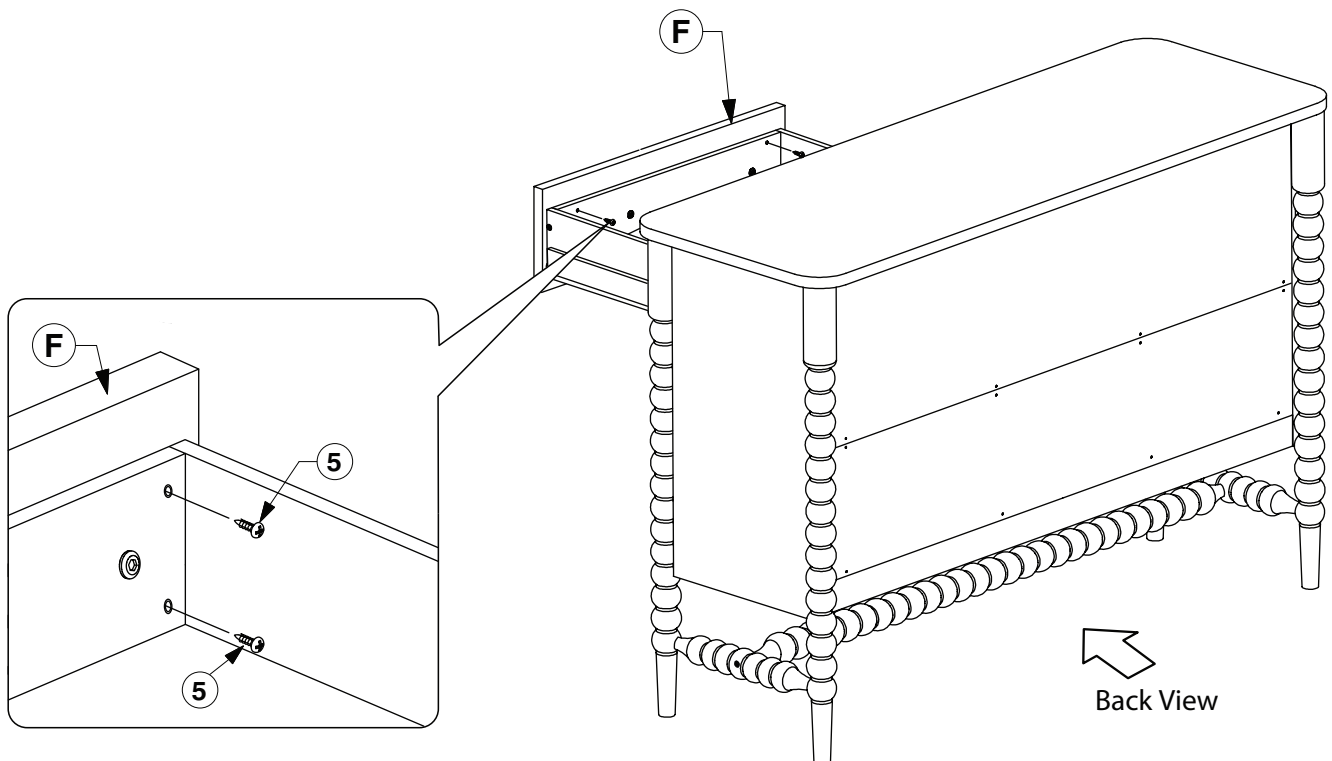

- * NOTE: Only one Drawer can be open
at a time.




9025 6 Drawer Dresser

Assembly Instructions


WI-1024

13 Remove the Drawers.

- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

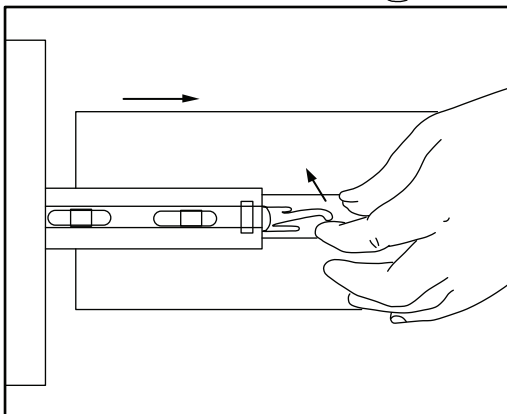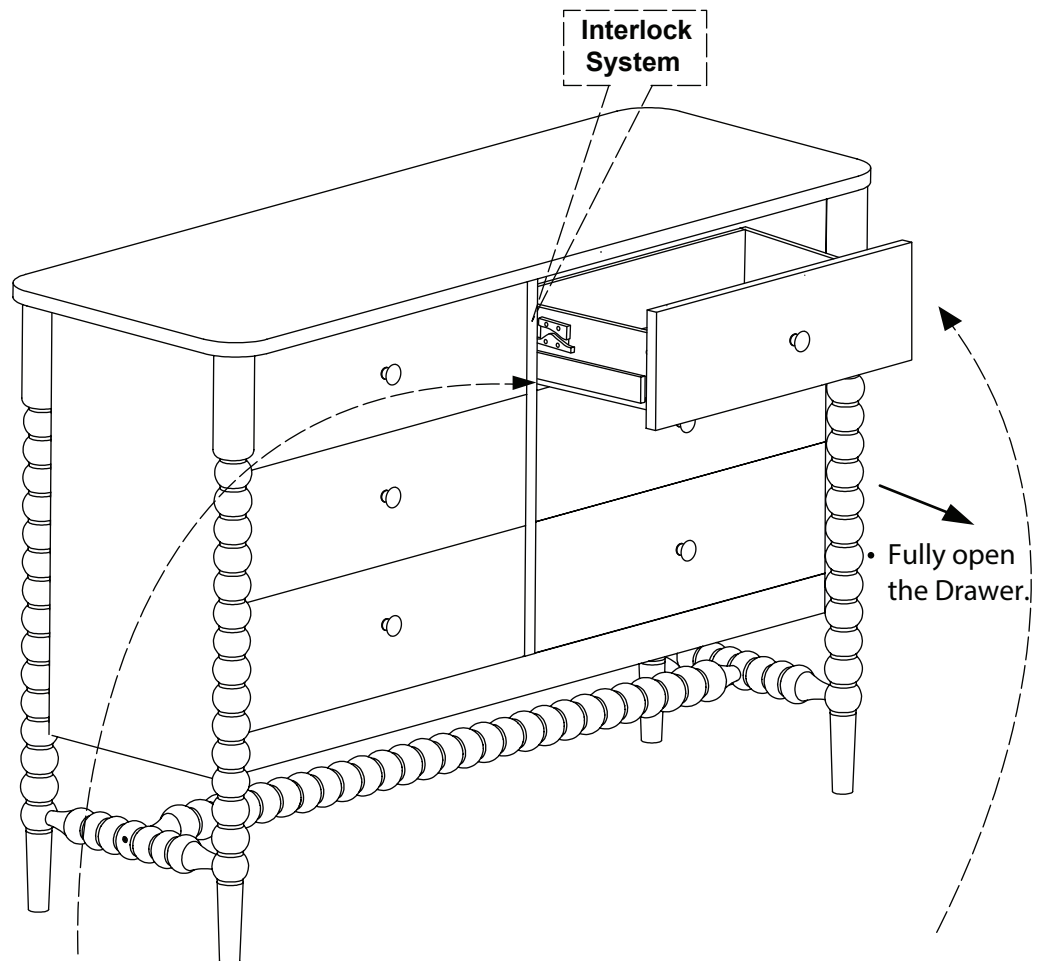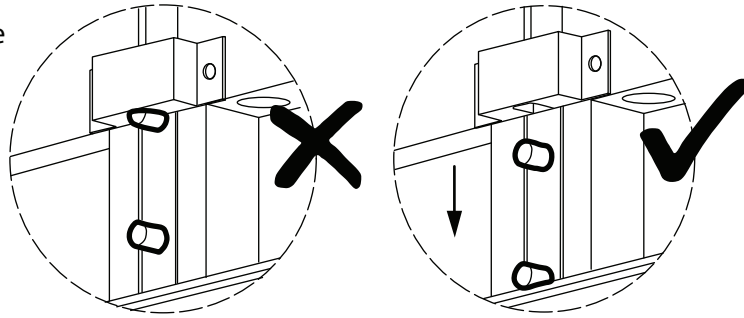

- Lift the **LEFT** side clip up.


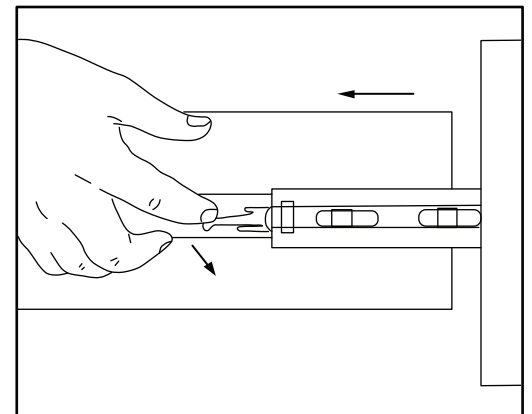


- Push the **RIGHT** side clip down.

9025 1 Drawer Night Stand












Assembly Instructions

WI-1025

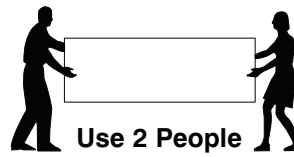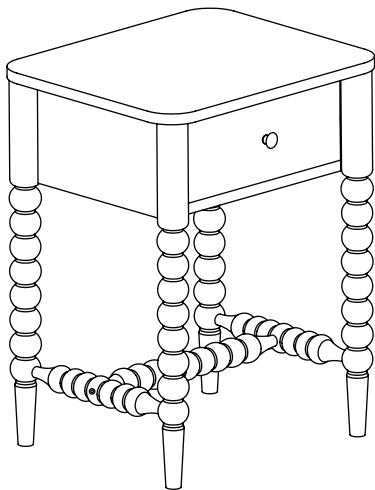

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

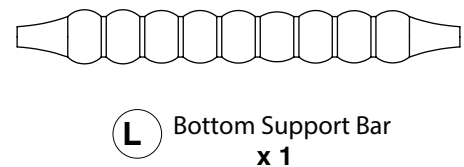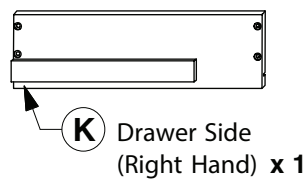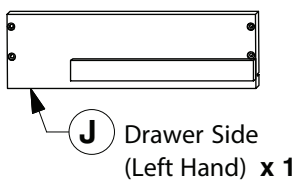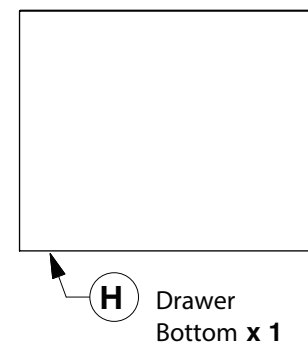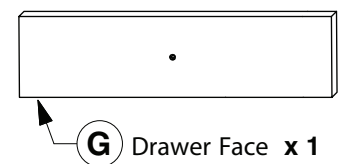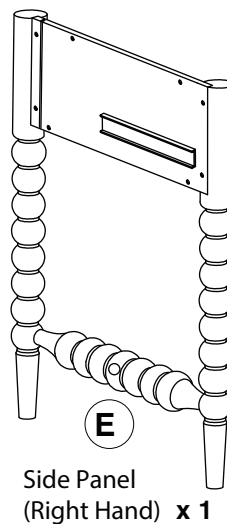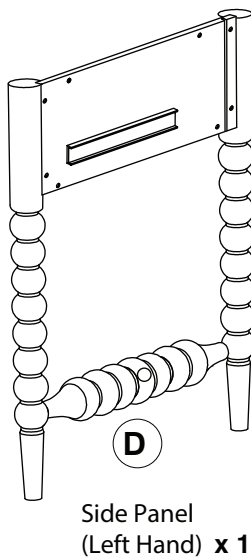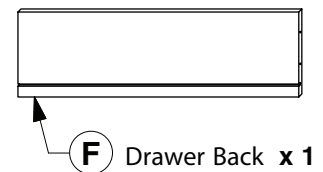
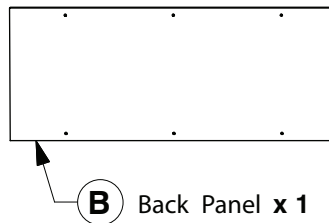
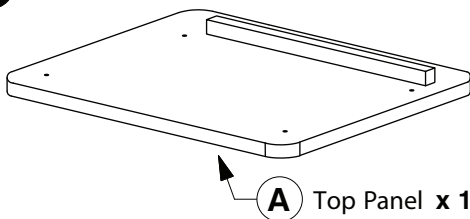


9025 1 Drawer Night Stand


Assembly Instructions

WI-1025


2 Hardware List

- | | | | | |
|---|---|---|---|---|
|  |  |  |  |  |
| 1 M6 x 15mm JCB x 8 | 2 M6 x 30mm JCB x 4 | 3 'L' Bracket (5005-3) x 4 | 4 M4 x 20mm Wood Screw x 4 | 5 M4 x 16mm Wood Screw x 6 |
|  |  |  |  |  |
| 6 M4 x 25mm Wood Screw x 8 | 7 M6 X50mm JCBC W x 2 | 8 Handle x 1 | 9 M4 x 22mm Wood Screw x 1 | 10 Allen Key x 1 |


3 Assemble the Drawer Sides (J & K) to the Drawer Face (G).

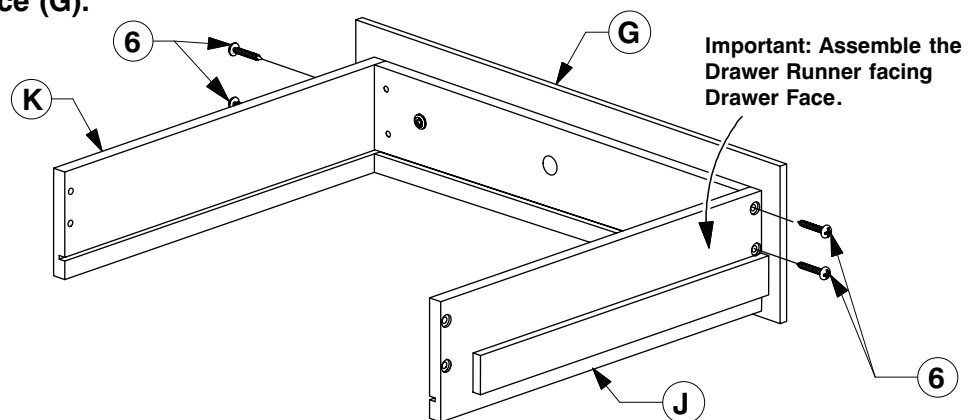

4 Slide the Drawer Bottom (H) into the groove on the Drawer Sides (J & K).

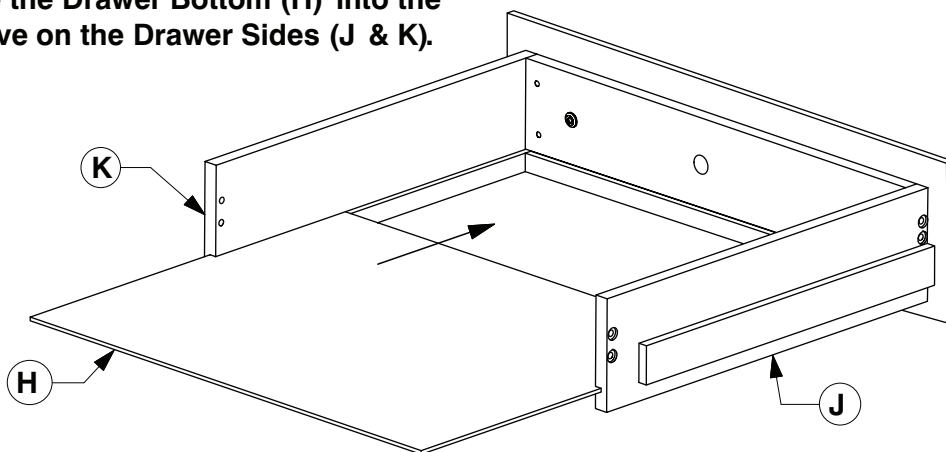

5 Assemble the Drawer Back (F) to the Drawer Sides (J & K). Fit the Handle to the Drawer Face (G).

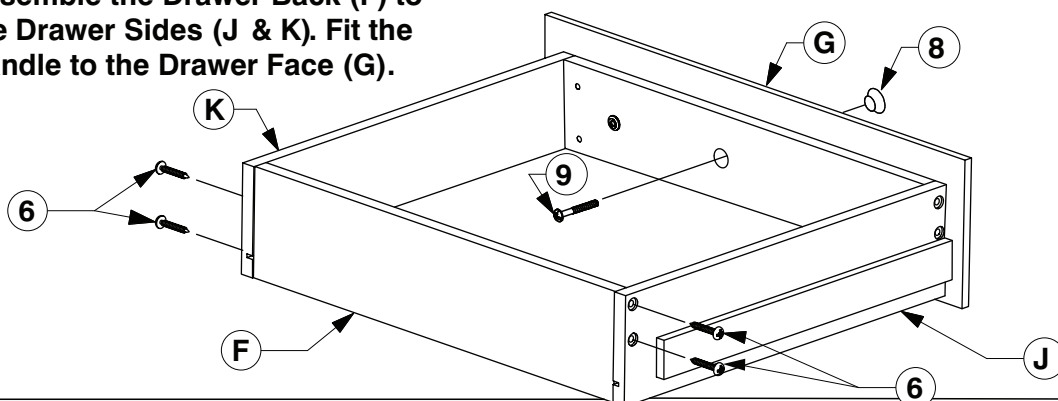


9025 1 Drawer Night Stand


Assembly Instructions

WI-1025

- 6** Fit the 'L' Bracket (3) to the Side Panel (D & E).

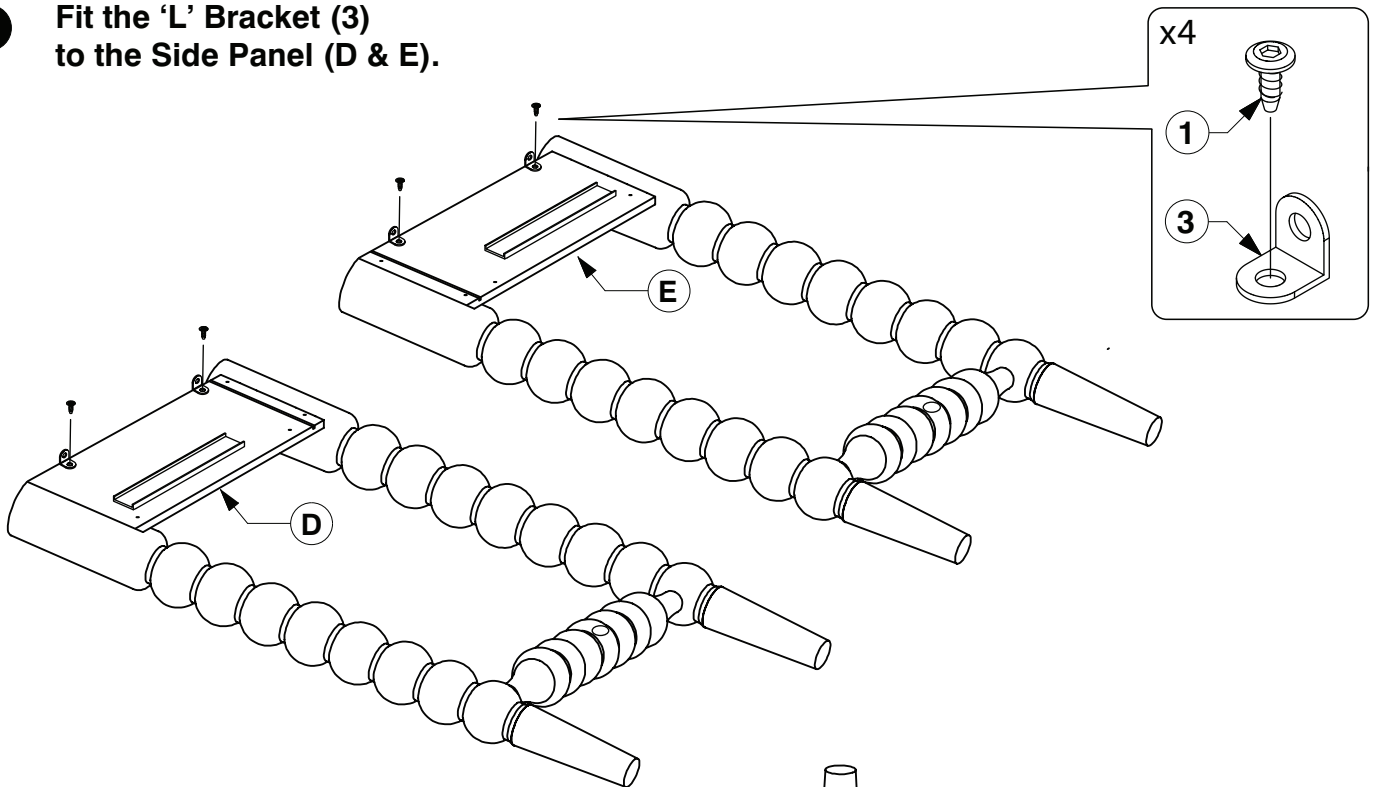

- 7** Assemble the Side Panel (D) to the Top Panel (A).

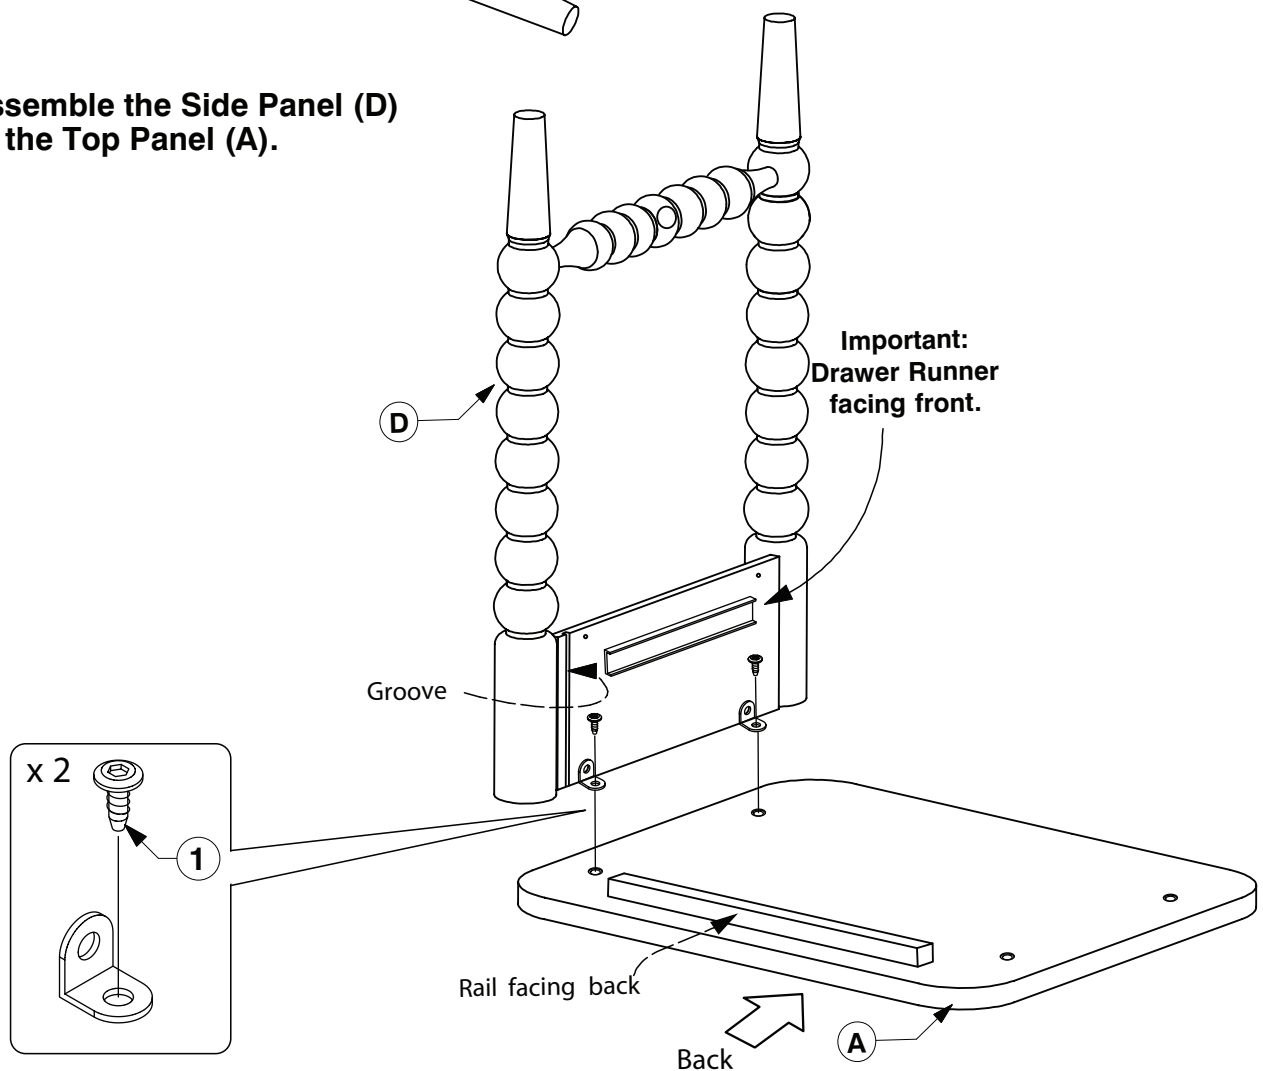


9025 1 Drawer Night Stand

Assembly Instructions

WI-1025

8 Fit the Bottom Support Bar (L) & Support Bar (C) to the Side Panel (D).

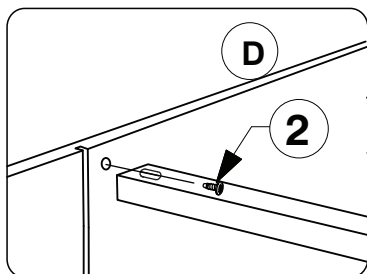


Step 1

Use the **ball end** of Allen key to start the bolt.

Step 2

Tighten fully with the **straight end**.

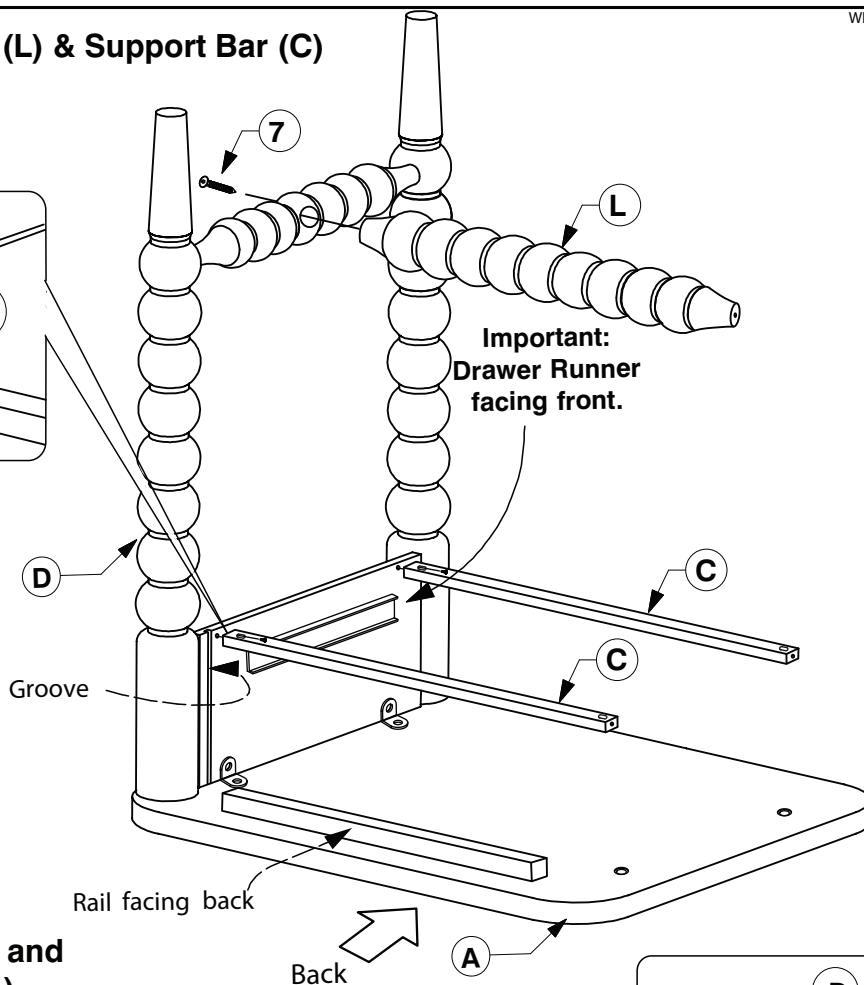



9 Assemble the Side Panel (E) and to the Bottom Support Bar (L) and Support Bar (C) Top Panel (A).

Step 1


Use the **ball end** of Allen key to start the bolt.

Step 2

Tighten fully with the **straight end**.

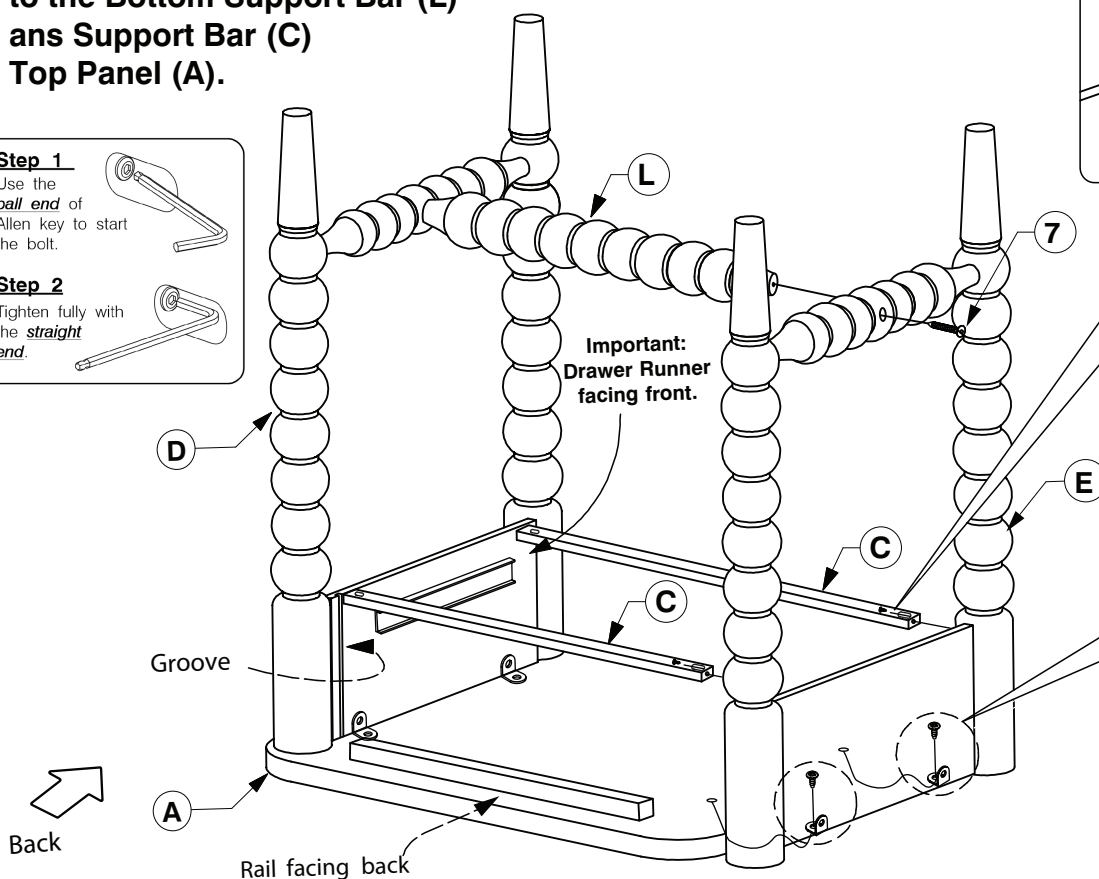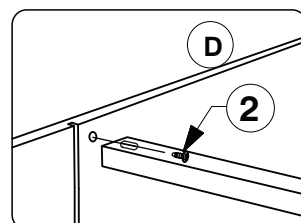

x 2

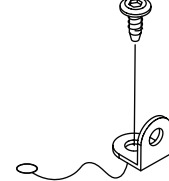


9025 1 Drawer Night Stand


Assembly Instructions

WI-1025

- 10** Slide the Back Panel (B) into the groove on the back of the Side Panel (D & E)

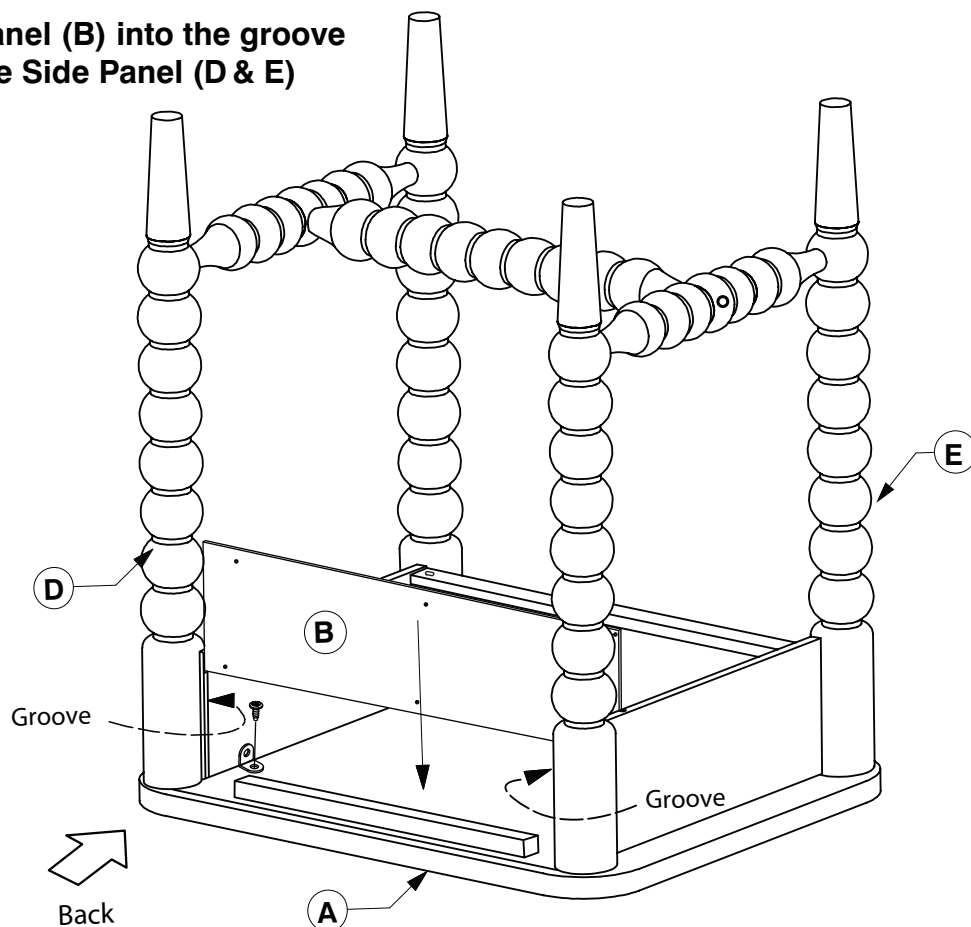

- 11** Screw the Back Panel (B) to the Side Panel (D & E).

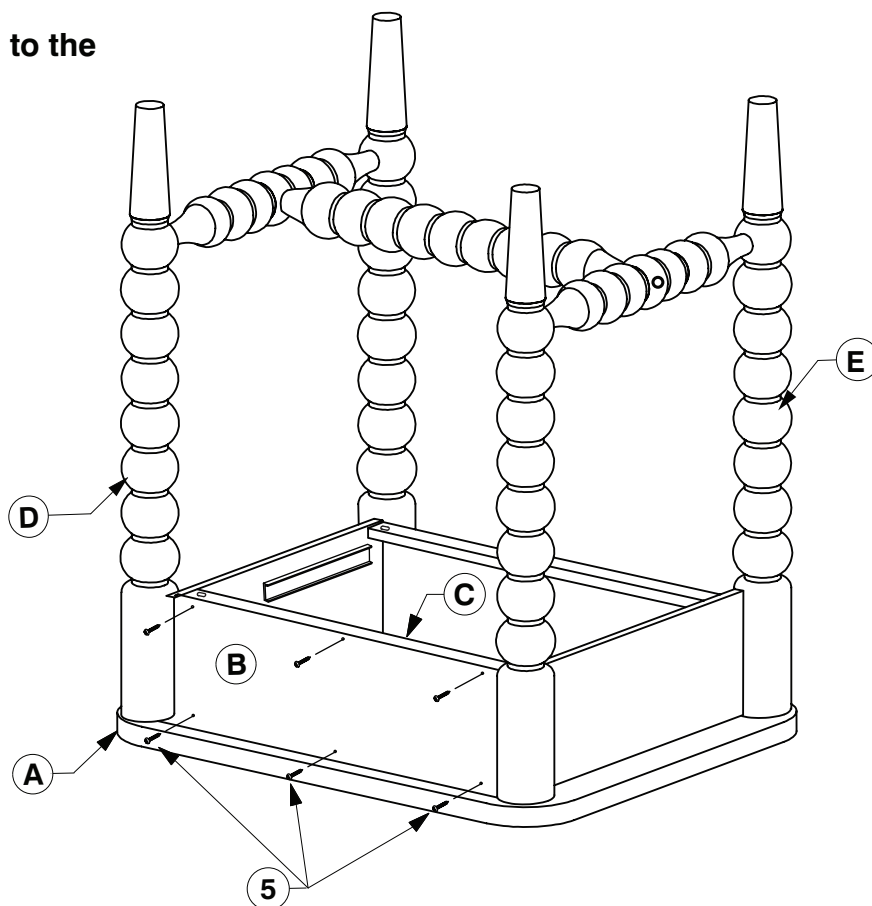


9025 1 Drawer Night Stand

Assembly Instructions


WI-1025

12 Fit the Drawer Box to the Caseload Body.

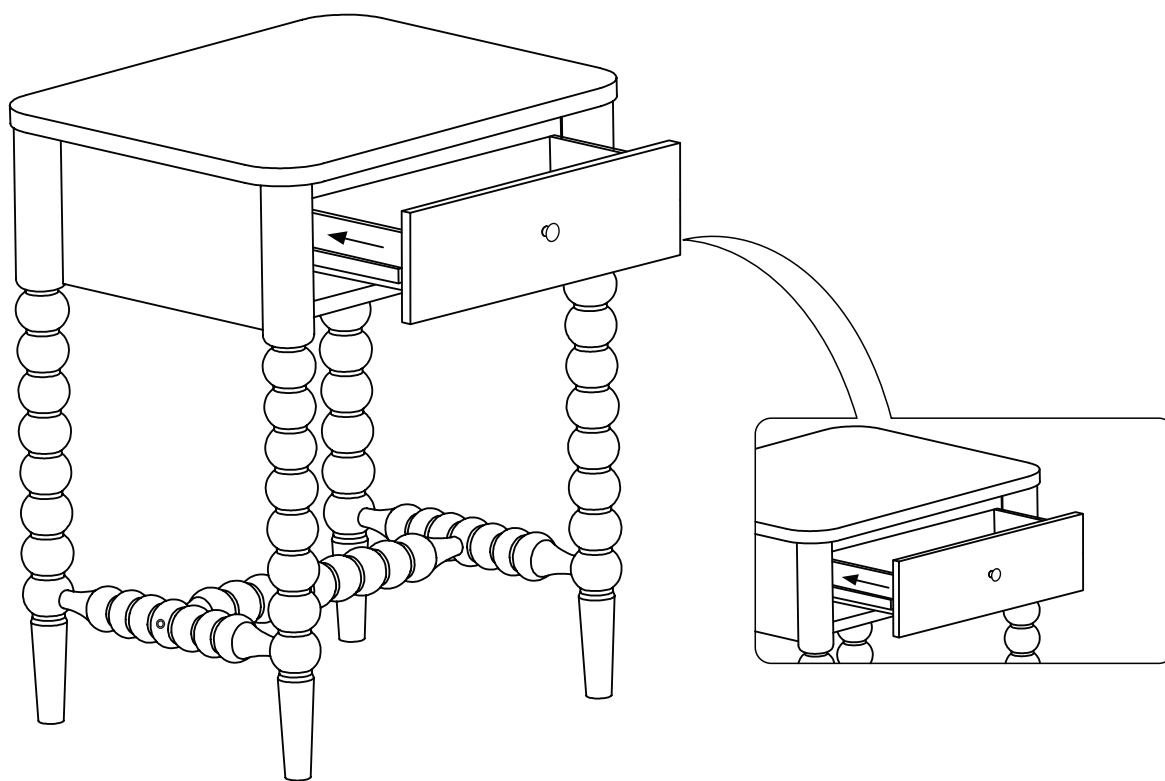

13 Adjust the Drawer Face (G).

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

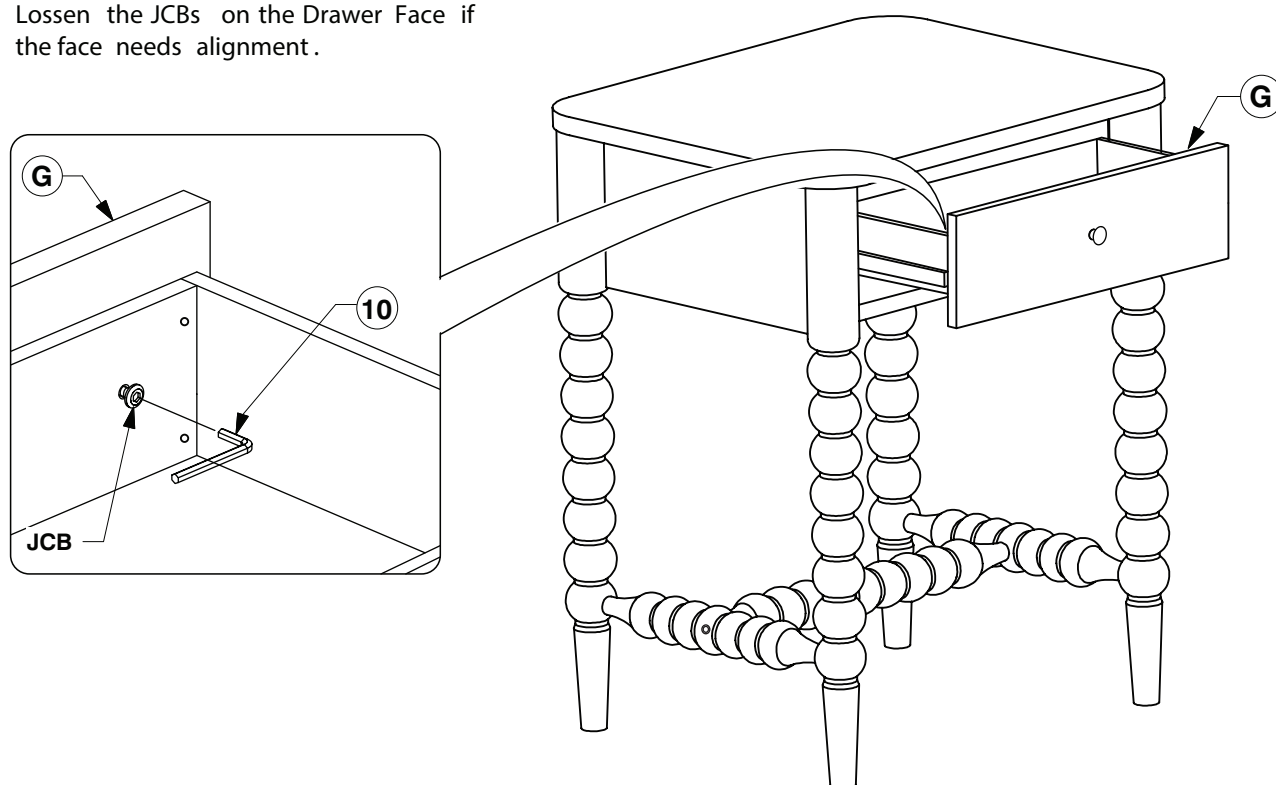


9025 1 Drawer Night Stand

Assembly Instructions

WI-1025



- 14** After the Drawer Faces (G) are aligned, secure with wood screws.

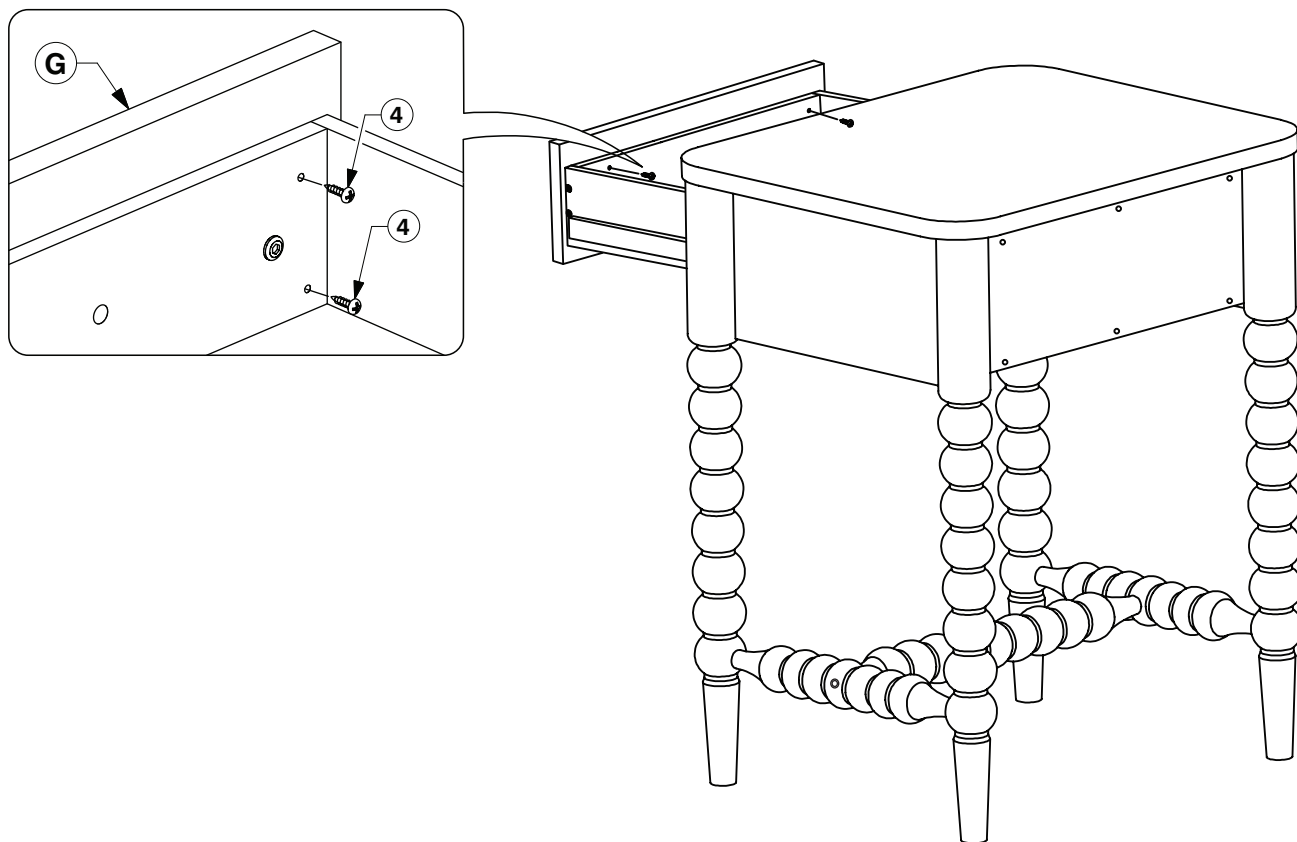

9025 4 Drawer Chest


Assembly Instructions

WI-1025

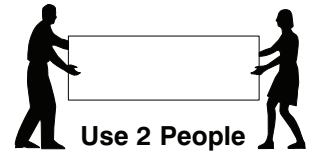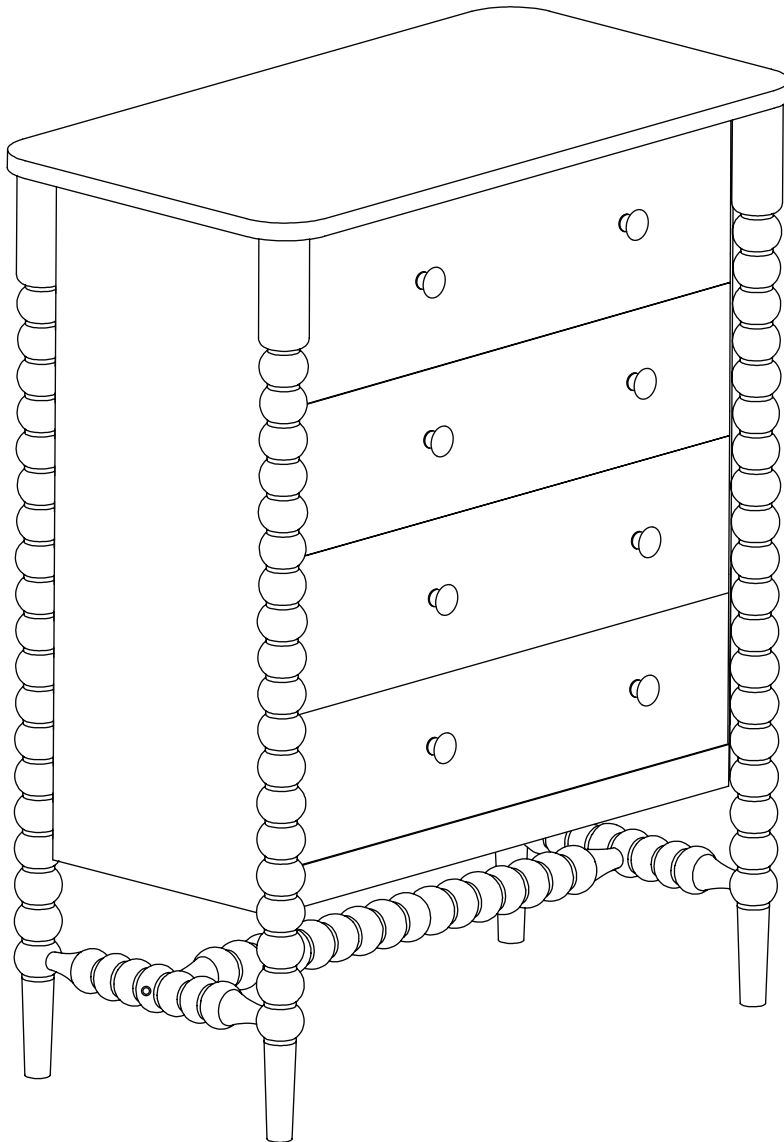

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

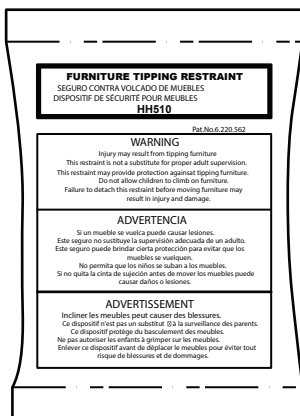

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.










9025 4 Drawer Chest

Assembly Instructions






WI-1025

1 Parts List

Parts in Box A:

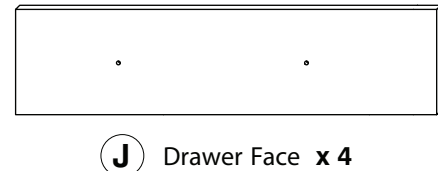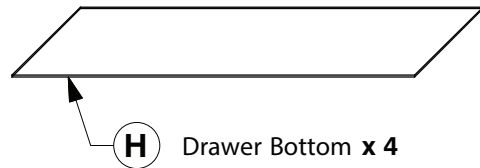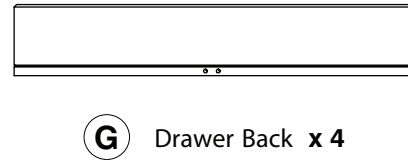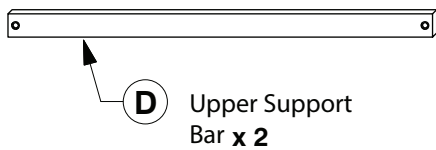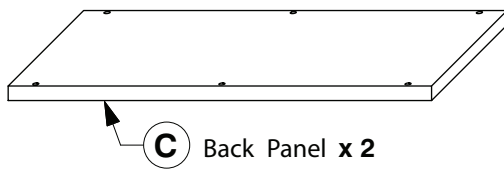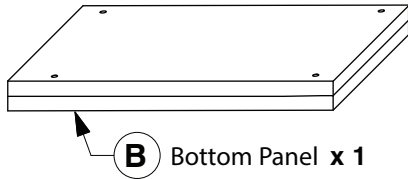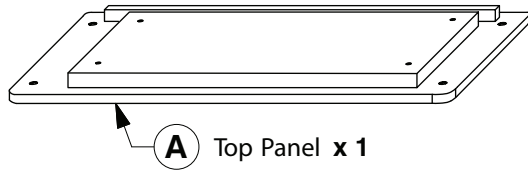

Parts in Box B:







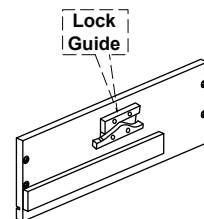

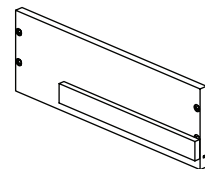

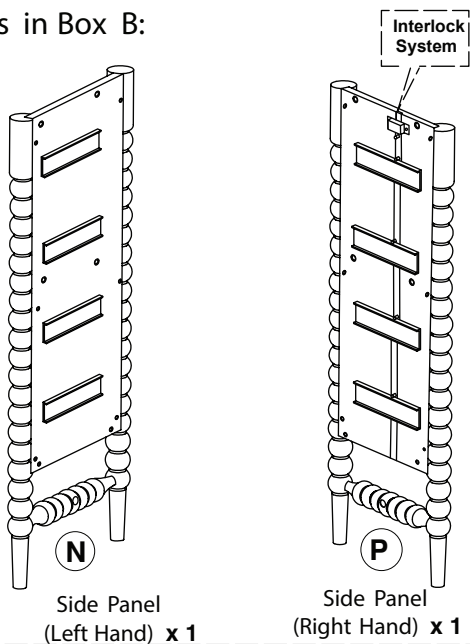


9025 4 Drawer Chest


Assembly Instructions

WI-1025

2 Hardware List

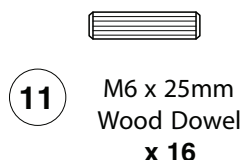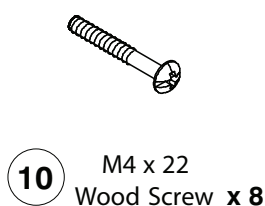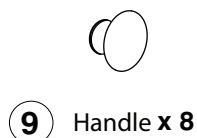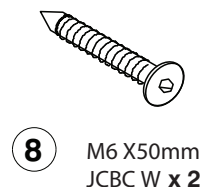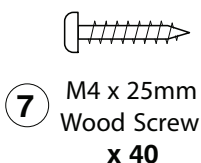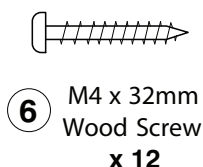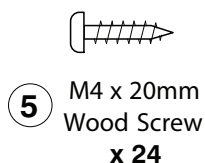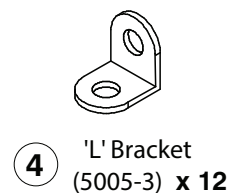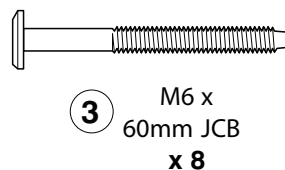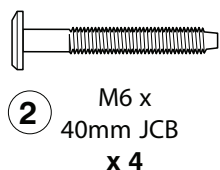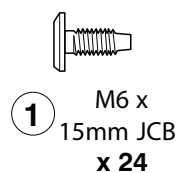

3 Assemble the Drawer Sides (Q & R) & Drawer Rail (K) to the Drawer Face (J).

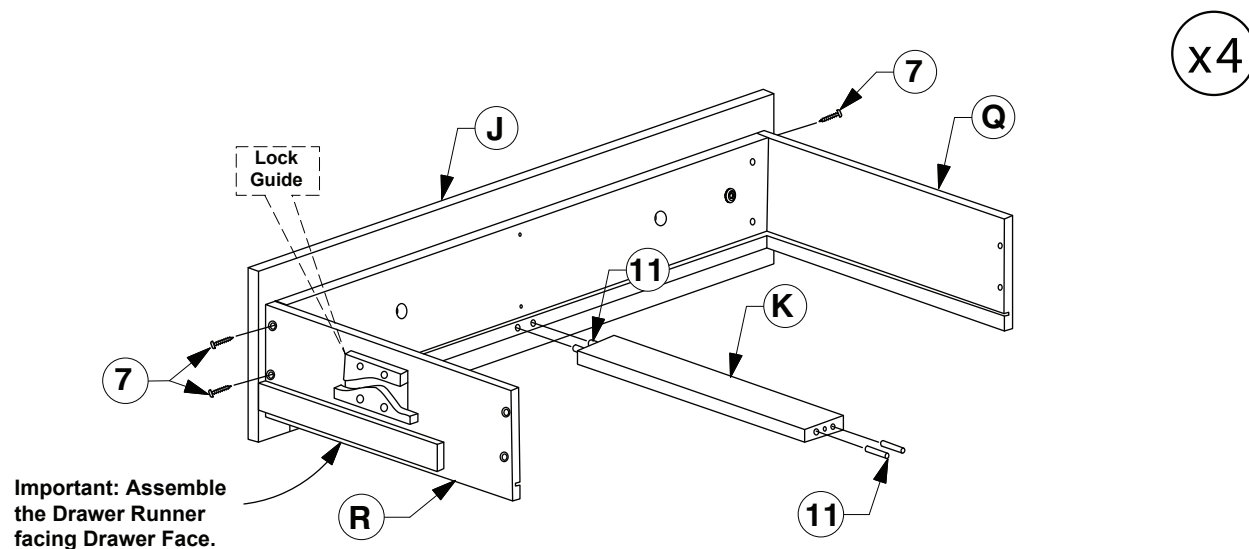


9025 4 Drawer Chest

Assembly Instructions

WI-1025


- 4** Slide the Drawer Bottom (H) into the groove on the Drawer Sides (Q & R).

x4

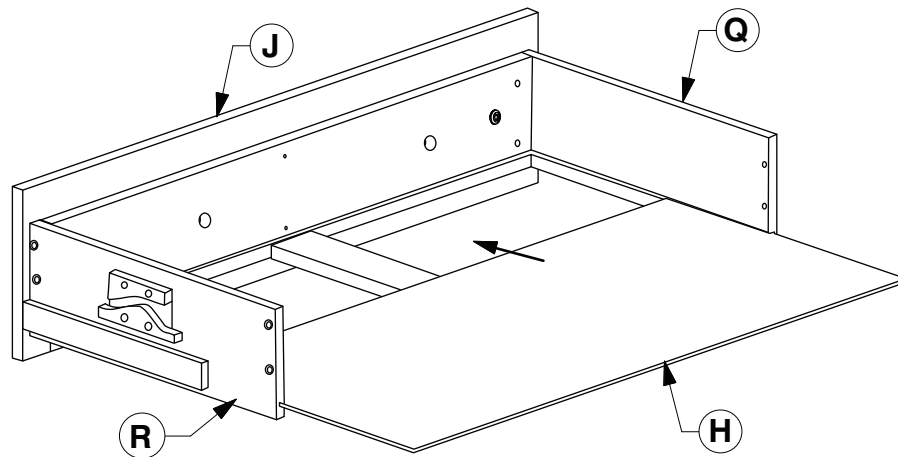


- 5** Assemble the Drawer Back (G) to the Drawer Sides (Q & R). Fit the Handle to the Drawer Face (J).

x4

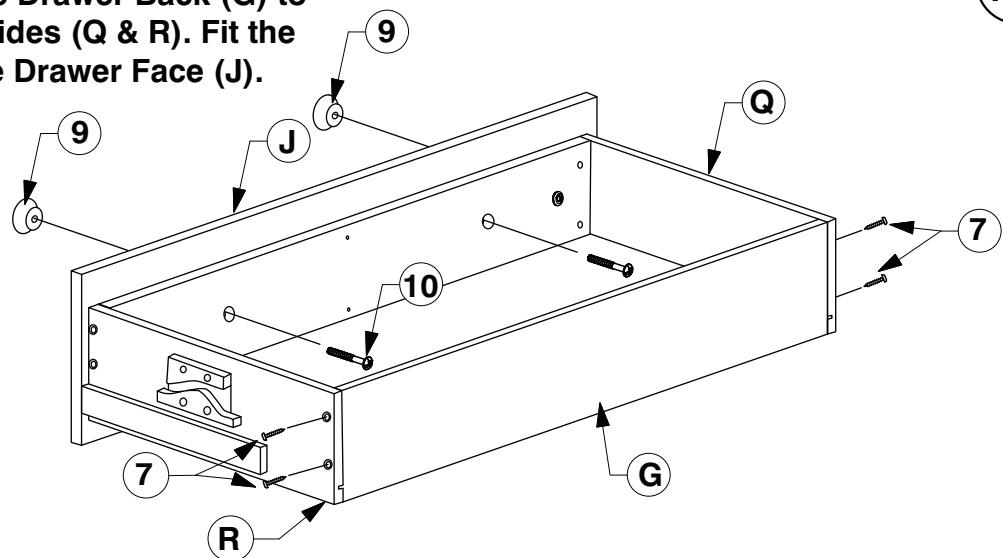

- 6** Turn the Drawer over to fit angled 25mm Wood screws (7) to the Drawer Rail (K).

x4

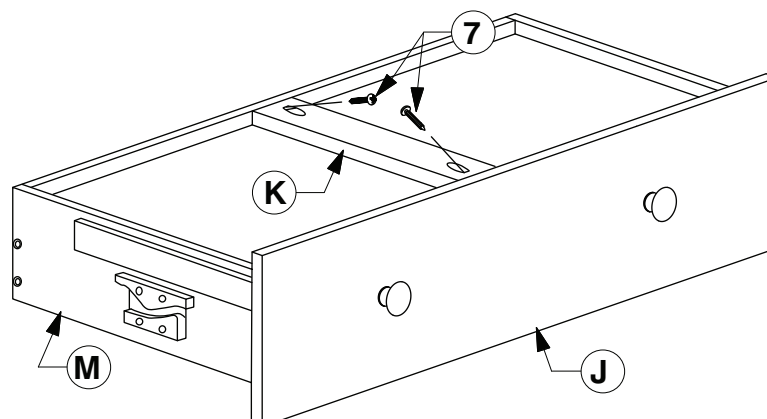


9025 4 Drawer Chest


Assembly Instructions

WI-1025

- 7** Fit the 'L' Bracket (4) to the Side Panel (N & P).

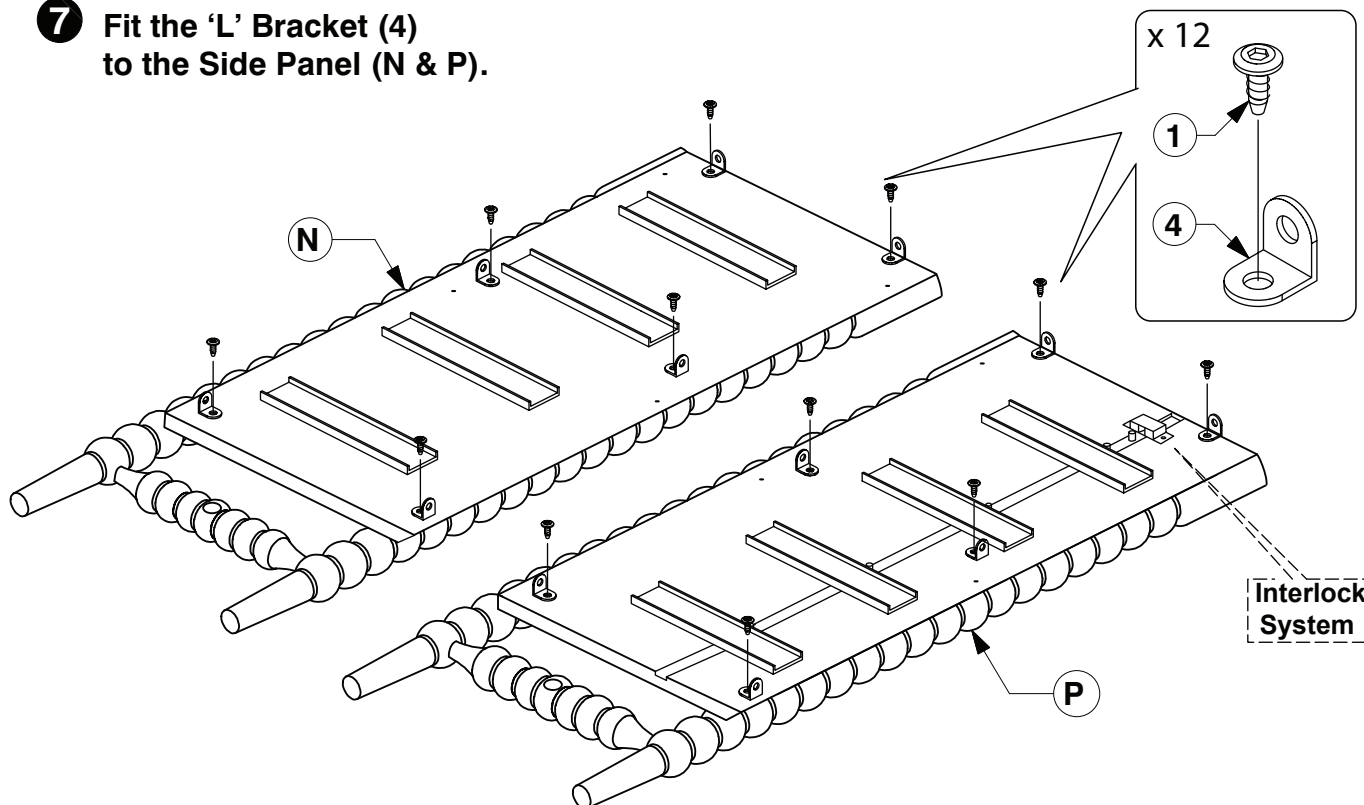

- 8** Assembled the Top Panel (A) and Bottom Support Bar (M) to the Side Panel (P)

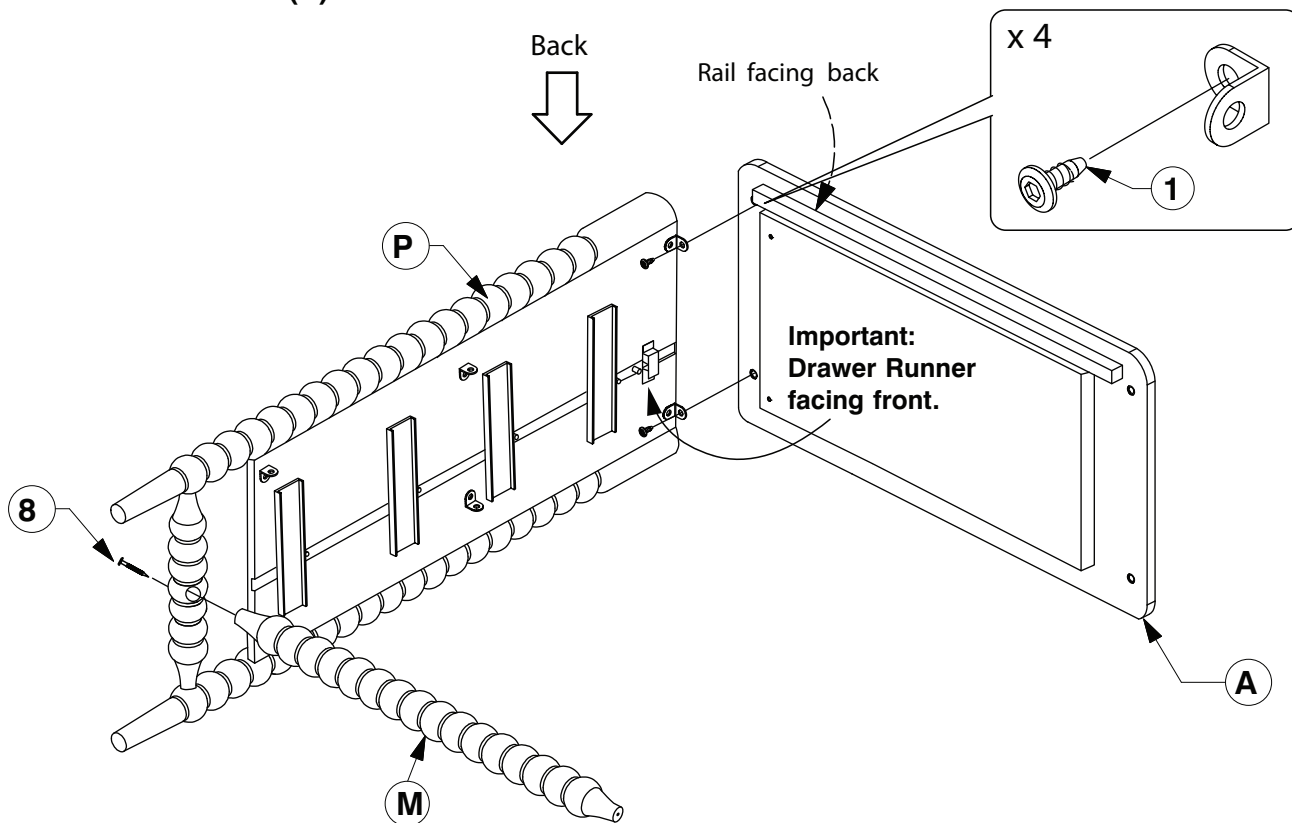


9025 4 Drawer Chest


Assembly Instructions

WI-1025

- 11** Assembled the Bottom Support (L) to the Bottom Front & Rear Support Bar (E & F) as shown.

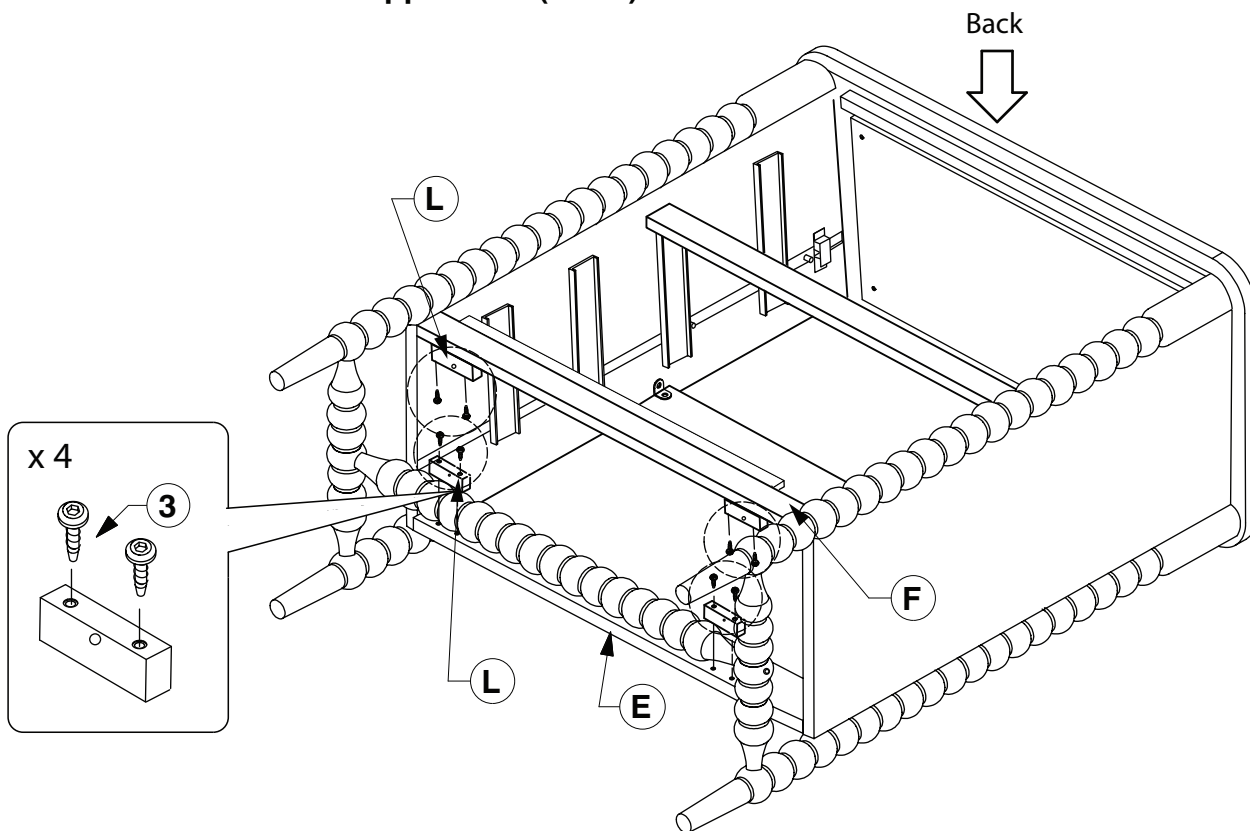

- 12** Bolt the Bottom Support (L) to the Bottom Panel (B) as shown.

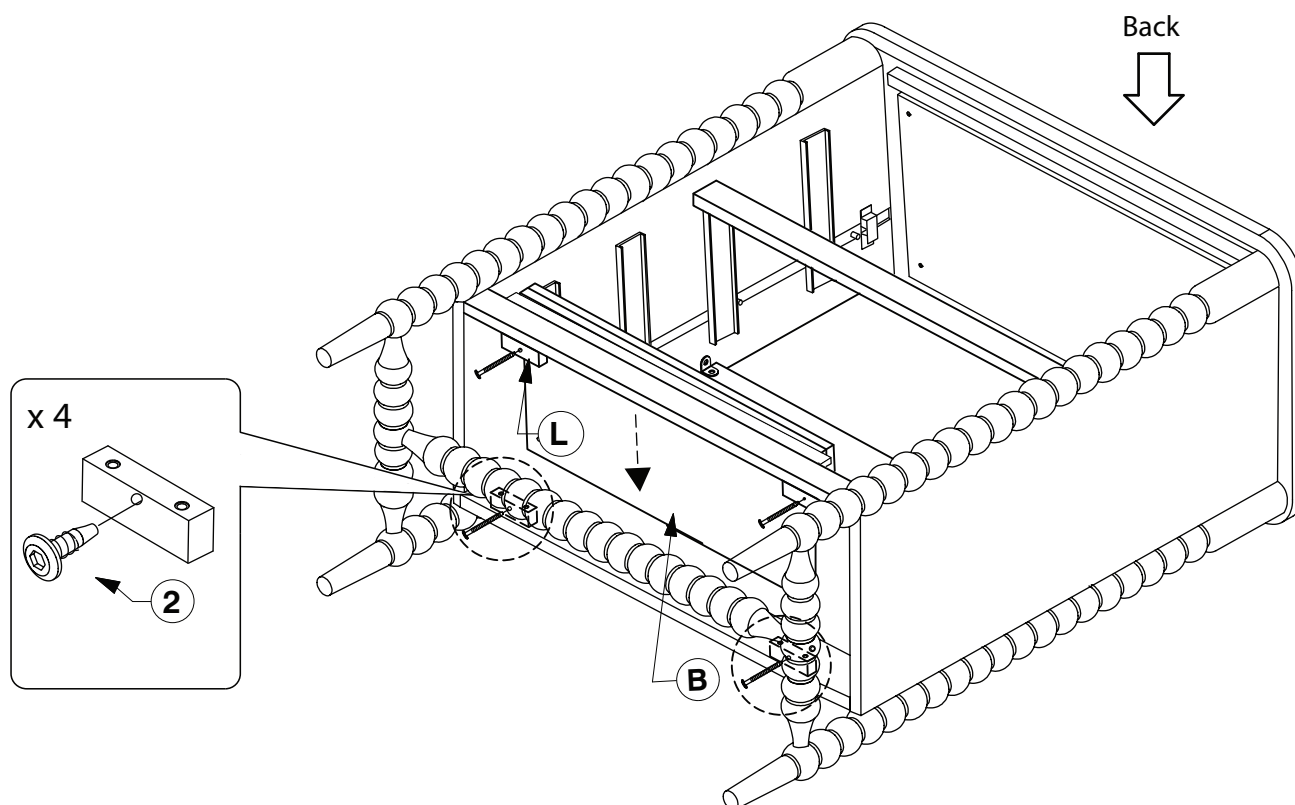

Assembly Instructions

Interlock bar **upwards**
inserting the drawers.

Assembled Drawer


9025 4 Drawer Chest

Assembly Instructions


WI-1025

15 Fit and adjust the Drawer Face (J).


* NOTE: Before fitting the Wood Screws .
Losen the JCBs on the Drawer Face if
the face needs alignment.

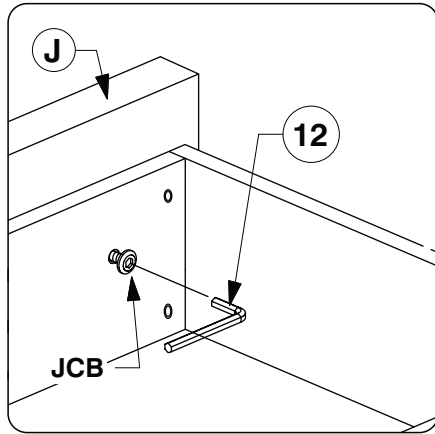


* NOTE: Only one Drawer can be open
at a time.

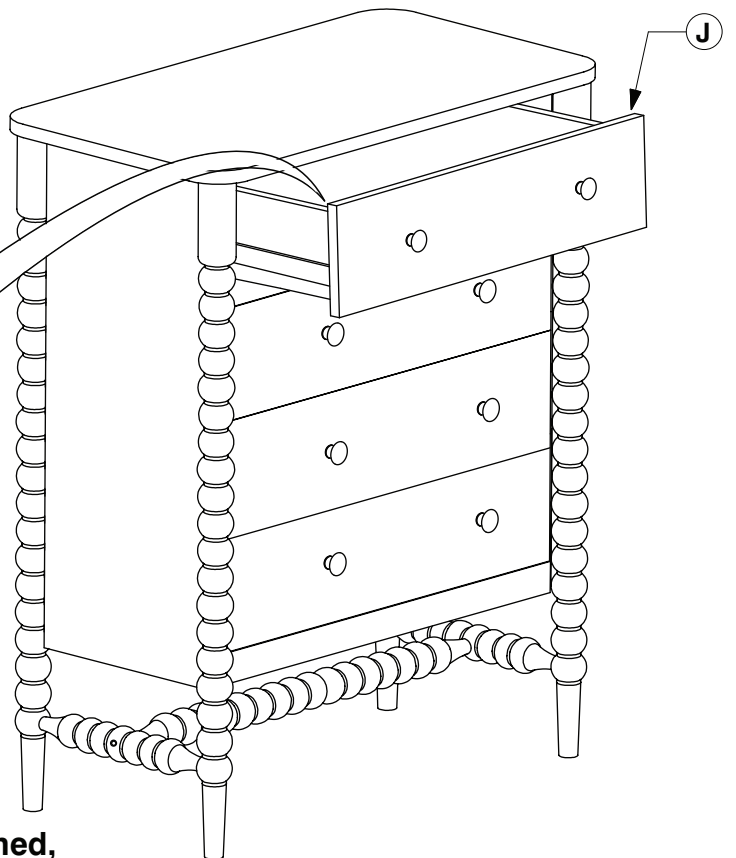

16 After the Drawer Faces (J) are aligned, secure with wood screws.

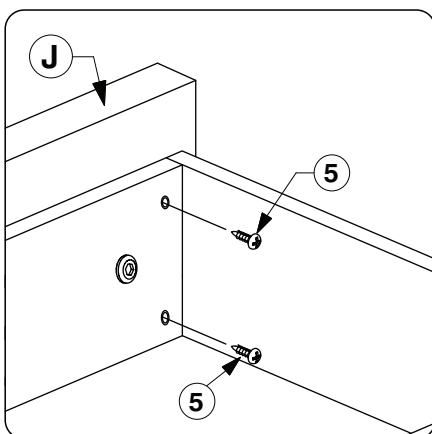

* NOTE: Only one Drawer can be open
at a time.

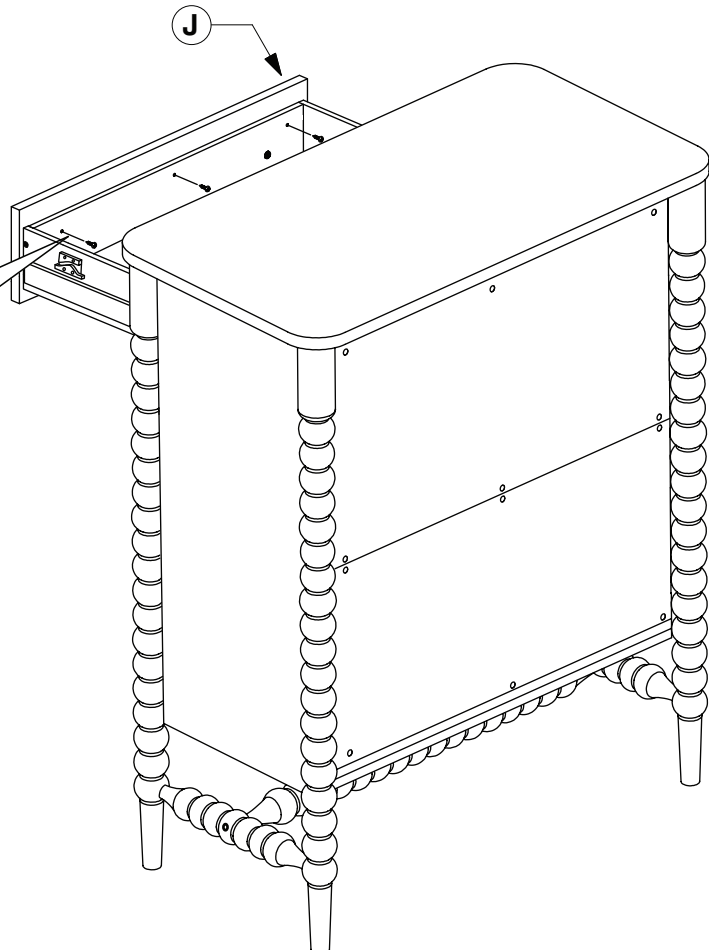




9025 4 Drawer Chest

Assembly Instructions


WI-1025

17 Remove the Drawers.

- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

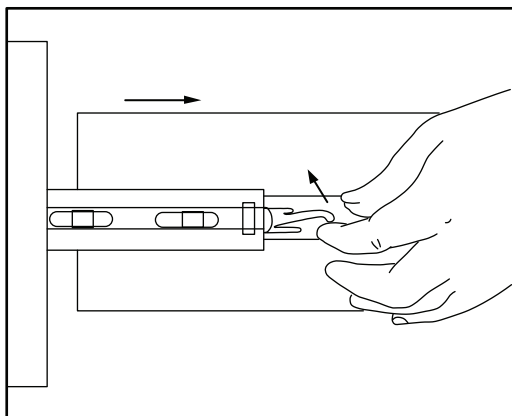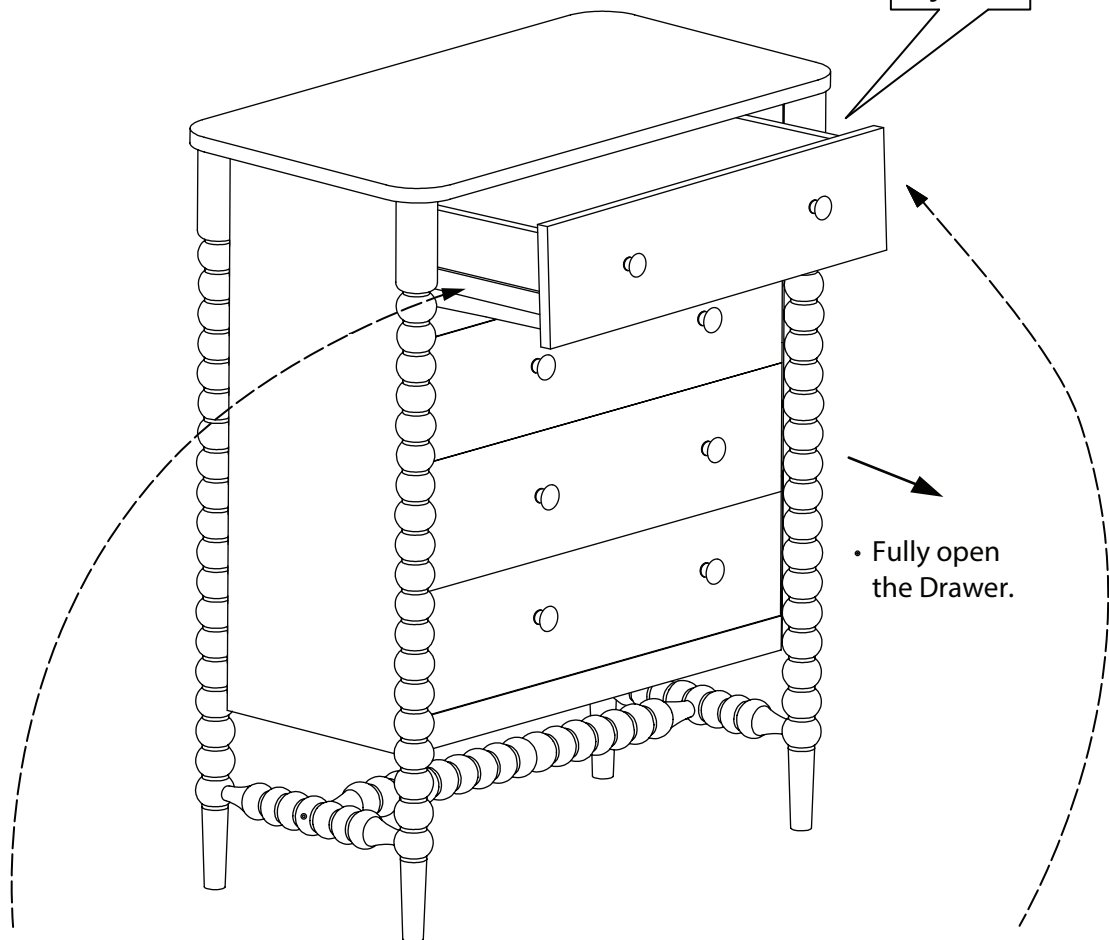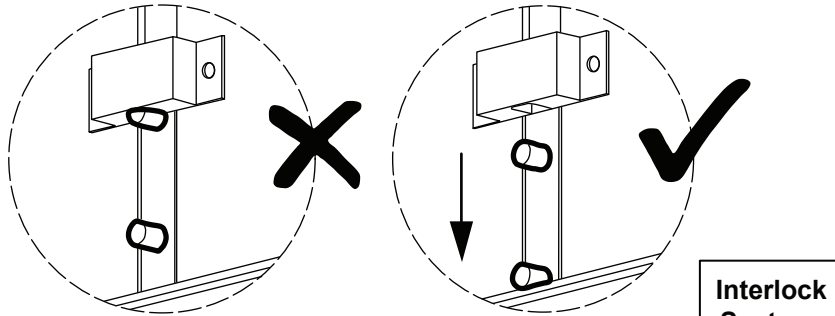

- Lift the **LEFT** side clip up.

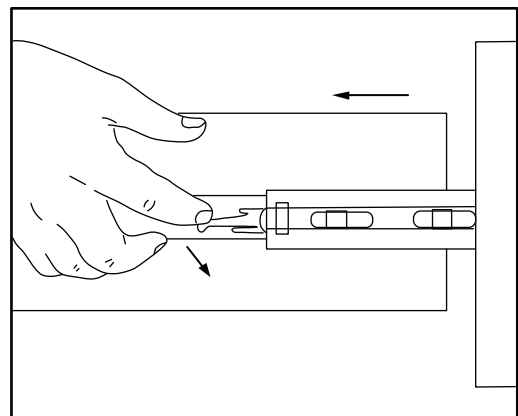

- Push the **RIGHT** side clip down.