


0110-11 Canopy Queen Bed

Assembly Instructions

WI-0226






1 Assembled View

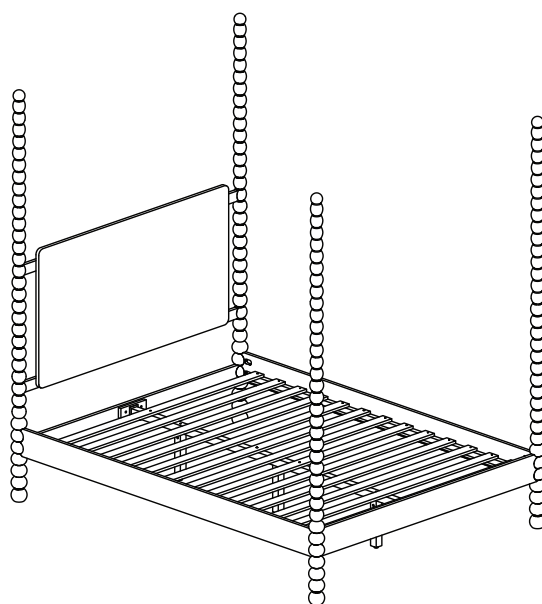


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List


Parts in Box A:

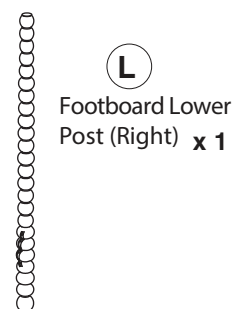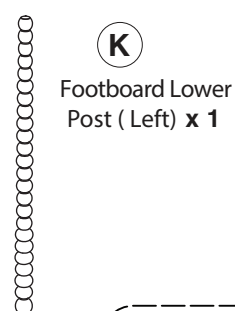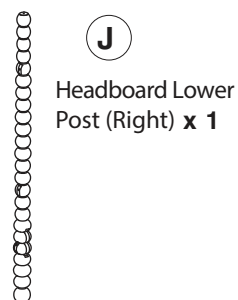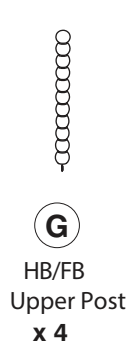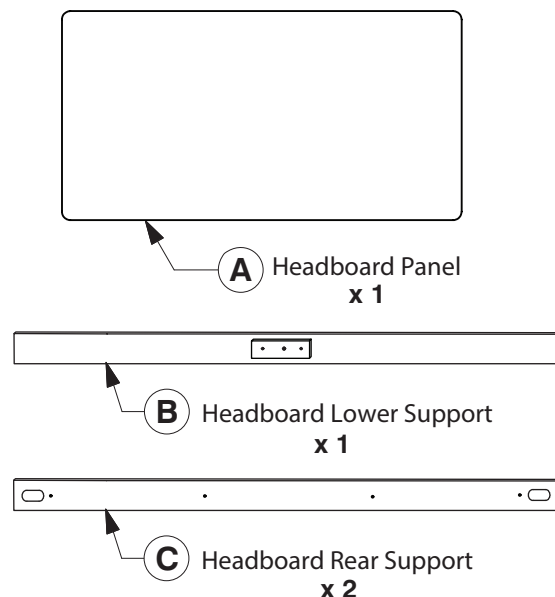

Parts in Box B:

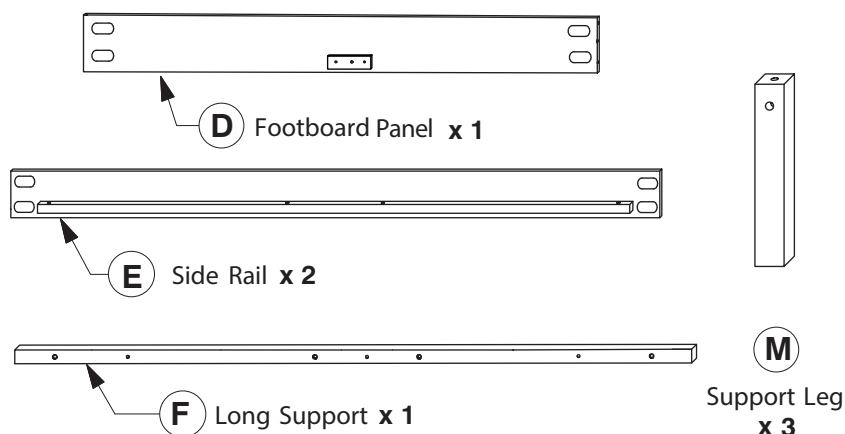

Partsin Box A:

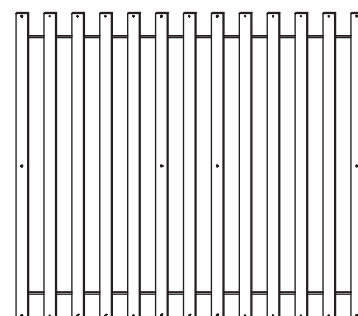


0110-11 Canopy Queen Bed


Assembly Instructions

WI-0226


3 Hardware List

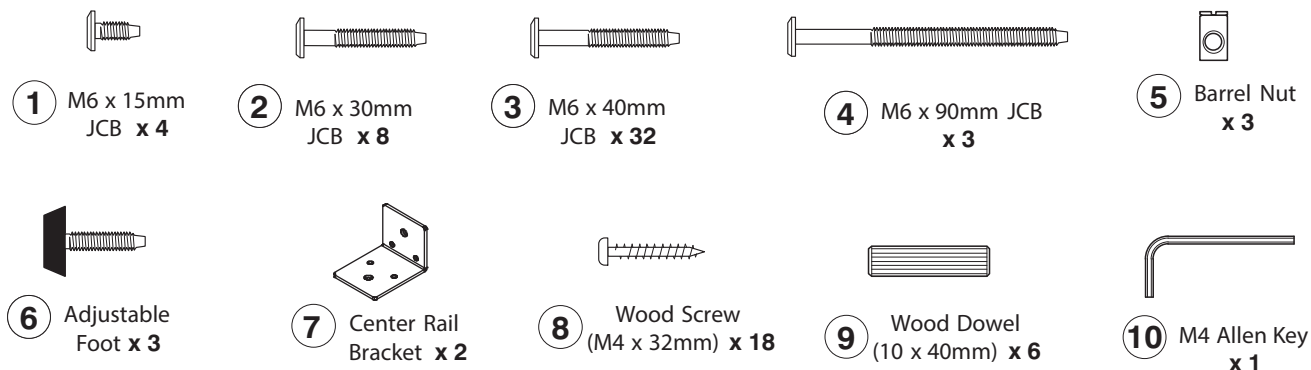

4 Assembled the Support Leg (M) to the Long Support (F).

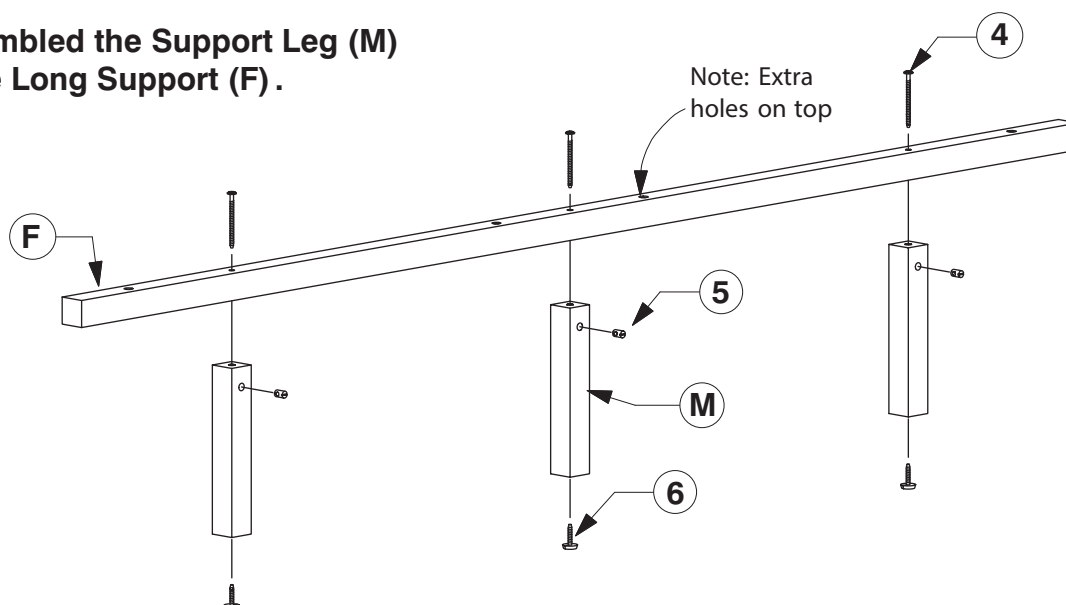

5 Fit the Center Rail Bracket (7) to the Headboard Lower Support (B).

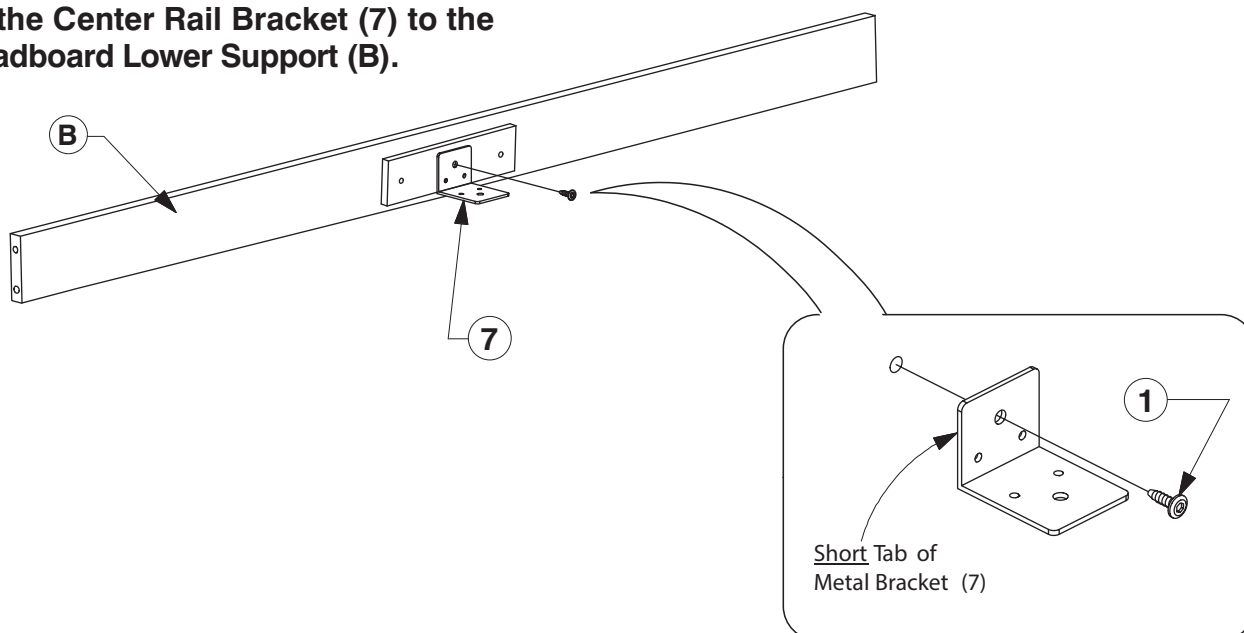


0110-11 Canopy Queen Bed

Assembly Instructions


WI-0226

- 6** Assembled the Headboard Rear Support (C) to the Headboard Panel (A).

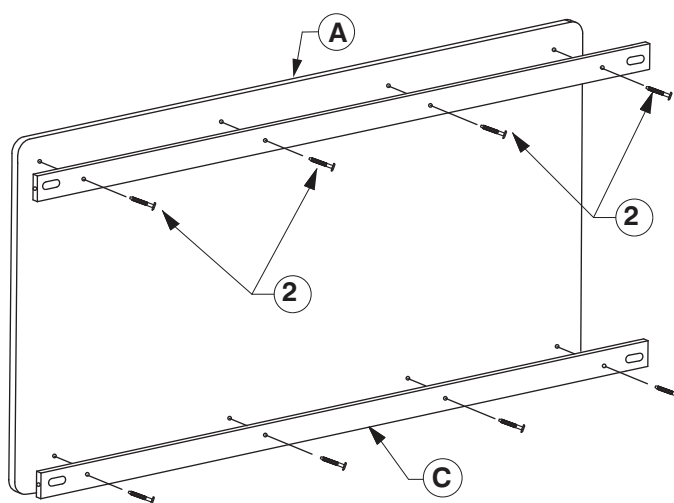

- 7** Fit the HB/FB Upper Post (G) to the HB Lower Post (H & J) and FB Lower Post (K & L)

x4

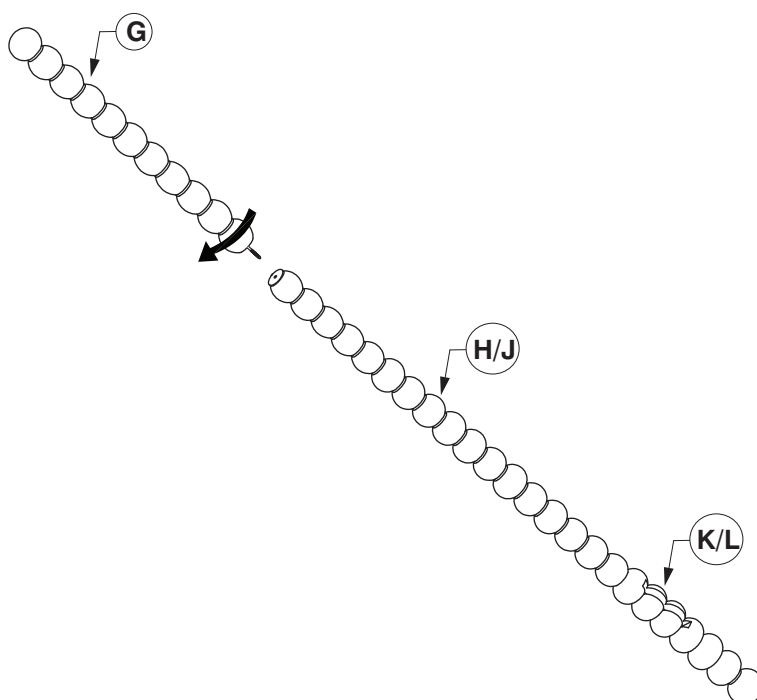


0110-11 Canopy Queen Bed

Assembly Instructions


WI-0226

- 8** Assemble the Headboard Post (H & J) to the Headboard Panel (A) and Headboard Lower Support (B).

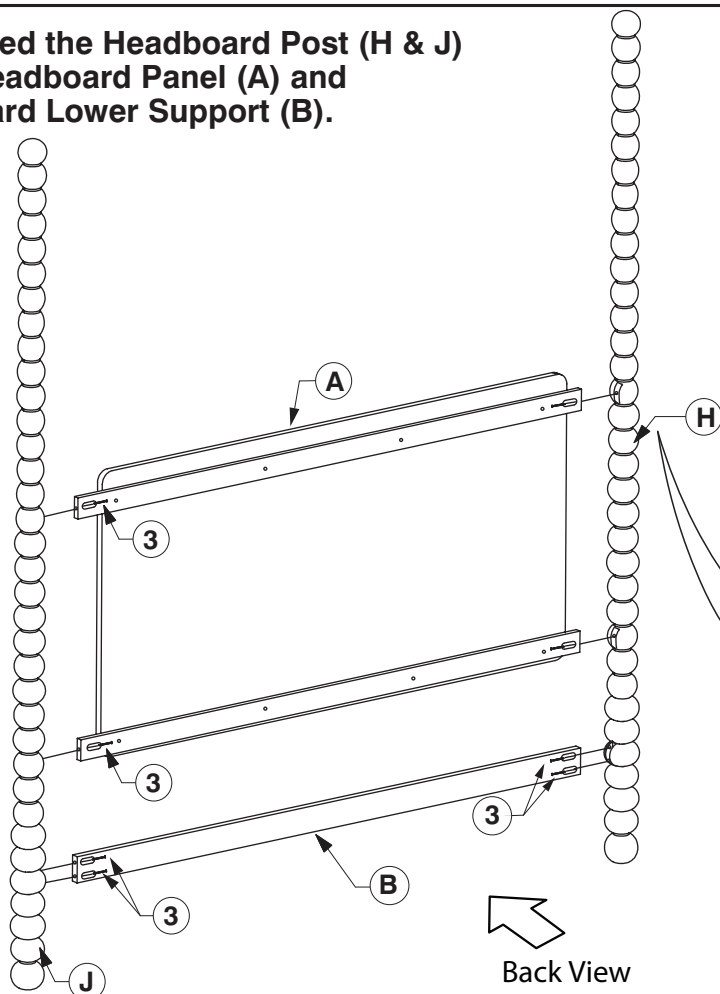



Step 1

Use the **ball end** of Allen key to start the bolt.

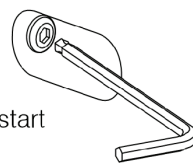


Step 2

Tighten fully with the **straight end**.

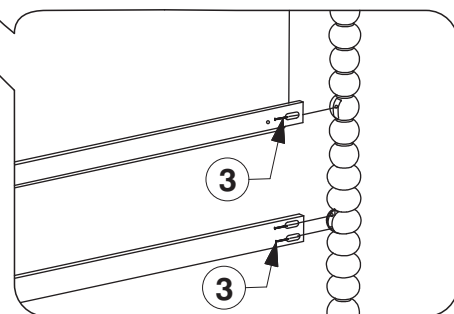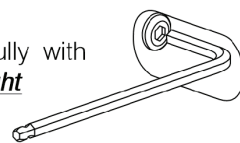


- 9** Assemble the Footboard Post (K & L) to the Footboard Panel (D). Fit the Center Rail Bracket (7) to the Footboard Support (D)

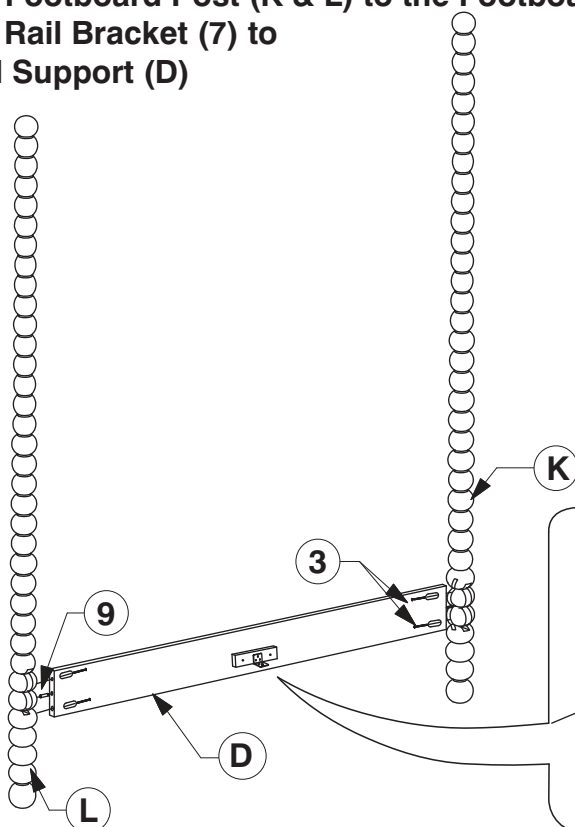



Step 1

Use the **ball end** of Allen key to start the bolt.

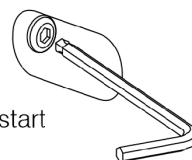

Step 2

Tighten fully with the **straight end**.

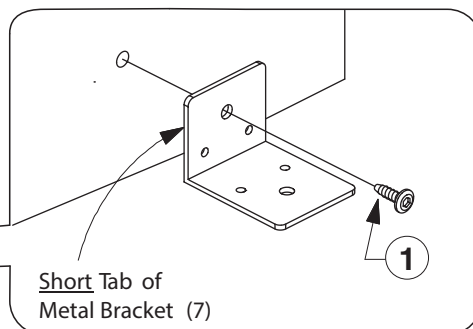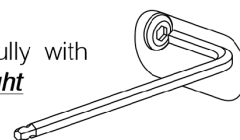


0110-11 Canopy Queen Bed


Assembly Instructions

WI-0226

- 10 Assemble the Side Rail (E) to the Headboard Post (H & J) & Footboard Post (K & L).**

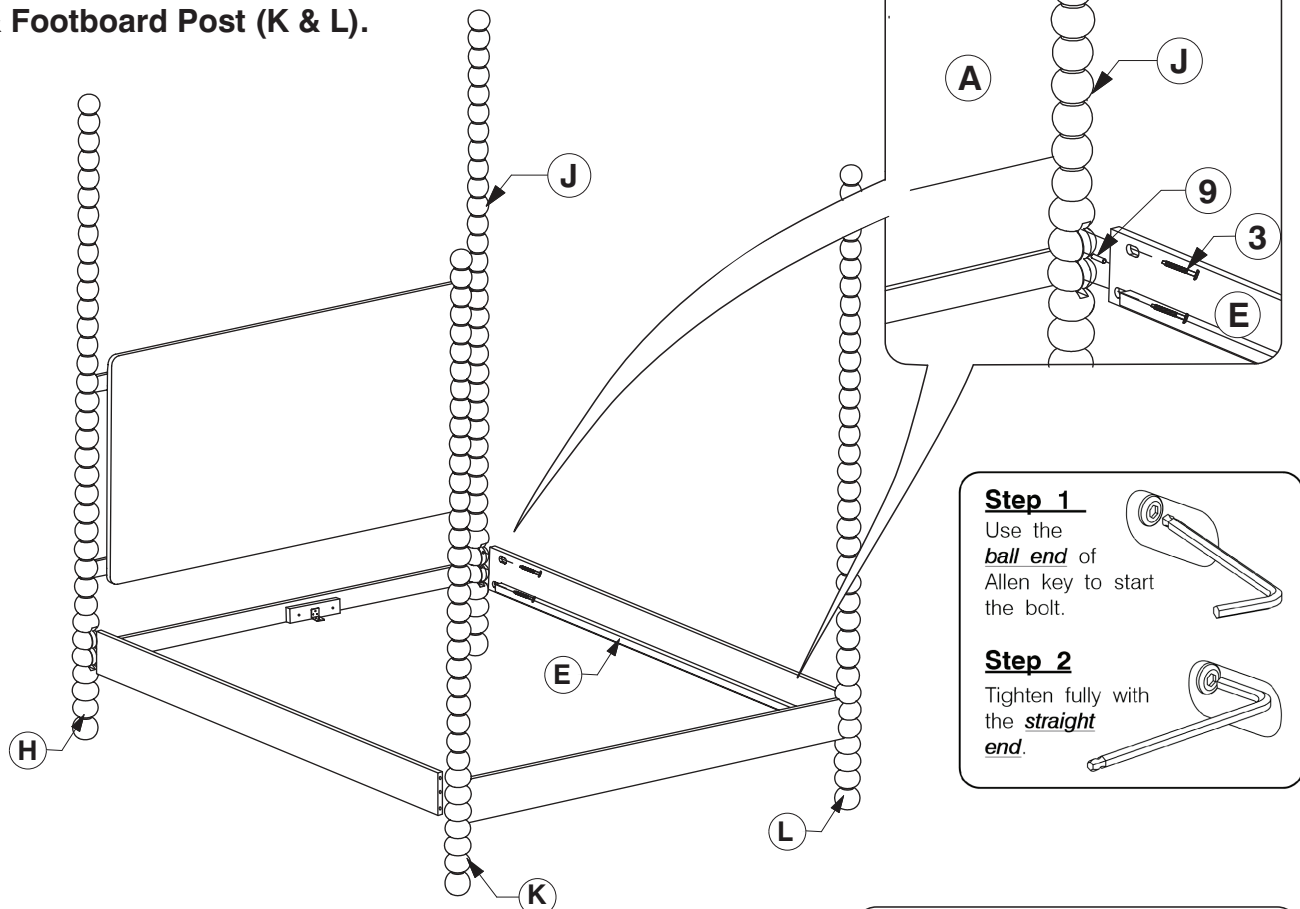

- 11 Bolt the Long Support (F) to the Center Rail Bracket (7) on the Headboard Lower Support (B) & Footboard Panel (D).**

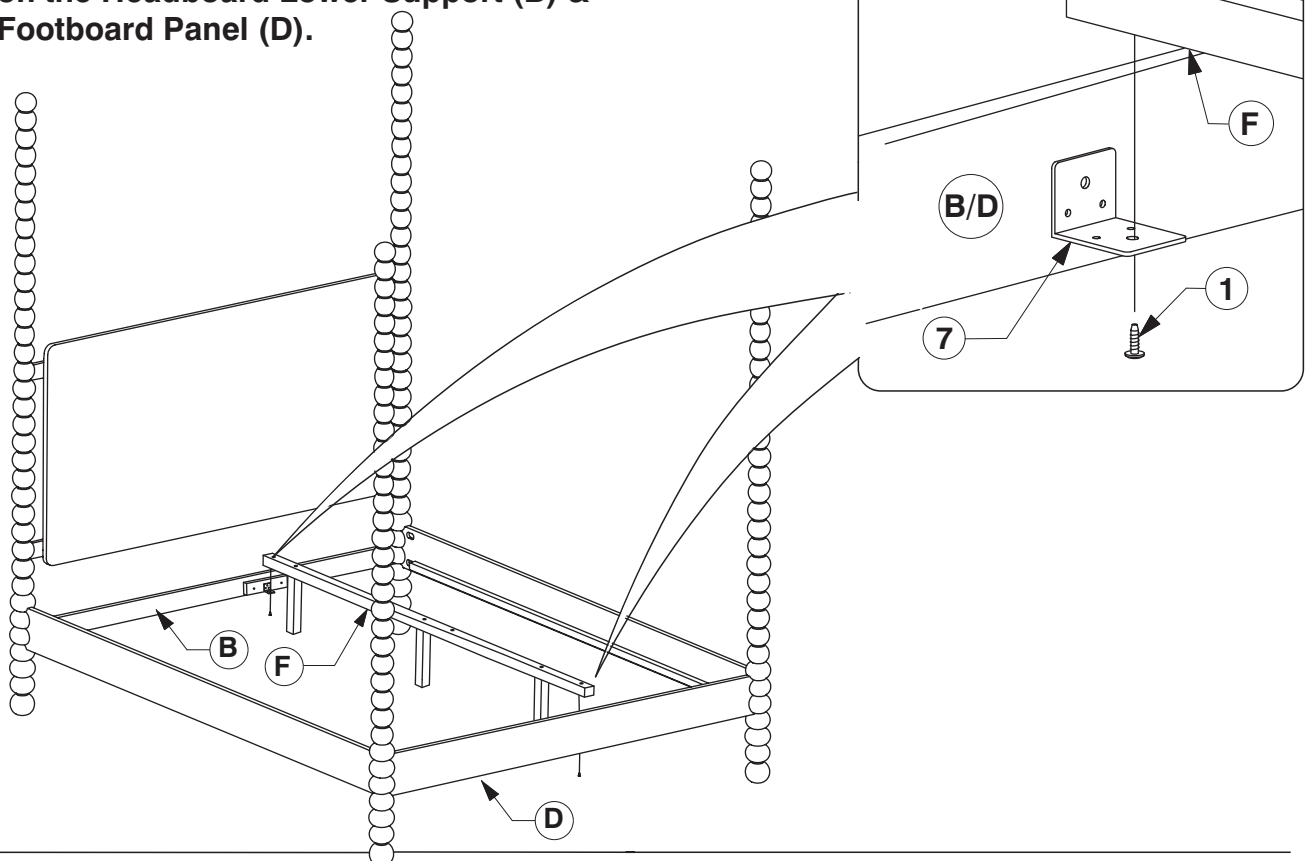

0110-11 Canopy Queen Bed

Assembly Instructions

WI-0226

- 12** Bolt & screw the Bed Slats (N) to the Side Rail (E).

