
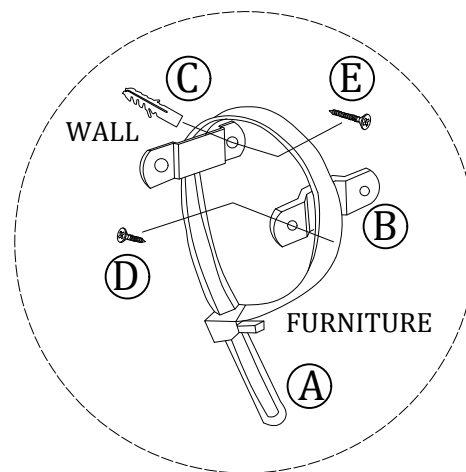



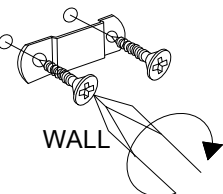
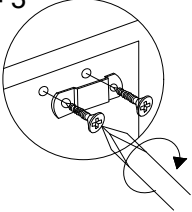
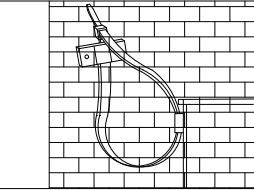
ANTI - TIP KIT INSTALLATION INSTRUCTIONS

SVN-1296_MEGA-CABINET

PARTS LIST

NO	DESCRIPTION		QNT
A		PLASTIC STRAP	01
B		BRACKET	02
C		PLASTIC ANCHOR	02
D		SHORT SCREW	02
E		LONG SCREW	02



STEP - 1	STEP - 2	STEP - 3	STEP - 4
 <p>WALL</p>	 <p>WALL</p>		
Drill on the wall to be installed (part C), then install (part C) 2 pcs on the wall that has been drilled	Install (part B) on the wall that has been installed (part C), then lock it with screw (part E)	Install (part B) on the item, and lock with screw (part D)	Attach (part A) to the part (part B) that is already installed on the wall and item, that hook it firmly

