ASSEMBLY INSTRUCTIONS

NAPOLEON SIDE CHAIR

HARDWARE PARTS:

8x1"
WOOD SCREW
6 PCS

M6x70mm
JCBC BOLT
8 PCS

M6x40mm
JCBC BOLT
2 PCS

M6
LOCK WASHER
10 PCS

M6.5x16.5mm
FLAT WASHER
10PCS

M4x2.1/2"
ALLEN KEY
1 PC

ASSEMBLY:

1. POSITION THE CHAIR BACK ON A SOFT SURFACE SUCH AS A CARPET. PLACE THE CHAI BACK WITH THE DOWEL FULLY INSERTED INTO THE PRE-DRILLED HOLES. MAKE SURE

1.1. INSERT 70mm JCBC BOLT THROUGH A LOCK WASHER AND A FLAT WASHER INTO THE PRE CORNERS. TIGHTEN WITH THE ALLEN KEY PROVIDED.

1.2. INSERT THE 40mm JCBC BOLT THROUGH A LOCK WASHER AND A FLAT WASHER INTO THE RAIL, TIGHTEN WITH THE ALLEN KEY PROVIDED.

2.. INSERT THE 70mm JCBC BOLT THROUGH A LOCK WASHER, A FLAT WASHER AND THE PR DRILLED HOLES ON THE FRONT LEG, TIGHTEN THE JCBC BOLT WITH ALLEN KEY PROV

APRON FRAME ON TO THE MIDDLE RAIL OF THE CHAIR THAT THE SCREW HOLES ON THE APRON FRAME ARE FACING

-DRILLED HOLES ON THE APRON FRAME AT REAR

PRE-DRILLED HOLES ON THE APRON FRAME AT REAR

E-DRILLED HOLES OF CORNER BLOCK INTO THE PRE-IDED.

FIG.1

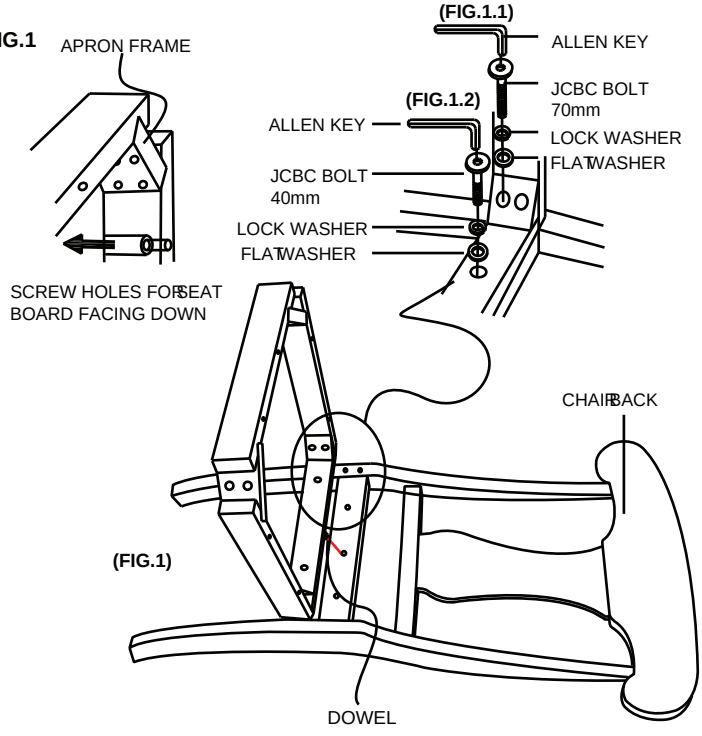

FIG.2

ASSEMBLE FRONT LEGAS SHOWN

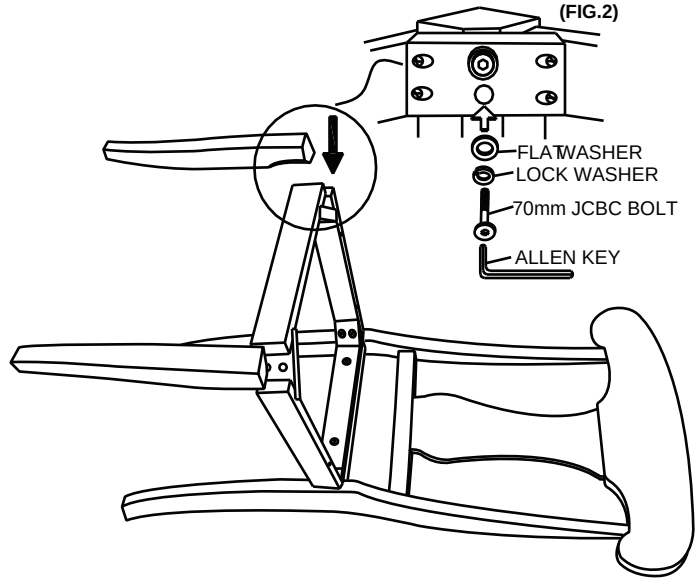

FIG. 3

3. FLIP CHAIR UPSIDE DOWN AND SECURE THE SEAT BOARD WITH THE 1" WOOD SCREW THROUGH THE PRE-DRILLED HOLES ON THE APRON FRAME.

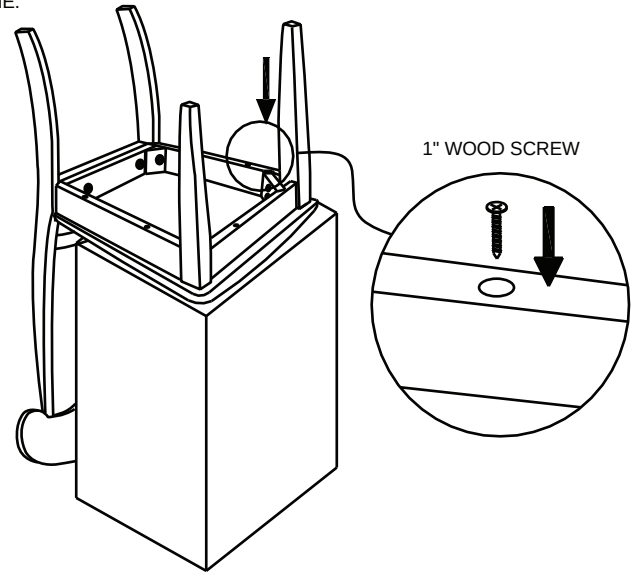

FIG. 4
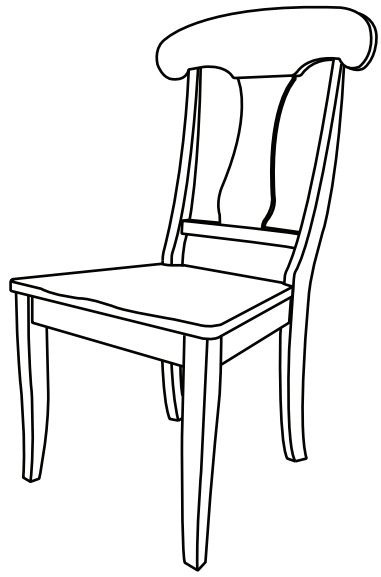
4.TURN THE CHAIR TO STANDING POSITION.