Assembly Instruction

Model : WI4886 (3A)
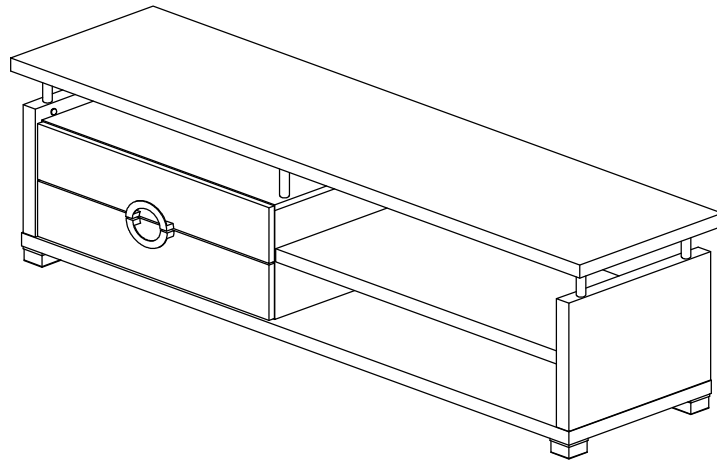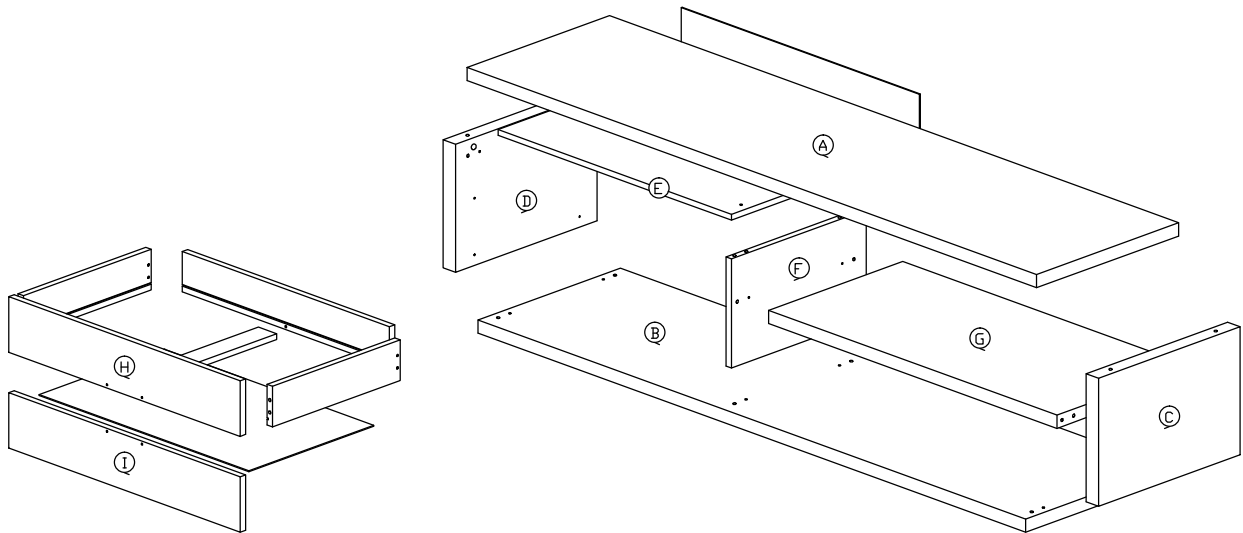
Part List

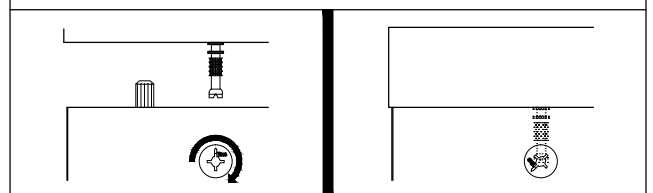| No.	SHAPE	DESCRIPTION	Qty.
	Hardware List		
1		**8x25mm Wood Dowel**	18Pcs
2		**M5x8mm Screw** (Euro Screw)	8Pcs
3		**M3.5x15mm Screw**	20Pcs
4		**M4x38mm Screw**	10Pcs
5		**M4x65mm Screw**	6Pcs
6		**M6x25mm JCBC Screw**	2Pcs
7		**15MM Titus Mini Fix**	14Sets
8		**Minifix Cam 10606 with 10703 Connecting Bolt**	4Sets
9		**15mm Minifix Cap**	4Pcs
10		**15mm Minifix Cap (hole)**	4Pcs
11		**Nail**	18Pcs
12		**Drawer Slide = 350mm**	2Sets
13		**PVC Square Leg**	5Pcs
14		**Handle 855-96mm M4 x 20mm**	2Sets
15		**Steel Pipe (Ø25 x 80mm)**	4Pcs
16		**Steel Pipe (Ø25 x 110mm)**	2Pcs
17		**L Key**	1Pc

Dowel / Cam - Lock Installation

Assembly Instruction

Step 1

*Install 18pcs Wood Dowel into all panels as shown.

Step 2

*Install minifix bolt to all panels as shown above.

Assembly Instruction

Step 3

Install Drawer Slide to all panels as shown.

Step 4

Install Steel Pipe as shown.

Install minifix bolt to Steel Pipe as shown.
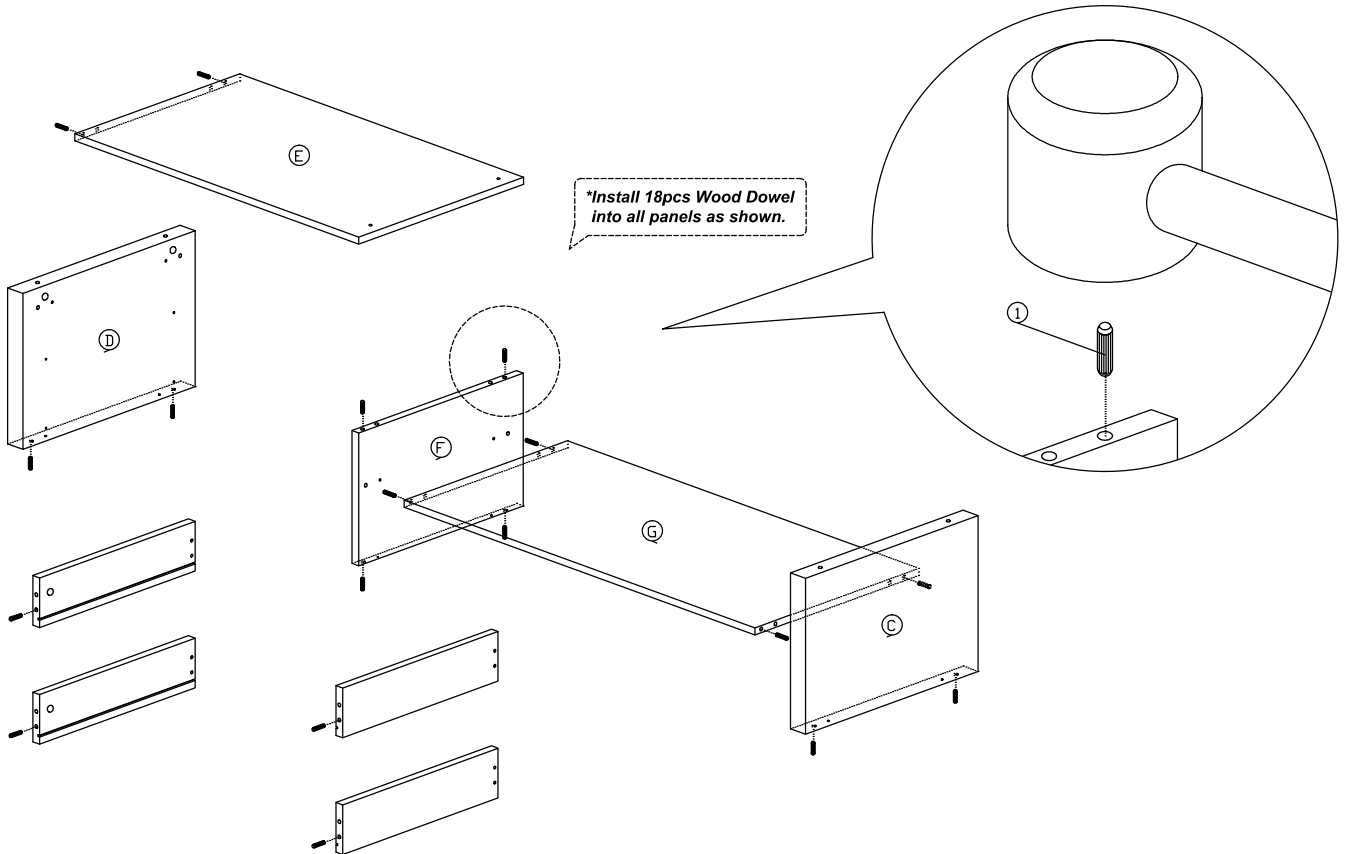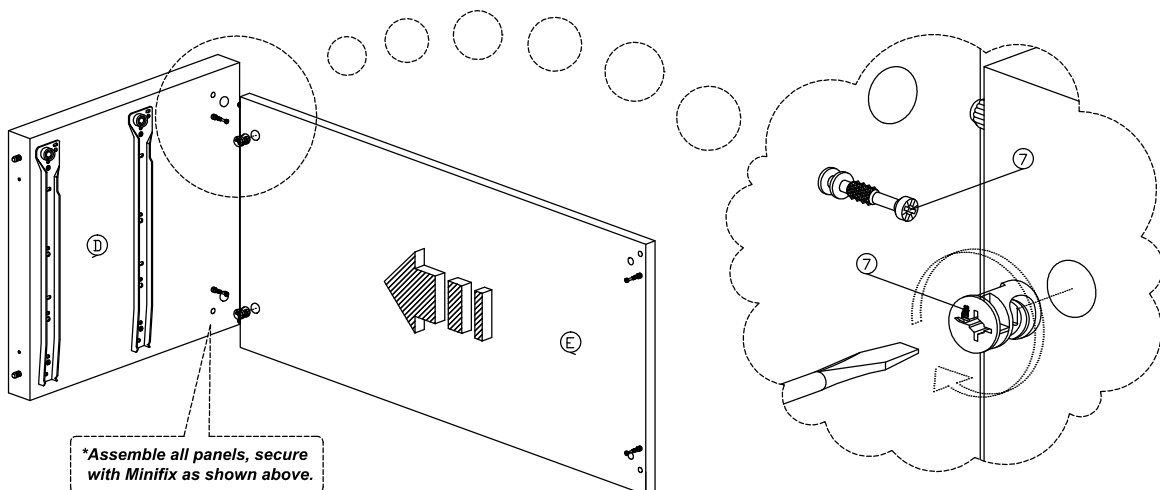
Step 5
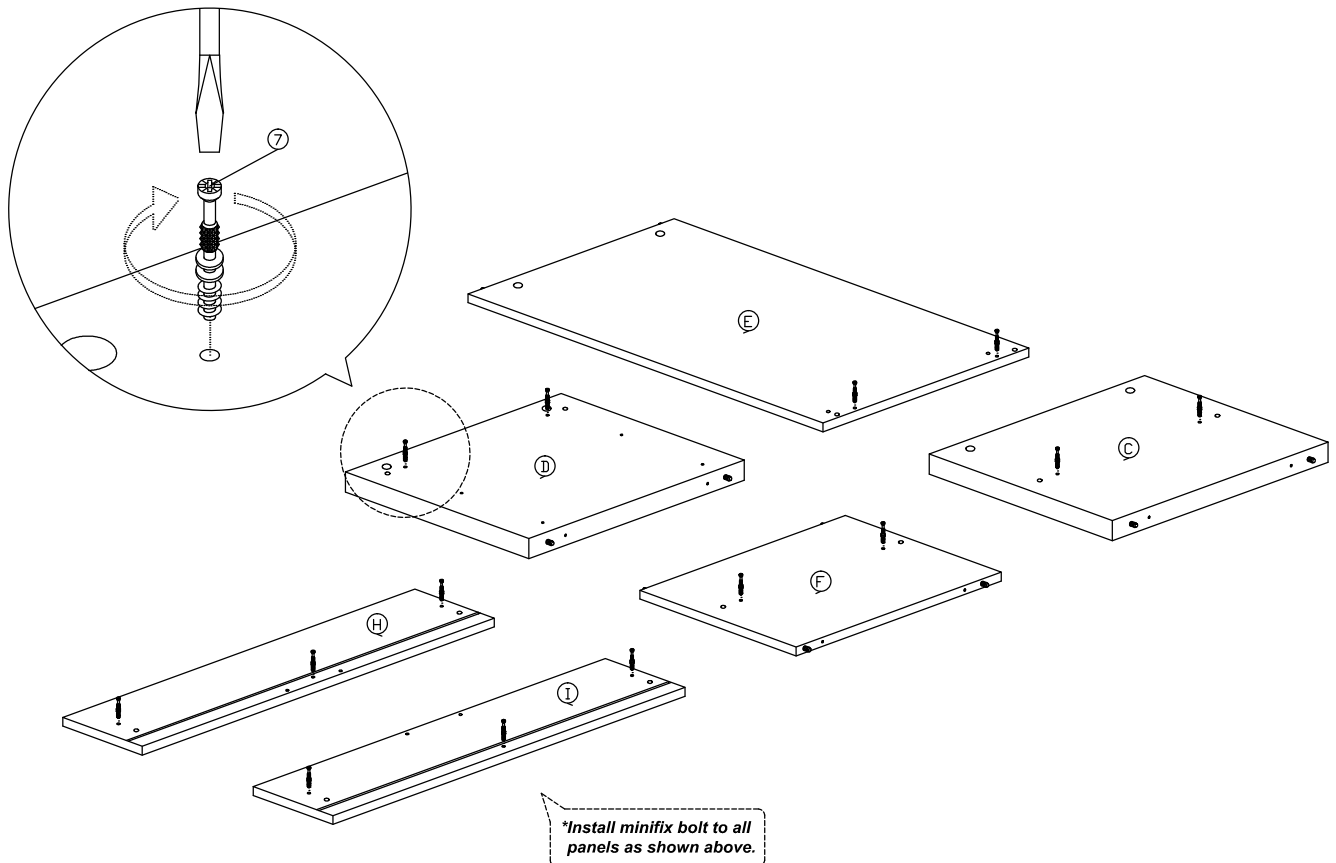
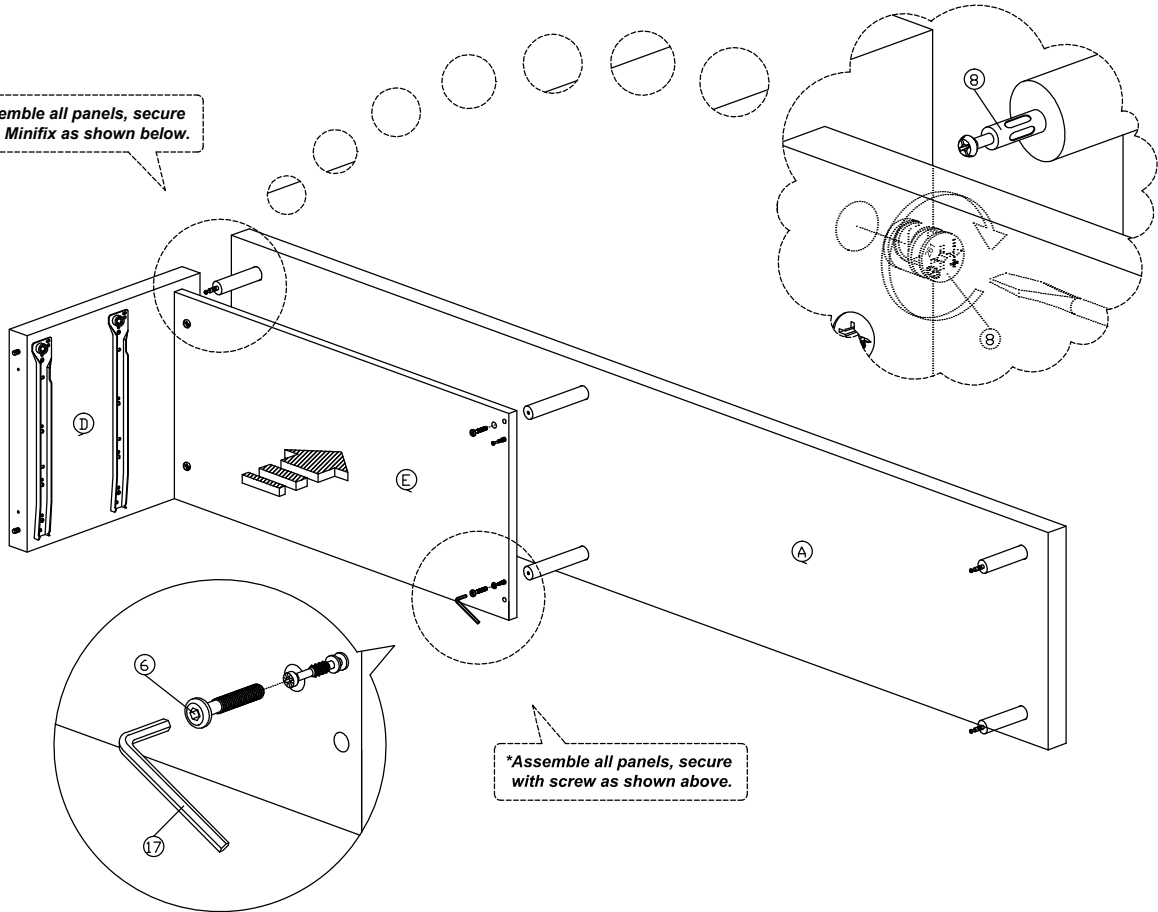*Assemble all panels, secure with Minifix as shown above.*
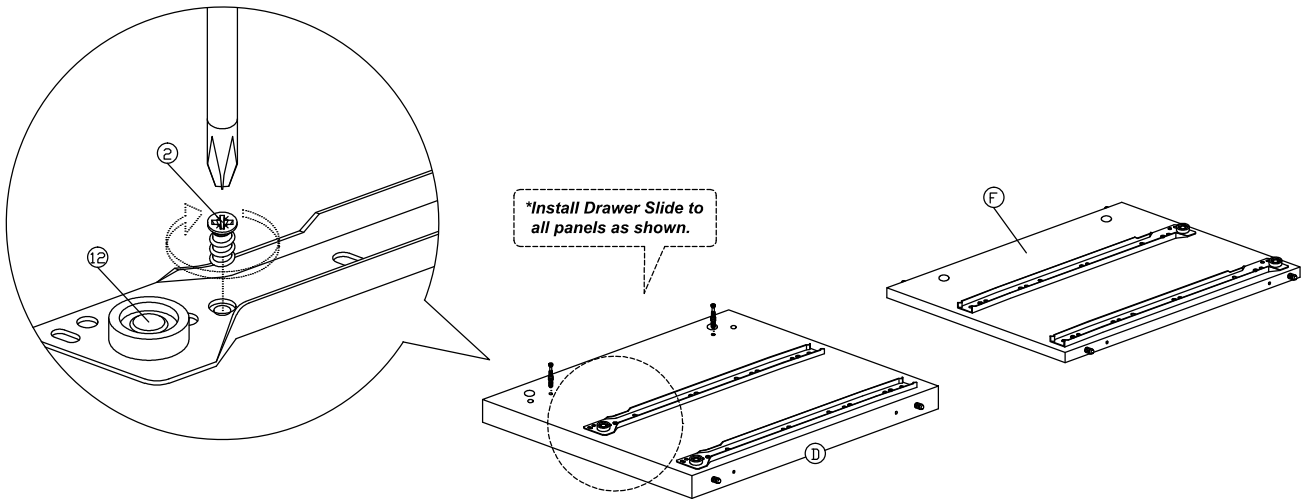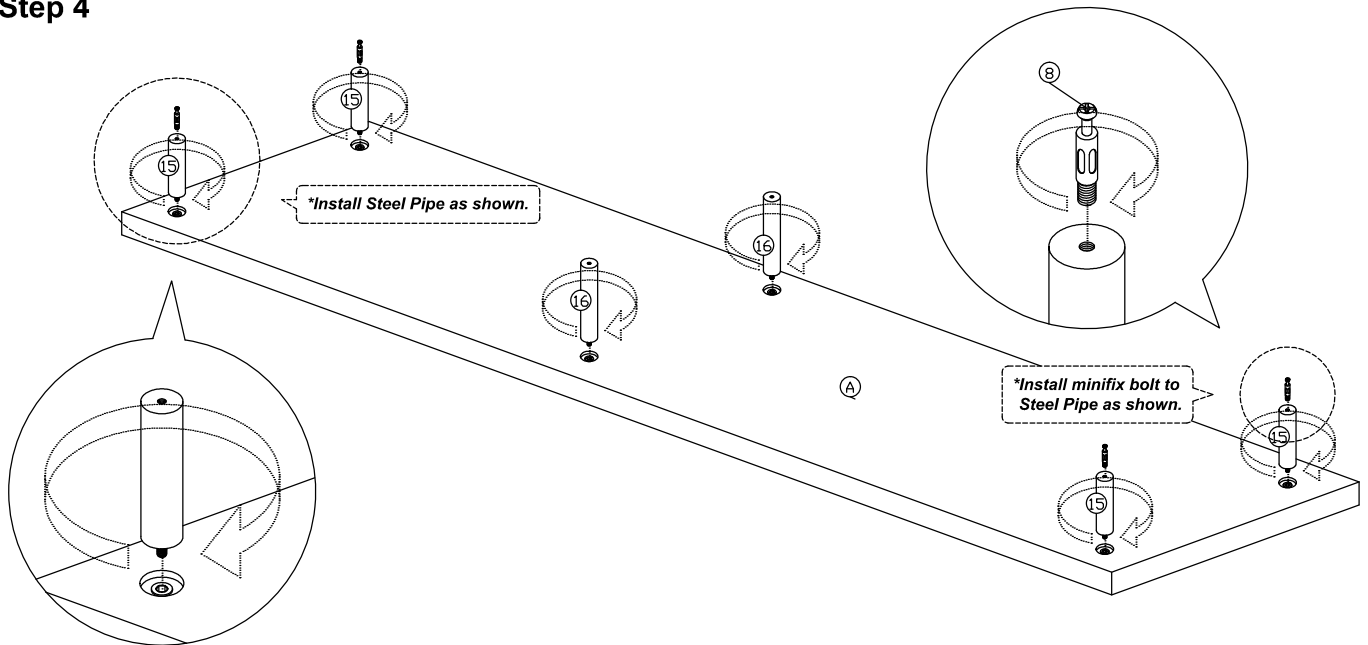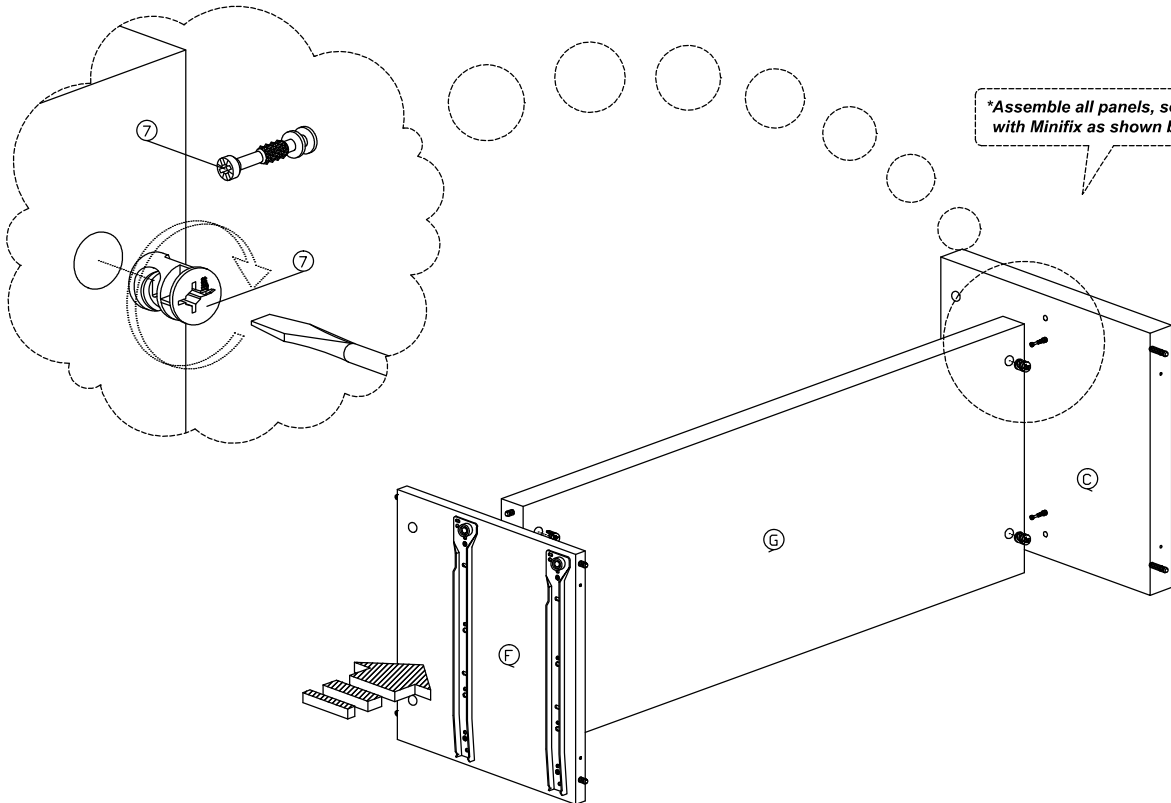
Assembly Instruction

Step 6

Assemble all panels, secure with Minifix as shown below.
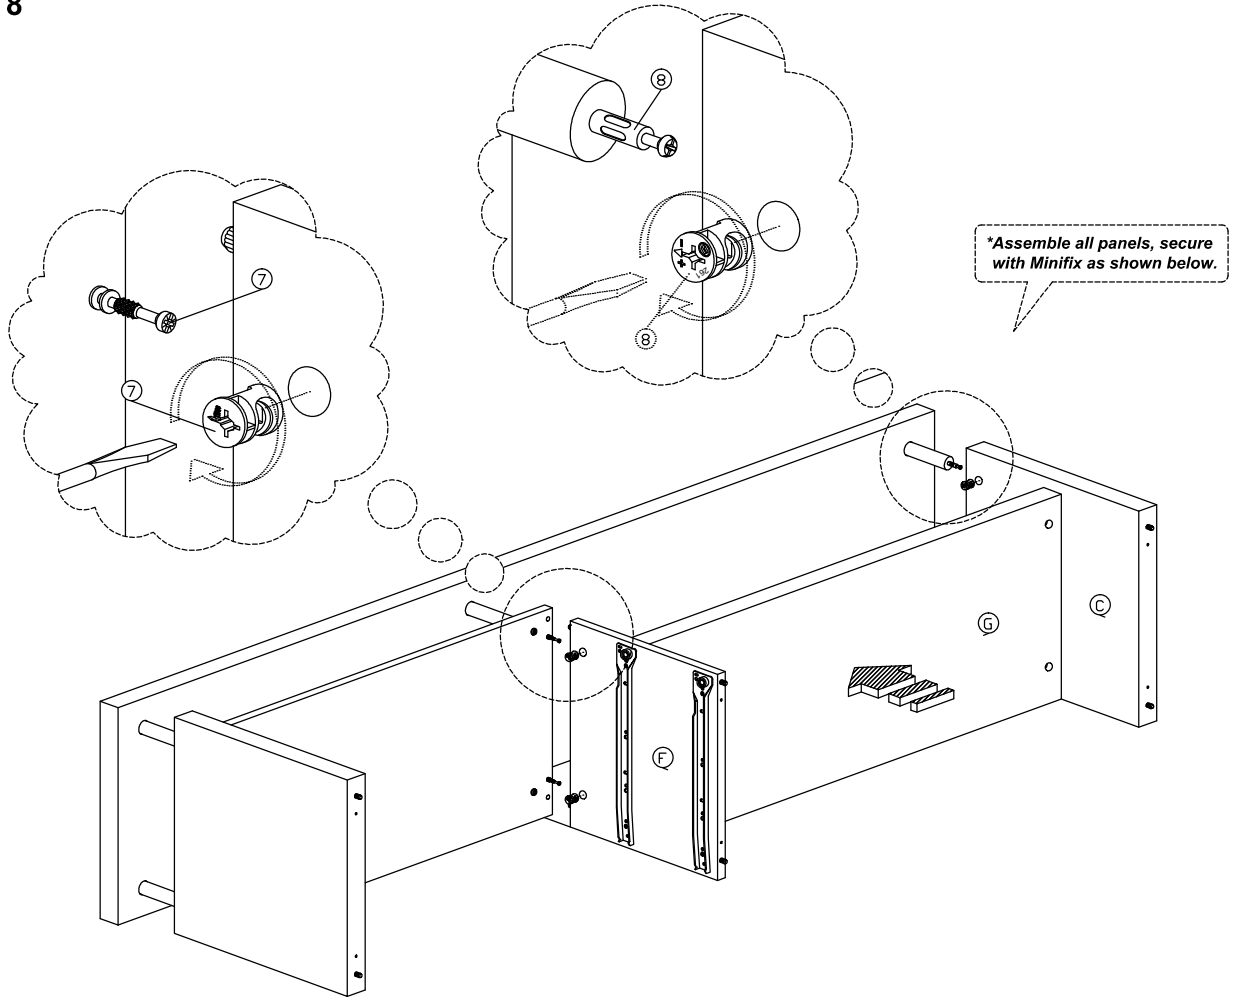
Assemble all panels, secure with screw as shown above.

Step 7

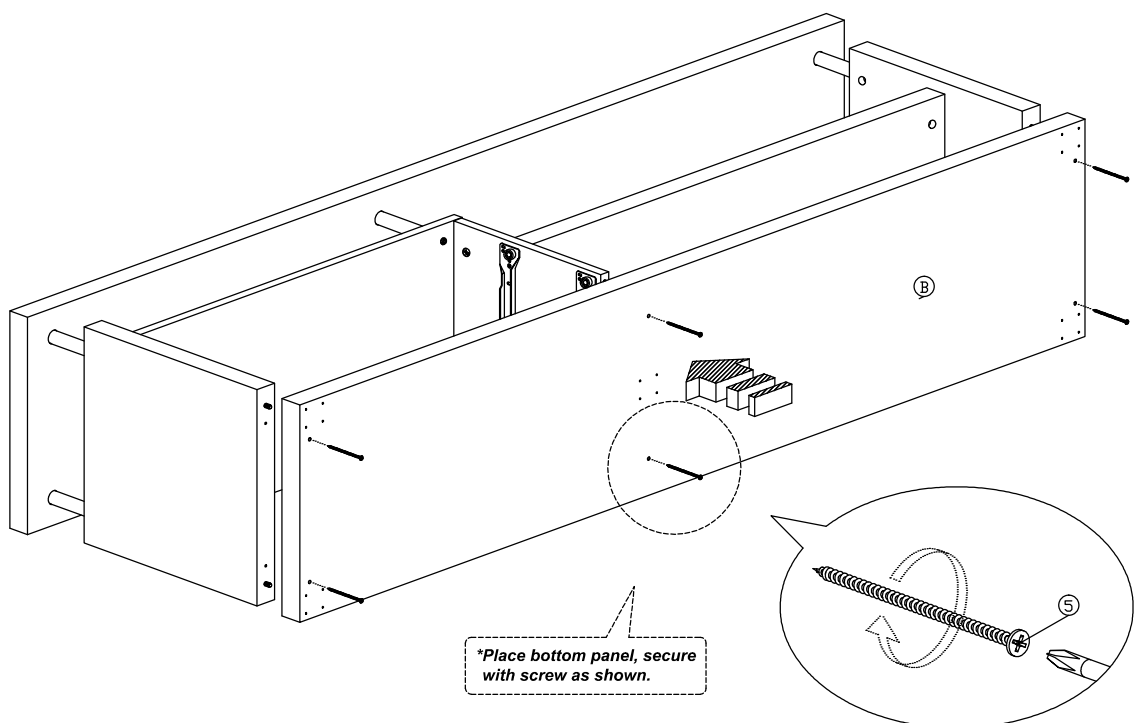*Assemble all panels, secure with Minifix as shown below.*

Assembly Instruction
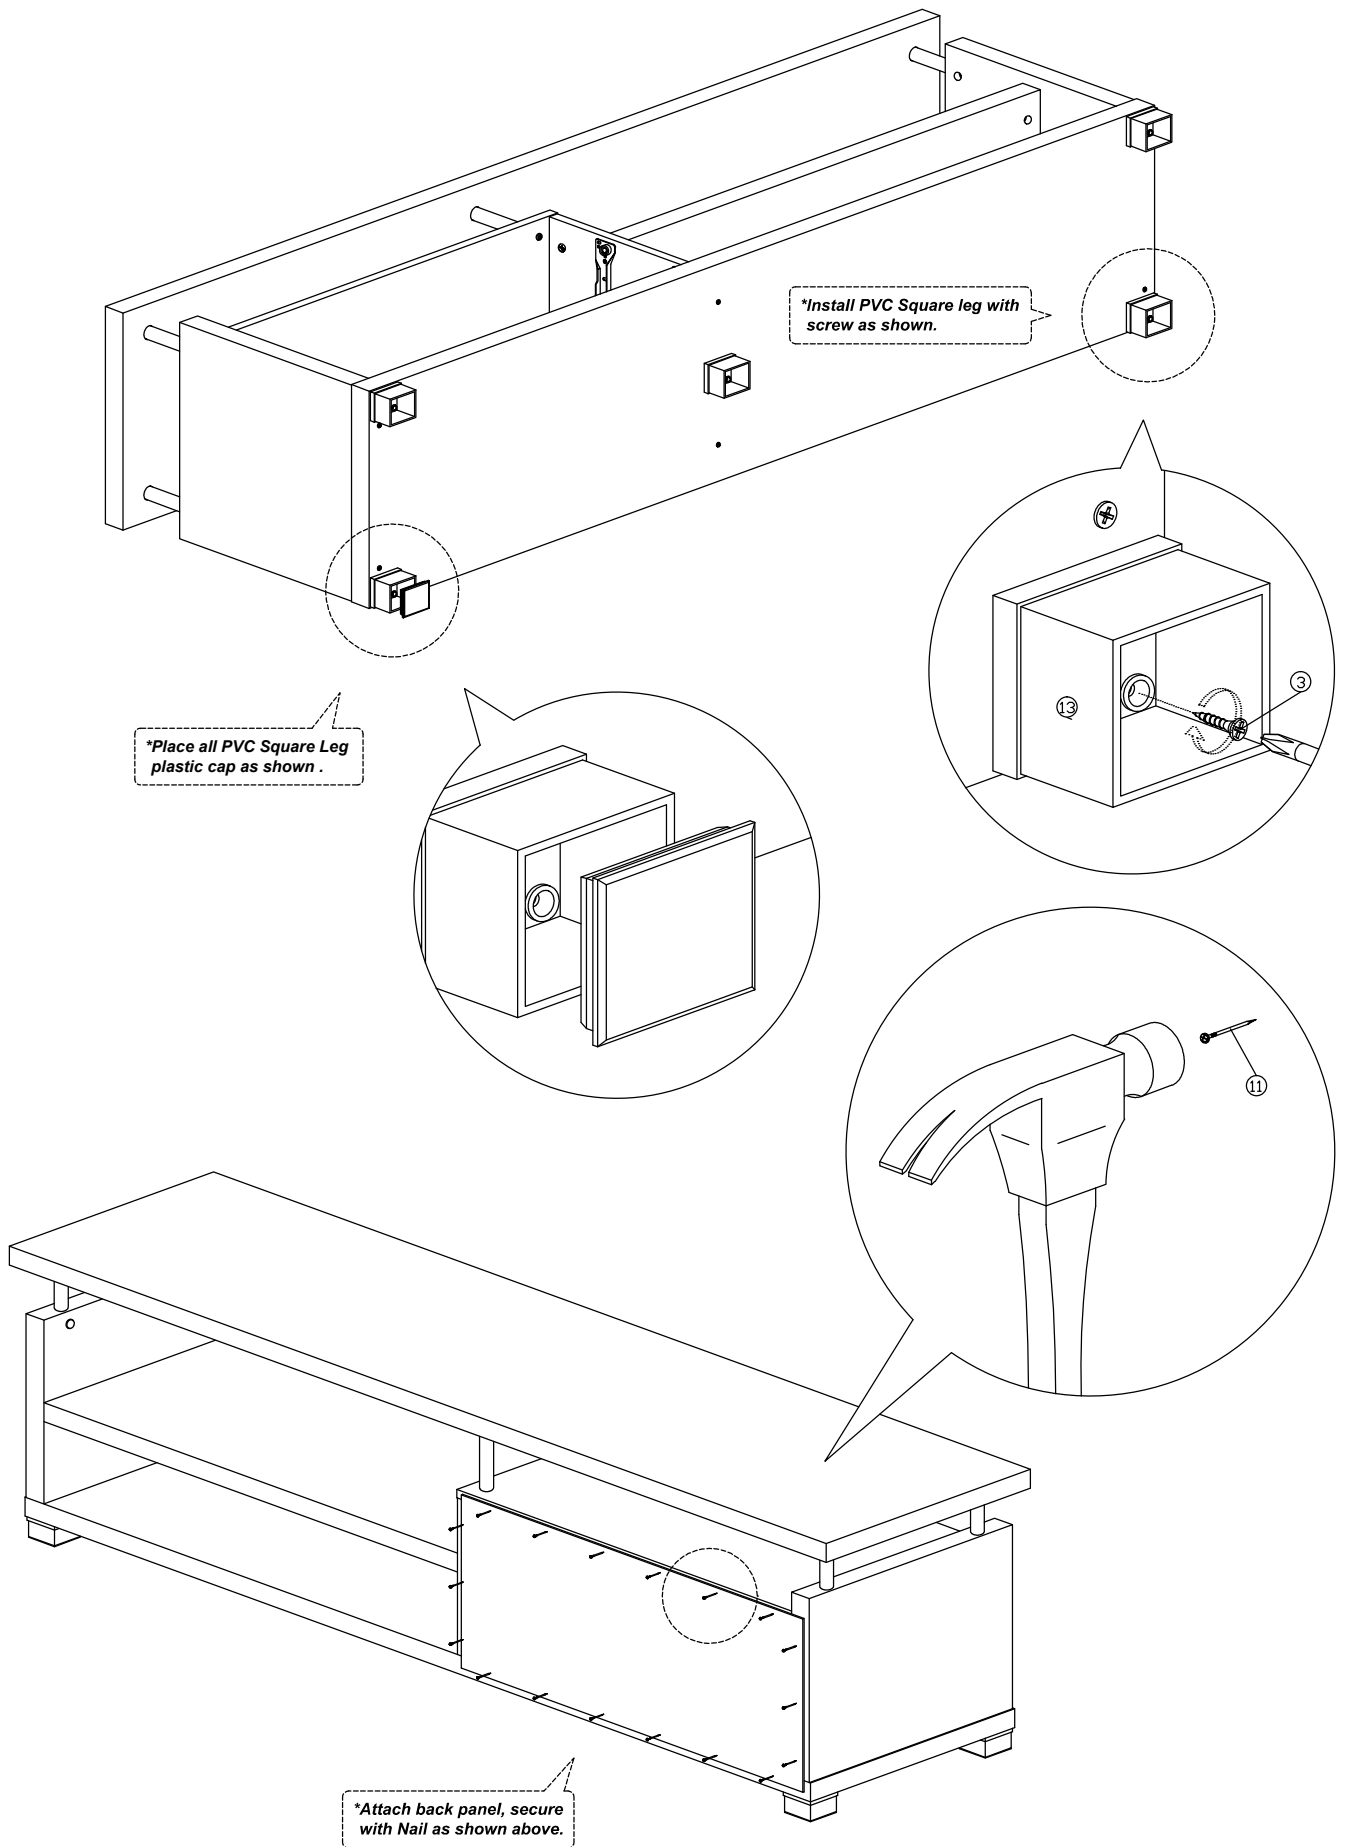
Step 8

Assemble all panels, secure with Minifix as shown below.

Step 9

Place bottom panel, secure with screw as shown.

Assembly Instruction

Step 10

Install PVC Square leg with screw as shown.

Place all PVC Square Leg plastic cap as shown .

③

⑬

⑪

Attach back panel, secure with Nail as shown above.

Step 11

*Assemble drawer panels, secure with Minifix as shown above.

H + I

Step 12

*Insert drawer bottom as shown below.

Step 13

*Insert drawer back, secure with screw as shown.

Step 14

*Install Handle with screw as shown.

H

I
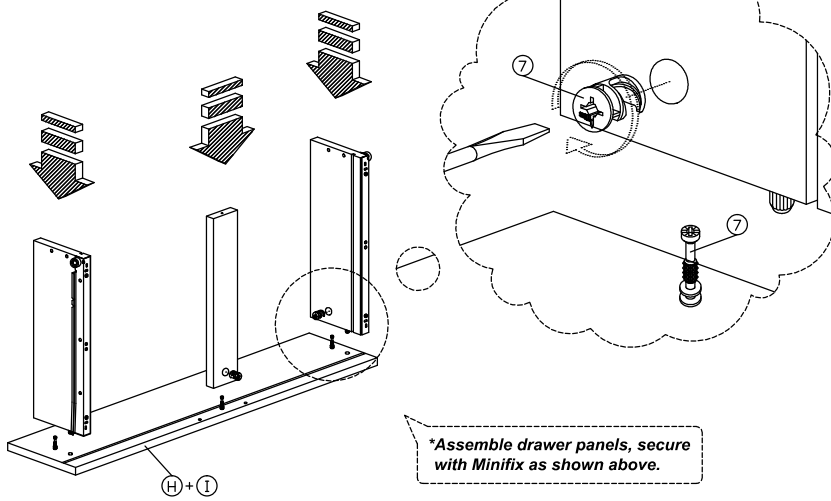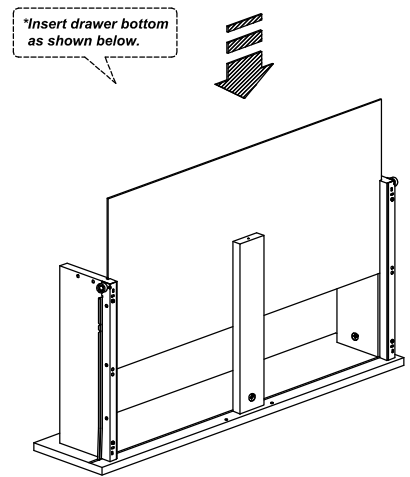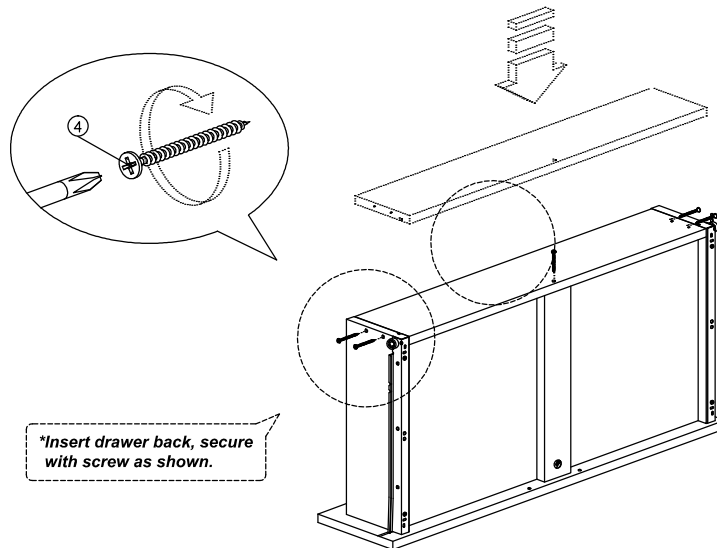
Step 15
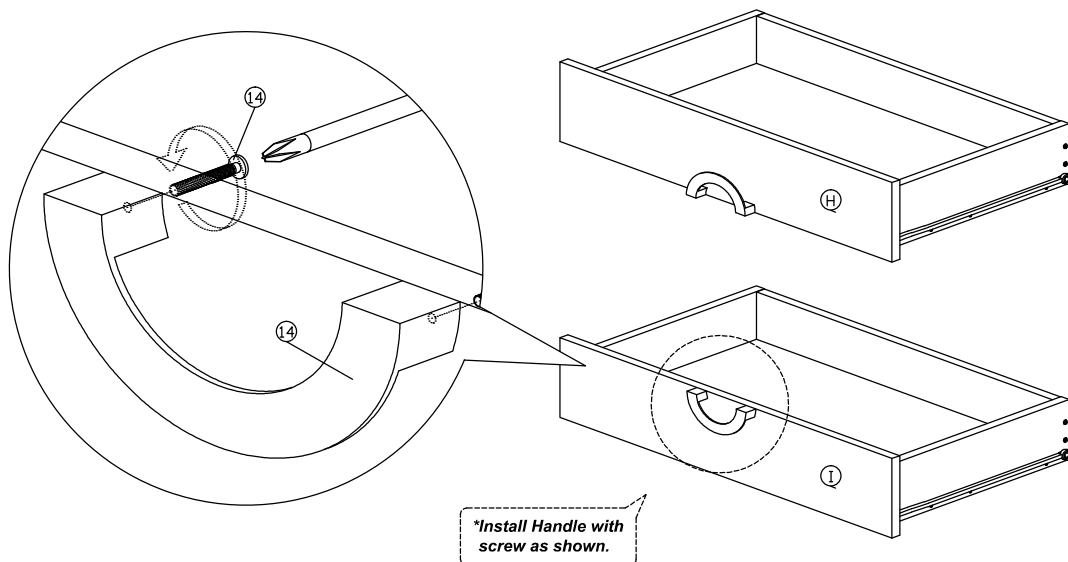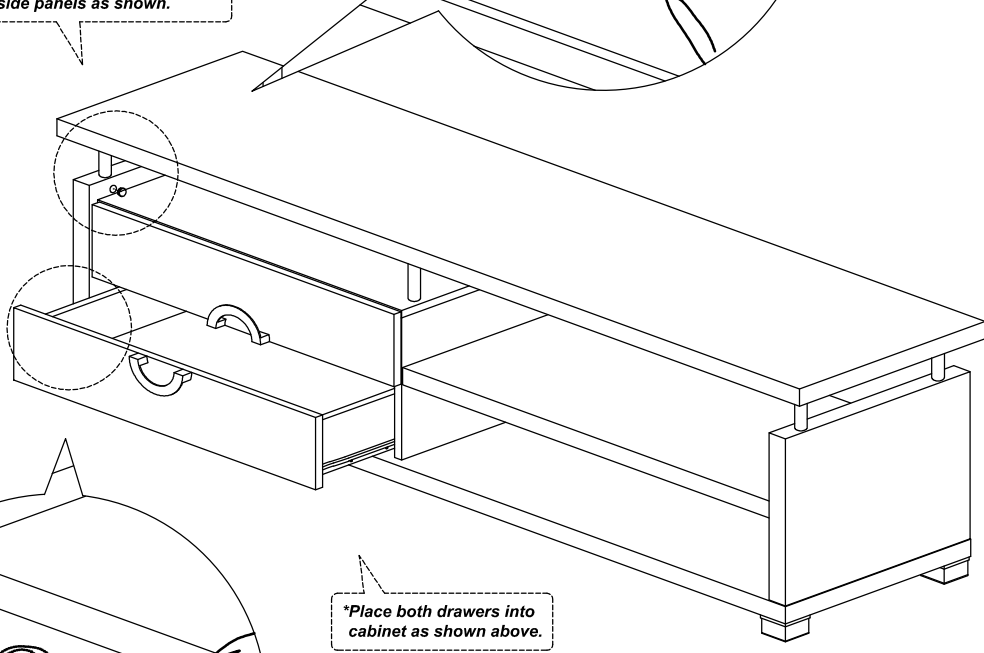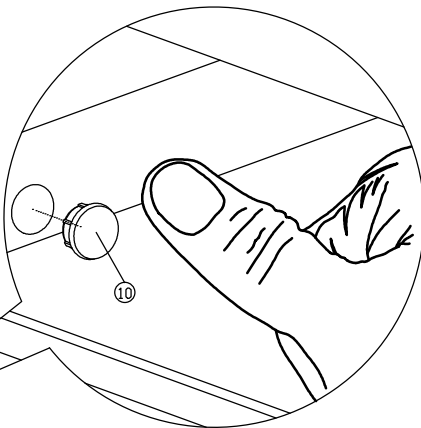
Attach Minifix Cap to both side panels & drawer side panels as shown.

⑩

⑨

Place both drawers into cabinet as shown above.