Assembly Instruction

Model : ST - 002

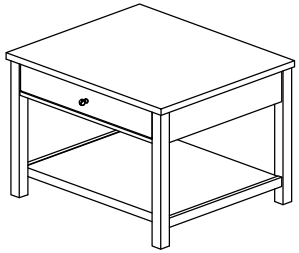

Dowel / Cam - Lock Installation

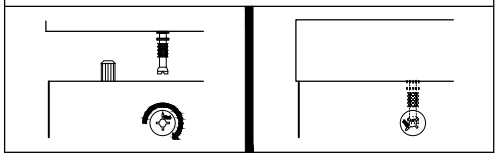

Hardware List			
No.	SHAPE	DESCRIPTION	Qty.
1		6x25mm Wood Dowel	4Pcs
2		8x25mm Wood Dowel	14Pcs
3		M3.5x15mm Screw	4Pcs
4		M4x38mm Screw	5Pcs
5		15MM Titus Mini Fix	13Sets
6		15mm Minifix Cap	2Pcs
7		Drawer Slide 16" (400mm)	1Set
8		Handle (2293) M4x20mm Handle Screw	1Set
9		Nail Leg	4Pcs

Part List

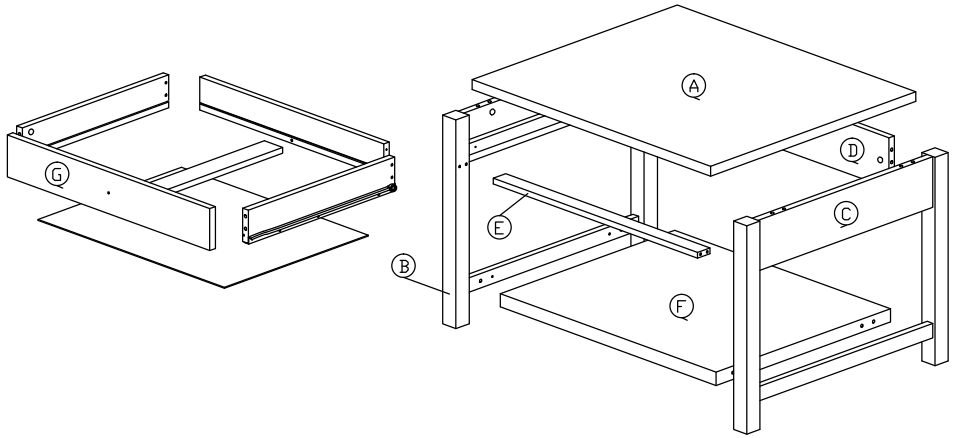

Step 1

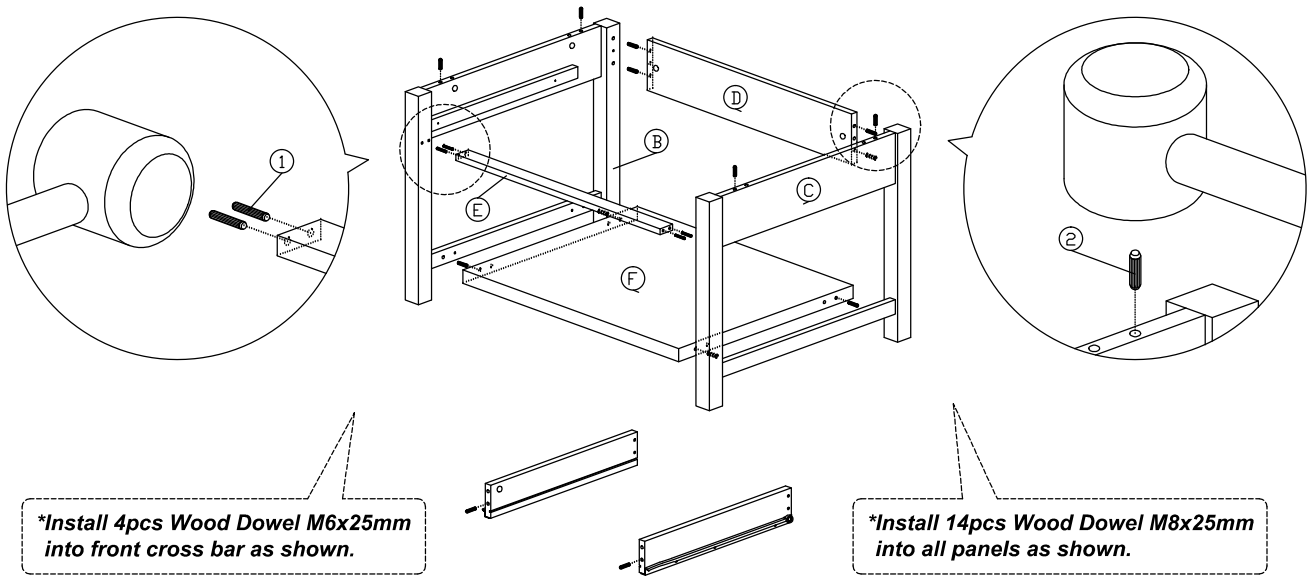

*Install 4pcs Wood Dowel M6x25mm into front cross bar as shown.

*Install 14pcs Wood Dowel M8x25mm into all panels as shown.

Step 2

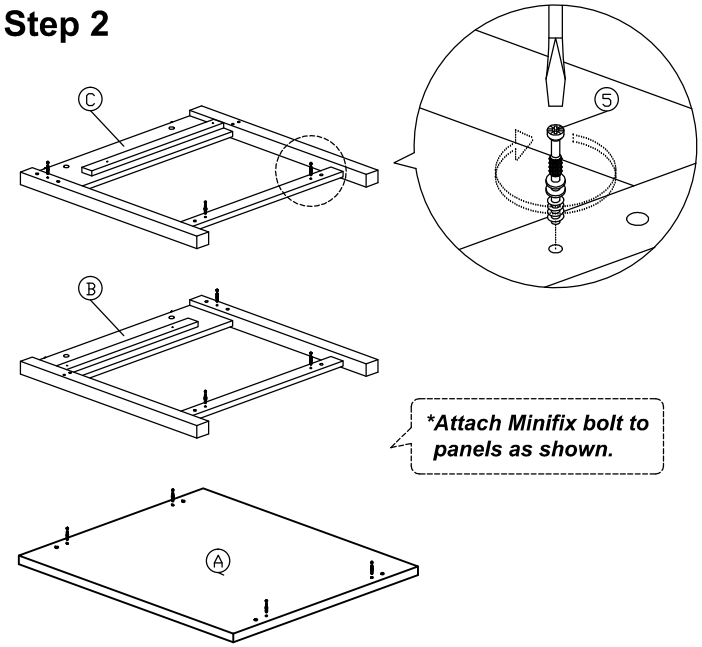

*Attach Minifix bolt to panels as shown.

Assembly Instruction

Step 3

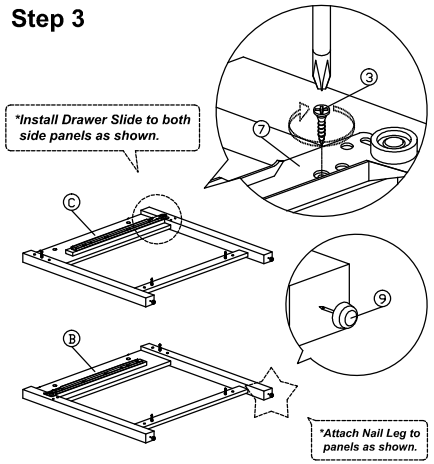

Step 4

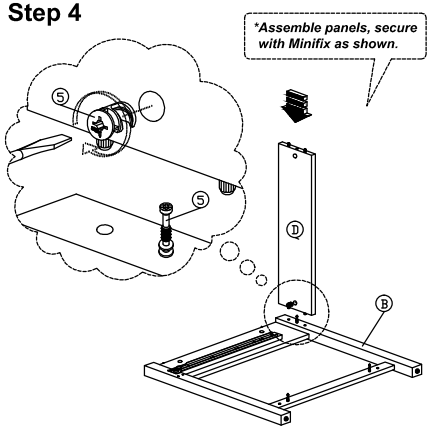

Step 5

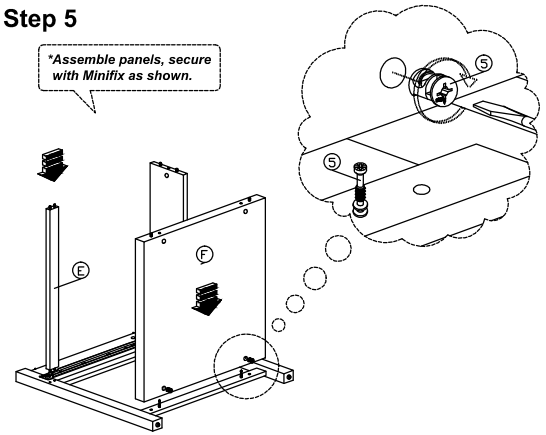

Step 6

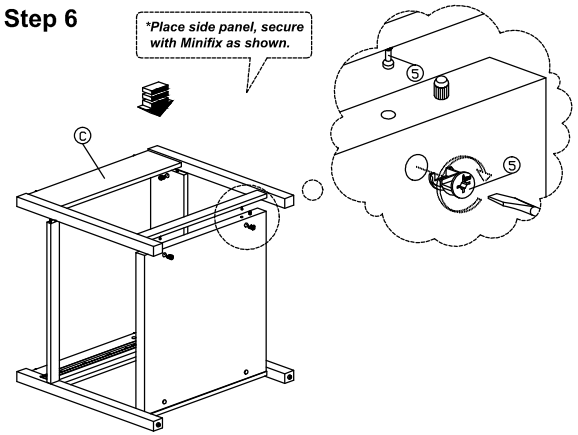

Step 7

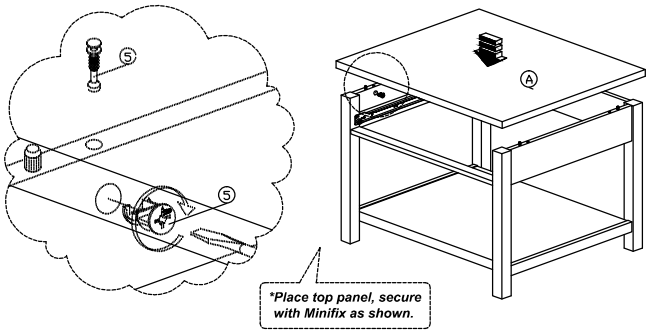

Step 8

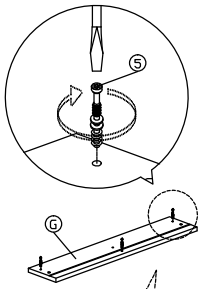

Step 9

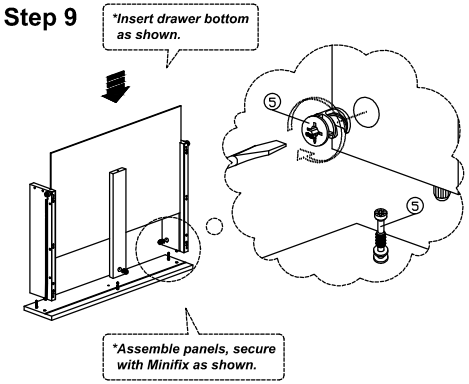

Step 12

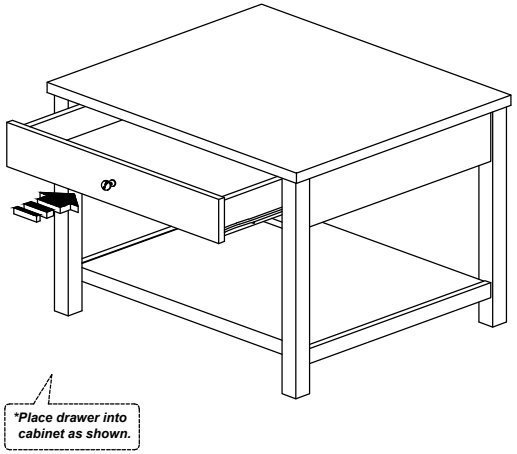

Step 10

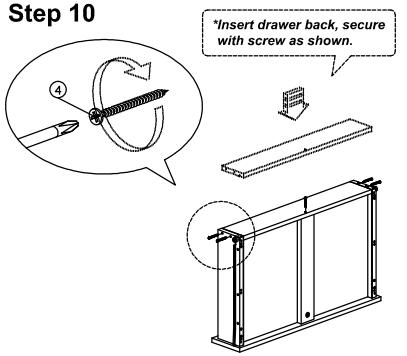
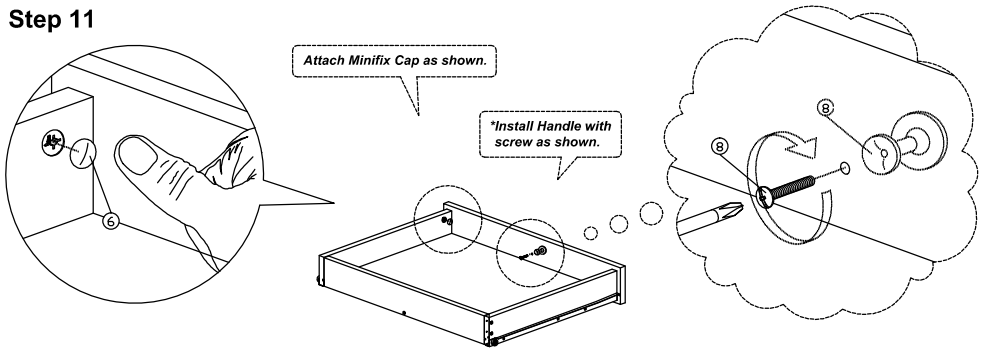
Step 11