
Model: WI7501



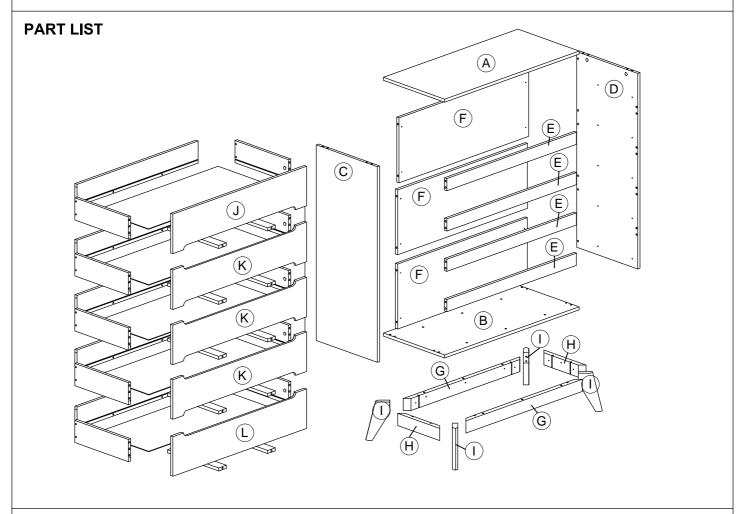


	Hardware List					
No.	SHAPE	DESCRIPTION	Qty.			
1		8x25mm Wood Dowel	62Pcs			
2		15MM Myfix Minifix	24Sets			
3		M5x8mm Screw (Euro Screw)	20Pcs			
4	<b>~~~~</b>	M3.5x15mm Screw	110Pcs			
5	<b>←</b>	M4x38mm Screw	34Pcs			
6	<u> </u>	Jcbc 'W' M6 x 40mm	8Pcs			
7	<b>6</b>	L Bracket	28Pcs			
8	0	Nail Leg	4Pcs			
9		Metal Drawer Slide 12" ( 300mm)	5Sets			


10	Minifix Cap	10Pcs
11	Metal Corner Bracket	4Pcs
12	L Key	1Pc


### Packing Tipping Restraint


	_	11 0	
13	OF THE	Wall Plug	2Pcs
14	<b>√</b>	M4x30mm Screw	2Pcs
15		Safety Strap	2Pcs
16	0	Flat Washer 6x19x2mm	4Pcs
17	<b>√</b>	M3.5x15mm Screw	2Pcs

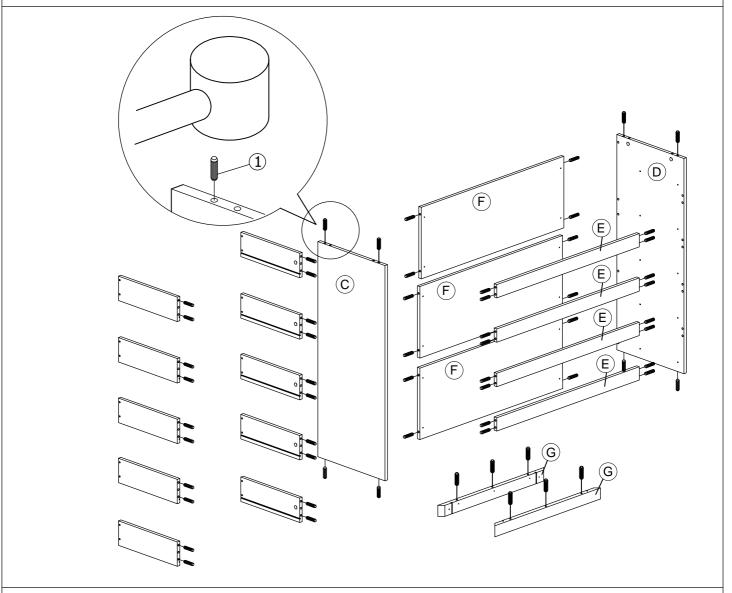


### STEP 2

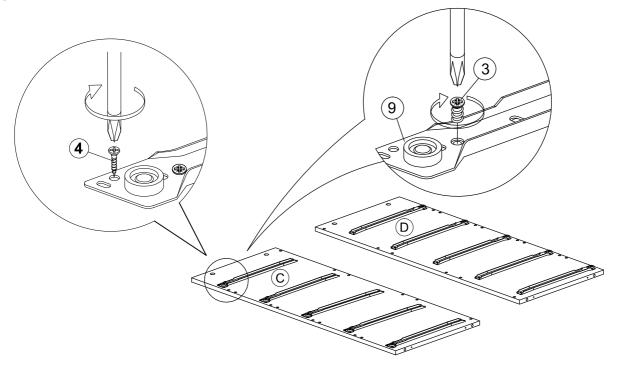


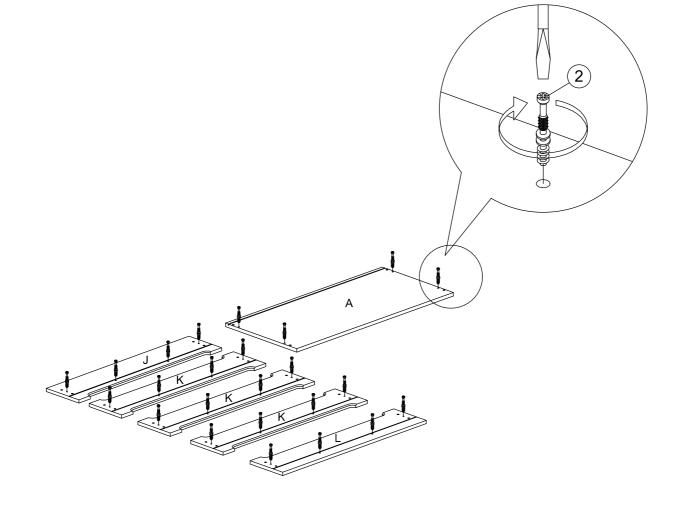

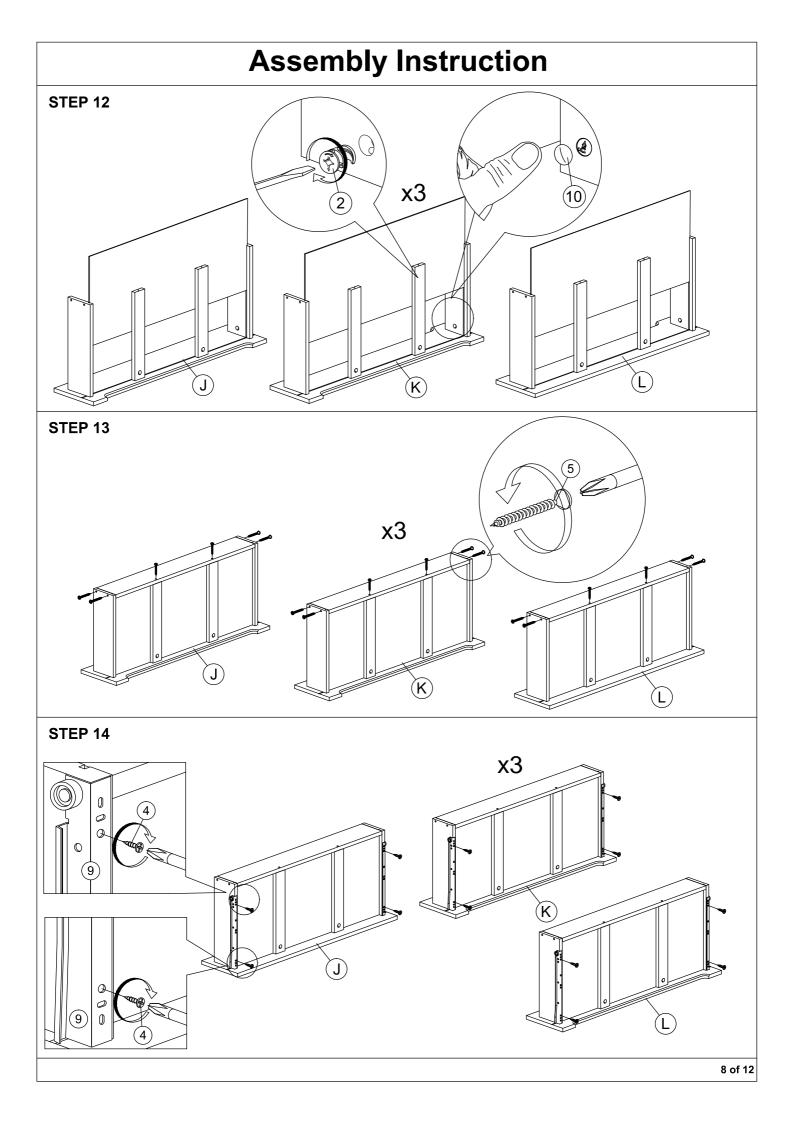



### STEP 6

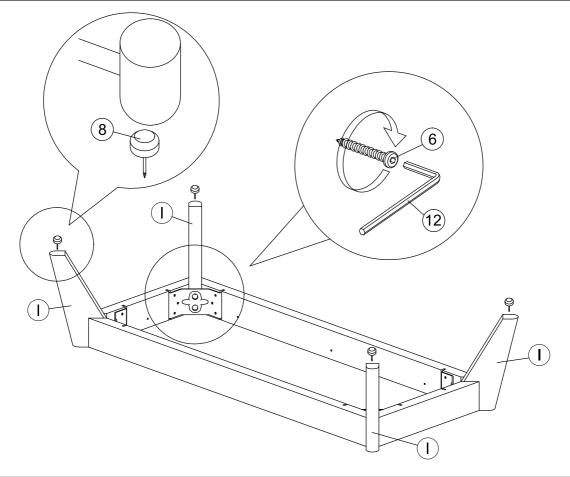

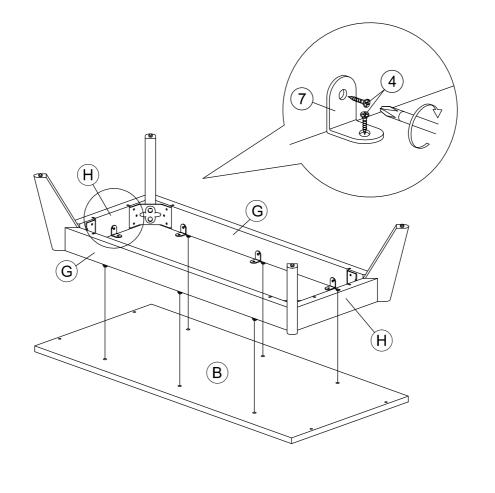



### STEP 8

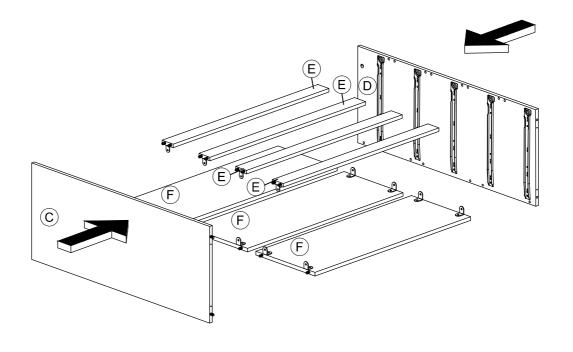


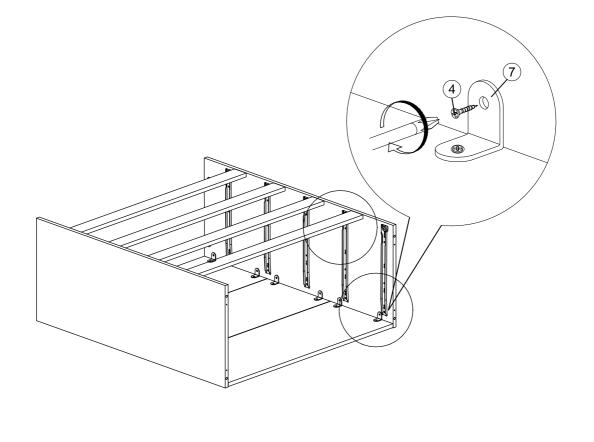


### STEP 10

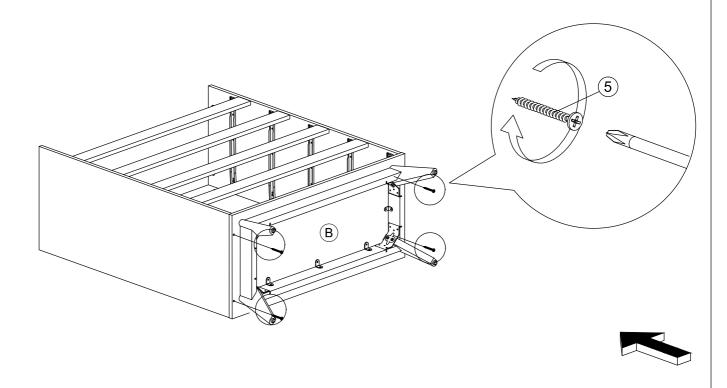

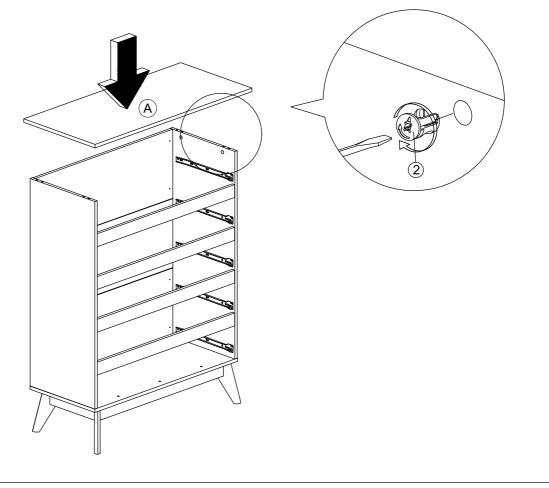


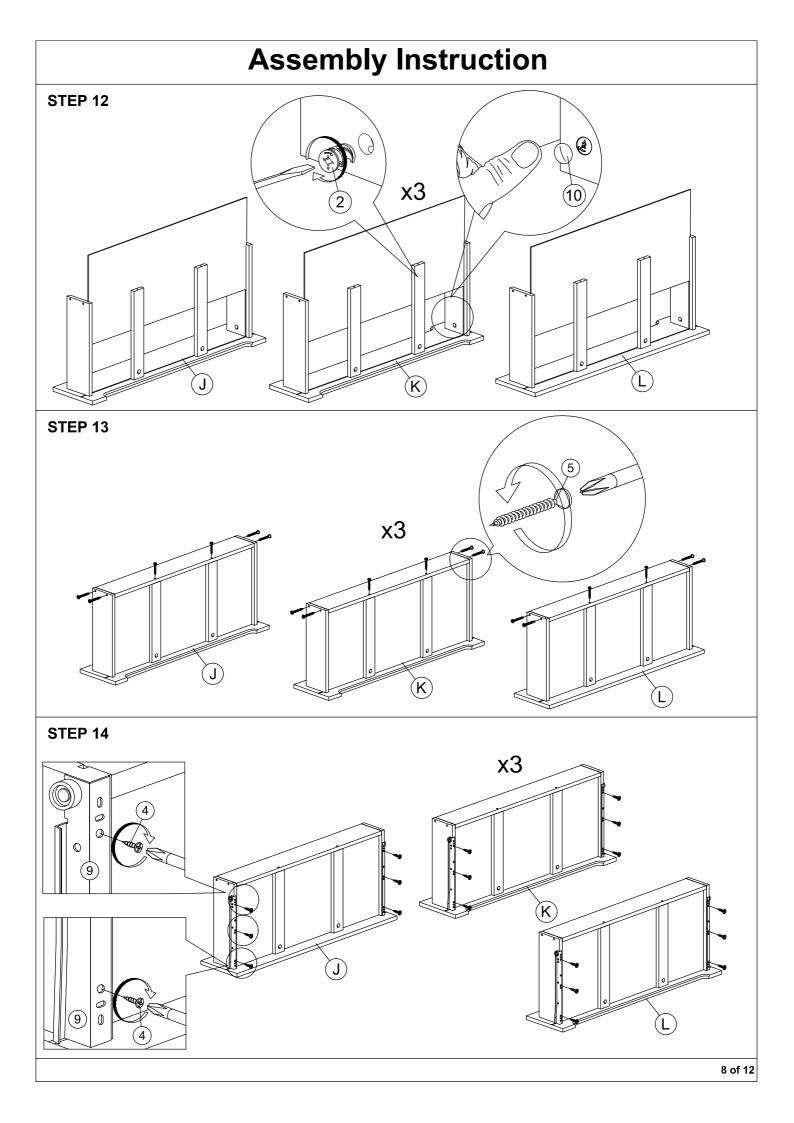


STEP 15

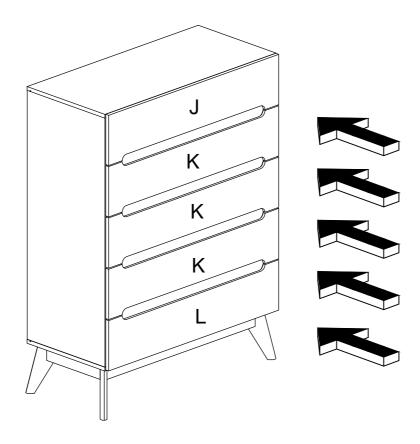


**STEP 16** 

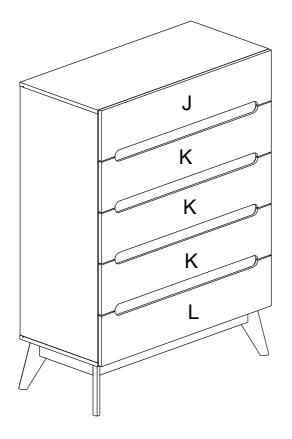


### **FURNITURE TIPPING RESTRAINT**

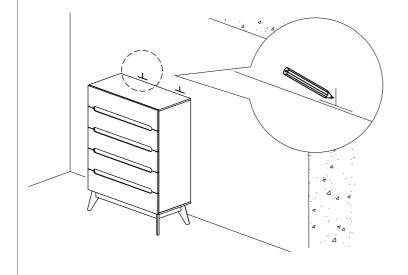

1.First mark the wall with pencil as in diagram.

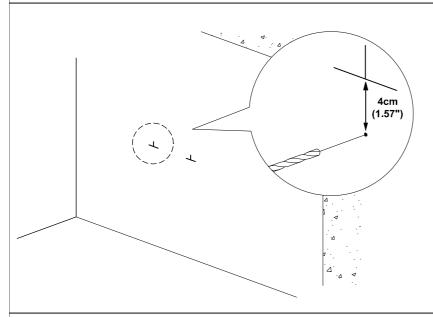


2. Drill small hole at the pencil mark.

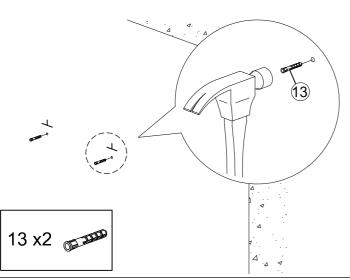


3. Insert plastic wall plug (13).

### **FURNITURE TIPPING RESTRAINT**

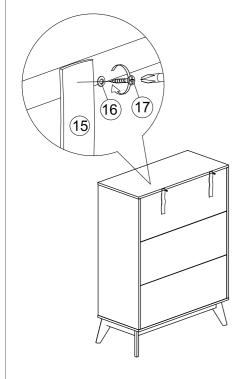


4. Add safety strap (15), washer (16) using 3.5x15mm screw (17) to back of cabinet.

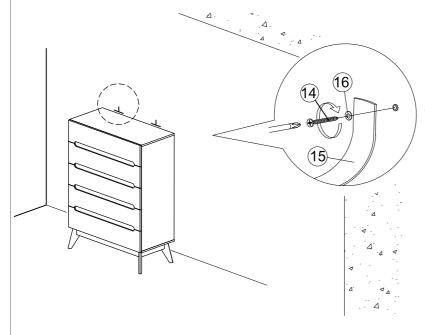

5. Finally, attach safety strap (15) and washer (16) using 4x30mm screw (14) to the wall.

 16 x2

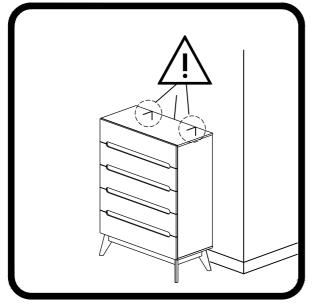



#### **A WARNING**

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- · Install tipover restraint provided.
- · Place heaviest items in the lowest drawers.
- Do not set TV's or other heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time. (OR)
- Do not defeat or remove the drawer interlock system.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

This is a permanent label. Do not remove!



Anti-Topple hardware included for added safety and stability